


# INSIGNIA™

## IN-MP3256

Digital Audio Player

Instruction Manual

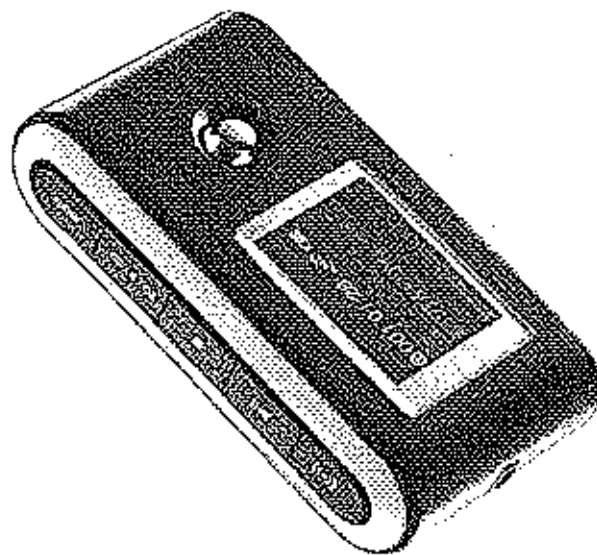

# INSIGNIA™

## IN-MP3256

**IMPORTANT NOTE:** French and Spanish versions of the manual are located on the CD-ROM.

**REMARQUE IMPORTANTE :** les versions françaises et espagnoles du manuel sont sur le CD-ROM.

**NOTA IMPORTANTE:** Las versiones en Francés y Español del manual se encuentran en el CD-ROM.

# Table of Contents

<b>Declarations</b>	
<b>Getting Started</b>	
Introduction	1
Key Features	1
Package Contents	1
Parts description	2
Controls (Key Functions)	3
Battery Installation	4
<b>Downloading and Transferring Files</b>	
USB Driver Installation	5 - 8
Transferring Files	9
Downloading WMA Files with DRM	10 - 12
Safely Remove Hardware Procedure	13 - 14
<b>Operation</b>	
Listening to Music	15
Using the MAIN MENU	15 - 21
MUSIC PLAYER	16
NAVIGATION	17
FM RADIO	18-19
FM TRANSMIT	20
VOICE RECORDER	21
<b>Customizing the Player</b>	
Using the SETTING MENU	22 - 23
PLAY LIST	22
SOUND	23
FM TRANSMIT	23
AUTOPLAY	23
PLAY TIMER	23
REC RESOLUTION	23
SCREEN SAVER	23
SLEEP	23
CONTRAST	23
<b>Additional Information</b>	
Precautions	24 - 25
Trouble Shooting	26
Technical Specifications	27
Care and Maintenance	28

**Insignia Limited Warranty**

## FCC DECLARATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*Shield cable must be used with this unit to ensure compliance with the class B FCC limits.*

## IC (INDUSTRY CANADA) DECLARATION

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with an antenna having a maximum gain of -10 dBi/m. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 300 ohms.

"To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication."

## Getting Started

### INTRODUCTION

Digital Audio Player (DAP) – IN-MP3256

Your Digital Audio Player is a device that stores and plays multi-format digital audio files including MP3, WMA, and WAV files. Hours of music files can be transferred directly from your computer to your DAP. The FM transmit function allows you to listen to these files on any FM radio including your car stereo. The unit can also be used to listen to FM radio or for voice recording. Please read this manual carefully before using this product for the first time.

### KEY FEATURES



- Supports MP3, WMA, WMA with DRM and WAV files
- Built-in Memory: 256MB
- Supports MP3 ID3 tags
- Built-in FM Tuner with FM Recording
- Wireless FM Transmitter with Car Cradle
- Built-in Microphone for Voice Recording
- Organic LED Display (OLED)
- USB Version 2.0
- Ten preset Equalizer modes and User Defined EQ mode
- Windows Plug & Play support for Windows ME, 2000 and XP and Mac OS10.2.8 or higher.
- Windows 98SE compatible: Driver required

### PACKAGE CONTENTS

The packaging should include the following items:

- Digital Audio Player
- Car Cradle
- Car Charger
- Standard AC Adapter
- Stereo Earphones
- USB Cable
- 1 x AAA Battery
- Carrying case
- Armband
- Installation CD
- User Manual

### PARTS DESCRIPTION

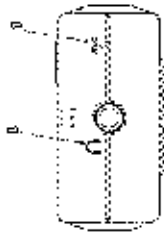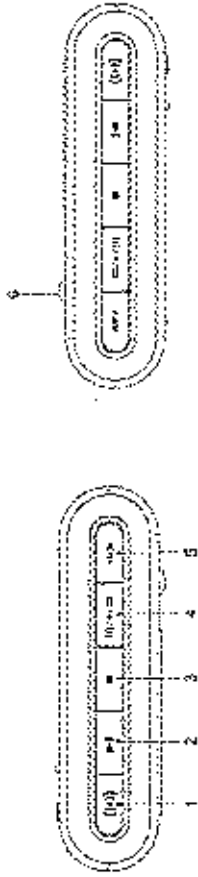

1. (FM) - FM Transmit
2. Power On ~ Play (▶||)
3. Power Off - Stop (■)
4. EQ / ● / ↻ Button
5. Mode Button


6. Navigation Control
7. USB Port and FM Transmit Antenna
8. Earphone Jack
9. Mic rophone

## CONTROLS

### Key Functions


mode	Press to access the Main Menu. Press and hold to access the Settings Menu.
hold	Slide down to lock all key functions. Slide up to unlock all key functions.
(-+)	Press while in Music Player Mode to transmit songs to FM radio.
EQ/•/↻	Equalizer / Record / Repeat button. Press to access the Repeat mode. Press and hold to access the Equalizer mode. Press to record in Voice mode. Press to add song into the play list in Navigation mode.
▶	Press to turn the player ON. Press to play music while in standby. Press to pause music during playback.
⏏	Press to stop music during playback. Press and hold to turn the player OFF.



There is a joystick key: /Navi in the center that can be used to control several key functions. Push the button up, down, left, right or pressing it down will achieve the following actions:

•/Navi	Press to access the Navigation mode of the folders. Press down to confirm while in Setting Mode.
▶▶	Push to the right to select the next file. Push and hold to the right to fast-forward within the files.
◀◀	Push to the left to select the previous file. Push and hold to the left to fast-rewind within the files.
-	Push downward to decrease the volume. Push and hold downward to decrease the volume rapidly.
+	Push upward to increase the volume. Push and hold upward to increase the volume rapidly.


### Screen

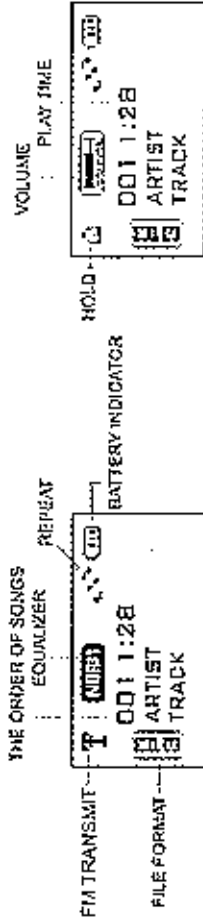

### Battery Installation

When the bars in the battery indicator become low, replace the battery as follows.

1. Push open the battery compartment door.
2. Insert the battery with the correct polarity as shown.
3. Close the battery compartment door.

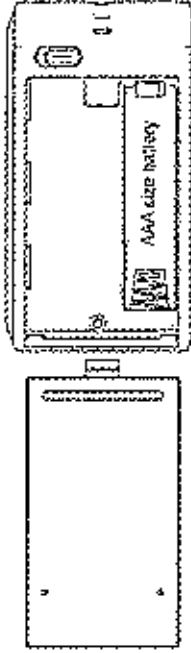

### BATTERY PRECAUTIONS

- To avoid battery leakage or corrosion, remove the battery from the player if the player is not to be used for a long time.
- Remove dead battery from the player immediately to avoid damaging the player.
- When corrosion occurs, wipe the battery compartment immediately with a dry cloth and insert a new battery.

## Download and Transferring Files

### USB DRIVER INSTALLATION

For Windows ME, 2000 or XP and MAC OS 10.2.8 or higher. These operating systems will automatically detect your DAP after connecting with the USB cable and the computer. (Please make sure the DAP is turned ON.)


#### For Windows 98SE:

Windows 98SE will not recognize the player until you have installed the driver using the included installation CD-ROM. Follow the detailed instructions in this section to activate the USB mass storage function, so you will be able to transfer files from your computer to your player.

#### Driver Installation Procedure (For Windows 98SE only)

When connecting the player to the computer for the first time, please follow these instructions:


1. Insert the CD-ROM into the CD Drive. The auto-run program will display as shown (Figure 1).

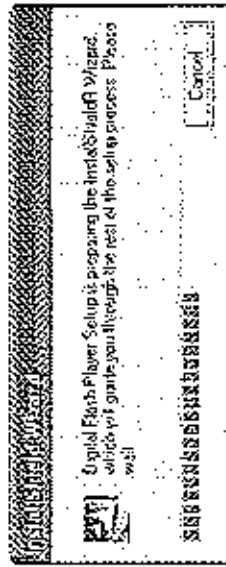


(Figure 1)

Remarks: If the setup does not start automatically, please run the setup.exe in your CD-ROM drive directory. Double click "setup.exe" in the installation CD.


2. Follow the on screen instruction to install the software.

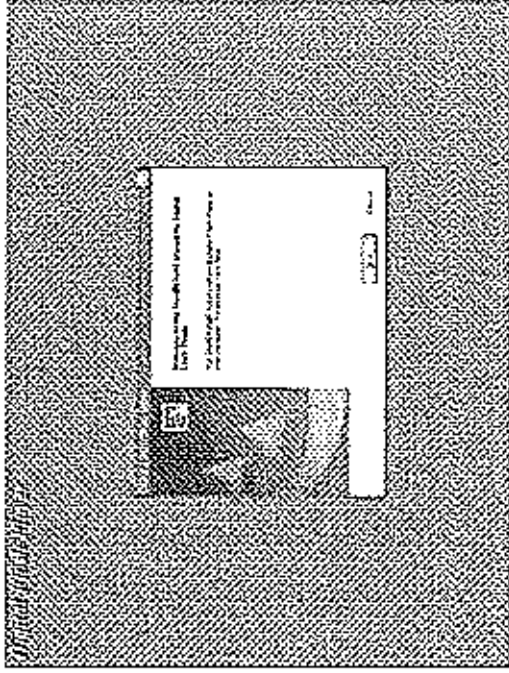

3. Click "Yes" to accept the License Agreement.

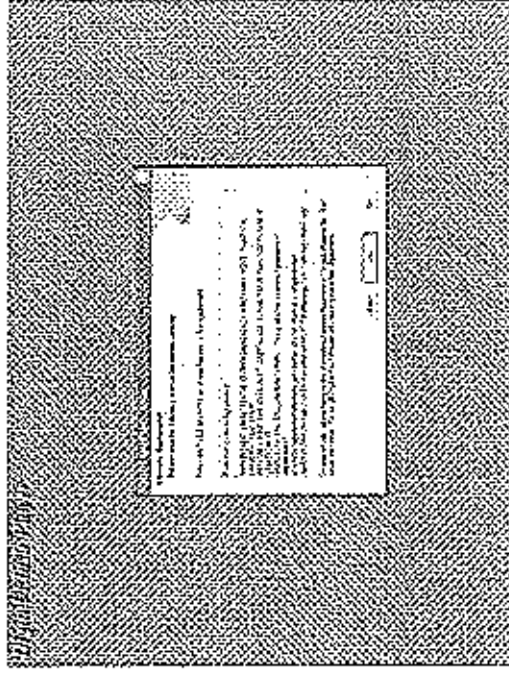


4. Please install the software under the directory as prompted.

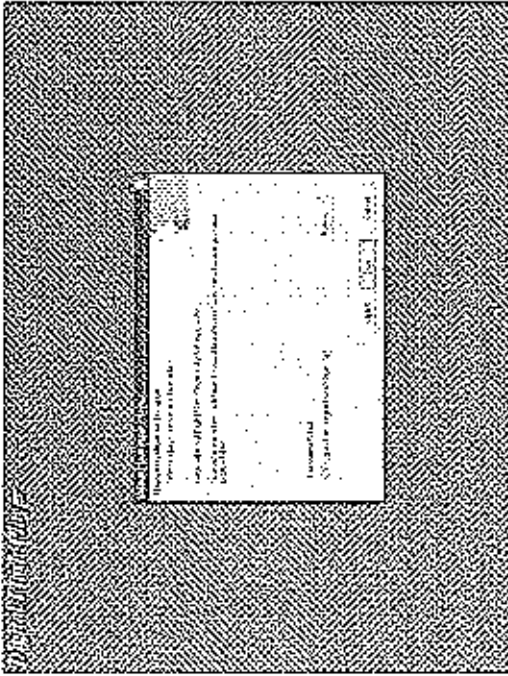


Warning: DO NOT change the installation path. Otherwise, the Player driver may not run properly.


5. Click "Next" as prompted.

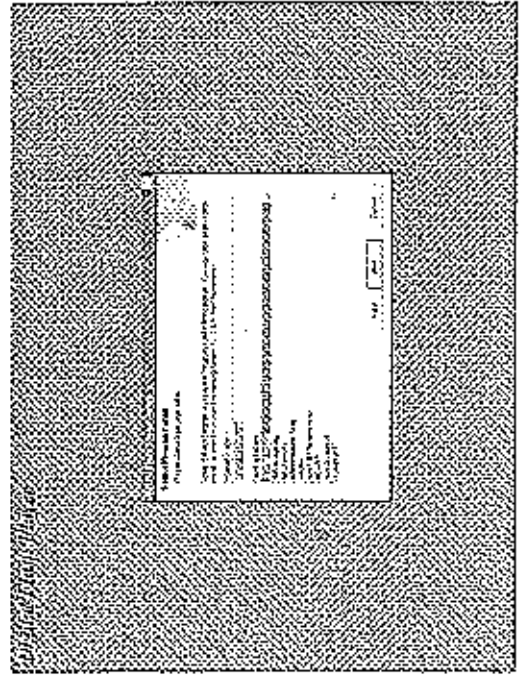

6. After successfully installing the driver software, please click "Finish" to complete the installation.

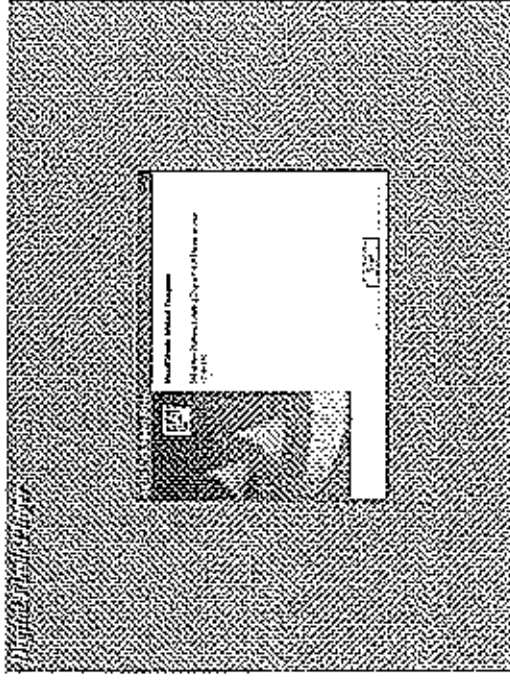


7. When the installation is completed, the new program will be added to your Program menu in the computer.

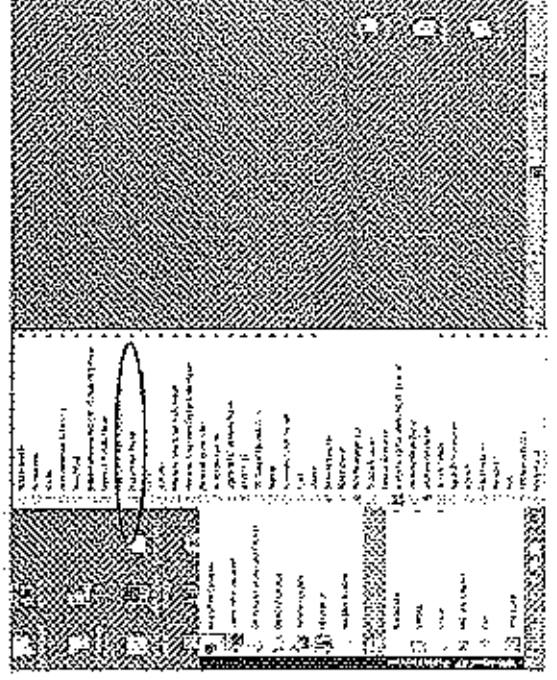


## TRANSFERRING FILES

Connect the DAP by using the supplied USB cable to the computer. Press the **▶** button to turn the player ON. The following will be displayed on the display of your DAP:

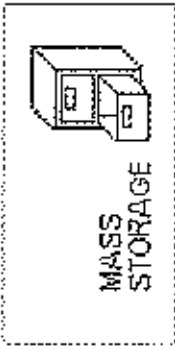

A "Removable Disk" will be added in My Computer. Open the "Removable Disk" folder:

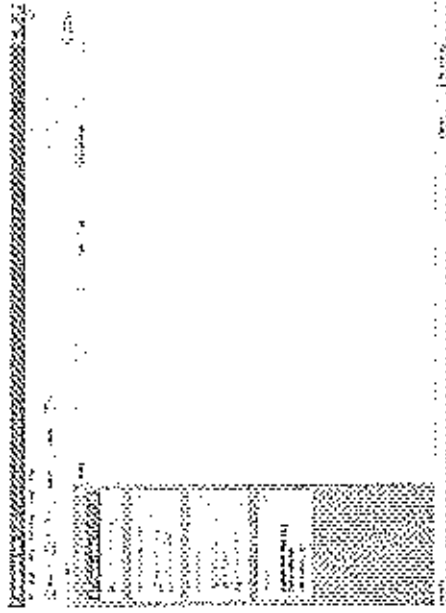


Locate the files you wish to copy from your computer to your player. Drag and drop MP3, WMA or WAV files on your computer into the "Removable Disk" folder. These files will now be copied into your DAP.

**Note:** When you are finished transferring files, use the **Safely Remove Hardware** procedure before disconnecting your player. (Please see the next section for detailed instructions.)


## DOWNLOADING WMA FILES WITH DRM

In order to download WMA files with DRM you must follow the procedure described below. If you do not have "Windows Media Player 9" on your computer, you must go to [www.microsoft.com](http://www.microsoft.com) to download and install this software. Before beginning the procedure please turn the unit ON and connect the USB cable to the unit and to the USB port of your computer.


1. Open the "Windows Media Player Browser," and click on "Tools" in the menu bar. Then click "Options..."

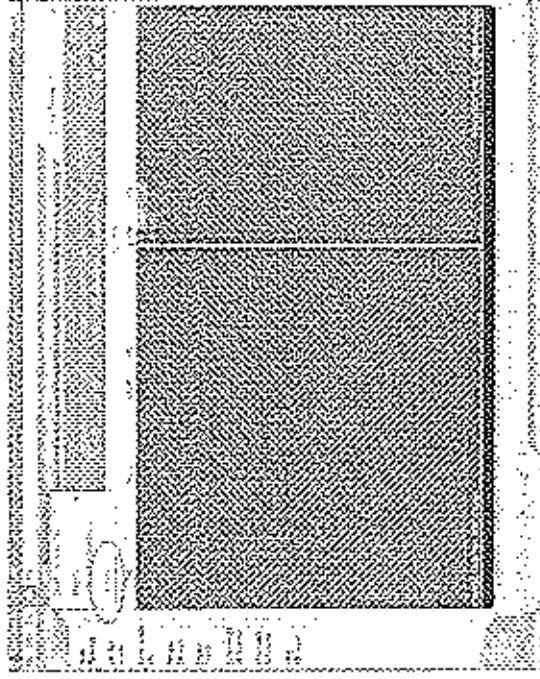


2. Click the "Copy Music" tab and tick the option "Copy protect music" in order to copy a DRM music file onto your unit. Click "OK" to save the setting.

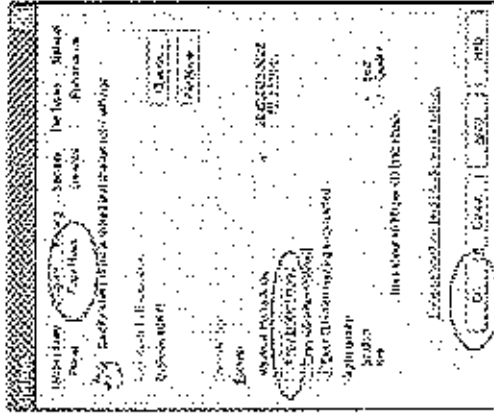


3. Click "Copy to CD or Device".

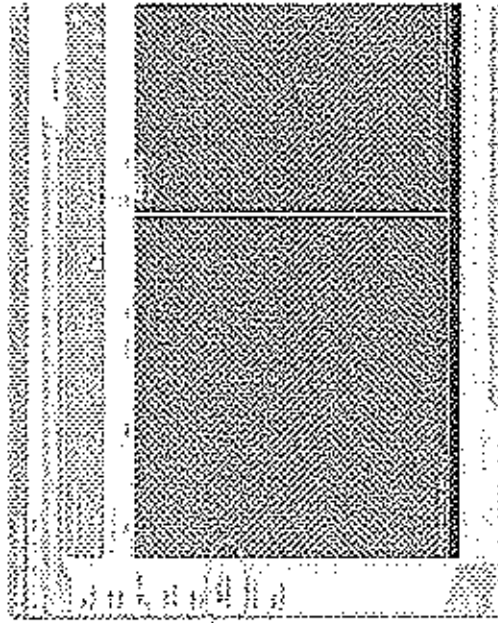

4. Click on the "Items to Copy" drop down menu to locate the music files you wish to download. Make sure to select the box next to the files.

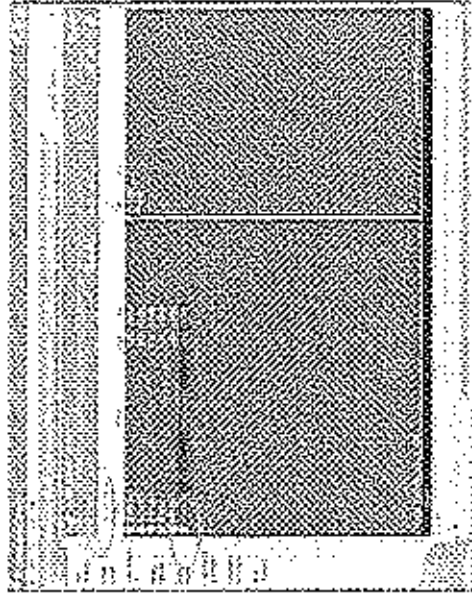

5. Select the Portable Device you want to copy to from the "Items on Device" drop down menu. Click "Copy" to start transferring the DRM files onto your unit.

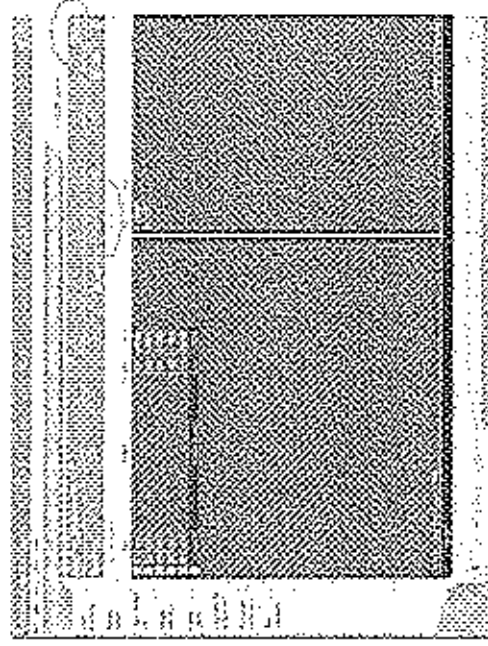

6. After you have downloaded all the desired files to your unit, follow the "Safely Remove Hardware" procedure described in the next section.




## SAFELY REMOVE HARDWARE PROCEDURE


1. Double click the "Safely Remove Hardware" icon on the task bar.



2. From the "Safely Remove Hardware" window, select "USB Mass Storage Device" and click the "Stop" button. The "Stop a Hardware Device" window will pop up as shown.

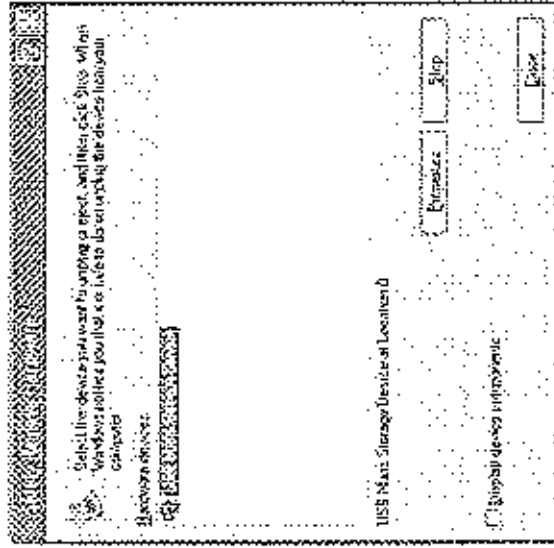

3. Click "OK". A "Safe to Remove Hardware" window will pop up. Now, it is safe to remove the USB Cable and the DAP from the computer.

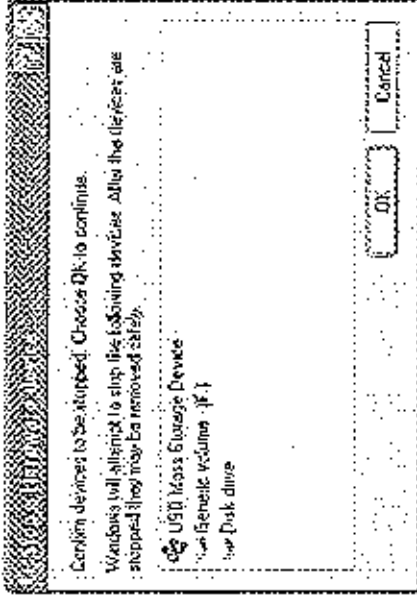

Remarks: If the "Safely Remove Hardware" icon is not displayed on the task bar, please double click on My Computer. Right-click on "Removable Disk", left click on "eject". Then it is safe to remove the DAP from the computer.

## Operation

### LISTENING TO MUSIC

After you have transferred MP3, WMA or WAV files from the computer to the DAP player, you can start listening to music while you learn how to use the rest of the features.


Insert the earphones into the earphone jack of the player; press the **▶||** button to turn the player on. Use the navigation keys to forward, reverse, adjust the volume and access to Navigation mode.

### USING THE MAIN MENU

Press the **mode** button to access the MAIN MENU. The following menu will be displayed:



Push **▶▶** or **◀◀** until your desired selection is highlighted and press the **◉/Navj** button to confirm the selection.

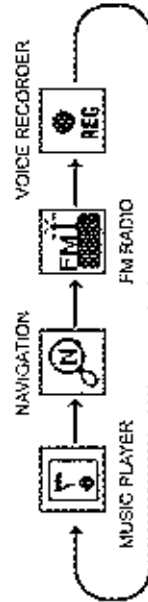

## MUSIC PLAYER

To listen to any files or songs stored in your DAP or run the Play List, you can select the MUSIC PLAYER mode.

### Using Special Functions

#### Equalizer Mode (EQ)

The current equalizer mode is displayed at the top of the display in a rectangular block with a yellow background.

#### Changing the EQ mode

- Press and hold the **EQ/◉/◀** button until the current mode is displayed with a clear block background. Keep pressing the **EQ/◉/▶** button repeatedly to select one of the equalizer modes:



- Stop pressing the **EQ/◉/▶** button when your desired selection is displayed with a clear background. The background will turn back to the yellow after a few seconds.

#### Repeat Button

Press the **EQ/◉/▶** button repeatedly to select different repeat mode options. As each mode is selected, the following icons will be displayed on the right upper part of the display:

Play all the files in the player once.

Randomly play all the files in the player once.

Randomly play all the files in the player continuously.

Plays a single file repeatedly.

Play all the files repeatedly in the consecutive order.

Edits and plays one section repeatedly. Press **◉/Navj** button once to start with point A **▶▶** and press **◉/Navj** button again to end with point B **◀◀**.

Plays the play list once. (The play list must be created before using this function.)

Plays the play list repeatedly. (The play list must be created before using this function)



## NAVIGATION

You may search for, listen to, and program the play list in the Navigation mode. Press the mode button and use the **▶** or the **◀** button to highlight the Navigation.



Press the **◀/Navi** button to confirm and access the Navigation menu. All the files are displayed in the Root folder. Voice recorded files are stored in the Voice/ folder. FM recorded files are stored in the FM/ folder.

### Creating a play list

- Enter into the Navigation menu.
- Push + or - button to highlight a desired song or file.
- Press the **EQ/OK** button; a number icon (01, 02 etc.) will be displayed next to that song or file.
- Press the **EQ/OK** button to confirm the song or file selection; the number icon will disappear and the file or the song will be added to the play list.
- Follow these steps with each file you would like to add to your play list.

**Note:** You can only program the same file into the play list once.

### Deletion

Files can be deleted in the Navigation Mode:

- After entering the Navigation mode, press the + or the - button to highlight a desired file.
- Press the **◻** button.
- Press **▶** or the **◀** button to highlight Yes or No.
- Press the **◀/Navi** to confirm the deletion of the file.

## FM RADIO

The DAP has a built-in FM tuner with auto scan and twenty preset station memory. Besides listening to your favorite station, you can also record a song or program.



Press the mode button and use the **▶** or the **◀** button to highlight the FM Radio.

 
 

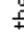 
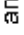 

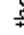 
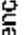 



Press the **◀/Navi** button to confirm the FM Radio mode.

### Setting FM Stations with Auto Scan




- If the PRESET icon is displayed in the screen, press the **◻** button to clear it.
- Press and hold the **▶/H** button to begin auto scan. The AUTO SCAN icon will be displayed in the screen. Each detected FM station will be stored in memory with a channel number icon from [C01] to [C20] next to the station frequency.

**Note:** Each time auto scan is performed the previously preset channels will be overwritten by the new FM stations detected.


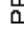
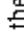
### Setting FM Stations Manually

- If the PRESET icon is displayed in the screen, press the  button to clear it.
- Press the  button to increase the FM frequency. To fast forward scan, press and hold the  button. The unit will stop at each FM Station detected.
- Press the  button to decrease the FM frequency. To fast rewind scan, press and hold the  button. The unit will stop at each FM Station detected.
- To store each station into memory, press the  button. The STORE icon will be displayed.
- Press the  or  button; a channel number will appear next to the FM frequency in the screen for the first time setting.
- To select a different channel number, use the  or the  button.
- Press the  button to store this FM frequency in the selected channel number. (The STORE icon will clear from the screen.)
  
### Using the Preset Channel

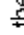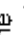   - Press the  button to display the PRESET icon.
- Use the  button to select the next preset station and use the  button to select the previous preset station.

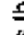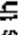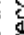


### Recording a FM Radio Station

- Press the  button to start recording.
- Press the  button to pause and unpaue recording.
- Press the  button to stop recording.
- The recorded file is saved as a WAV format.

**NOTE:** The volume is not controlled during recording. If the signal is weak, the STEREO icon will disappear and the system will operate in mono.
 
### FM Transmit

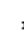While In Music Player mode the songs playing on the unit can be transmitted to a digital FM radio, such as a car or home stereo. The default frequency of the DAP is 88.1. (The default can be changed through the FM Transmit Setting, which is described later in "Settings" section of the manual). Use the car charger or USB cable as the antenna.


- Tune the FM frequency of the radio you wish to broadcast to, to the default setting.
- Press the  button in order to broadcast to this station.
- Press the  button to start playback over the broadcast station.
- Press the  button to stop broadcasting.

### IMPORTANT NOTE

PLEASE FOLLOW ONE OF THE STEPS BELOW DURING FM TRANSMIT FOR OPTIMAL PERFORMANCE:

1. CONNECT THE USB CABLE TO THE USB JACK ON THE UNIT
2. CONNECT THE UNIT TO THE CAR CRADLE THEN:

- A. CONNECT THE CAR CHARGER TO THE CAR CRADLE POWER JACK AND PLUG THE OTHER END INTO A CAR CHARGER SOCKET.  
OR
- B. CONNECT THE AC ADAPTER TO THE CAR CRADLE POWER JACK AND THEN PLUG THE OTHER END INTO AN AC WALL SOCKET.

**Note:** After changing the default FM Transmit frequency, the unit must be powered OFF by pressing and holding the  button if you wish to store this frequency as the new default setting.

## VOICE RECORDER

Use your DAP to record quick reminder memos, lengthy business meetings or lectures.

Press the **mode** button and use the **◀** or the **▶** button to highlight the Voice Recorder icon as shown.



Press **◉/NavI** to confirm and enter the Voice Recorder mode.

### Recording a Voice Message

- Press the **EQ/◉/◂** button to start recording.
- Press the **▶||** button to pause recording
- Press the **■** button to stop recording.
- The recorded file is saved in WAV format.

### Listening to the Recorded File

- Press the **▶||** button to listen to the recorded file.
- Press the **■** button to stop playback.
- Press the **◀** button to select the previous recorded file.
- Press the **▶** button to select the next recorded file.

**Notes:** The volume is not controlled during recording.

You may select three different quality levels for recording through the Settings.


## Customizing the Player

### USING THE SETTING MENU

The Setting Menu provides the option to change the player settings, displays, and resolution.

Press and hold the **mode** button to display the **SETTING MENU** on the display.

Press the **▶||** or the **◀** button to select one of the following setting options: Play List, Sound, FM Transmit, Autoplay, Play Timer, Rec Resolution, Screen Saver, Sleep or Contrast. Once your selection is highlighted then press **◉/NavI** to confirm.

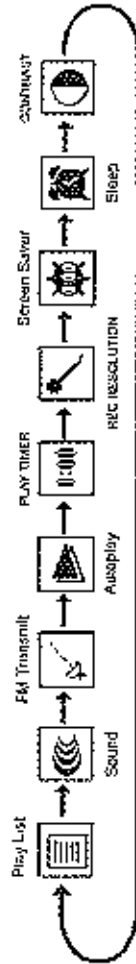

To exit the **SETTING MENU**, press the **mode** button.

### Setting Features

#### Play List Setting

- Push **+** or **-** button to select the desired file.
- Press the **■** button; a [CLEAR ITEM / CLEAR LIST] box will appear on the display.
- Push **+** or **-** to select clear item or clear list and press **◉/NavI** button to confirm.
- Push **▶||** or **◀** button to select [Yes / No] to clear the selection.
- Press **◉/NavI** button to confirm the selection.



**Note:** If you have deleted or not programmed a play list, "LIST EMPTY" will be displayed.

### Sound Setting

Push + or - button to select EQ or User EQ.  
Press to confirm.

### FM Transmit Setting

Push + or - to select the desired FM frequency to transmit to.  
Press the button to confirm the FM frequency selection.

**NOTE:** It is recommended to choose the frequency with the least interference from local radio stations. If there is interference during FM transmission change this setting accordingly.

### Autoplay Setting

Push + or - to select whether the unit will automatically start playback at startup (On) or whether the unit will be in standby mode at startup.  
Press to confirm.

### Play Timer Setting

Push + or - to select between Elapsed time and Remaining time.  
Press to confirm the play timer selection.

### Recording Resolution Setting

Push + or - to select one of the three voice recording resolution:  
Low, Medium, or High  
Press to confirm the resolution selection.

### Screen Saver Setting

Press + or - to select the amount of time before the screensaver is activated.

Press the button to confirm the screen saver setting.

**NOTE:** It is recommended to enable the Screen Saver function to save power and protect the screen.

### Sleep Setting

You may go to sleep while listening to your DAP.

Press + or - to select to select the amount of time before you would like the unit to turnoff.

Press the button to confirm the sleep setting.

### Contrast Setting

Press the or the button to adjust the display contrast level.  
Press to confirm the contrast level.

## Additional Information

### PRECAUTIONS

#### Copyright

- Making copies of MP3 tracks or files without permission is a violation of the international copyright laws.

#### Safety

- Vibration experienced during walking or exercising will not affect the player. However, dropping the player or dropping a heavy object on the player may result in damage or sound distortion.
- Avoid spilling any liquid onto or into the player.
- Do not leave the player in a location near extreme heat sources or in a car with the windows closed during excessive heat. Do not leave in a place subject to direct sunlight, excessive dust or sand, moisture, or rain.

### On Headphones and Earphones

#### Road Safety

- Do not use the headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossing and potentially hazardous situations.

### Preventing Hearing Damage

- Avoid using the headphones/earphones at high volume. Hearing experts advise not to play loud music for a long period of time. If you do experience ringing in your ears, reduce the volume or discontinue use.

### Consideration for Others

- Keep the volume at a moderate level. This allows you to hear the sound and still be considerate to the people around you.

### CE Warnings



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.



This unit must not be exposed to moisture or rain.



Ensure all connections are properly made before operating the unit.



This unit should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on the carpet or in a built-in installation such as a bookcase.



Do not expose this unit to direct sunlight or heat radiating sources.



Make sure all batteries are inserted according to the proper polarity. Do not mix old batteries with new ones.



If the unit is not used for a long period of time (more than 1 month), remove all batteries from their compartment to avoid possible leaking.

The player may lock up or temporarily lose its function due to electrostatic discharge or other electrical disturbance, but normal function resumes when the device is reset.

### TROUBLE SHOOTING

Should any problem persist after you have checked these symptoms, contact the customer support contact listed in the warranty.

Symptom	Possible Reason	Actions
No Power	The battery is exhausted.	Replace the battery.
No Sound from Earphones	The earphones are detached from the unit.	Re-insert the earphones.
	The volume is set to "minimum".	Increase the volume.
	The battery is exhausted.	Replace the battery.
Poor FM Reception	The earphones jack is contaminated or oxidized.	Clean the earphones jack.
	Corrupted MP3 or WMA file.	Download the files again.
	Not using antenna.	Insert car charger or USB Cable into USB port.
	Weak Signal.	Adjust the position of player and earphones.
Poor FM Transmit Reception	Electrical interference by other electrical appliances.	Turn off the electrical appliances. Walk away from interference sources.
	Interference from local radio stations.	Change the Fm Transmit frequency setting.
	Short broadcast range.	Connect the DAP with the car cradle.
Failed to Download or Upload of MP3/WMA/WAV files	The battery is exhausted.	Replace the battery.
	Faulty connection of the USB cable.	Re-plug the cable at both ends.
	Damaged USB cable.	Replace a new USB cable.
	Memory is full.	Release some memory space by deleting some files.
Cannot record Voice	Memory is full.	Release some memory space by deleting some files.

## TECHNICAL SPECIFICATIONS

Category	Item	Specification
Audio	Frequency Range	20Hz – 20KHz
	Headphones Output	20 mW, 16 ohm
	S/N Ratio	90db (MP3)
File Support	MP3	MPEG 1/2/2.5 Layer 3
	WMA	Windows Media Audio
	WAV	ADPCM encoding
	Bit Rate	8kbps – 320kbps
	Tag Info	ID3 Tag
FM Tuner	FM Frequency Range Antenna	87.5MHz - 108.0 MHz Headphone/Earphone Cord Antenna
FM Transmitter	RF Output Power Distortion (THD) Mono	-15 dBm, 88.1MHz - 107.9MHz 2.5%
	Dimension Weight Battery Display USB Built-in Memory Max Playtime Supported OS	70.8 x 65 x 24 mm Approx. 40 g (without battery) 1 x AAA battery Full Graphic OLED USB 2.0 128MB / 256MB / 512MB Up to 17 hours Win ME, 2000, XP and Mac OS X
	Voice Recording Firmware Upgradeable Operating Temperature	Win 98SE (Driver is required) Approx. 7-8 hours (Low resolution) Yes (Except Windows 98 and Mac) 23°T ~ 104°T (-5°C ~ 40°C)

Specifications are subject to change without notice.

## CARE AND MAINTENANCE

Your Digital Audio Player is a precise electronic device, and should not be subjected to rough handling or exposed to extreme temperatures or moisture. Do not use chemical agents or liquids to clean the unit, as they may damage the plastic.

### Please Retain this Information for Future Reference

The manufacturer reserves the right to make any technical changes without notice in the interest of progress.

### Declaration.

Our company will not be responsible for any mistakes in this manual. Prior notices will not be given in case of any amendments within the manual. The corresponding companies own the mentioned trademarks and names.

Microsoft Windows Media and Windows Logo are registered trademarks in the US and/or other countries.



# INSIGNIA™

## LIMITED WARRANTY

Insignia Products warrants to you, the original purchaser of this Product, that this 256MB Digital Audio Player, Model# IN-MP3256, shall be free of defects in material or workmanship for a period of 90 days from the date of purchase as follows:

1. **LABOR:** During the Warranty Period if this Product is determined to be defective, Insignia will repair or replace the Product, at its option at no charge, or pay the labor charges to any Insignia authorized service facility. After the Warranty Period, you must pay for all labor charges.
2. **PARTS:** In addition, Insignia will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts for the Warranty Period. After the Warranty Period, you must pay all parts costs.

To obtain warranty service, you must take the Product with your original receipt or other proof of purchase, either in its original packaging or packaging affording an equal degree of protection, to your nearest retail store location of the store or online web site from which you purchased the Product.

This warranty does not cover cosmetic damage or damage due to acts of God, lightning strikes, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Insignia to service the Product. This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty is valid only in the United States and Canada.

This warranty is invalid if the factory applied serial number has been altered or removed from the Product.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY, REPRESENTATION OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state, or province to province.

For customer service please call 1-877-467-4289  
[www.insignia-products.com](http://www.insignia-products.com)

Insignia Products, Richfield, Minnesota, U.S.A.