


1. **Reading:** The reader antenna is located in the top of the reader. On the front of the reader the top has an AVID logo and the back has a button saying READ HERE. The antenna reading system consists between the antenna and the reader. While reading, there is a beep sound from the antenna.

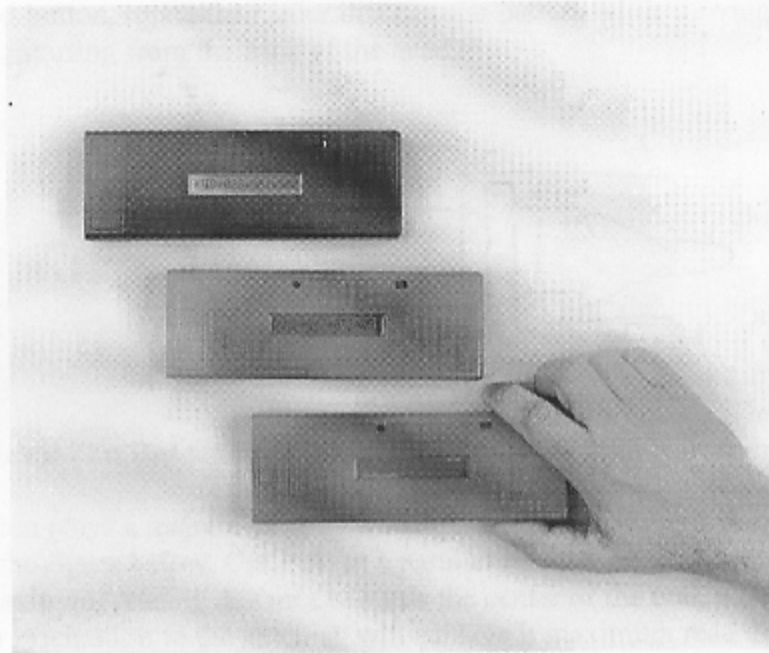

Congratulations on the purchase of your new AVID Mini-Tracker Plus Reader. This reader is capable of reading AVID and FECAVA tags, and detecting the presence of ISO FDX-B electronic identification tags.

INSTRUCTIONS: How to use the AVID Reader:

- 1. Power Button:** Turn the reader ON by sliding the lower right hand button on the face of the reader, forward. When the reader is powered on, it will emit a double beep sound and the LCD will display **AVID Reader**. To turn the reader OFF, slide the button back.
- 2. Read Button:** Press the upper right button on the reader to put the reader into the **LOOKING** mode. The LCD will display **LOOKING**. When a microchip is found, the reader will emit two beep tones and display the number on the LCD. If an ISO FDX-B tag is detected the LCD will display **ISO TAG FOUND**. If the read button is released before finding a microchip, the message **NO ID FOUND** will display on the LCD.