



Accessory Workshop, LLC. is a design and manufacturing firm specializing in cutting edge consumer electronics and accessories. We create and develop innovative products meant to enhance your computer and gaming experience. Our mission is to make your life a little easier, one product at a time.

Simple as that.™

For questions and technical support please call 1.888.691.3047.



iPad and Apple are registered trademarks of Apple Inc. The **Bluetooth**® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Accessory Workshop is under license.

MADE IN CHINA



Bluetooth® keyboard case for iPad® 2

Specifically designed with Apple® in mind.

USER MANUAL

Model: TY-109

Included with tyPad® 2

1. **Bluetooth®** Wireless Keyboard
2. Protective iPad® 2 Case
3. User Manual
4. USB Charging Cable

Welcome to tyPad® 2

Thank you for purchasing the all new tyPad 2, your must-have companion for iPad 2. tyPad 2 has been designed in collaboration with a team of iPad experts to offer you the best in functionality and appearance.

Here are some basic instructions to get you through the set-up and synchronization process.

After your initial set-up is complete, your iPad will automatically recognize your tyPad for continued use.

Product Features:

1. **Bluetooth** wireless technology enabled 3.0 interface keyboard.
2. Re-chargeable lithium battery for keyboard.
3. Soft-touch keys.
4. Faux leather protective case.
5. Home Screen key.
6. Apple shortcut keys.
7. Dual shift keys.
8. Heavy duty USB port connector.

MANUFACTURER'S WARRANTY

Accessory Workshop, LLC warrants all new tyPad products to be free from defects in materials or workmanship under normal use during a 90-day warranty period. The warranty period commences on the date of invoice. The warranty extends only to you, the original Purchaser, and is non-transferable. In order to be eligible for warranty service, a proof of purchase must be furnished by the consumer to validate the service request. The proof of purchase must be an original receipt issued to the consumer. Photocopied receipts or receipts issued to someone other than the individual requesting service will be denied eligibility. This Limited Warranty is valid only within the United States.

If a defect exists under normal use, at its option Accessory Workshop, LLC will repair or replace the tyPad at no charge, using new or refurbished replacement parts. Repair or exchange will be made at no additional charge to the customer. Following Repair or Exchange, the resulting product will retain only the balance of the original warranty period that commenced from the date of invoice of the original product.

Obtaining Warranty Service

To obtain warranty service, you must first call Accessory Workshop at 888-691-3047. The telephone representative will provide further information, including shipping instructions to mail back your product for replacement or repair.

Warranty Program DOES NOT include:

...repair and/or replacement of tyPads damaged by shipment, misuse, accident, modification or attempted repairs by anyone other than Accessory Workshop, unsuitable physical or operating environments, improper maintenance, intentional misuse of product, failures caused by a product for which Accessory Workshop is not responsible, intentional misuse of equipment by the customer, theft, and/or acts of God including but not limited to floods, lightning, earthquakes, hurricanes, and tornadoes.

THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. ACCESSORY WORKSHOP SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF ACCESSORY WORKSHOP CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THIS LIMITATION MAY NOT APPLY TO YOU. ACCESSORY WORKSHOP'S RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN HARDWARE AND ACCESSORIES IS LIMITED TO REPAIR OR REPLACEMENT AS SET FORTH ABOVE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. ACCESSORY WORKSHOP IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH ACCESSORY WORKSHOP PRODUCTS.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a class B digital device.

Pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio or television reception. This can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

FCC ID: YX7-TY-109

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.
2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Keyboard Specifications:

1. **Bluetooth** V3.0 wireless technology
2. Working Distance: Approx. 33 feet
3. Transmitting Power: Class 2
4. Operating Voltage: 3.7V
5. Standby Time: 90 days
6. Uninterrupted Use Time: 90 hours
7. Charging Time: Approx. 3.5 hours
8. Li-ion Battery Capacity: 470 mAh
9. Operating Temperature: 14° to 104°F

Getting Started:

Securing your iPad into the tyPad case

1. Open and unfold your tyPad case.
2. Position the case so that the keyboard is facing you.
3. Fold back the protective corner flaps located at the top 2 corners.
4. Carefully insert your iPad into the case via the opening at the top of the tyPad. The iPad should be inserted with the home key on the right side. See Figure A on page 4.

5. Secure your iPad in place by fitting the protective flap and corner flaps over it. Fold the protective flap into the back part of the case so that it hugs the top and back of your iPad. Fold the corner flaps over the top 2 corners for full protection. When inserted properly, the iPad will fit snugly in the case.

6. Lean iPad into viewing position. Be sure bottom is secured on hook and loop fastener strip above keyboard.

7. Your iPad is now safely nestled in the case and ready to use.

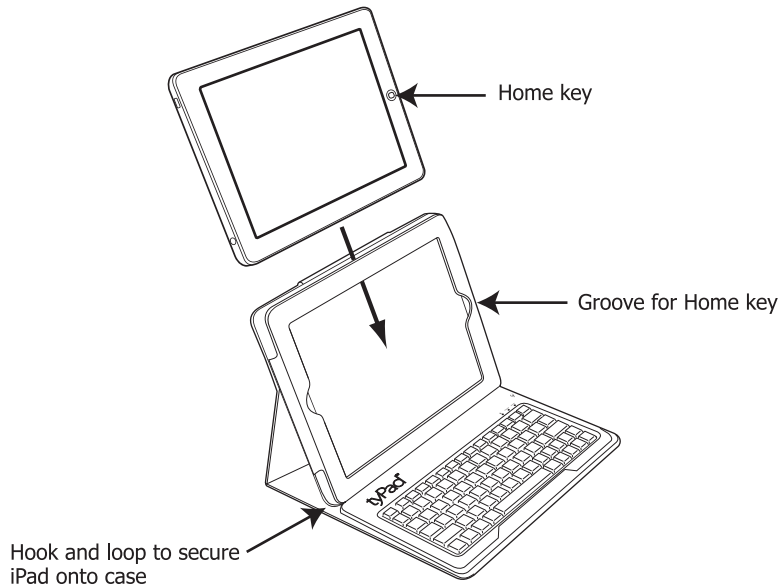


Figure A

Storage

To prolong battery life, always switch the power on the tyPad to OFF after each use.

Disposal Guidelines

The built-in keyboard for your tyPad contains a Lithium Ion battery that may require special disposal. Should you decide to discard your tyPad after use, please remove the rechargeable Lithium Ion battery and discard it in accordance with your state's battery disposal guidelines. Contact your local or county waste department or recycling facility to obtain the disposal requirements for your area.

Attention:

1. Keep away from sharp objects.
2. Do not put objects on keyboard.
3. Do not force or distort keyboard.
4. Avoid contact with liquid or food.
5. Do not drop keyboard.
6. Keys may be wiped gently with a damp cloth only. Do not soak the keys in water. Only clean the keyboard when it is powered OFF.

Disclaimer

Accessory Workshop is not responsible for any consequential or incidental damage resulting from the sale or use of any merchandise bought from us, nor is it responsible for any damage, theft, or loss incurred to your iPad when used in conjunction with this product. Please refer to the Manufacturer's Warranty section of this manual for complete details.

Note: While using your tyPad, the iPad Cover Lock/Unlock setting should be OFF in order to conserve the battery. To adjust, go to Settings » General on your iPad.

Troubleshooting and Tips:

If you are unable to sync the tyPad with the iPad, please try the steps below:

1. Make sure your iPad is turned on and working properly. Make sure your tyPad is turned on.
2. Press and release the connect button on the right side of the tyPad.
3. Make sure that your iPad is within effective range of the keyboard --If your iPad is nestled properly in the tyPad it is within range.

If the recommendations above do not solve the sync issue, reboot both your iPad and tyPad and try again. Follow the sync directions provided in this manual.

Please note that it may take up to 25 seconds for a new passkey to be generated.



TIP: When your battery is low, the power light on the keyboard will blink. You should charge your keyboard immediately to avoid losing data.

TIP: When your tyPad is inactive, it will enter standby mode. The keyboard lights will turn off. Your keyboard is not broken or powered off. Press any key (do NOT press connect button) and wait three seconds and the keyboard will revert to its normal state.

Tech Support

For technical support of your tyPad, please call 1.888.691.3047 and we will be happy to assist you.

tyPad® Keyboard

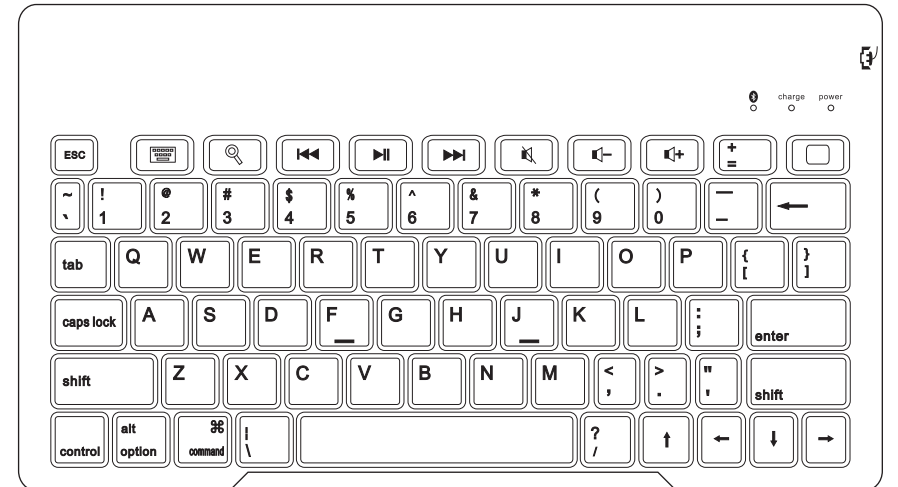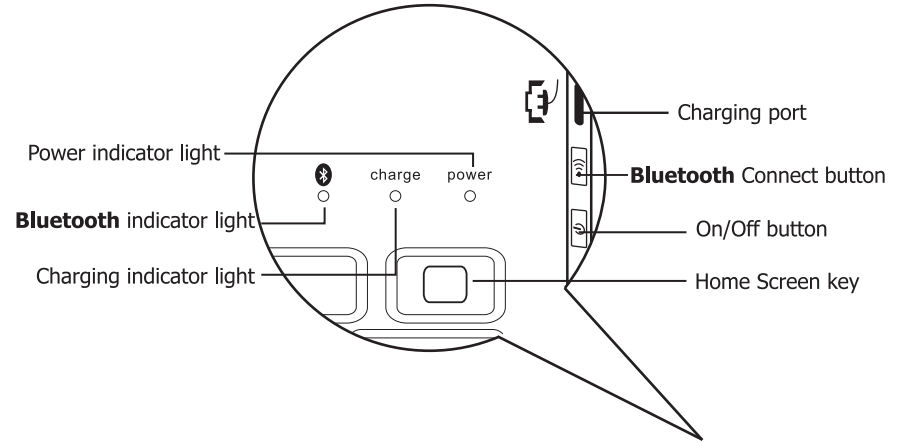

Syncing the tyPad®

How to sync the keyboard with your iPad. Note that while using your tyPad, the iPad Cover Lock/Unlock setting must be OFF. To adjust, go to Settings » General.

Step 1: Make sure your iPad is turned on.

Step 2: Turn ON tyPad by pressing On/Off button for 2 seconds on the right side of keyboard. Both the power light and **Bluetooth** light will activate.

Step 3: On your iPad screen, tap Settings button. Select General, then **Bluetooth**.

Step 4: The iPad will search for your keyboard. Select “tyPad” on the iPad screen.

Step 5: A message prompt will appear on your iPad screen. The prompt will provide you with a unique passkey to authorize the pairing of your iPad and tyPad. Enter the passkey on your keyboard exactly as it appears on the screen, then press the enter key on your keyboard. Your keyboard is now synced with your iPad device. If the passkey is entered incorrectly, the devices will not pair. You will have to repeat Step 5 and re-enter the passkey through the **Bluetooth** menu on your iPad.

Once the devices are successfully paired, the tyPad will be listed as “Connected”. Your iPad and keyboard will automatically sync each time you power on the keyboard and the iPad together.

Connect Button (⌘)

The connect button (⌘) is only for syncing your keyboard and iPad. Pressing the connect button (⌘) when the devices are already paired will unpair them. Follow the instructions under “Syncing the tyPad” to re-sync the keyboard with your iPad.

Home Screen Key (⏏)

Pressing the home screen key (⏏) on your keyboard will automatically return you to the home screen on your iPad. Pressing the home screen key (⏏) will awaken your keyboard when it is in standby mode and take you to the home screen on your iPad. (See STANDBY MODE below.)

Standby Mode

Your keyboard will automatically enter a standby mode when it is not in use to prolong battery life. When it is in standby mode the power light will turn off. The keyboard is still powered on and will come out of standby mode by pressing any key.

Charging Your tyPad®

When the power light begins flashing continuously, there is approximately one hour of battery life remaining. It’s time to charge your keyboard.

Your tyPad charges via a USB port located on the right side of your keyboard above the power button. Use the provided USB cord, attaching the small end to your keyboard and the larger end to any USB port for charging. A red indicator light will appear to confirm that the unit is charging. When the red indicator turns off, charging is complete. Approximate charging time is 3.5 hours.