

MONSTER®
ROCKIN' ROLLER®

User Manual • Manual de Usuario • Manual de Instrucciones



TABLE OF CONTENTS

Warning & FCC Statement	3
Safety Instructions	4
New Features	5
Contents	5
Speaker Component	5
Getting Started	6
Charging Battery	6
Bluetooth Connection	6
Monster Zone Control App	7
NFC Connection	7
NOAA (National Weather Service)	7
1/4" Guitar / Mic input	7
AUX Input	7
FM Radio	8
USB Charging	8
Auto Standby	8
Troubleshooting	9
Equalizer Presets	9
Specifications	10
Limited Warranty	11

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

IMPORTANT SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.

 The lightning flash with arrow- head symbol, within an equilateral triangle is intended to alert the user to the presence of insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
---	---	---

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
- 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.

- 4) Follow all instructions – All operating and use instructions should be followed.
- 5) This apparatus can be used in wet location conditions after disconnected the AC Mains supply and closing the water proof cap for the AC inlet. It must not be used in wet location conditions when charging. Do not use this apparatus near water-The appliance should not be used near water or moisture – for example, in wet basement or near a swimming pool.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lighting storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 18) Attention should be drawn to the environmental aspects of battery disposal.
- 19) The use of apparatus in moderate climate.
- 20) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



 
Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.

NEW FEATURES

TRUE WIRELESS SYSTEM (TWS) Additional speaker sold separately

True Wireless System (also known as TWS) is a feature that allows one device to wirelessly connect with another device. As a brand-new feature for the Rockin' Roller X, you can use the TWS function to connect it to a second Rockin' Roller X and play your music through two speakers at once!

- Make sure the speaker is in Bluetooth mode and connected to a device.
- Press the TWS button to activate the speaker's True Wireless System (RED LED indicator will flash in TWS mode)
- On a second speaker (NOT connected to a Bluetooth device), press the TWS button.
- When speakers connect, the RED LED indicator will stop flashing and remain on.
- To disconnect a speaker, press the TWS button.

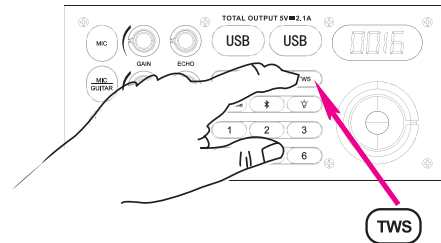


Line Out Feature

Connect additional speakers via 3.5 mm cable. (additional speakers sold separately)

NOAA WEATHER RADIO (NWR)

Also known as NWR, NOAA Weather Radio is a network of radio stations that continuously broadcast weather information throughout the U.S. The Rockin' Roller X comes equipped with NOAA radio as a play source alongside AUX, Bluetooth, and FM Radio. The unit also receives warnings from local weather stations.

 - Press the "Source" button to select "NOAA" Source. The letters "NO-1" will be displayed on the screen.
- Press and hold (◀ or ▶) to search a station with the strongest reception

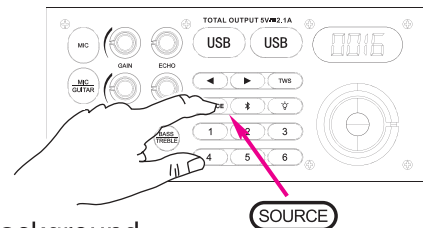

Antenna use only for NOAA operations, NOAA always active in background.

To disable NOAA Feature push volume knob until led displays "NOFF"

CONTENTS


This box includes the following items:

- Monster Rockin' RollerX speaker
- AC Power Cable
- AUX Cable
- Microphone (wired)
- User Manual (incl. Warranty Statement)
- Quick Start Guide

If any items are missing, contact our customer service team at 1.800.976.0677.


- | | | |
|---------------------------|-----------------------|--------------------------------------|
| 1. Carry handle | 9. USB port (x2) | 17. Line Out |
| 2. Ruggedized housing | 10. LED interface | 18. Mic / Guitar Input |
| 3. Telescoping handle | 11. LED lights | 19. Mic / Guitar Gain & Echo Control |
| 4. Battery life indicator | 12. AUX input | 20. NOAA antenna |
| 5. Power On/Off switch | 13. Source selector | |
| 6. AC power input | 14. Bluetooth pairing | |
| 7. AC pass-through outlet | 15. Radio presets | |
| 8. In-line rolling wheels | 16. Volume knob | |

 SPEAKER COMPONENTS

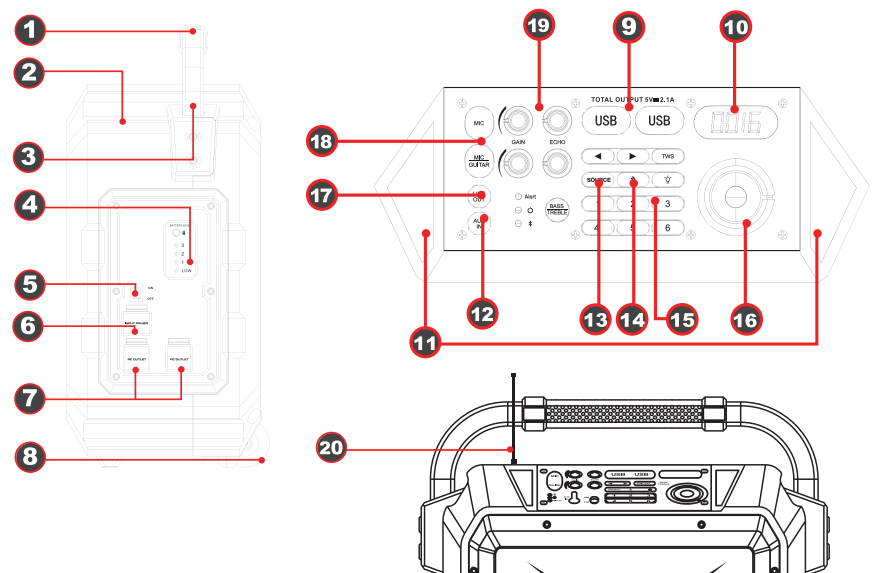


GETTING STARTED

 - Press Battery Level button on side panel to check current battery charge
- Turn the Power switch to ON.
- The LED battery indicator will turn on.
- The unit will enter Bluetooth pairing mode (LED will flash blue).
- If 3.5mm AUX cable is plugged in, unit will automatically enter AUX mode.

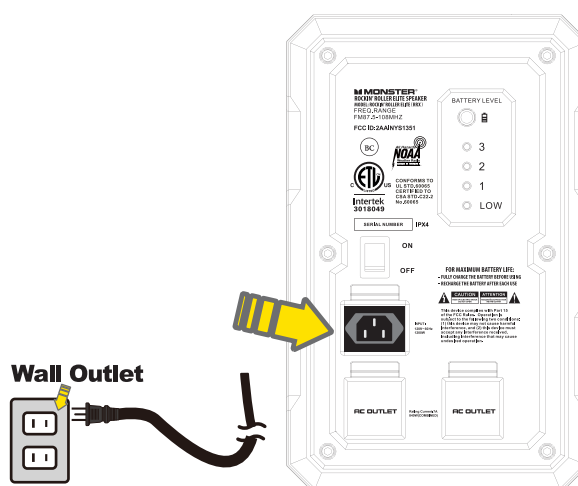

CHARGING BATTERY


 
- Connect speaker to AC outlet via AC power input to charge battery.
 - Full charge in 7 hours while powered OFF.
 - Full charge in 15 hours while powered ON.
- 3 GREEN LED indicates full battery charge.
- Flashing RED LED indicates that the battery level is low.
- NOTE: Before first use, charge unit for ~6 hours.

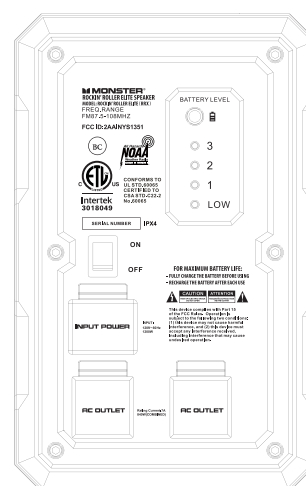


BLUETOOTH CONNECTION

Manual Bluetooth pairing

  - Place speaker and Bluetooth device within 3 feet of each other.
- Make sure Bluetooth function is enabled on your device.
- Press and hold Bluetooth button for 2 seconds to enter pairing mode. BLUE LED will flash.
- Search for Bluetooth connections on your device. Select "MONSTER RR3"

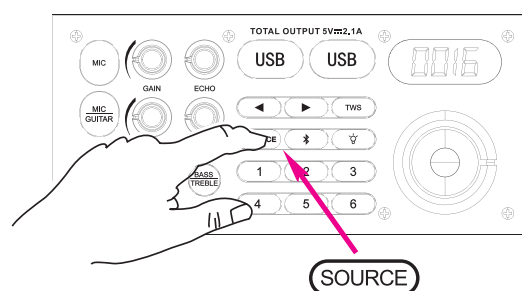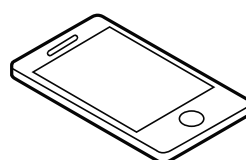

Bluetooth®
Pairing

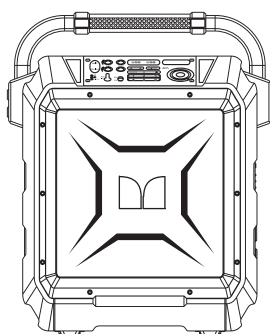 

- Speaker will confirm connection with audible sound.
- Once paired, **BLUE LED** will stop flashing and remain steady.

 
MONSTER ZONE CONTROL APP Phone not included

Using the **FREE** mobile app, you can make adjustments on the fly to the Decora's settings and functions – all from your smart device.




NFC CONNECTION

- Turn the speaker on to Bluetooth pairing mode by pressing and holding  to enter into Bluetooth pairing mode.
- Activate Bluetooth on your NFC Compatible mobile device
- Tap your mobile device onto the NFC logo of the speaker
- Bluetooth Blue LED Indicator turns solid upon pairing

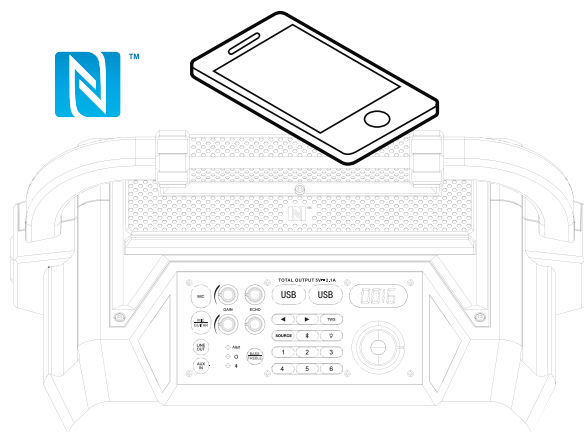


1/4" GUITAR / MIC INPUT Guitar not included

 - Plug in the 1/4" audio jack plug in the MIC input for Microphone, GUITAR input for guitar, the unit will enter into that mode (MIC / GUITAR), make sure the the Microphone, Guitar, or other device is on.
- You can connect any audio device that has 1/4" audio output jack, and can playback and audio from this connected device.
- Playback functions (Play, Pause, Next, Previous) can be controlled from the connected Audio device.
- Guitar not included

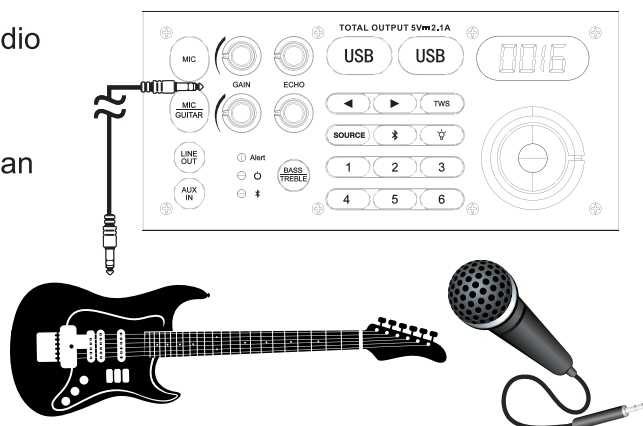

AUX INPUT

 
- Plug in the 3.5 mm Stereo Audio wire into the AUX-IN input, and the unit will enter into AUX mode and the BT Blue LED indicator will turn off..
- You can connect any audio device that has 3.5mm audio output jack, and can playback any audio from this connected device.

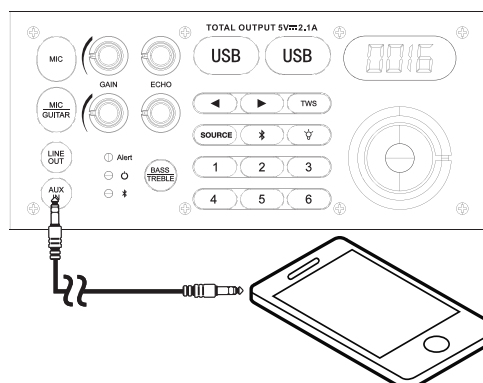

FM RADIO

Listening to FM radio

 - Press the “Source” button to select FM source, the radio station frequency will be displayed on the screen
- Press and hold (◀ or ▶) to search a station with the strongest reception.

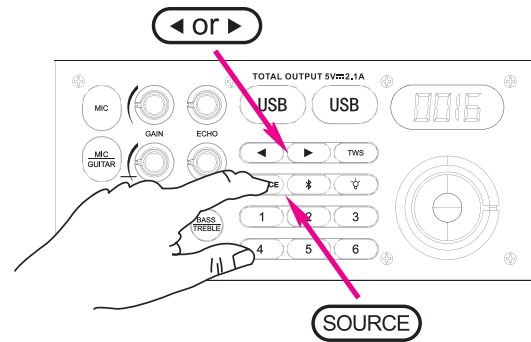

Store your favorite six radio stations manually

- Tune to the desired radio station.
- Press and hold a number key (1-6) to enter programming mode; The corresponding number blinks on the screen; enter the stations to save on the selected preset.
- Repeat above step 1-2 to store additional stations.


Store a favorite radio station

- Press the “Source” button to select FM source.
- Press the number 1-6 keys to select one of your favorite radio stations to listen.

USB CHARGING

- With the built in USB power back, connect your USB cable to one of the two USB power ports. You can connect an iPhone, iPad, or any Android device. (USB cable not included)

Items	Parameters
Capacity of Built-in Battery	12V / 9A
Power Bank Output	voltage 5V/2.1A

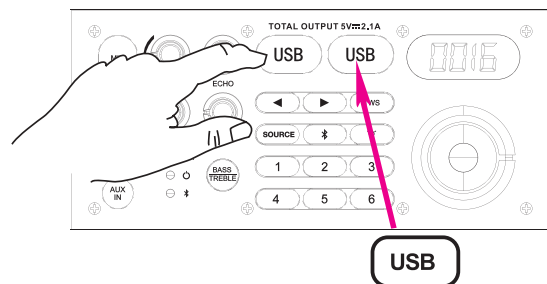 

AUTO STANDBY

When entering standby, the RED LED Power signal will turn on, and all other LED lights will turn off.

- **Bluetooth:** Standby mode enables when there is no BT connection, when it has been disconnected for 15 minutes, or if there is a connection failure.
- **AUX:** Standby mode enables when the speaker is in AUX mode and does not detect an AUX cable.
- **Work:** Standby mode enables in work mode by pressing and holding volume knob for 3 seconds.

“Wake up” from standby mode:

If the main unit is in Standby mode, press and hold the volume knob for 1 second. The main unit will turn on and return to the latest source mode. The Power Red LED Signal will turn off and the LED Screen will display the latest source once the main unit is in work mode.

TROUBLESHOOTING

General

No power

- Make sure AC power cord is fully inserted into the unit and the electrical outlet,
- Make sure Power switch is turned to the ON position.
- If battery is flat, plug AC power cord into electrical outlet to charge.

No Button/Key Response

- Turn Power switch to OFF, then back to ON to reset the unit.
- Unplug the AC power cord and plug it back in.

No Music Playing

- Make sure AUX/Bluetooth-connected device volume is turned up.
- Make sure Bluetooth-connected device is playing audio through BT.

Disable NOAA Feature

- Push volume knob until led displays “NOFF”

Bluetooth Operations

Poor Audio Quality

- Bluetooth connection may be poor, move Bluetooth device closer to the unit.

Cannot Pair to Device

 
- Make sure the unit is not paired to another Bluetooth device.
- Make sure the unit's Bluetooth is switched to ON.
- Make sure the unit is in pairing mode (BLUE LED flashing).
- Turn Power switch to OFF, then back to ON. Press and hold BT button for 2 seconds to enter pairing mode.

EQUALIZER (EQ) PRESETS



Customize your listening experience with 6 EQ settings when in **Bluetooth** or **AUX** mode.

- 1 FLAT
- 2 JAZZ
- 3 ROCK
- 4 POP
- 5 CLASSICAL
- 6 DEFAULT

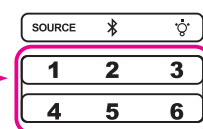

SPECIFICATIONS

General	
Input(s) / Output(s)	Bluetooth / FM / AUX / NOAA
Power Input	AC IN 120V/60Hz
Power Save	When the unit is not being used for over 15 minutes it will automatically enter standby mode (BT and AUX mode only)
Speaker Output	100W
Driver Layout	8" (woofer) + 3" (full range)
Cabinet Material	Plastic
Dimensions (W x H x D)	16.7" x 20.6" x 9.05"
Weight	21 lbs
THD + Noise	<10%
S/N	>75dB

Operating Temperature	
Operating Temperature Range	32 F° - 95 F°
Operating Humidity Range	40~90% RH
Storage Temperature Range	-13F° to 158F°

Button Key	
Power On / Off	Power On: Switch key to "ON" Power Off: Switch key to "OFF"
Source	Press to change between "BT", "AUX IN", "FM" or "NOAA"
Volume Knob	1. Rotate VOLUME knob to increase / decrease volume. 2. Press and hold the VOLUME knob for 3s to enter standby status.
Bluetooth	1. Press and hold to enter pairing mode.
Previous / Next Key	Press and hold to search radio stations when in FM mode
Preset	Press 1-6 to play preset station. Press and hold to store current station to preset
Battery Level	Press button to activate LED display

Connections	
3.5mm AUX In	x1
3.5mm AUX Out	x1
USB Port	x2 (5v Parallel 2.1A)
AC In	x1
AC Out	x 2 (Passthrough)
1/4" Line in	x 2

Bluetooth	
Bluetooth Version	BLE Module:4.0/BT Module:4.2
Bluetooth Profile	A2DP, AVRCP
Bluetooth Range	10m (33ft.)

Limited Warranty

Model: Rockin' Roller X

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a 'marked down' special, in as is condition, 'close outs', "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used In the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days. This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

Telephone: 800-976-0677

Ver. 130828-i

TABLA DE CONTENIDO

Declaración de Advertencia de la FCC	13
Importantes Instrucciones de Seguridad	14
Funciones Nuevas	15
Contenido	15
Componentes del Altavoz	15
Empezando	16
Cargando la Batería	16
Conexión Bluetooth	16
Monster Zone Control App	17
Conexión NFC	17
NOAA (servicio meteorológico nacional)	17
Entrada 1/4" de Micrófono / Guitarra	17
Entrada AUX	17
Radio FM	18
Carga USB	18
En Espera Automático	18
Solución del Problemas	19
Preajustes de Ecualizador	19
Especificaciones	20
Garantía Limitada	21

DECLARACIÓN DE ADVERTENCIA DE LA FCC

Cambios o modificaciones a este aparato que no estén expresadamente aprobados por la parte responsable podrían anular la autoridad del usuario para utilizar este aparato.

Este equipo ha sido sometido a pruebas y se ha encontrado que cumple con los límites establecidos para un aparato digital de Clase B, de acuerdo a la Parte 15 del Reglamento de la FCC.

Estos límites están diseñados para proporcionar protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera o emplea energía de radiofrecuencia y, si no es instalado y empleado de acuerdo a estas instrucciones, puede causar interferencias perjudiciales a las radiocomunicaciones. Sin embargo, no garantizamos que no ocurrirán interferencias en una instalación en particular; si este equipo causa interferencias perjudiciales a la recepción radial o televisiva, situación que puede ser determinada apagando y encendiendo el equipo, se sugiere al usuario que trate de corregir tal interferencia mediante una o más de las siguientes medidas:

- Reoriente o relocalice la antena receptora.
- Incremente la separación entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente o circuito diferente al que está conectado el receptor.
- Si estas medidas no eliminan la interferencia, por favor consulte con su centro de servicio autorizado para solicitar asistencia.

DECLARACIÓN DE EXPOSICIÓN A LA RADIACIÓN DE LA FCC

Este equipo cumple con los límites de exposición a la radiación de la FCC establecidos para un ambiente no controlado. Con el fin de evitar la posibilidad de exceder los límites de exposición a radiofrecuencia de la FCC, la proximidad humana a la antena no deberá ser inferior a los 20 cm (8 pulgadas) durante el funcionamiento normal.

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Para evitar el riesgo de incendio o descarga eléctrica, no use este enchufe con un cable de extensión, receptáculo u otro tomacorriente a menos que la cuchilla quede completamente insertada para evitar la exposición de la cuchilla. Para evitar el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia ni a la humedad.

 Un rayo y una punta de flecha dentro de un triángulo equilátero denotan la presencia de "voltaje peligroso" aislado dentro del gabinete del producto. El voltaje puede ser de magnitud suficiente como para constituir un riesgo de descarga eléctrica para las personas que entran en contacto con él.	PRECAUCIÓN NO ABRIR RIESGO DE DESCARGA ELÉCTRICA Advertencia: para reducir el riesgo de descarga eléctrica, no remueva la cubierta (parte posterior). Dentro de la unidad no hay partes que le puedan servir, si la unidad necesita servicios llévela con un técnico calificado.	 El signo de exclamación dentro de un triángulo equilátero indica la presencia de instrucciones importantes de operación y mantenimiento/servicio.
--	---	--

- 1) Lea las instrucciones – Debe leer todas las instrucciones de operación y seguridad antes de operar este aparato.
- 2) Guarde las instrucciones – Debe guardar las instrucciones de operación y seguridad para referencias futuras.
- 3) Respete todas las advertencias – Debe seguir al pie de la letra todas las advertencias marcadas en la unidad y en este manual de instrucciones.

- 4) Siga todas las instrucciones – Debe seguir todas las instrucciones de operación y uso.
- 5) Este aparato se puede usar en lugares mojados solamente después de desconectarlo de la fuente de alimentación de ca y de cerrar la tapa a prueba de agua para la entrada de ca. No se debe usar en lugares mojados cuando se está cargando. No use este aparato cerca del agua o en lugares húmedos; por ejemplo, en un sótano mojado o cerca de una piscina.
- 6) Limpie este aparato solamente con un paño suave y seco.
- 7) No bloquee ni cubra las ranuras de ventilación, instale este aparato de acuerdo a las instrucciones del fabricante.
- 8) No instale este aparato cerca de ninguna fuente de calor como radiadores, registradores de calor, estufas u otros aparatos que generen calor (incluyendo amplificadores).
- 9) Este aparato puede estar equipado con un enchufe polarizado de corriente alterna (un enchufe con una hoja más ancha que la otra); este enchufe entrará de una sola forma en el tomacorriente. Esta es una función de seguridad; si le es imposible insertarlo completamente en el tomacorriente de pared, vuelva a intentarlo invirtiendo el enchufe. Si después de esto, todavía no entra consulte con un electricista para que le cambie el tomacorriente obsoleto; no trate de modificar la función de seguridad del enchufe polarizado.
- 10) Proteja el cable de ca, colóquelo en un lugar donde nadie pueda pisarlo o colocar objetos pesados sobre él; ponga especial cuidado al área del enchufe y al punto de donde sale el cable de la unidad.
- 11) Use solamente accesorios y/o adaptaciones especificadas por el fabricante.
- 12) Use sólo con un carrito, soporte, trípode o mesa recomendado por el fabricante, o vendidos con el aparato. Sea extremadamente cuidadoso cuando transporte este aparato de un lugar a otro; paradas repentinas, fuerza excesiva y superficies desniveladas pueden causar que el aparato se caiga y se dañe seriamente. Cualquier montaje de la unidad en la pared, debe adherirse a las instrucciones del fabricante.
- 13) Desenchufe este aparato del tomacorriente en la pared durante una tormenta eléctrica o cuando no lo vaya a usar durante un largo período.
- 14) Refiera todo el servicio de este aparato a personal de servicio calificado, cuando se haya dañado de alguna manera, el cable de alimentación o el enchufe están dañados, se ha derramado líquido o han caído objetos dentro del aparato, el aparato ha sido expuesto a la lluvia o humedad, el aparato no funciona normalmente, o se ha caído.
- 15) El enchufe principal se usa como dispositivo de desconexión y debe permanecer fácilmente accesible durante el uso.
- 16) No instale este aparato en un espacio confinado o incorporado, como una estantería o mueble similar, asegúrese de colocarlo en un lugar donde se le proporcione la ventilación adecuada. Nunca cubra/bloquee las ranuras/aberturas de este aparato con periódicos, manteles, cortinas, etc.
- 17) No coloque fuentes de llama descubiertas, como velas encendidas sobre o cerca de este aparato.
- 18) Se debe prestar atención a los aspectos ambientales de la eliminación de la batería.
- 19) Use este aparato en un clima moderado.
- 20) No exponga este aparato a salpicaduras o goteo, nunca coloque objetos llenos con líquido sobre o cerca de este aparato.



ADVERTENCIA: Para reducir el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia o a la humedad.

ADVERTENCIA: Nunca exponga las baterías al calor excesivo como al fuego, la luz solar directa o similar.

PRECAUCIÓN: Peligro de explosión si reemplaza la batería incorrectamente. Reemplace la batería sólo con una del mismo tipo o equivalente.



 
Terminal de puesta a tierra de protección. El aparato debe conectarse a un toma de corriente con una conexión a tierra de protección.

FUNCIONES NUEVAS

ESTÉREO INALÁMBRICO VERDADERO (TWS) Altavoz adicional se vende por separado

Estéreo Inalámbrico Verdadero (también conocido como TWS) es una función que permite que un dispositivo se conecte de forma inalámbrica con otro dispositivo. Como una nueva función para Rockin' Roller X, podrá usar la función TWS para conectarla a un segundo Rockin' Roller X y reproducir su música a través de dos altavoces a la vez.

- Asegúrese que el altavoz esté en el modo Bluetooth y conéctelo a un dispositivo.
- Presione el botón TWS para activar el modo Estéreo Inalámbrico Verdadero del altavoz (el indicador LED ROJO parpadeará en el modo TWS).
- En un segundo altavoz (NO conectado a un dispositivo Bluetooth), presione el botón TWS.
- Cuando se conecten los altavoces, el indicador LED ROJO dejará de parpadear y permanecerá encendido.
- Para desconectar un altavoz, presione el botón TWS.

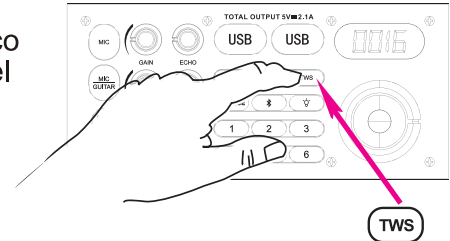


FUNCIÓN SALIDA DE LÍNEA

Conecte altavoces adicionales a través de un cable de 3,5 mm (los altavoces adicionales se venden por separado).

RADIO METEOROLÓGICO NOAA (NWR)

 También conocido como NWR, NOAA Weather Radio es una red nacional de estaciones de radio que transmiten información meteorológica continua a lo largo de los Estados Unidos de América. El Rockin' Roller 3 viene equipado con el radio NOAA como una Fuente de reproducción al lado de AUX, Bluetooth, y Radio FM. La unidad también recibe advertencias de las estaciones meteorológicas locales.

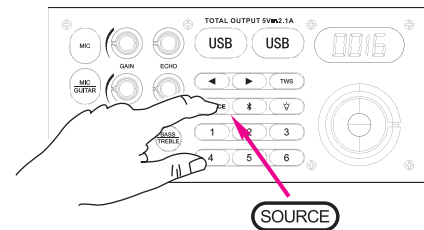

- Presione el botón SOURCE para seleccionar la fuente "NOAA". Las letras "NO-1" aparecerán en la pantalla.
- Mantenga presionado el botón ◀ o ▶ para buscar una estación con la recepción más fuerte.

La antena se usa solamente para las operaciones NOAA, NOAA siempre está activo en el fondo. Para desactivar la función NOAA, presione el botón de volumen hasta que aparezca la indicación "NOFF".

CONTENIDO


Verifique que todos los siguientes elementos estén incluidos en su paquete:

- Altavoz Monster Rockin' Roller X
- Cable de ca
- Cable Auxiliar
- Microfófono (alámbrico)
- Manual de Instrucciones (Garantía Limitada incluida)
- Guía de Inicio Rápido

Si falta alguno de los elementos, comuníquese con nuestro equipo de servicio al cliente al 1-800-976-0677.

- | | | |
|---------------------------------------|------------------------------|---------------------------------------|
| 1. Agarradera de transporte | 8. Ruedas rodantes en línea | 16. Botón de volumen |
| 2. Cubierta resistente | 9. Puertos USB | 17. Salida de Línea |
| 3. Agarradera telescópica | 10. Interfaz LED | 18. Entrada de Microfófono/Guitarra |
| 4. Indicador de la vida de la batería | 11. Luces LED | 19. Entrada de Microfófono/ GAIN/ECHO |
| 5. Interruptor de Encendido/Apagado | 12. Entrada AUX | 20. Antena NOAA |
| 6. Entrada de ca | 13. Selector de Fuente | |
| 7. Salida de paso de ca | 14. Emparejamiento Bluetooth | |
| | 15. Preajustes de radio | |

 
ESCRIPCIÓN DEL ALTAVOZ

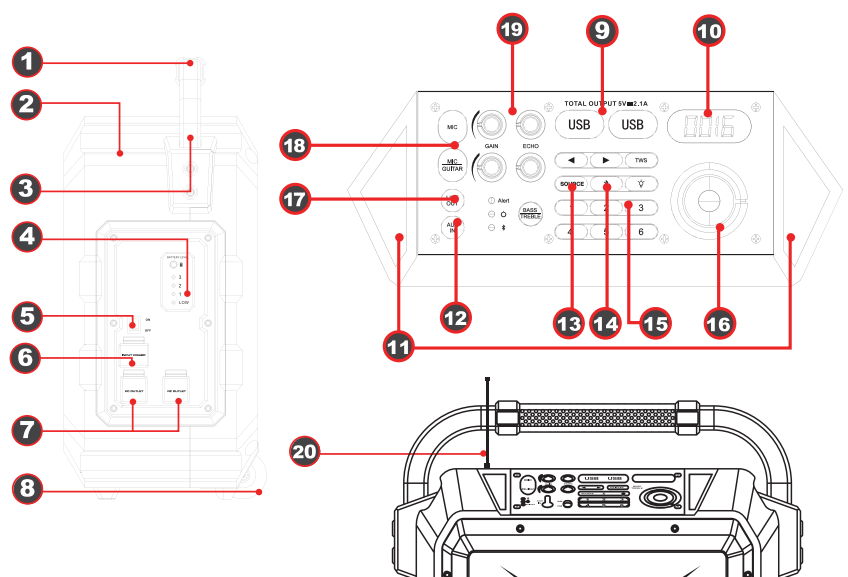

EMPEZANDO



- Presione el botón del nivel de batería ubicado en el panel lateral para verificar el nivel de carga actual de la batería.
- Coloque el interruptor de encendido/apagado en la posición ON.
- El indicador LED de la batería se iluminará.
- La unidad entrará en el modo de emparejamiento Bluetooth (el indicador LED AZUL parpadeará).
- Si hay un cable AUX de 3,5 mm enchufado, la unidad entrará automáticamente en el modo de AUX.

 Toma de Corriente

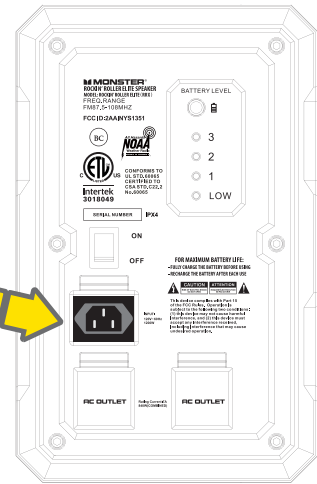

CARGANDO LA BATERÍA


 
 
- Conecte el altavoz en un tomacorriente en la pared para cargar la batería.
 - Carga completa en 7 horas mientras el altavoz está apagado.
 - Carga completa en 15 horas mientras el altavoz está encendido.
- Los 3 indicadores LED VERDE iluminados significa que la batería está completamente cargada.
- El indicador LED ROJO parpadeando significa que el nivel de la batería está bajo.
- NOTA: Antes de usar la unidad por primera vez, cargue la batería durante 6 horas.

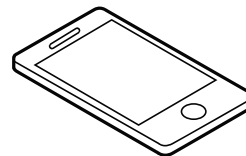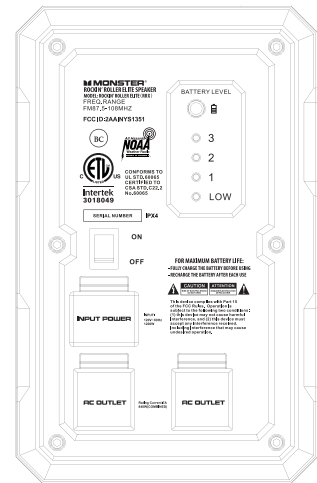

CONEXIÓN BLUETOOTH

Emparejamiento Bluetooth manual

   - Coloque el altavoz y el dispositivo Bluetooth dentro de una distancia de separación no mayor a los 3 pies.
- Asegúrese que la función Bluetooth esté ACTIVADA en su dispositivo.
- Mantenga presionado el botón Bluetooth por 2 segundos para entrar en el modo de emparejamiento Bluetooth. El indicador LED AZUL parpadeará.

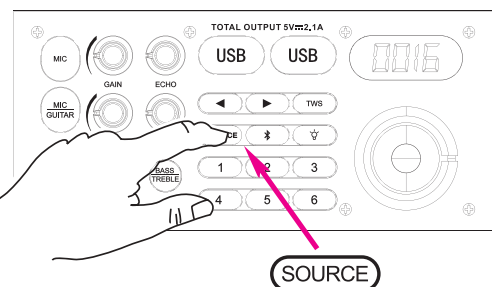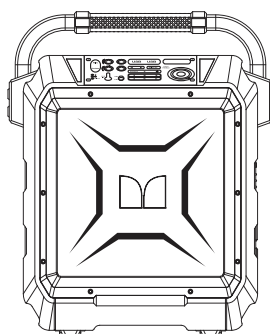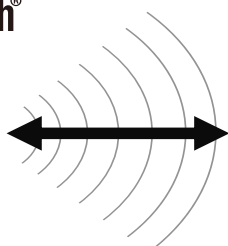

- Busque las conexiones Bluetooth en su dispositivo. Seleccione "MONSTER RRX".
- El altavoz confirmará la conexión con un sonido audible.
- Una vez emparejado, el indicador LED AZUL dejará de parpadear y se quedará fijo.