 





TRUE
WIRELESS
EARBUDS


WHAT'S INCLUDED

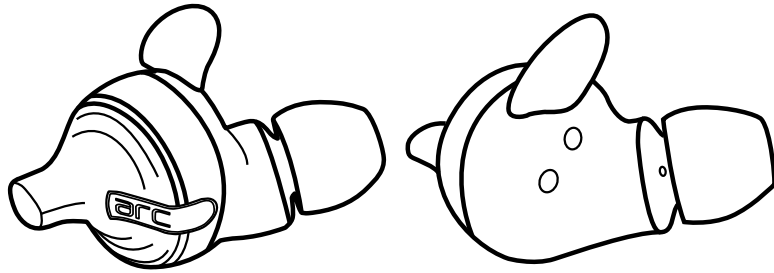

 True wireless earbuds(Left & Right)

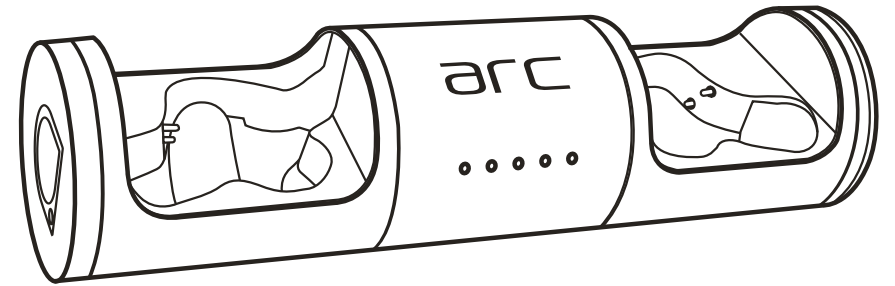


Portable charging case

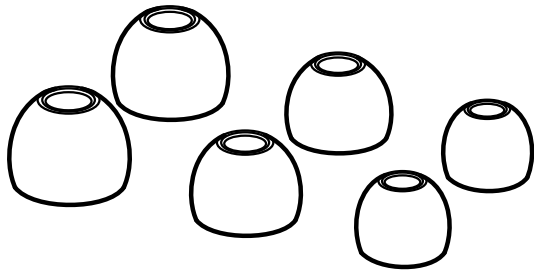 


Ear tips(Small,Medium & Large)



 
Soft bag

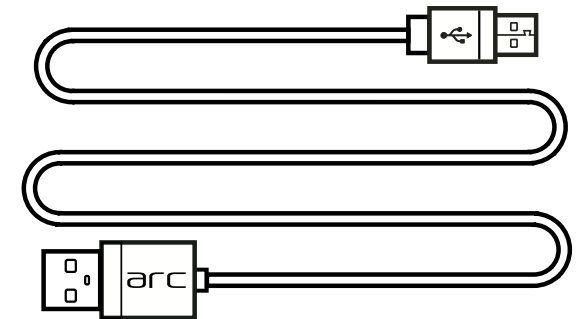

USB to micro-USB cable

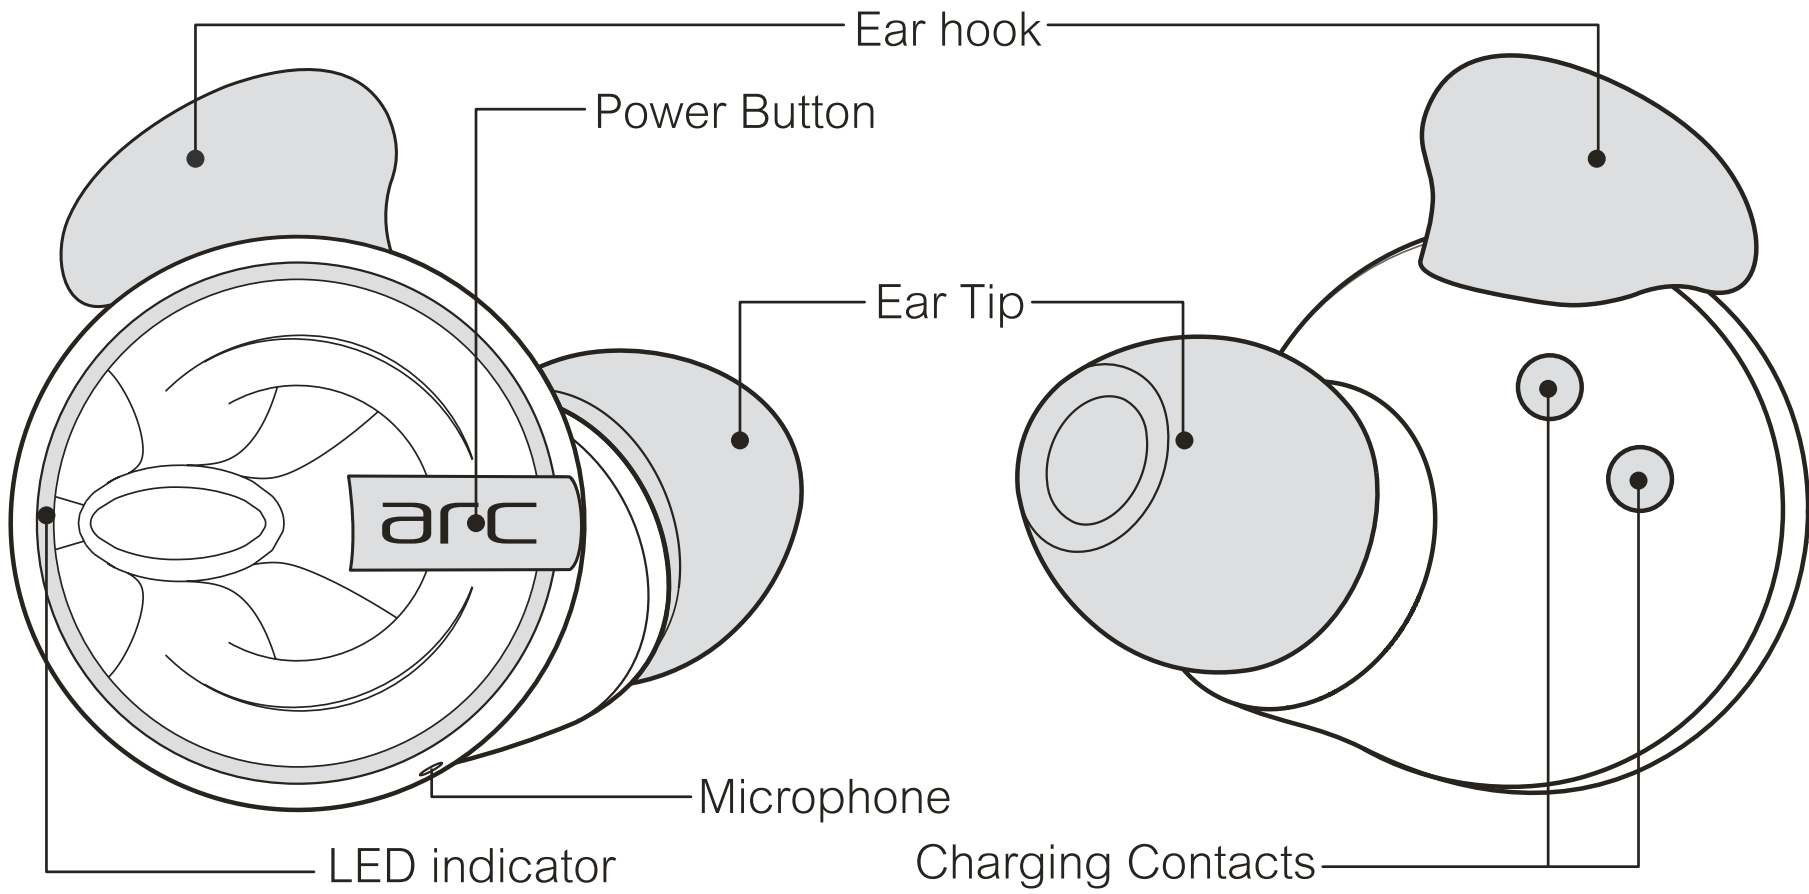 




PARTS & FEATURES

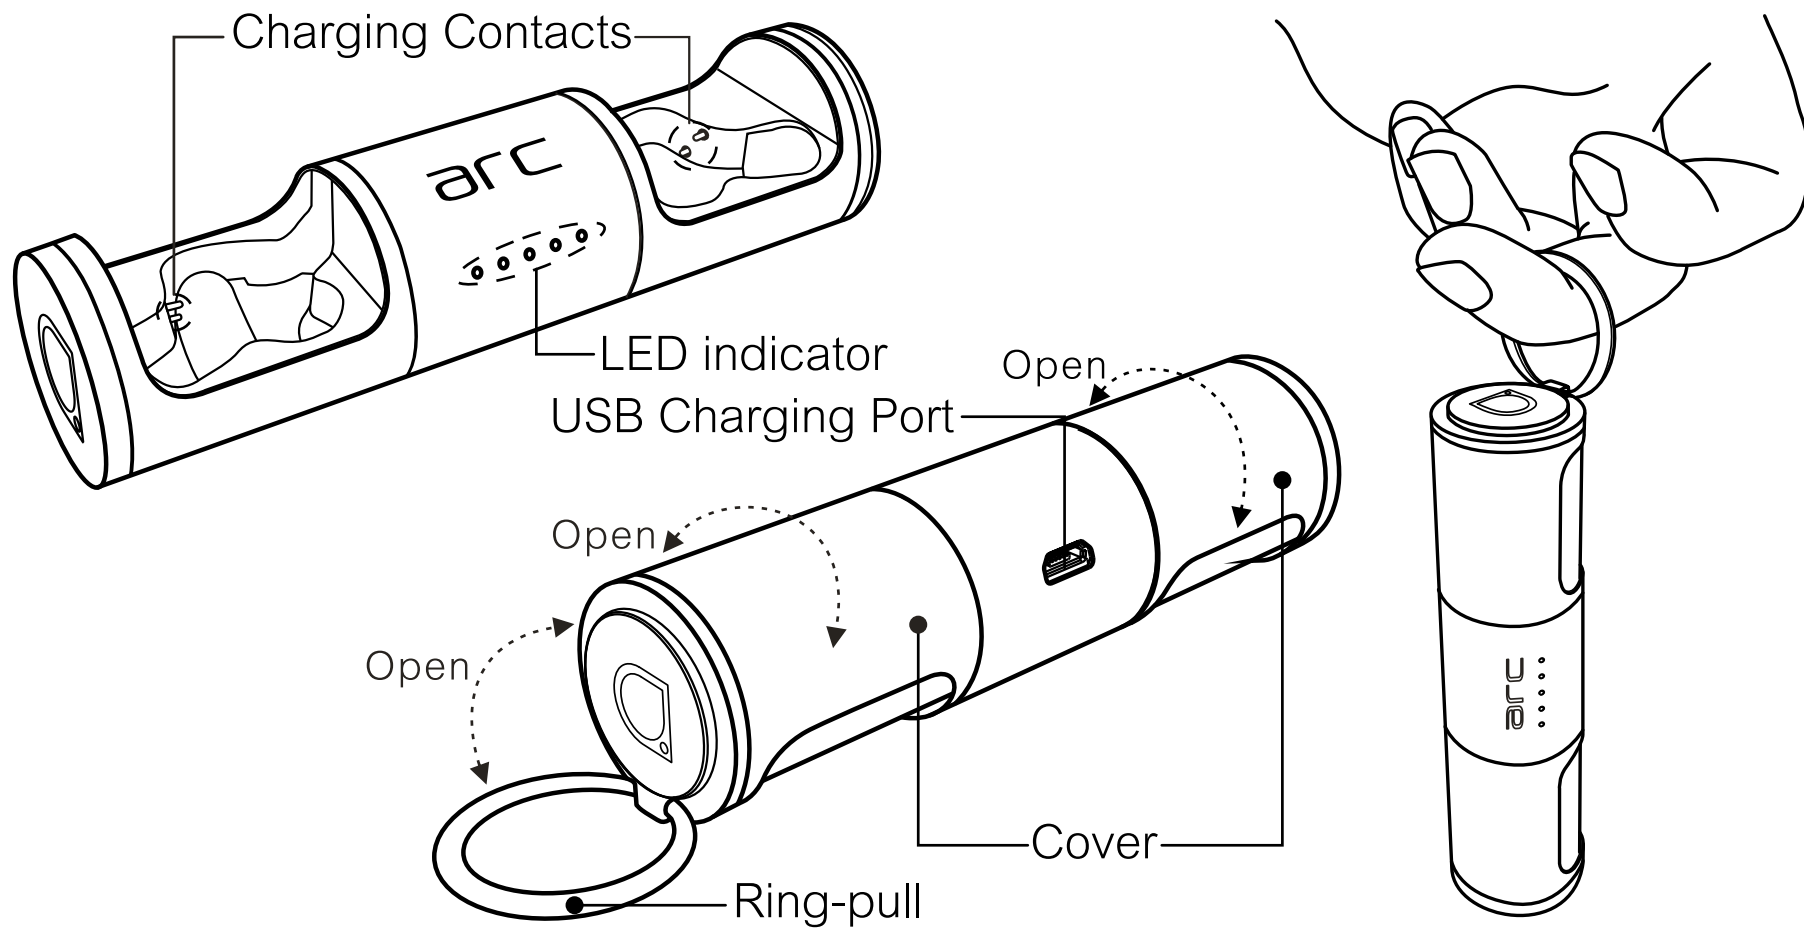 

CHARGING EARBUDS

◎ Twist to open the covers of portable charging case.

   ◎ Insert the earbuds into the portable charging case as the following steps:

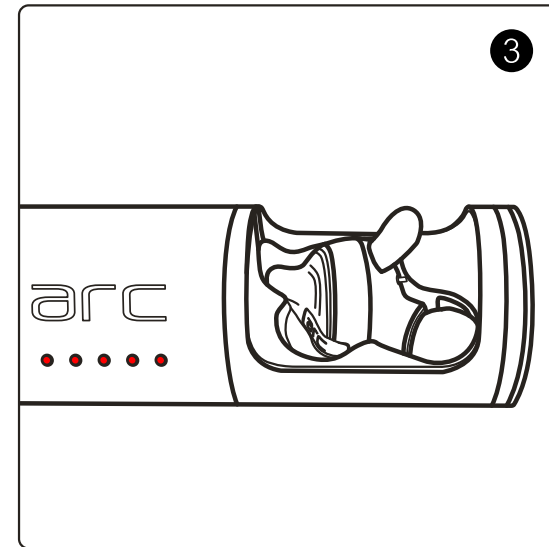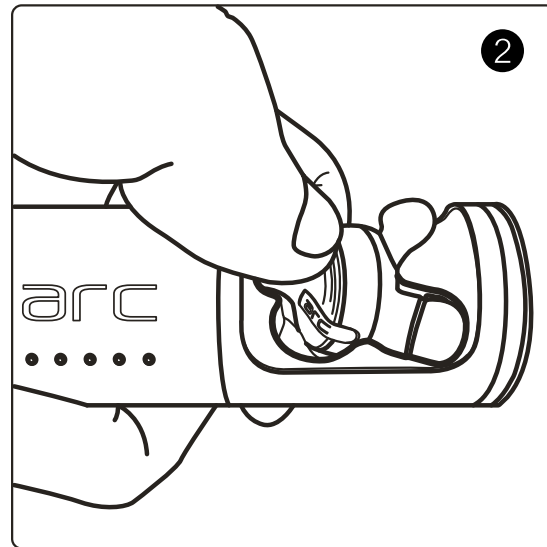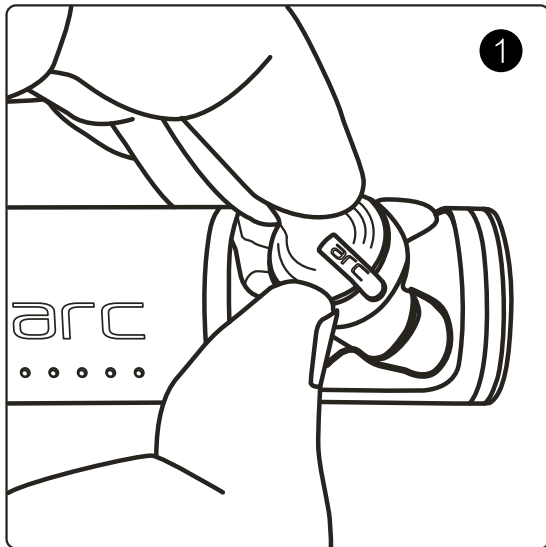

- ① Insert the nozzle of the earbud into the case first;
- ② Press the earbud gently to fix it into the case;

- ③ Make sure the LED indicator flashes in blue and orange intermittently. It means the earbud is charging.
- ◎ Charging time is approx. 1.5 hours and the LED indicator will turn off when charging is completed.

CHARGING THE PORTABLE CHARGING CASE

 
 
 
The portable charging case contains a lithium rechargeable battery which can recharge the earbuds four times. Charge the portable charging case by using the USB to micro USB cable.

- ◎ Connect the small end of USB cable to the portable charging case, then connect the large end to a power source.
- ◎ The orange LED indicators light up.
- ◎ Charging time is approx. 2 hours*. When it is fully charged, all LED indicators will turn off.

* Time required for charging the empty battery to its full capacity.

TAKE OUT EARBUDS FROM CHARGING CASE

- ◎ Twist to open the covers of portable charging case.
- ◎ Take out the earbuds from charging case as the following steps:

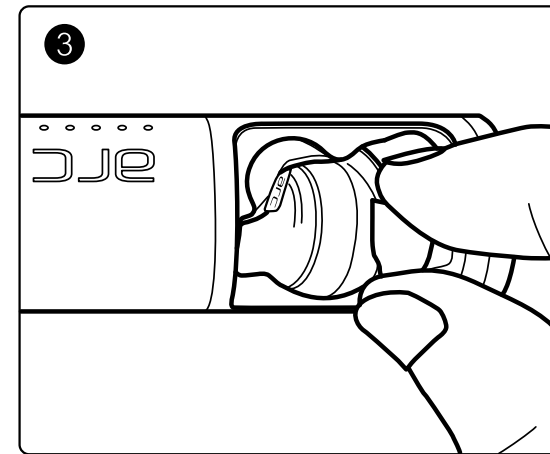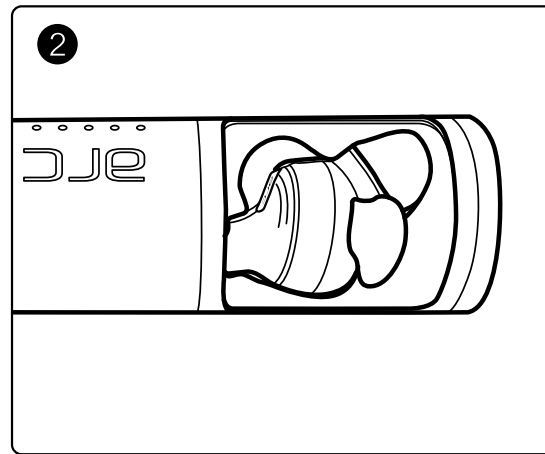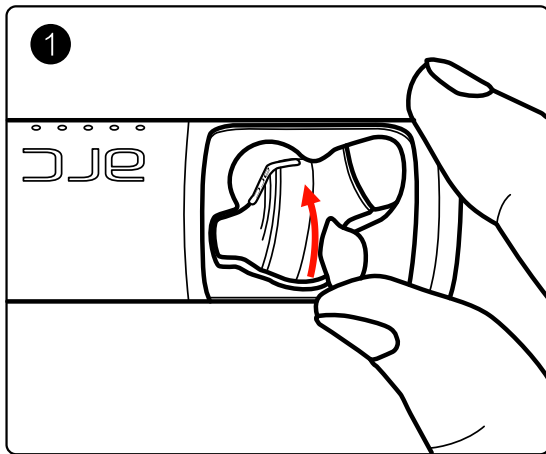

- ① Push the ear fin in the direction shown in diagram.
- ② Make sure the earbud is detached from the charging pins.
- ③ Take out the earbud gently.

OPEN AND PAIR THE EARBUDS

- ◎The left (L) and right (R) earbuds have been paired during manufacturing.
- ◎Put both left and right earbuds within 1 foot in distance while pairing
- ◎Turn on the earbuds simultaneously by pressing the Power buttons on both left and right earbuds for 2 seconds
- ◎The left and right earbuds will under pairing mode after switch on and the LED indicator will flash rapidly in orange.
- ◎Signal seek mode will open for 15 seconds
- ◎Turn on the Bluetooth function now and select “ARC.SPARK” from the list.
- ◎If your device requires a password, enter “0000”
- ◎When connected, the LED indicator of both earbuds will flash slowly in orange.

* Remarks : When the earbuds are turned on, they will search for each other for pairing first. After that, user should pair the Bluetooth device with the right earbud.

Even though the left earbud is not turned on, the right earbud will still search for the left earbud for 15 seconds before going to pairing processes with a Bluetooth device.

PLAYBACK MUSIC ON THE EARBUDS

- ◎ Play music on the paired device.
- ◎ Adjust the volume on the paired device.
- ◎ When playing music, LED indicators on both earbuds will light up in blue.

MAKE PHONE CALLS ON THE EARBUDS

- ◎ Making a call
 - Dial the number on paired device.
 - Adjust the volume on the device and select “ARC.SPARK”
 - To end a call by pressing “Power” button on the right earbud.

◎Receiving a call

- Press “Power” button on the right earbud to receive an incoming call.
- Adjust the volume on the device.
- To end a call by pressing “Power” button on the right earbud.
- To refuse an incoming call by pressing “Power” button on the right earbud for 2 seconds.

* Remark: Phone call feature is only activated on the right earbud.

RUNNING OUT OF BATTERY

◎When battery runs low, the orange LED indicator will flash.

◎After the orange LED indicator flashes, earbud will turn off automatically in 1 minute.

◎Use the portable charging cable to charge the earbuds when they run out of battery.

TURN OFF THE EARBUDS

◎Press “Power” button on both earbuds for 2 seconds to turn off.

©When the earbuds are not connect with any devices for 15 minutes, it will turn off automatically.

RESET THE EARBUDS

- ©Turn the left and right earbuds off.
- ©Press the “Power” button of both earbuds for 12 seconds simultaneously to clear old memory and reset.
- ©The LED indicators will flash between orange and blue three times.
- ©Start “Open and Pair the earbuds” procedures again.

LED INDICATION OF EARBUDS

Color	Status
Orange(flash)	Power on / pairing
Blue(flash)	Connected / playing
Orange(flash)	Low battery
Blue and orange flash intermittently	Charging
Orange(still)	OFF

LED INDICATION OF CHARGING CASE

Color	Status
Orange(still)	Battery level
LED off	Earbuds are fully charged
Orange(flash)	Charging
5 Orange LED on(still)	Charging case is fully charged

* The Charging case LED display the battery level and status.

Problems	What to do
The earbuds do not charge	<ul style="list-style-type: none">⦿ Make sure earbuds are well connected with the portable charging case.⦿ Make sure the portable charging case still has enough battery.⦿ Put out and put in the earbuds to the portable charging case again.
The portable charging case does not charge	<ul style="list-style-type: none">⦿ Make sure both ends are well connected when charging⦿ Disconnect and reconnect the charging cable
The earbuds do not pair or connect with the Bluetooth device	<ul style="list-style-type: none">⦿ Make sure the earbuds are not connected with other devices.⦿ Make sure the Bluetooth is turned on your device.⦿ Make sure the Bluetooth device is not connected with other devices.⦿ Turn off the Bluetooth device and then turn on again.⦿ Reset the earbuds by pressing the power button for 12 seconds to clear the paired device list.⦿ Try connecting with other Bluetooth device to ensure the earbuds are working properly.

Problems	What to do
No sound	<ul style="list-style-type: none">⦿ Make sure the earbuds are turned on.⦿ Make sure the earbuds are connect with the Bluetooth device.⦿ Make sure the volume of the connected device is not too low or not muted.⦿ Try another track or audio source.⦿ Try connecting with other Bluetooth device to ensure the earbuds are working properly.
Signal drop	<p>The signal between left and right earbuds may drop when you enter a place with much interference (such as WiFi signals). It is a normal circumstances.</p>

MAINTENANCE AND CLEANING

Earbuds should be cleaned regularly for a better experience.

⦿ Keep the earbuds and ear tips as clean and dry as possible.

- ◎To clean ear tips, remove them from earbuds, rinse in warm water gently and air dry.
- ◎Ear tips must be completely dry before reusing.
- ◎Wipe the earbuds with dry cloth. Do not put the earbuds into water.
- ◎Do not attempt to modify this product. Doing so will void the warranty and could result in personal injury and/or product failure .

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

EARPHONES	
Earphone Form Factor	In-ear
Earphone Technology	Dynamic
Driver Unit	9.2mm
Power Handling Capacity	3.7mW
Sensitivity	107+3 dB/mW(1kHz)
Impedance	16 Ω (1kHz)
Frequency Response	20Hz-20kHz
Diaphragm	PET
Magnet Material	NdFeB magnet
Transmission Range	33 ft
Width	27mm
Depth	33mm
Height	25mm
Weight	6g (each earbud)

BATTERY	
Battery Type	Li Battery 85 mAh
Audio Playback Time	Up to 5 hours
Talk Time	Up to 5 hours
Standby Time	Up to 20 hours
Battery Charging Time	1.5 - 2 hours
MICROPHONE	
Unit/Type	Silicone Microphone
Directivity	Omni Directional
Frequency Range	80 _ 8kHz

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:VHC-AAI-BH1525US

