 


**iSplash BLUETOOTH SPEAKER
BD-9816B / iSplash**

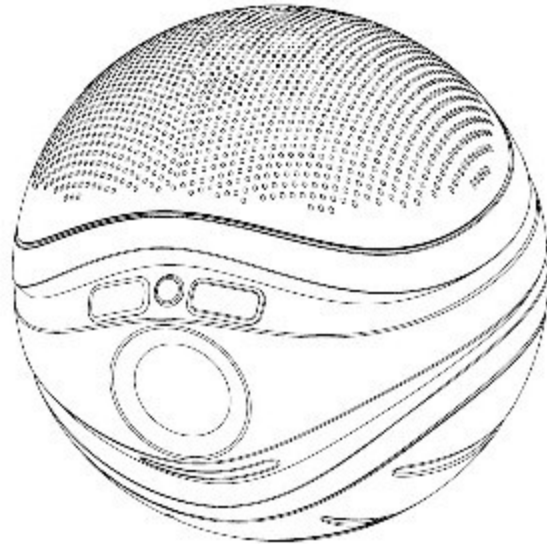

Instruction Manual

A. INTRODUCTION

This Bluetooth wireless speaker system applies the latest BT 3.0 wireless technology platform that enables you to enjoy music, video everywhere you want.

 
B. FEATURES

1. Bluetooth 3.0 Platform
2. Operating distance up to 10 meters / 33 feet (open area)
3. Powered by 6x AA alkaline batteries (not included)
4. IPX 7 Water-proof feature
5. Floating feature
6. Blue mood light

C. PACKIANG

- 1 X Bluetooth speaker
- 1 X User manual


D. COMPONENT IDENTIFICATION

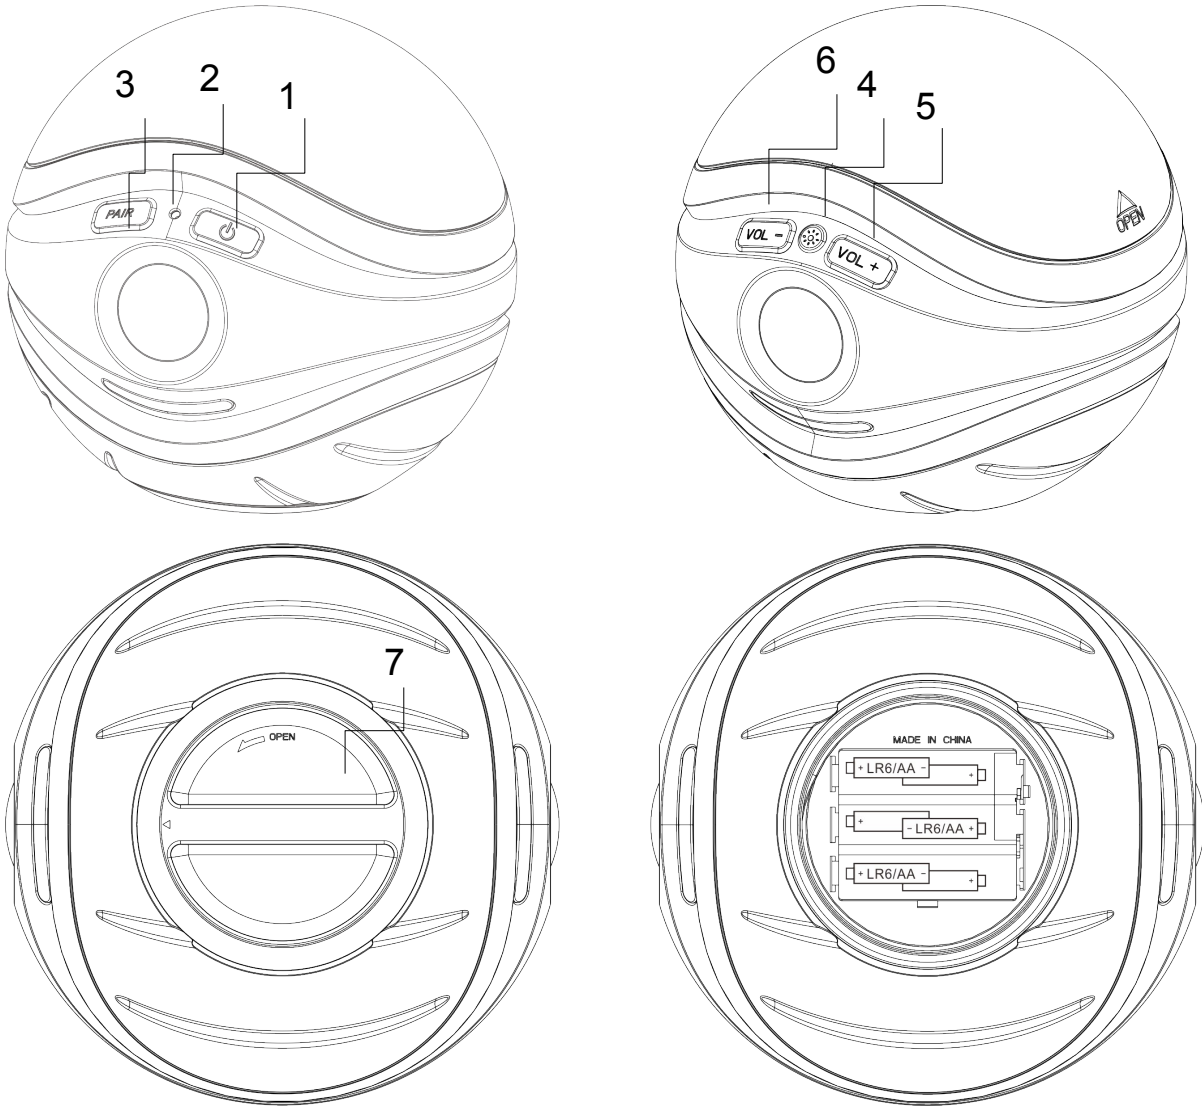

1. Power On/Off Control
2. Power LED Indicator
3. Pair
4. Mood Light
5. Volume +
6. Volume -
7. Batteries door

E. PAIRING

 
1. Press the power button for 3 seconds to turn the speaker on, the Blue LED light will flash quickly.
2. Enable your Bluetooth device such as cell phones, tablets or other Bluetooth media, and make sure it is in searching mode.
3. The Bluetooth speaker will automatically search your Bluetooth device, pair it up when 'BD-9816B' appears on your Bluetooth device.
4. If no auto pairing connection is made, press the Pair button and hold for 5 seconds until the Blue LED flashes quickly.

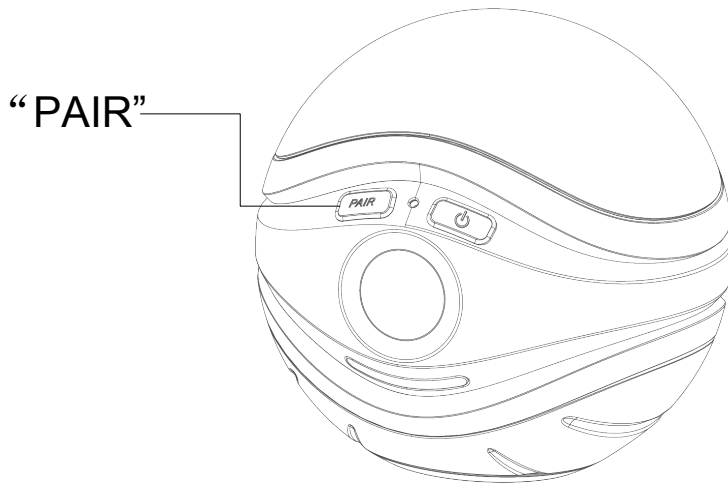

5. Select "BD-9816B" in the list shown in the Bluetooth device.
6. Enter "0000" if password is required.
7. When Bluetooth connection is made, the Blue LED will solid.
8. Listen to your music or make.

CAUTION: Your speaker will operate best and loudest with no water resting on top of the speaker. Periodically draining the speaker by inverting it will ensure that not too much water remains standing on top of the speaker driver. Turn the speaker over and lightly shake it to let the water drain out quickly for best audio performance and when storing the speaker between uses.

 When you find the floater with low volume or no volume in the water, it might be because the floater fills in with too much water on top of the speaker driver, which prevents the driver from producing sound. Simply open the speaker cover to release the water out. You can use your finger thumb to press the edge of speaker cover (as below figure) and open the cover, pour out the water. After that, close the speaker cover with correct position, the floater will work properly again.

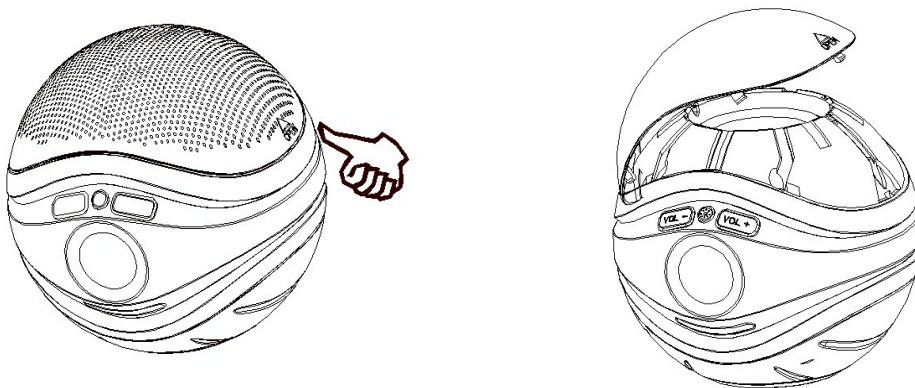

F. TECHNICAL SPECIFICATIONS

Carrier Frequency	: Bluetooth 3.0
Power Requirements	: By 6x AA alkaline batteries (not included)
Frequency Response	: 30Hz – 18KHz
Distortion	: <0.5%
S/N Ratio	: 65dB (typical)
Operation Distance	: Up to 10 meters / 33 feet (open area)
Output Power	: 5W (Max)

NOTES: This speaker is in compliance with the specified Bluetooth version. It does not guarantee compatibility of all functions on every Bluetooth enabled device. Please check with your mobile phone's user manual for compatibility and functionality.

G. TROUBLE SHOOTING

NO SOUND

- The speaker's battery charge is too low. Replace with the new batteries.
- Ensure the speaker is ON.
- Ensure Bluetooth device is ON.
- The volume of speaker is too low, adjust the volume to an appropriate level.
- Unable to connect with Bluetooth device, restart the pairing process.
- The speaker may be too far away from the Bluetooth device, move closer to it.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: Clean the speaker with soft, lint - free, dry cloth. Never use detergents or abrasive cleaners to clean.

H. FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this product not authorized and could void the FCC compliance and negate your authority to operate the product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The Bluetooth word, mark and logo are owned by Bluetooth SIG, Inc. Any and all other trademarks and trade names are those of their respective owners.