


There are two formats, one is for a quarter-folded manual, another just a single page, full size. The final user manual, whether a folded sheet, single full-page, or stitched booklet should have the same "cover" layout. The supplier, however, will be required to obtain the fonts, Myriad Pro and Pirulen.

We don't think you must have the entire collection, and would encourage you not to buy the entire set. Supplier should probably have the fonts for future mockups.

The fonts can be purchased from this website:
<http://www.myfonts.com/search/myriad+pro/fonts/>
<http://www.myfonts.com/search/pirulen/fonts/>

The text in the files should already call for the correct fonts:
 Product Name - Pirulen Regular
 Vendor Stock Number - Myriad Pro Regular
 "Product Guide" - Pirulen Regular



**ATLANTIS
BLUETOOTH® SPEAKER**

Model: BWA15AV106


PRODUCT GUIDE

Bluetooth
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.


Please read the following safety warnings and precautions before using your device.

CAUTION: Your speaker will operate at its best and loudest with no water resting on top of the speaker. Periodically draining the speaker by inverting it will ensure that not too much water remains standing on top of the speaker driver. Turn the speaker over and lightly shake it to let the water drain out quickly for best audio performance and when storing the speaker between uses.

When you find the floater with low volume or no volume in the water, it might be because the floater has too much water on top of the speaker driver. This prevents the driver from producing sound. Reverse the floater, drain out the water. After that, the floater will work properly again.

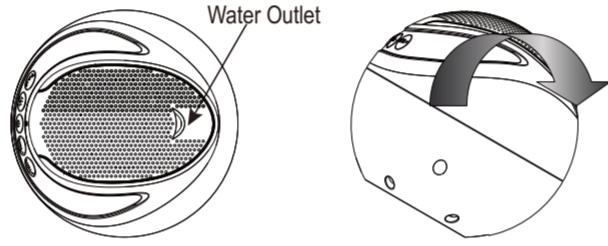

F. CHARGING
 There is an indication sound when the battery is low. Charge the speaker using the power adapter provided. Please drain the water from the speaker before charging.

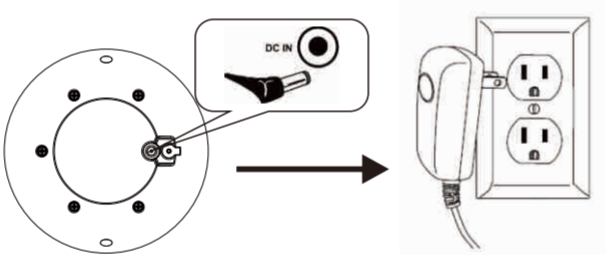

A. INTRODUCTION
 This Bluetooth wireless speaker system applies the latest BT 4.0 wireless technology platform that enables you to enjoy music or video anywhere you want.


B. FEATURES

- Bluetooth 4.0 Platform
- Operating distance up to 10 meters / 33 feet (open area)
- IPX 6 Water-proof feature
- Floating feature
- Blue LED mood light

C. PACKAGING

1 X Bluetooth speaker
1 X User manual
1 X Power adapter


D. COMPONENT IDENTIFICATION

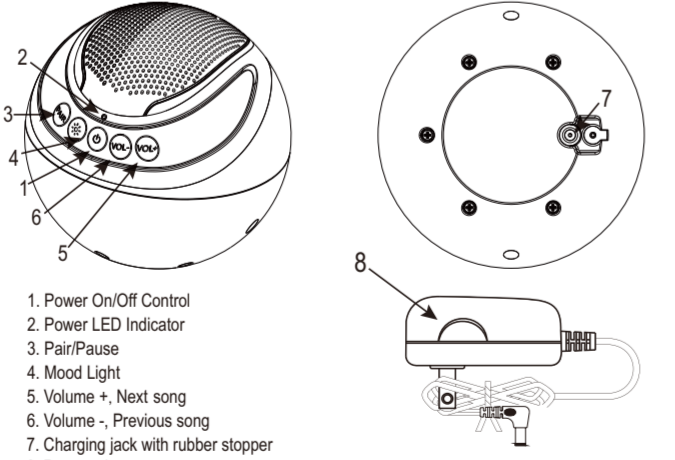

- Power On/Off Control
- Power LED Indicator
- Pair/Pause
- Mood Light
- Volume +, Next song
- Volume -, Previous song
- Charging jack with rubber stopper
- Power adapter

E. PAIRING

- Press the power button for 3 seconds to turn the speaker on. The Blue LED light will flash quickly.
- Enable any Bluetooth device such as cell phones, tablets or other Bluetooth media, and make sure it is in searching mode.
- The Bluetooth speaker will automatically search your Bluetooth device and pair it up.
- If no auto pairing connection is made, press the Pair button and hold for 5 seconds until the Blue LED flashes quickly.
- Select "ATLANTIS" in the list shown on the Bluetooth device.
- Enter "0000" if password is required.
- When Bluetooth connection is made, the Blue LED will be solid.
- Listen to your music.



G. TECHNICAL SPECIFICATIONS

Carrier Frequency:	Bluetooth 4.0
Power Requirements:	DC 9V 1.1A
Frequency Response:	30 Hz -18 KHz
Distortion:	<0.5%
S/N Ratio:	65dB (typical)
Operation Distance:	Up to 10 meters / 33 feet (open area)
Output Power:	5 W (Max)

H. TROUBLE SHOOTING

NO SOUND

- The speaker's battery charge is too low. Replace with new batteries.
- Ensure the speaker is ON.
- Ensure Bluetooth device is ON.
- The volume of speaker is too low, adjust the volume to an appropriate level.
- Unable to connect with Bluetooth device, restart the pairing process.
- The speaker may be too far away from the Bluetooth device, move closer to it.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: Clean the speaker with soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean. Using the speaker in water without the rubber stopper at the DC jack in place will cause damage to the speaker. Pressing and holding the pair key for 12 seconds will clear the memory of any Bluetooth devices previously paired with the speaker.

THE FCC WANTS YOU TO KNOW
 Warning! This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that might cause undesired operation.
 Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY WARNINGS
CAUTION

- Read these instructions.
- Keep these instructions for future reference.
- Heed all warnings.
- Follow all instructions.
- Clean only with a dry cloth.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified personnel.

FCC ID: VHC-AAI-BS4160-00



**ATLANTIS
BLUETOOTH® SPEAKER**

Model: BWA15AV106

PRODUCT GUIDE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.