 





**blackweb**<sup>TM</sup>

**Wireless Touch Keyboard**  
USER MANUAL | GUIDE DE L'UTILISATEUR

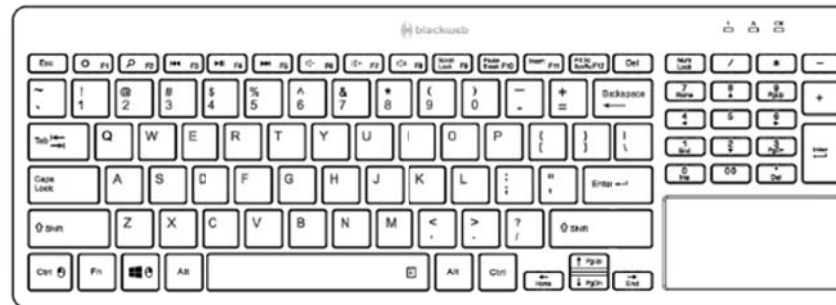

**WIRELESS TOUCH KEYBOARD**  
**CLAVIER TACTILE SANS FIL**


## KEYBOARD BUTTONS

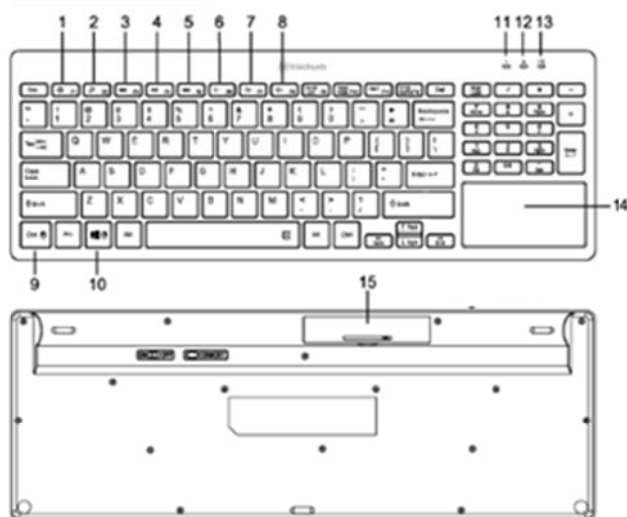 

- |                   |                                 |                                 |
|-------------------|---------------------------------|---------------------------------|
| 1  Setting        | 7  Volume up                    | 13  LED indicator (Low Battery) |
| 2  Search         | 8  Mute                         | 14  Touchpad                    |
| 3  Previous track | 9  Right mouse button           | 15  Battery Cover               |
| 4  Play/Pause     | 10  Left mouse button           |                                 |
| 5  Next track     | 11  LED indicator (Number Lock) |                                 |
| 6  Volume down    | 12  LED indicator (Caps Lock)   |                                 |

## SETUP YOUR WIRELESS KEYBOARD

 - Step 1: Open the battery compartment on the bottom of the keyboard, then insert batteries  
 Step 2: Insert the batteries as shown inside the battery storage  
 Step 3: Replace the battery cover

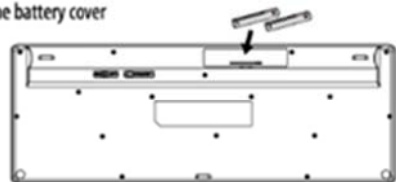


- Step 4: Insert the Nano Receiver into your computer  
 Step 5: Turn on your power switch of keyboard  
 Step 6: Your Wireless Keyboard is ready to use



## SETUP THE CONNECTION BETWEEN THE WIRELESS KEYBOARD AND COMPUTER

 If your wireless keyboard has not been connected to your computer after completing the previous steps, the following information will help you to complete the connection.

- Step 1: Make sure the computer is switched on  
 Step 2: Press the CONNECT BUTTON on the underside of your keyboard  
 Step 3: The LED will flash 10 seconds to indicate the keyboard is pairing with the nano receiver on the computer  
 Step 4: Your keyboard will connect automatically  
 Step 5: If the keyboard does not work after 10 seconds, repeat above connection procedure again (The receiver has auto pairing function)  
 Step 6: When the keyboard battery is low, the low power indicator will start to blink

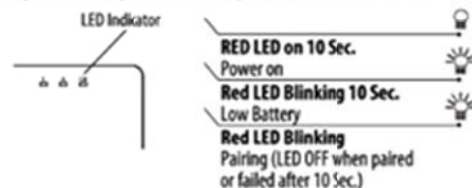

## TOUCHPAD GESTURES

1. Point: Point and slide one finger anywhere on the touchpad to move the screen pointer  
 2. Scroll: Scroll with two fingers, up or down.



3. Left Click: Tap twice with one finger



4. Right Click: Tap twice with 3 fingers



**FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.