 


1) PACKAGE CONTENTS

PACKAGE CONTENTS

- Wireless Multimedia Keyboard with Touchpad
- Dongle Receiver
- 2 x AA Batteries
- User's Guide

2) KEYBOARD BUTTONS

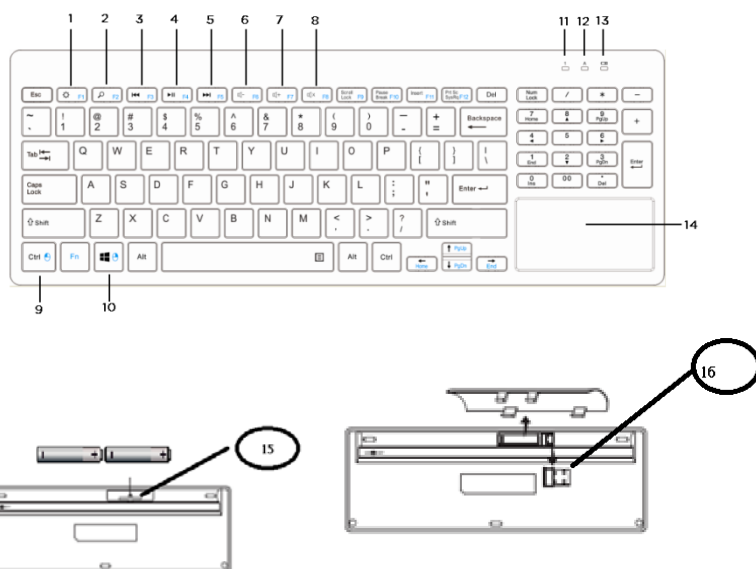


1.		Setting
2		Search
3		Previous track
4		Play/Pause
5		Next track
6		Volume down
7		Volume up
8.		Mute
9		Right mouse button
10		Left mouse button
11	1	LED indicator (Number Lock)
12	A	LED indicator (Caps Lock)
13		LED indicator (Low Battery)
14		Touchpad
15		Battery Cover
16		Nano Receiver

3) **SETUP YOUR WIRELESS KEYBOARD**

Step 1 : Open the battery compartment on the bottom of the keyboard, then insert batteries

Step 2 : Insert the batteries as shown inside the battery storage

 Step 3 : Replace the battery cover

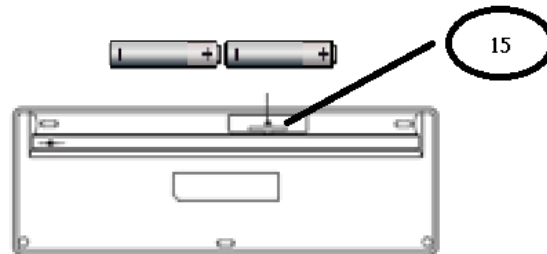

Step 4 : Insert the Nano Receiver into your computer

 
Step 5 : Turn on your power switch of keyboard

Step 6 : Your Wireless Keyboard is ready to use

4) **SETUP THE CONNECTION BETWEEN THE WIRELESS KEYBOARD AND COMPUTER**

If your wireless keyboard has not been connected to your computer after completing the previous steps, the following information will help you to complete the connection.

1. Make sure the computer is switched on
2. Press the **CONNECT BUTTON** on the underside of your keyboard
3. The LED will flash 10 seconds to indicate the keyboard is pairing with the nano receiver on the computer
4. Your keyboard will connect automatically
5. If the keyboard does not work after 10 seconds, repeat above connection procedure again (The receiver has auto pairing function)
6. When the keyboard battery is low, the low power indicator will start to blink

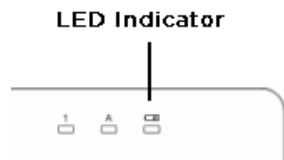

- Red LED on 10 sec.
Power ON
- Red LED Blinking 10 sec.
Low Battery
- Red LED Blinking
Pairing (LED OFF when paired or failed after 10 sec.)

LED Indicator
RED LED on 10 Sec. Power on
Red LED Blinking 10 Sec. Low Battery
Red LED Blinking Pairing (LED OFF when paired or failed after 10 Sec.)

5) Touchpad Gestures

1. Point

Point and slide one finger anywhere on the touchpad to move the screen pointer



 
2. Scroll

Scroll with two fingers, up or down.




3. Left Click

Tap twice with one finger

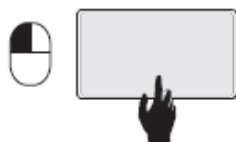

4. Right Click

 Tap twice with 3 fingers

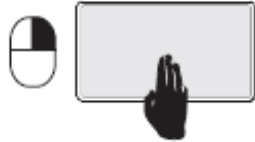

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.