



# WIRELESS SILENT KEYBOARD

Model: BWC17HO004

## PRODUCT GUIDE

Ver.01. Rev.05/25/17

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



Wal-Mart Stores, Inc.,  
Bentonville, AR 72716  
Hotline: 1-800-925-6278

1

Ver.01. Rev.05/25/17

正面
  
### Keyboard Button

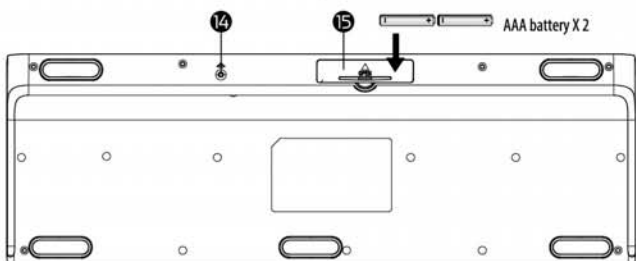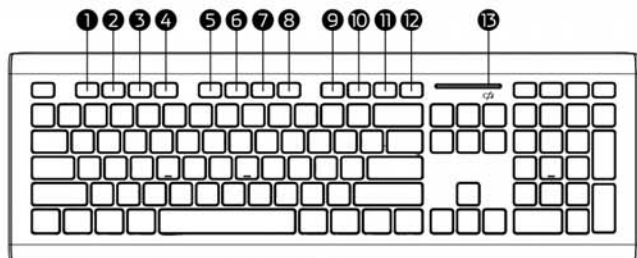

#### Key Function (\*compound key, Press with Fn Key)

- |                          |                       |
|--------------------------|-----------------------|
| 1.  Media Play on        | 9.  Homepage (www/e)  |
| 2.  Volume down (Voice-) | 10.  Outlook (E-mail) |
| 3.  Volume up (Voice+)   | 11.  My Computer      |
| 4.  Mute                 | 12.  My Favourites    |
| 5.  Previous             | 13. LED Indicator     |
| 6.  Next                 | 14. Connect Button    |
| 7.  Play/pause           | 15. Battery Cover     |
| 8.  Stop (Media)         |                       |

2

Ver.01. Rev.05/25/17

### \*\*Warning:

\*Please insert the batteries with the correct position according to the instruction labeled in the Keyboard.

\*The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

### Battery warning statement:

 
Do not mix old and new batteries  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

### Setup the Connection between the Receiver and the Keyboard

1. Plug the Nano receiver into the USB port of your computer.
2. Insert the batteries into the keyboard, then your keyboard will connect automatically.
3. If your wireless keyboard has not been connected to your computer after completing the previous steps, then put them into pairing mode.
4. Pairing : Press the connect button on the bottom of the keyboard, If the keyboard does not work after 10 seconds, Re-pair again. Keep the keyboard closer to the receiver while in pairing mode.
5. When the keyboard battery is low, the low power indicator will start to blink.



### During pairing

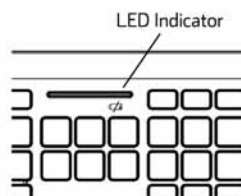

- Red LED is on for 10 Sec. Power On
- Red LED Blinking for 10 Sec. Low Battery Warning
- Red LED Blinking Pairing (LED OFF when paired or failed after 10 sec.)

3

Ver.01. Rev.05/25/17

反面