

Wireless Keyboard with Nano Receiver

Model: LK6500R

PRODUCT GUIDE

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Installing the batteries

Step 1: Take the battery cover off.

Step 2: Insert 2 x AAA batteries as shown inside the battery

compartment.

Step 3: Replace the cover.




Setup the Connection between the Receiver and the Keyboard

- 1. Insert the batteries into the Keyboard, then follow the steps below.
- 2. In the meantime, to take the nano receiver out. from the keyboard.
- 3. Plug the Nano receiver into the USB port of your computer.



- 4. If the keyboard is not working, please put them into pairing mode.
- Pairing: Re-plug the receiver into the USB port of your computer, then
 press connect button of the keyboard. If the keyboard does not work
 after 10 seconds, pair them again. (The receiver has auto pairing
 function).
- 6. The LED indicator on the Keyboard flashes steadily when it is in pairing mode and stops blinking when it is successfully paired with the receiver.
- 7. When the batteries' power of the keyboard or the mouse is low, the Low Power indicator will start to blink..

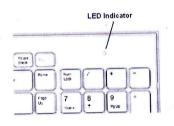

*Keyboard Indicator

Red LED is on for 10 sec.

Red LED Blinks for 10 sec. Low Battery Warning

Red LED Blinking
Pairing (LED OFF when paired or failed after 10 sec.)