


BLUE : Pantone Black C

Trim Marks


Folding Marks

105mm



PL5 BLE
Bluetooth Enabled Padlock

USER MANUAL

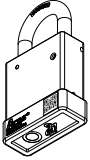

support@acsys.com
www.acsys.com

Copyright © 2019 Acsys International Ltd.

70mm

INSTALL APP


METHOD 1

- Scan this QR code
- Download the Acsys BLE mobile app for your respective platform

METHOD 2


- Search for "Acsys Mobile App" on your device app store
- Download and install the app on your device

On the welcome screen, select "Acsys IAMS Enterprise" from the available app types


- Register the app by following the on-screen instructions


REGISTER LOCK

- Open Main Menu
- Add Access Point
- Enter Site ID
- Enter PIN code
- Press Register

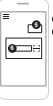

 
- Add Access Point
- Enter Lock ID or scan QR Code on the lock
- Activate Lock
- Lock is registered




DELETE LOCK

- Open Main Menu
- Delete Access Point
- Enter Site ID
- Enter PIN code
- Press Delete



- Press the Delete button next to the correct Lock name
- Activate Lock
- Lock is deleted

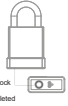


OPERATE LOCK

CHECK-IN


- Enter Site ID
- Enter PIN code
- Press

 or Check-out depending on the operation type



CHECK-OUT


- Press the shake/shake and hold
- Press the Close button next to the Lock name
- Lock is Closed



JUMP START LOCK


Jump starting is used when the battery is fully depleted. It serves as a way to wake up the lock, open it and perform a battery replacement (illustrated in the next section)

- Remove the Dust Cap to uncover the USB jump-start port
- Insert a Micro USB Cable in the Micro USB port and connect it to USB wall charger or a portable power bank
- While jump-starting, the LED flashes green every 2 seconds indicating that Bluetooth is advertising during which, the lock can be opened using the mobile app
- If the 60 sec have elapsed, press the Bluetooth button or remove and reconnect the USB power to put the lock in Bluetooth advertising mode again
- Open the padlock using the mobile app and perform the battery replacement procedure shown below

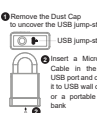

REPLACE BATTERY

- Remove the screw found at the bottom of the shackle hole
- Push the bottom plate through the shackle hole and detach it from the padlock body
- Replace the battery and reverse the previous steps to reassemble

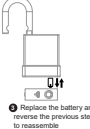

LED INDICATIONS

ACTION	STATE	INITIALIZED LOCK INDICATION	BLANK LOCK INDICATION
Press	Bluetooth advertising	1 green flash every 2 sec for 60 sec	1 red flash every 2 sec for 60 sec
Bluetooth button	Lock is open and shackle is pulled closed	1 green flash every 2 sec until shackle is released	1 red flash every 2 sec
Press and Hold shackle	Operation successful	1 quick green flash	1 quick red flash
Initiate, Denial, Open, Close	Operation failure	1 quick orange flash	
Battery Replacement		1 quick green flash	1 quick red flash
USB Jump start	Bluetooth advertising	1 green flash, every 2 sec for 60 sec average glow	1 red flash, every 2 sec for 60 sec average glow

SPECIFICATIONS

Dimensions & Weight	70 x 125 x 31 mm 11mm shackle 900g
Power Type	Lithium (CR2) Non-Rechargeable Jump-Start
Visual Indicator	Tricolor LED

CAUTION

- Don't attempt to remove the Lithium-(CR2) battery from this product without consulting an Acsys authorized installer first.

NOTE

- This user manual is for reference only. Minor differences can be found in user interface.
- Please follow the instructions to set up your device. In case of any issue, please contact Acsys Support
- Specifications may be altered without prior written notice.

FCC STATEMENT

FCC ID: 2AR69-116P1948

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PART NUMBER	PART NAME	REV	SCALE:
421-024A	BLUETOOTH PADLOCK USER MANUAL – PL5BLE USER MANUAL-ENG	01	1:0.7

PROPRIETARY AND CONFIDENTIAL : THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ACSYS. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ACSYS IS PROHIBITED.