 
 


FM Transmitter
AUDIOVOX, AXION
HR7012M / HR7012S
Introduction

HR7012M

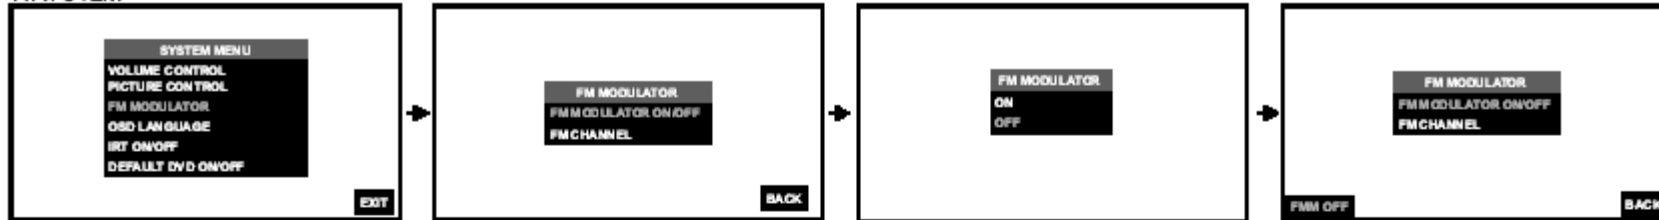

HR7012S

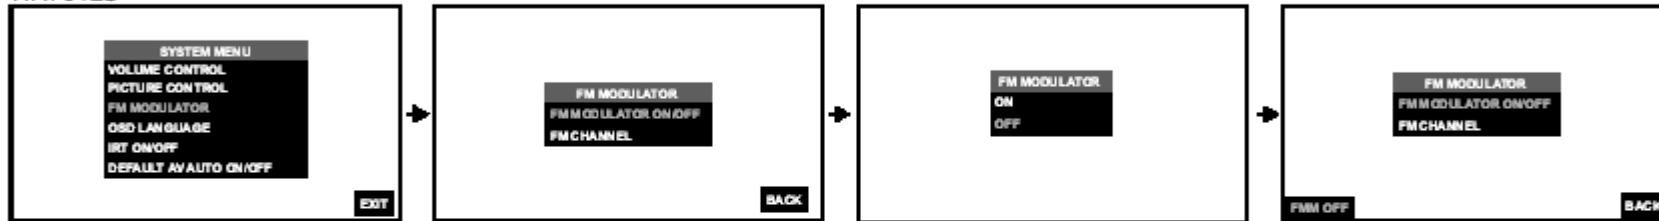

FM MODULATOR

a) FM Modulator ON/OFF

FM Modulator with Hard Key

1. Press & hold 3sec - 5sec MENU/SELECT key to call out System Menu page.
2. Use U/D key to select FM Modulator and press MENU/SELECT key to enter FM Modulator page.
3. For immediately exit System Menu page use the U/D key to select EXIT and press MENU/SELECT key.
4. Use U/D key to select FM Modulator ON/OFF and press MENU/SELECT key.
5. Use U/D key to select BACK and press MENU/SELECT key to go back to System Menu page.
6. To turn ON/OFF FM Modulator, use U/D key to select ON or OFF and press MENU/SELECT key to confirm and go back to FM Modulator page.
7. After FM Modulator selection, "FMM xxxxMHz" or "FMM OFF" will display on screen and automatic disappear from screen within 5sec - 6sec.
8. After the selection done, use U/D key to select BACK and press MENU/SELECT key to go back to System Menu page.

FM Modulator with Remote Control (via System Menu)


1. Press System Menu key to enter System Menu page.
2. Use U/D key to select FM Modulator and press Enter key to enter FM Modulator page.
3. For immediately exit System Menu page use the U/D key to select EXIT and press Enter key.
4. Use U/D key to select FM Modulator ON/OFF and press Enter key.
5. Use U/D key to select BACK and press Enter key to go back to System Menu page.
6. To turn ON/OFF FM Modulator, use U/D key to select ON or OFF and press Enter key to confirm and go back to FM Modulator page.
7. After FM Modulator selection, "FMM xxxxMHz" or "FMM OFF" will display on screen and automatic disappear from screen within 5sec - 6sec.
8. After the selection done, use U/D key to select BACK and press Enter key to go back to System Menu page.

FM Modulator with Remote Control (via FMM ON/OFF direct access key)


1. Press the FMM ON/OFF key to turn ON/OFF the FM Modulator.
2. After FM Modulator selection, "FMM xxxxMHz" or "FMM OFF" will display on screen and automatic disappear from screen within 5sec - 6sec.



 HR7012M

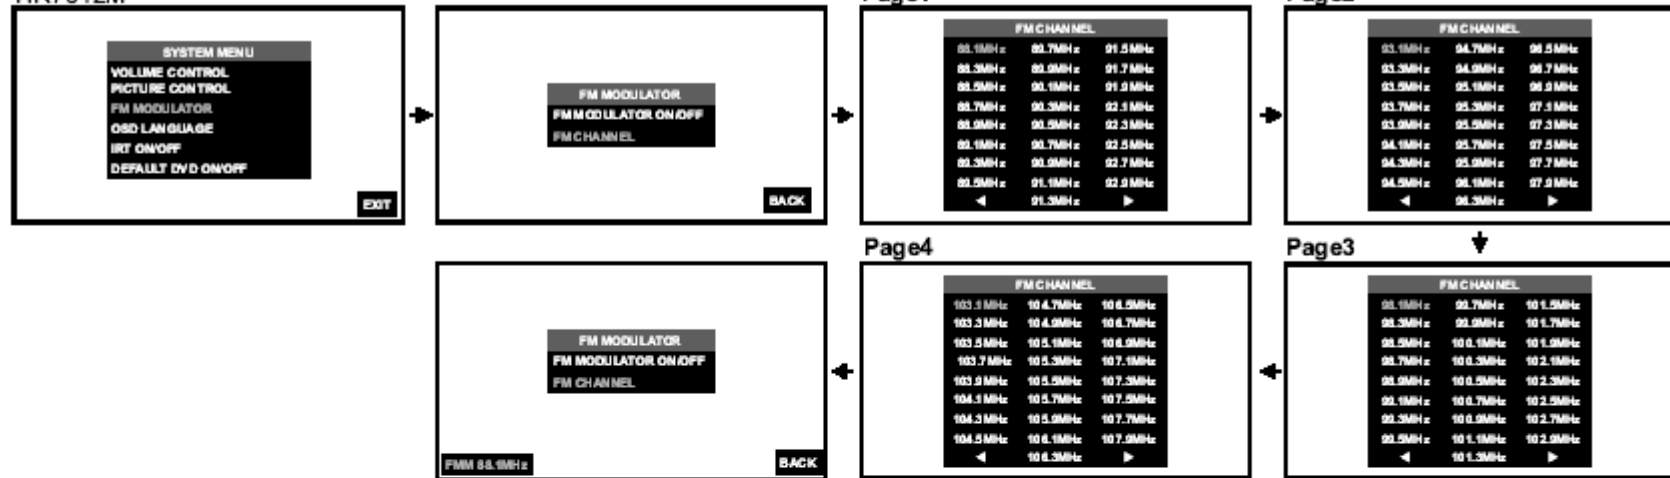

HR7012S

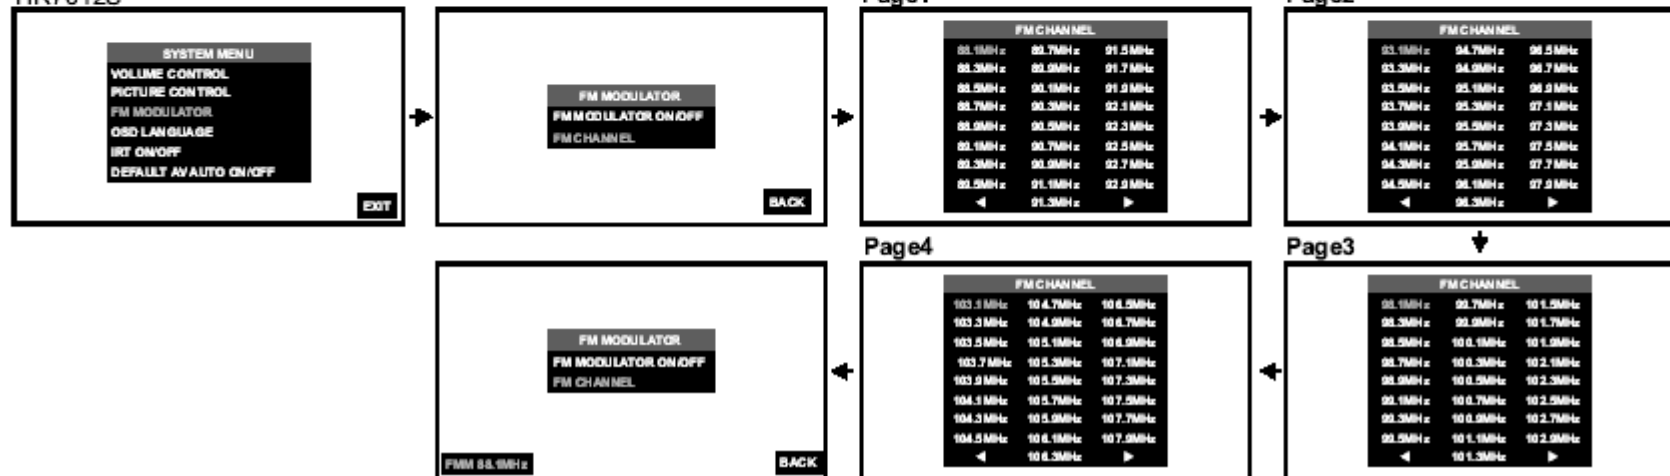 

b)FM Channel

FM Channel with Hard Key

1. Press & hold 3sec - 5sec MENU/SELECT key to call out System Menu page.
2. Use U/D key to select FM Modulator and press MENU/SELECT key to enter FM Modulator page.
3. For immediately exit System Menu page use the U/D key to select EXIT and press MENU/SELECT key.
4. Use U/D key to select FM Channel and press MENU/SELECT key.
5. Use U/D key to select BACK and press MENU/SELECT key to go back to System Menu page.
6. To select FM Channel, use U/D/L/R key to select the frequency and press MENU/SELECT key to confirm and go back to FM Modulator page.
7. Use U/D/L/R key to select ◀ or ▶ and press MENU/SELECT key to go to previous or next FM Channel Page. Total 4 pages.
8. After FM Channel selection, "FMM xxxxMHz" will display on screen and automatic disappear from screen within 5sec - 6sec.
9. After the selection done, use U/D key to select BACK and press MENU/SELECT key to go back to System Menu page.

FM Channel with Remote Control

1. Press System Menu key to enter System Menu page.
2. Use U/D key to select FM Modulator and press Enter key to enter FM Modulator page.
3. For immediately exit System Menu page use the U/D key to select EXIT and press Enter key.
4. Use U/D key to select FM Channel and press Enter key.
5. Use U/D key to select BACK and press Enter key to go back to System Menu page.
6. To select FM Channel, use U/D/L/R key to select the frequency and press Enter key to confirm and back to FM Modulator page.
7. Use U/D/L/R key to select ◀ or ▶ and press Enter key to go to previous or next FM Channel Page. Total 4 pages.
8. After FM Channel selection, "FMM xxxxMHz" will display on screen and automatic disappear from screen within 5sec - 6sec.
9. After the selection done, use U/D key to select BACK and press Enter key to go back to System Menu page.

Remark:

- a) All OSD will automatic disappear from screen within 5sec - 6sec if the user was not controlling it.
- b) This FM Modulator feature only available at Master Unit.

NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.