

Front View

Back View

5-1/8" 5.125" 130.176mm

5-1/8" 5.125" 130.176mm

5-1/16" 5.0625" 128.588mm

5-1/8" 5.125" 130.176mm

5-1/8" 5.125" 130.176mm

5-1/16" 5.0625" 128.588mm




TONY HAWK RIDE Hardware Manual / Manuel de matériel

- Wireless Controller for PLAYSTATION®3
Manette sans fil pour PLAYSTATION®3
Controlador inalámbrico para PLAYSTATION®3

Important! Before using the PLAYSTATION®3 system with this product, read the PLAYSTATION®3 system instruction manual for safety, health and other information regarding the use of the PLAYSTATION®3.

Important! Avant d'utiliser le système PLAYSTATION®3 avec ce produit, lisez le manuel du système PLAYSTATION®3 pour obtenir l'information de sécurité, santé et autres portant sur l'utilisation du système PLAYSTATION®3.

Important! Antes de usar el sistema PLAYSTATION®3 con este producto, lee el manual de instrucciones del sistema PLAYSTATION®3 para obtener información sobre la seguridad, salud y otra información relacionada con el uso del PLAYSTATION®3.

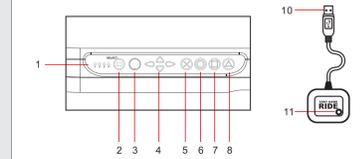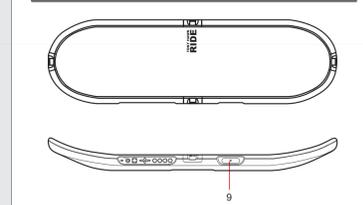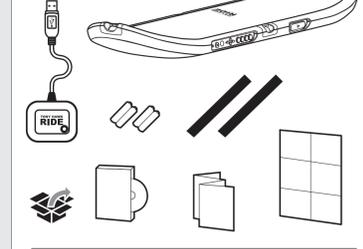

- 1. LEDs
2. SELECT button
3. PS button
4. Directional buttons
5. @button
6. @button
7. @button
8. @button
9. START Button
Wireless receiver
USB Connector
Connect button and receiver status light

PLAYSTATION®3 SKATEBOARD CONTROLLER INSTRUCTIONS

- 1. Insert four new alkaline batteries into skateboard controller. Note the plus and LED on the side of the skateboard controller will begin flashing. This indicates the skateboard controller is searching for a paired receiver.
2. Plug the receiver into the USB port of the PS3 console. Once the PS3 console has recognized the receiver, this indicates the receiver is searching for the paired skateboard controller.
3. The four LEDs on the skateboard controller turn off, press the PS button on the back of the skateboard controller. All four LEDs will flash. The LED indicator will turn on when the skateboard controller is connected to the PS3 console.

1 Install the batteries

Insert the batteries into the battery compartment on the back of the skateboard controller. Note the plus and LED on the side of the skateboard controller will begin flashing. This indicates the skateboard controller is searching for a paired receiver.



Note: Opening the battery compartment requires one (1) Phillips head screwdriver (not included).

Remarque: Ouvrir le compartiment de piles exige (1) tournevis Phillips (non inclus).

Nota: Para abrir el compartimento de las baterías se necesita un (1) destornillador con cabeza Phillips (no está incluido).

Press Connect button on the receiver. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



The DUALSHOCK®3 wireless controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




2 Turn ON the console. Before inserting the game disk, plug in the receiver to the USB port and make sure skateboard controller connects to the receiver

Mettez la console sous tension. Avant d'insérer le disque du jeu, branchez le récepteur au port USB et assurez-vous que la manette de planche à roulettes se branche au récepteur.



Enciende la consola. Antes de introducir el disco del juego, conecta el receptor al puerto USB y asegúrate que el mando de patineta se conecta al receptor.

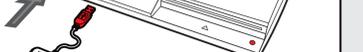

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

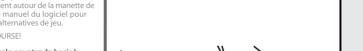


Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

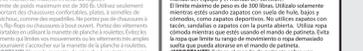

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

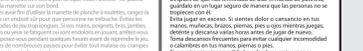

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

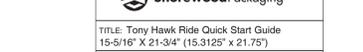


Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

3 Press Connect button on the receiver

Enciende la consola. Antes de introducir el disco del juego, conecta el receptor al puerto USB y asegúrate que el mando de patineta se conecta al receptor.



Enciende la consola. Antes de introducir el disco del juego, conecta el receptor al puerto USB y asegúrate que el mando de patineta se conecta al receptor.

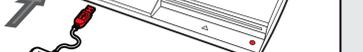

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

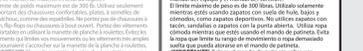

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

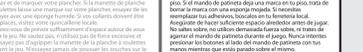

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

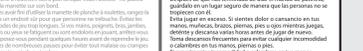

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).




Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

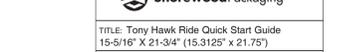

Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

4 Press PS button on the skateboard controller

Enciende la consola. Antes de introducir el disco del juego, conecta el receptor al puerto USB y asegúrate que el mando de patineta se conecta al receptor.



Enciende la consola. Antes de introducir el disco del juego, conecta el receptor al puerto USB y asegúrate que el mando de patineta se conecta al receptor.



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).



Press PS button on the skateboard controller. The skateboard controller can be used to navigate the in-game Pause menu (see software manual for details).

WIRELESS CONTROLLER INSTRUCTION MANUAL ENGLISH

Thank you for purchasing the Tony Hawk RIDE skateboard controller. For your personal safety and the safety of others, please carefully read this hardware manual before using the product.

SKATEBOARD CONTROLLER CARE

Do not use the skateboard controller if you are under the influence of alcohol or drugs. Do not use the skateboard controller if you are under the influence of any medication that may affect your ability to operate the skateboard controller. Do not use the skateboard controller if you are under the influence of any medication that may affect your ability to operate the skateboard controller.

BATTERY SAFETY

Insertion of batteries may result in battery overheating, venting or leakage. When using batteries, do not do the following: Do not use the skateboard controller if you are under the influence of alcohol or drugs. Do not use the skateboard controller if you are under the influence of any medication that may affect your ability to operate the skateboard controller.

TROUBLESHOOTING

If you encounter problems, try the possible solutions provided below. Refer to the instructions on the other side of this hardware manual. Do not use the skateboard controller if you are under the influence of alcohol or drugs. Do not use the skateboard controller if you are under the influence of any medication that may affect your ability to operate the skateboard controller.

FC INFORMATION FOR THE CONSUMER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and may interfere with other electronic equipment. It may be subject to harmful interference from other electronic equipment.

FC INFORMATION FOR THE CONSUMER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PRODUCT DISPOSAL INFORMATION

Dispose of this product in accordance with local and national disposal regulations if any, including those governing the recycling and/or reuse of waste electrical and electronic equipment (WEEE).

MANUEL D'INSTRUCTIONS DE LA MANETTE SANS FIL FRENCH

Merci de votre achat de la manette de planche à roulettes Tony Hawk RIDE. Pour votre sécurité personnelle et celle des autres, veuillez lire attentivement le manuel de matériel avant d'utiliser le produit.

ENTRETIEN DE LA MANETTE À ROULETTES

N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence d'alcool ou de drogues. N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence de tout médicament qui pourrait affecter votre capacité à manipuler la manette de planche à roulettes. N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence de tout médicament qui pourrait affecter votre capacité à manipuler la manette de planche à roulettes.

SÉCURITÉ DES BATTERIES

L'insertion de piles peut entraîner un surchauffement, un dégagement de gaz ou une fuite de liquide. Lorsque vous utilisez des piles, ne faites pas ce qui suit: N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence d'alcool ou de drogues. N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence de tout médicament qui pourrait affecter votre capacité à manipuler la manette de planche à roulettes.

DÉPANNAGE

Si vous rencontrez des problèmes, essayez les solutions possibles fournies ci-dessous. Reportez-vous aux instructions de l'autre côté de ce manuel de matériel. N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence d'alcool ou de drogues. N'utilisez pas la manette de planche à roulettes si vous êtes sous l'influence de tout médicament qui pourrait affecter votre capacité à manipuler la manette de planche à roulettes.

INFORMATION DE LA FCC POUR LE CONSOMMATEUR

Cet équipement a été testé et se conforme aux limites d'appareil numérique de catégorie B, conformément à la partie 15 des règles de la FCC. Ces limites sont destinées à fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence, et peut interférer avec d'autres équipements électroniques. Il peut être exposé à des interférences nuisibles provenant d'autres équipements électroniques.

INFORMATION DE LA FCC POUR LE CONSOMMATEUR

Cet équipement est conforme à la norme FCC de catégorie B. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence nuisible reçue, y compris l'interférence qui provient d'autres équipements électroniques.

INFORMATION SUR L'ÉLIMINATION DU PRODUIT

Éliminez ce produit conformément aux réglementations locales, nationales et internationales en vigueur. Si vous êtes incertain quant à la manière de procéder, contactez votre fournisseur local ou consultez le site Internet www.electronicrecycling.com.

MANUAL DE INSTRUCCIONES DEL MANDO INALÁMBRICO SPANISH

Gracias por comprar el mando de patineta Tony Hawk RIDE. Para su seguridad personal y la seguridad de los demás, le recomendamos que lea este manual de instrucciones antes de utilizar este producto.

CUIDADO DEL MANDO DE PATINETA

No utilice el mando de patineta si está bajo la influencia de alcohol o drogas. No utilice el mando de patineta si está bajo la influencia de cualquier medicamento que pueda afectar su capacidad para manejar el mando de patineta. No utilice el mando de patineta si está bajo la influencia de cualquier medicamento que pueda afectar su capacidad para manejar el mando de patineta.

SEGURIDAD DE LAS BATERÍAS

La inserción de pilas puede provocar un sobrecalentamiento, un escape de gases o un derrame de líquido. Cuando utilice pilas, no haga lo siguiente: No utilice el mando de patineta si está bajo la influencia de alcohol o drogas. No utilice el mando de patineta si está bajo la influencia de cualquier medicamento que pueda afectar su capacidad para manejar el mando de patineta.

SOLUCIÓN DE PROBLEMAS

Si encuentra algún problema, intente las soluciones posibles que se proporcionan a continuación. Consulte las instrucciones de la otra parte de este manual de instrucciones. No utilice el mando de patineta si está bajo la influencia de alcohol o drogas. No utilice el mando de patineta si está bajo la influencia de cualquier medicamento que pueda afectar su capacidad para manejar el mando de patineta.

INFORMACIÓN DE FCC PARA EL CONSUMIDOR

Este equipo ha sido probado y se encuentra dentro de los límites de un dispositivo digital Clase B, de acuerdo con la parte 15 de las Reglas de la FCC. Estas limitaciones están diseñadas para proporcionar una protección razonable contra las interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede emitir energía radiofrecuencia, y puede interferir con otros equipos electrónicos. También puede estar sujeto a interferencias perjudiciales de otros equipos electrónicos.

INFORMACIÓN DE FCC PARA EL CONSUMIDOR

Este equipo cumple con la Parte 15 de las Reglas de la FCC. Su funcionamiento está sujeto a las siguientes condiciones: (1) Este dispositivo no debe causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia perjudicial recibida, incluida la interferencia que puede causar otro equipo electrónico.

INFORMACIÓN DE LA FCC PARA EL CONSUMIDOR

Este equipo cumple con la Parte 15 de las Reglas de la FCC. Su funcionamiento está sujeto a las siguientes condiciones: (1) Este dispositivo no debe causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia perjudicial recibida, incluida la interferencia que puede causar otro equipo electrónico.

INFORMACIÓN DE LA FCC PARA EL CONSUMIDOR

Este equipo cumple con la Parte 15 de las Reglas de la FCC. Su funcionamiento está sujeto a las siguientes condiciones: (1) Este dispositivo no debe causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia perjudicial recibida, incluida la interferencia que puede causar otro equipo electrónico.

INFORMACIÓN DE LA FCC PARA EL CONSUMIDOR

Este equipo cumple con la Parte 15 de las Reglas de la FCC. Su funcionamiento está sujeto a las siguientes condiciones: (1) Este dispositivo no debe causar interferencias perjudiciales, y (2) este dispositivo debe aceptar cualquier interferencia perjudicial recibida, incluida la interferencia que puede causar otro equipo electrónico.

INFORMACIÓN DE LA FCC PARA EL CONSUMIDOR

Este equipo cumple con la Parte 15 de las Reglas de la FCC. Su funcionamiento está sujeto a las siguientes condiciones: (1) Este dispositivo no debe causar interfer