

Front View

 
 
 
Back View

5-1/8" 5.125" 130.176mm 5-1/8" 5.125" 130.176mm 5-1/16" 5.0625" 128.588mm 5-1/8" 5.125" 130.176mm 5-1/8" 5.125" 130.176mm 5-1/16" 5.0625" 128.588mm

TONY HAWK RIDE Hardware Manual • FRENCH SPANISH


- Wireless Controller for Wii™
Manette sans fil pour Wii™
Controlador inalámbrico para Wii™

Important Before using the WII™ console with this product, read the WII™ console instruction manual for safety, health and other information regarding the use of the WII™ console.
Important Before using the PLAYSTATION 3 with this product, read the PLAYSTATION 3 instruction manual for safety, health and other information regarding the use of the PLAYSTATION 3.

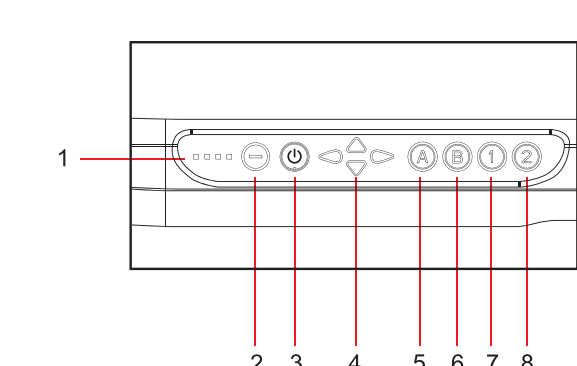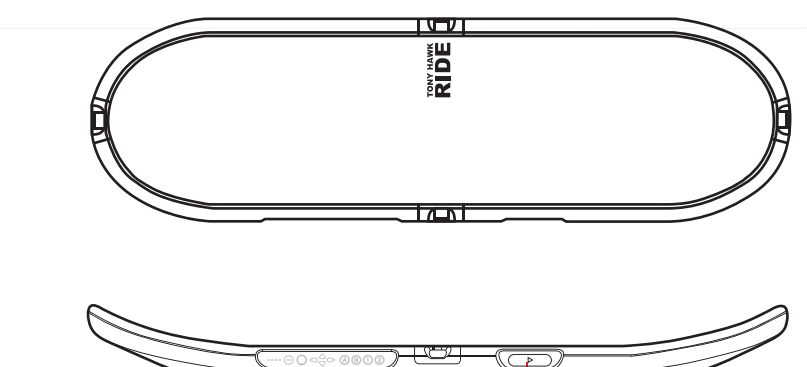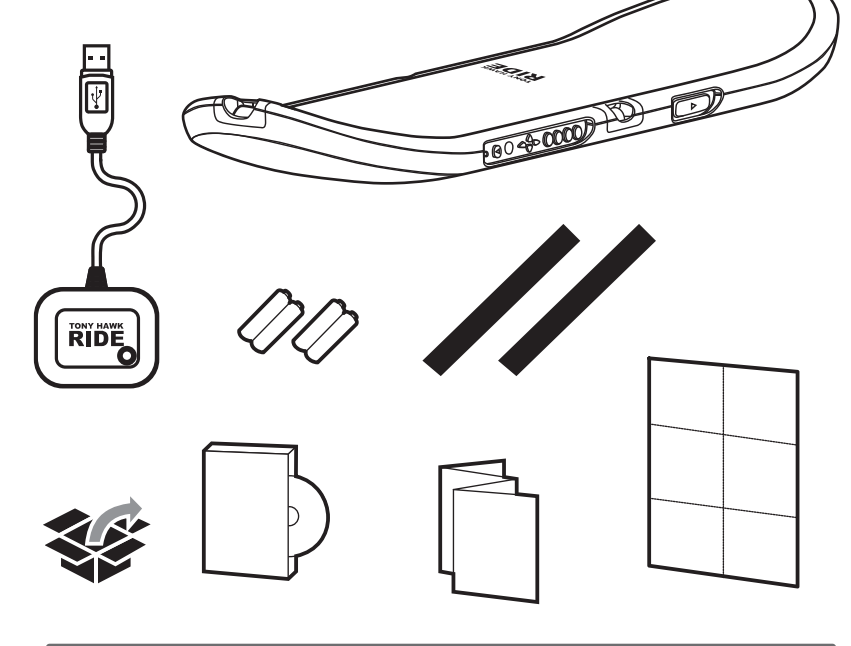


- 1. LEDs
2. Button
3. Power Button
4. D Pad
5. A Button
6. B Button
7. 1 Button
8. 2 Button
9. + Button
Wireless receiver
10. Connect Button and receiver status light
11. USB connector

 
- 1 Install the batteries. Installer les piles. Coloca las pilas.
2 Turn ON the WII™ console. Before inserting the game disc, plug in the receiver to the USB port and make sure skateboard controller connects to the receiver.
3 Press Connect Button on the receiver.
4 Press the Power Button on the skateboard controller.

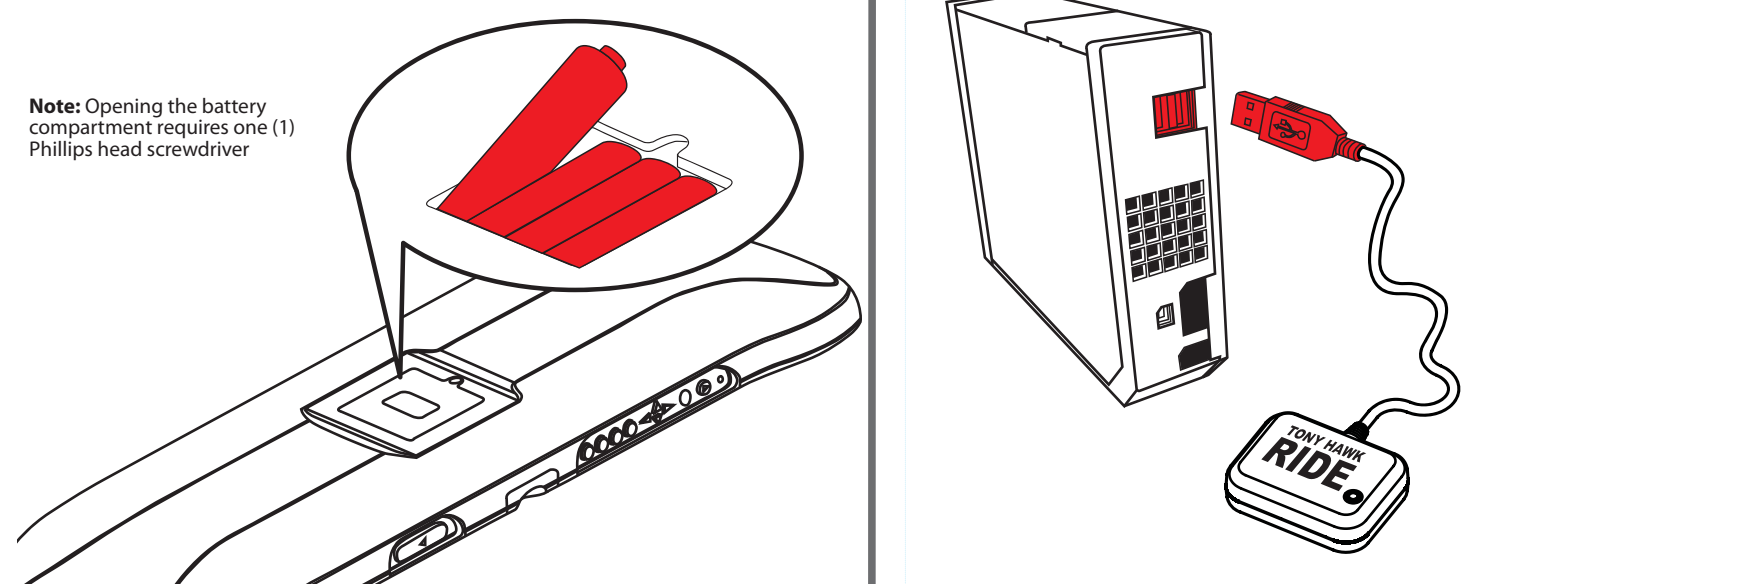

- 5 The Wii Remote™ can be used for navigating menu screens. The skateboard controller can be used to navigate the in-game Pause menu.
6 Position skateboard controller on floor pointed toward the TV. Stand on top of the skateboard controller and comfortably position feet so that the Tony Hawk™ RIDE™ logo is in front of you as seen in the image below. Make sure there is at least 4 feet of clearance around the skateboard controller.

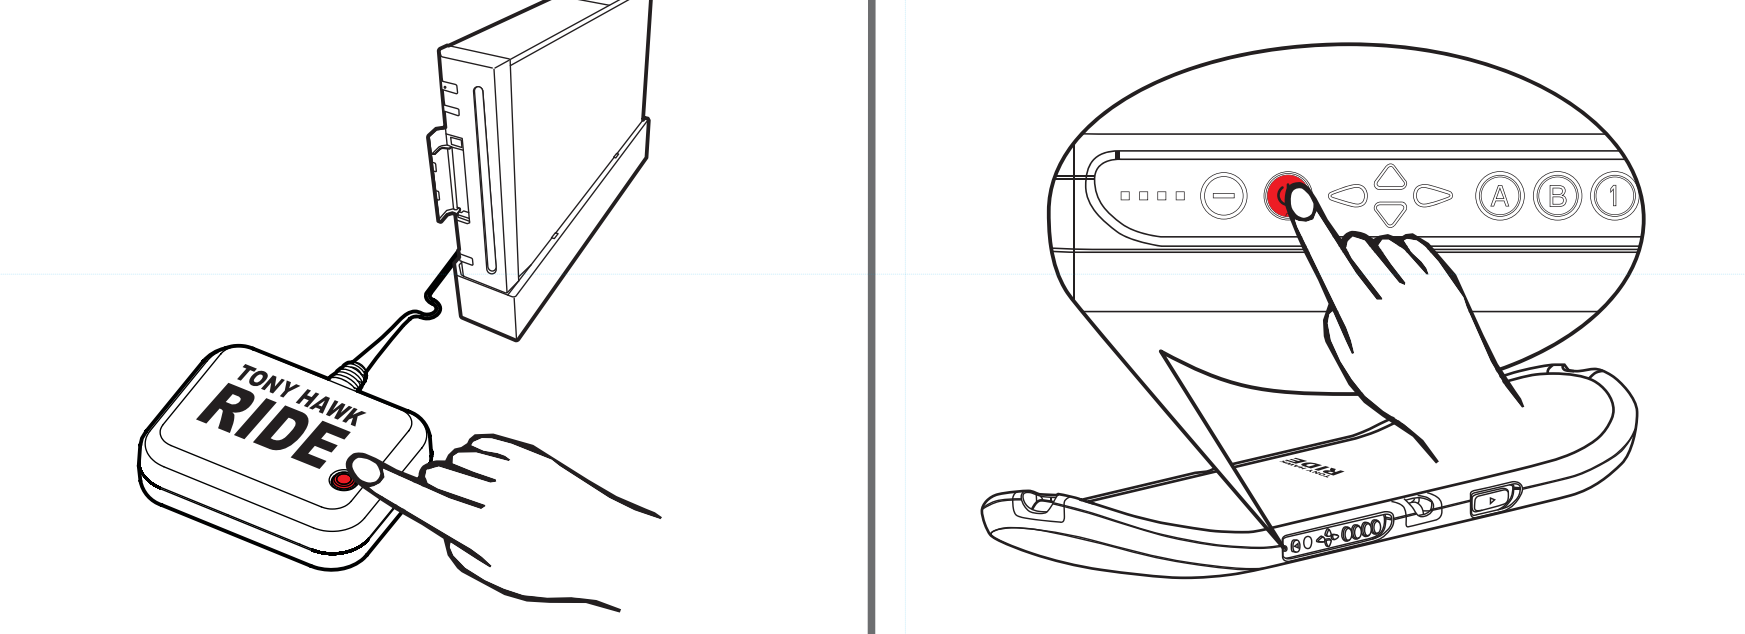 

 For use on non-carpeted surfaces, apply the provided protective stickers to the bottom of skateboard controller as shown.

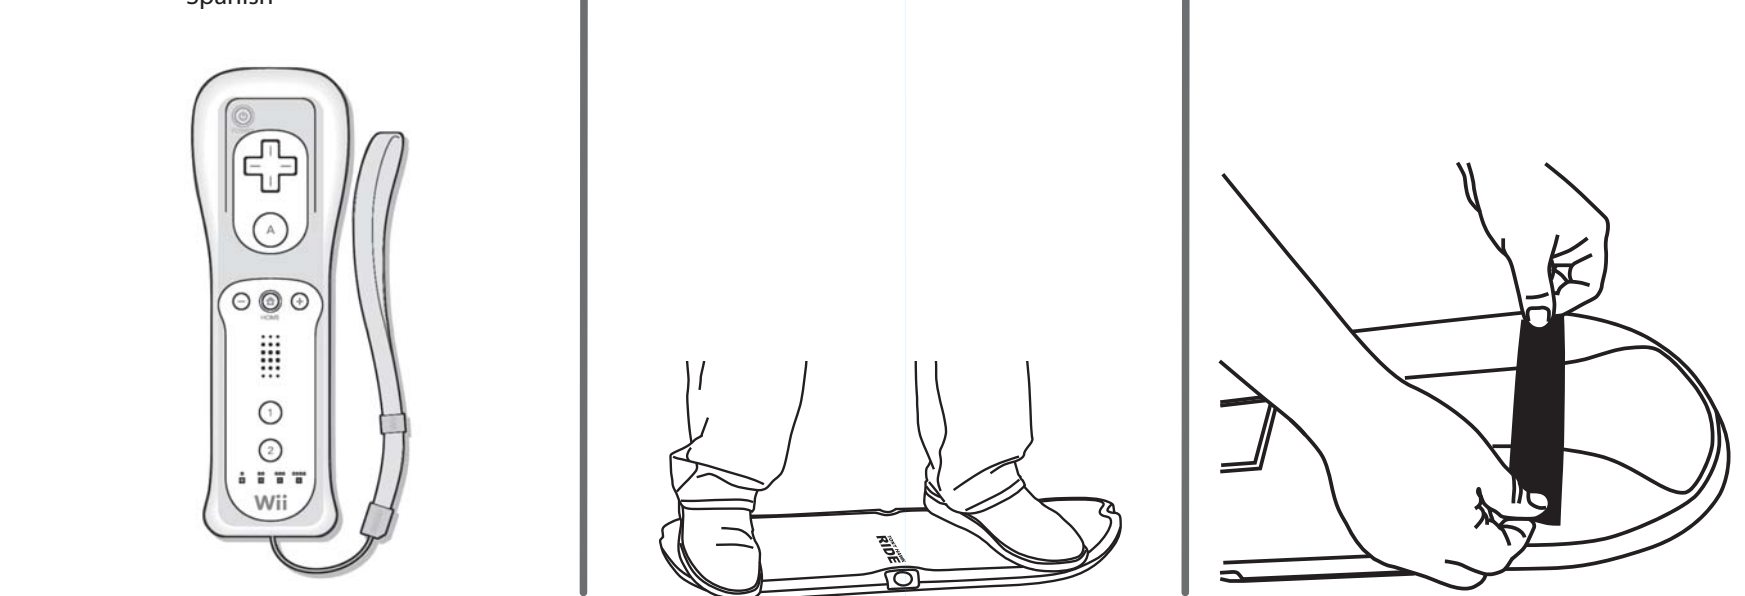

WII™ SKATEBOARD CONTROLLER INSTRUCTIONS
1. Install four new alkaline batteries into skateboard controller.
2. Plug in the dongle into the USB port of the WII™ console.
3. If the four LEDs on the skateboard turn off, press the Power Button once to turn on the skateboard controller.
4. After loading up the game, you can use the Wii Remote™ to navigate the main menu and select options.

USE INSTRUCTIONS
IMPORTANT! For proper use and to avoid injury, read and follow the important safety instructions in this hardware manual and the software manual.
CAUTION: Do not use the skateboard controller on a carpeted surface unless you are wearing your skateboard shoes.
WARNING: Do not use the skateboard controller on a wet or slippery surface.

CAUTION: Do not use the skateboard controller on a wet or slippery surface.
WARNING: Do not use the skateboard controller on a wet or slippery surface.

French Spanish

French Spanish

Auto Sleep Mode
1. The controller with the skateboard controller is hot for more than 30 seconds, it will enter sleep mode.
2. Press the Power Button on the side of the board to turn it back on.
3. Press the Connect Button on the dongle once.
4. After a few moments, the LEDs on both the dongle and skateboard controller will be blinking and remain steady, indicating that they have successfully been paired.

REACHING DONGLE WITH SKATEBOARD CONTROLLER
1. Plug the dongle into system and make sure the LED on it is blinking.
2. Press and HOLD the Power Button for more than 1 second.
3. Press the Connect Button on the dongle once.
4. After a few moments, the LEDs on both the dongle and skateboard controller will be blinking and remain steady, indicating that they have successfully been paired.

WARNING: Do not use the skateboard controller on a wet or slippery surface.
WARNING: Do not use the skateboard controller on a wet or slippery surface.

WIRELESS CONTROLLER INSTRUCTION MANUAL ENGLISH

SKATEBOARD CONTROLLER CARE
1. Keep the skateboard controller dry and away from open flames or heat sources.
2. Do not touch the skateboard controller if it is dirty or wet.
3. Do not use the skateboard controller if it is damaged or if the battery cover is not properly closed.

BATTERY SAFETY
1. Insert the batteries in the correct orientation.
2. Do not touch the positive (+) and negative (-) ends of the batteries.
3. Do not touch the positive (+) and negative (-) ends of the batteries.

TROUBLESHOOTING
If you encounter problems, try the possible solutions provided below.
1. Make sure the skateboard controller is properly connected to the console.
2. Make sure the skateboard controller is properly connected to the console.

IC INFORMATION FOR THE CONSUMER
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
1. This device may cause interference with other electronic equipment.

IC INFORMATION FOR THE CONSUMER
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may cause interference with other electronic equipment.

PRODUCT DISPOSAL INFORMATION
Dispose of this product in accordance with local and national regulations (if any), including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

CUSTOMER SUPPORT | LIMITED HARDWARE WARRANTY ENGLISH

LIMITED HARDWARE WARRANTY
Activation warrants to the original consumer purchaser of this hardware or accessories (collectively, the "Hardware") that the Hardware will be free from defects in materials and workmanship for the duration of the warranty period.

WARRANTY EXCLUSIONS
This warranty does not cover the Hardware if it is damaged or if the battery cover is not properly closed.

 
WARRANTY LIMITATIONS
This warranty is limited to the Hardware and does not cover accessories or software.

WARRANTY PROCESS
If you have a claim, you must first contact your local retailer or the manufacturer.


WARRANTY CONTACT
For more information, please contact your local retailer or the manufacturer.

WARRANTY CONTACT
For more information, please contact your local retailer or the manufacturer.

WARRANTY CONTACT
For more information, please contact your local retailer or the manufacturer.

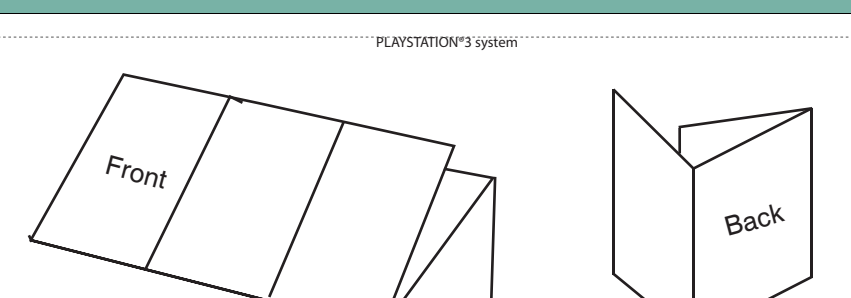

 Inside dotted lines are fold lines.
Outside solid lines are trim lines.
Outside dotted lines are bleed lines.

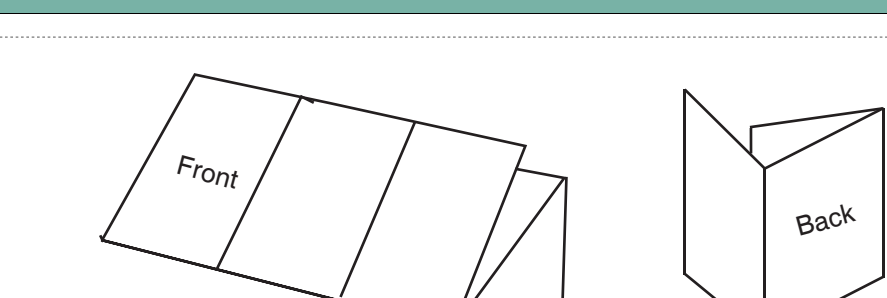

Inside dotted lines are fold lines.
Outside solid lines are trim lines.
Outside dotted lines are bleed lines.

ShorewoodPackaging
TITLE: Guitar Hero Quick Start Guide
DATE: 3/17/09 DIE NUMBER: GH_QuickStart_F18