

Adaptrum

A person wearing a plaid shirt is seen from the back, holding a laptop and looking out over a cityscape at sunset. The scene is bathed in warm, golden light, with the sun low on the horizon. The image is partially obscured by a red diagonal shape in the top left corner and a white diagonal shape in the bottom right corner.

QUICK START GUIDE v1.5

Initial Base Setup

FCC / OFCOM Database Mode

© 2017 Adaptrum, Inc.

ACRS 2.0 Base Initial Setup

Database Mode: Base(FCC/OFCOM) mode(1)

1. Select device from dropdown menu and open GUI
2. Fill out all information in form shown below
For OFCOM: Add Authorization Key provided by Nominet

Location Information

Network Settings

Registration Information

OFCom ONLY: Authentication Token

3. Save All Settings to Target and Reboot (wait 60 seconds)
4. Open GUI and select device from dropdown menu
5. Wait for Channel list to come up
6. Select any channel from database channel dropdown list


Select a Channel

Get Channel List Again

- Select the Diagnostics Tab
- Measure Available DB Channel Quality and pick a channel with the smallest number/greenest bar



- Select the Database Tab and click Reset Channel Request
- Select chosen channel from dropdown list

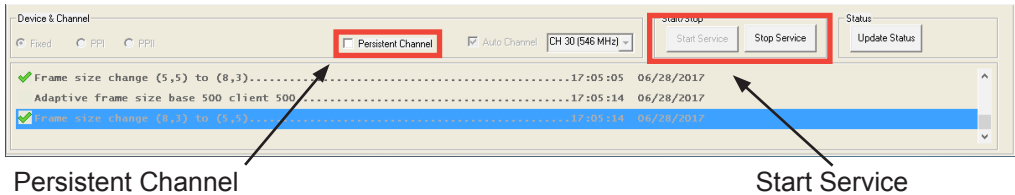


- Click Start Service to begin broadcasting
 - Select Persistent Channel if device should maintain service even after power cycle
- For OFCOM:** Do not use Persistent Channel and keep GUI open so that GUI can notify database of any changes.
- Save and Reboot to commit all changes
 - Proceed to configure Adaptrum Clients

Antenna Orientation

Panel to Multi-Yagi Client Installations

1. Client Yagi antennas should all be pointed directly at the Base Panel antenna

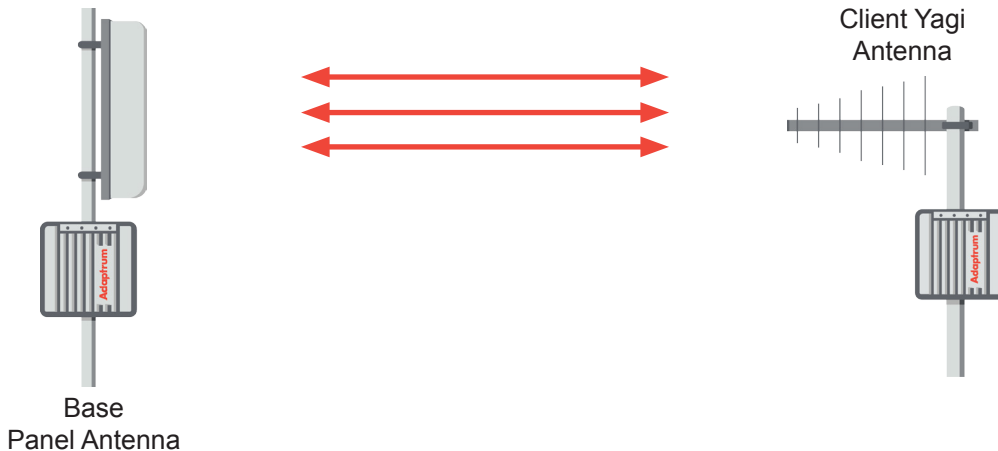

2. All Client antennas must be within a 120-degree arc
3. The Base antenna direction should point towards the center of the Clients' sector

