

Wallmount Wireless Chime & Push

RCWL110A

Please retain these instructions for future reference.

Pack Contents

- Bell Push
- 100 ft. door chime
- 4 screws, wall anchors, adhesive pad, wall mount bracket
- 23A 12V Alkaline battery for the push

You Will Require

 
- Small flat blade screwdriver
- Small cross head screwdriver
- 4 LR14(C) Alkaline batteries for the chime (not included)

Safety...

Always follow the manufacturer's advice when using power tools and wear suitable protective equipment (e.g. safety goggles) when drilling holes.


Set Up The Bell Push...

1. Open the bell push unit. Carefully insert a small flathead screwdriver into slot A and twist gently. Lift away the front of the bell push to reveal the inside.



2. Set the bell push channel.

 It is possible that your chime may be set off by a nearby wireless device. This could be a neighbor's bell push, for example. To prevent this interference, you may need to change to another "channel". Using a flat blade screwdriver, set rotary switch B to another position, 1 to 16. Make a note of the channel setting. Your chime will need to have its switch set to the same position – see Chime Set Up.

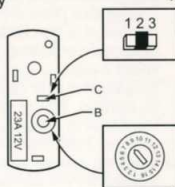

3. Select a tune.

 
Switch C, in the bell push, selects the chime tune:

- 1=Westminster
- 2=Ding Dong (manufacturer's setting)
- 3=Ding

Mounting The Bell Push...


Mount the bell push using the adhesive pad or by using the two screws, as follows:

1. Hold the bell push up against the door frame or wall where you want to mount it. (Ensure the push button is at the top).
2. Make a mark on the wall where the two screw holes will be.
3. Take away the bell push base and drill two holes, large enough to accommodate the wall plugs if necessary.
4. Screw the bell push to the wall through the mounting points D.
5. Insert the 12V 23A battery (included).
6. Refit the cover, locating the top catch first.

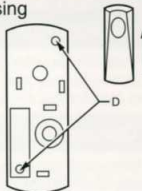

Set Up The Chime...

 1. Set the chime channel. Set rotary switch E on the chime to position 1 to 16, as with the bell push. The channel set on the chime must match the channel already set on the bell push in Push Set Up.
2. Install the chime batteries. Remove the cover on the rear of the chime and insert the alkaline batteries, LR14(C), in the direction shown in the molding in the back of the battery compartment. Note that this door chime does not work with rechargeable Ni-Cd batteries.

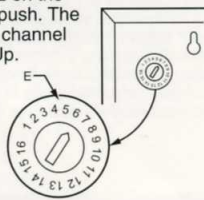

Test Your Door Chime...

 
Test your wirefree door chime at the desired location before you mount the chime on the wall.

1. Press the bell push. The chime should sound. Check the Troubleshooting section if the chime does not sound.

Wall Mounting...

The chime is designed so it can be free standing or wall mounted, using the wall mount bracket and screws (included).

1. Place the wall mount bracket on the wall and mark the screw holes (F).
2. Drill the holes and use wall anchors (included) if you are mounting to a masonry wall.
3. Screw the wall mount bracket to the wall. Make sure the hook is facing up.
4. Tilt the chime and hook the slot into the hook of the wall mount bracket as shown below. Make sure the hook is fully inserted into the slot.

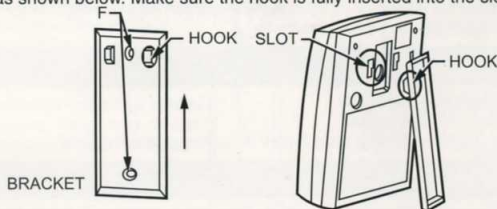

Troubleshooting...

Chime doesn't sound when the bell push is pushed

- Check that the batteries have enough charge and are installed the right way. Note the + and - symbols molded into the back of the battery compartment.
- If the chime sound becomes faint or distorted, you should replace the batteries. Use LR14(C) alkaline batteries only.
- Check that the push battery has enough charge and is installed the right way. Note the + and - symbols molded into the back of the battery compartment.
- Check that the bell push channel switch and the chime channel switch are in the same position. See Set Up.
- Check that the distance between the bell push or the chime is not too great* (see front of pack).

Chime sounds without being pushed

- Check that there is not water in the bell push or the chime. This can damage the electronics.
- Check that a neighbor is not using the same channel for their chime or a similar wireless system. See Set Up.

*The stated transmission range if this product is measured in open field conditions. Walls, ceilings and metal structures (i.e. reinforced uPVC) will reduce the maximum range.

Disposal and Recycling...

Batteries and waste electrical products should not be disposed of with household waste. Please recycle where these facilities exist. Check with your local authority or retailer for recycling advice.

Guarantee...

Honeywell guarantees this product for 1 year from the date of purchase. Proof of purchase is required; this does not affect your statutory rights. If you require further information about your product, call the Honeywell helpline at 1-800-468-1502.

Declaration...

Honeywell hereby declares that this product complies with Part 15 of the FCC rules and Industrial Canada standards. This device operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for regulatory compliance could void the users authority to operate the equipment.

Design reg. UK3015090,3015344; EU 180823,176672; China ZL200430006524.9, ZL200430050301.2



Operating frequency: 345 MHz;
FCC and IC certified
Fréquence de service : 345 MHz
Certifié FCC et IC

©2007 Honeywell International Inc.
All Rights Reserved.
Golden Valley, MN 55422 U.S.A.
Engineered by Honeywell - Made in China
Tous droits réservés.
Conçu par Honeywell - Fabriqué en Chine
Todos los derechos reservados.
Diseñado por Honeywell - Hecho en China

<http://yourhome.honeywell.com>
1-800-468-1502

1-Year Limited Warranty
Garantie limitée de 1 an
1 año de garantía limitada



Proof of Purchase/Preuve d'achat/
Comprobante de compra
Model/Modèle/Modelo RCWL110A1006
69-2125EFS