

Honeywell

800-09008 5/11 Rev. A
ADEMCO 5802WXT
SUPERVISED MINIATURE
TRANSMITTER

INSTALLATION AND SETUP GUIDE

The ADEMCO 5802WXT is a wireless transmitter that may be worn around the neck, on a wrist band or as an apparel clip that may also may be mounted to a desk, dresser, etc. (necklace, band, and clip supplied). Pressing the button on the transmitter sends a signal to the control receiver. The 5802WXT is intended for use only with wireless alarm systems that support 5800 Series devices.

The transmitter is supervised, i.e., it automatically sends a message to the control receiver that includes battery status information every 70-90 minutes.

This transmitter can be programmed as any zone type response (e.g., Emergency Panics, Relay Action, etc.).

Battery Replacement

The 5802WXT is powered by a long-life Lithium battery that may be replaced when a low battery is eventually indicated by the control unit.

NOTE: Although water-resistant, please do not immerse in water at a depth below 10cm for more than 1 hour.

Programming the Serial Number

The 5802WXT has a unique identification code (serial number) permanently assigned during manufacture.

You must "enroll" the transmitter's serial number and loop number during system programming. The 5802WXT may be defined as Input Type "RF" (supervised RF, for an hourly check-in; **do not** take out of range) or "UR" (Unsupervised RF). Its loop number is "1." See the control unit's Installation Instructions for further details regarding programming. When installation is complete, verify operation from desired location(s).

 
Specifications

Unit Dimensions: 1.5" (3.9mm) Diameter

LED: Lights when unit transmits.

Battery: 3-Volt 2032 Lithium

In UL installations: 3V Panasonic CR2032 only



1. Remove 4 screws and lift off cover.
2. Using a small flat-blade screwdriver remove old battery.
3. Insert new battery by placing new battery under the gold tab and then pressing down. Ensure the POS + side of battery is face up after installation.
4. Align cover and attach with 4 screws.

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE RECEIVER/CONTROL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION AND FOR DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

FEDERAL COMMUNICATIONS COMMISSION STATEMENTS

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

FCC/IC STATEMENT

This device complies with Part 15 of the FCC Rules, and RSS 210 of IC. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC & de RSS 210 des Industries Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.

IC MODEL: 5802WXT

UL US Listings: HOUSEHOLD BURGLARY WARNING SYSTEM CONTROL UNIT ACCESSORY **UL Canadian Listings:** HOUSEHOLD BURGLARY WARNING SYSTEM CONTROL UNIT ACCESSORY ALSO LISTED FOR USE AS A SIGNAL APPLIANCE, MISCELLANEOUS CERTIFIED FOR CANADA.

Honeywell

2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747
Copyright © 2011 Honeywell International Inc.



800-09008 5/11 Rev. A

Honeywell

800-09009 5/11 Rev. A
ADEMCO 5802WXT-2

**SUPERVISED MINIATURE TRANSMITTER
INSTALLATION AND SETUP GUIDE**

The ADEMCO 5802WXT-2 is a wireless transmitter that may be worn around the neck, on a wrist band or as an apparel clip that may also be mounted to a desk, dresser, etc. (necklace, band, and clip supplied). Pressing both buttons on the transmitter at the same time sends a signal to the control receiver. The 5802WXT-2 is intended for use only with wireless alarm systems that support 5800 Series devices.

The transmitter is supervised, i.e., it automatically sends a message to the control receiver that includes battery status information every 70-90 minutes.

This transmitter can be programmed as any zone type response (e.g., Emergency Panic, Relay Action, etc.).

BATTERY REPLACEMENT

The 5802WXT-2 is powered by a long-life Lithium battery that may be replaced when a low battery is eventually indicated by the control unit.

NOTE: Although water-resistant, please do not immerse in water at a depth below 10cm for more than 1 hour.

PROGRAMMING THE SERIAL NUMBER

The 5802WXT-2 has a unique identification code (serial number) permanently assigned during manufacture.

You must "enroll" the transmitter's serial number and loop number during system programming. The 5802WXT-2 may be defined as Input Type "RF" (supervised RF, **do not** take out of range) or "UR" (Unsupervised RF). Its loop number is "1." See the control unit's Installation Instructions for further details regarding programming. When installation is complete, verify operation from desired location(s).

Specifications

Unit Dimensions: 1.5" (3.9mm) Diameter

LED: Lights when unit transmits.

Battery: 3-Volt 2032 Lithium

In UL installations: 3V Panasonic CR2032 only



1. Remove 4 screws and lift off cover.
2. Using a small flat-blade screwdriver remove old battery.
3. Insert new battery by placing new battery under the gold tab and then pressing down. Ensure the POS + side of battery is face up after installation.
4. Align cover and attach with 4 screws.

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE RECEIVER/CONTROL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION AND FOR DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

FEDERAL COMMUNICATIONS COMMISSION STATEMENTS

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

FCC/IC STATEMENT

This device complies with Part 15 of the FCC Rules, and RSS 210 of IC. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la partie 15 des règles de la FCC & de RSS 210 des Industries Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.

IC MODEL: 5802WXT-2

UL US Listings: HOUSEHOLD BURGLARY WARNING SYSTEM CONTROL UNIT
ACCESSORY UL Canadian Listings: HOUSEHOLD BURGLARY WARNING SYSTEM CONTROL UNIT ACCESSORY ALSO LISTED FOR USE AS A SIGNAL APPLIANCE, MISCELLANEOUS CERTIFIED FOR CANADA.

Honeywell

2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747
Copyright © 2011 Honeywell International Inc.



800-09009 5/11 Rev. A