




## D6 PRO Wi-Fi DUCTLESS CONTROLLER


### Installation Guide

For more information visit  
[yourhome.honeywell.com](http://yourhome.honeywell.com)

### In this box

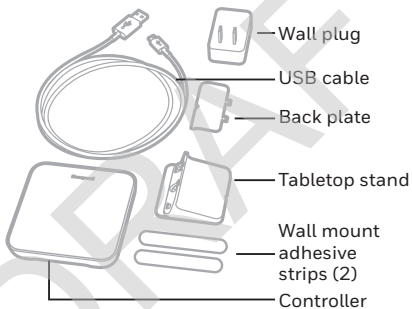

### Quick reference

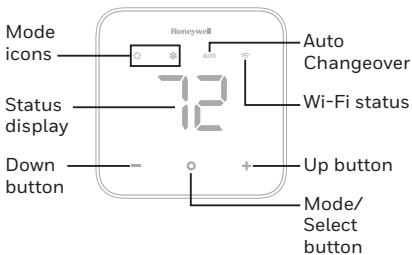

### Need Help?

**Web**  
[yourhome.honeywell.com](http://yourhome.honeywell.com)

**Email**  
[MyLyric@honeywell.com](mailto:MyLyric@honeywell.com)

**Phone**  
1-800-633-3991

### Home and Building Technologies

715 Peachtree Street NE  
Atlanta, GA 30308

[yourhome.honeywell.com](http://yourhome.honeywell.com)

® U.S. Registered Trademark  
© 2017 Honeywell International Inc.  
33-00322-01 M.S. 12-17  
Printed in U.S.A.




33-00322-01

# 1 Choose a location

Choose a location where the controller's signal has a clear path to the ductless unit.

Remove the batteries from the remote controller that came with the ductless unit. That way the two controllers won't send conflicting commands.

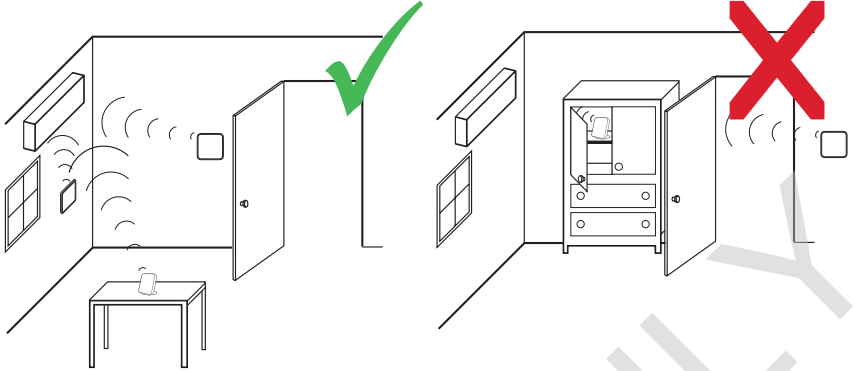


The controller sends an IR signal from three places. One on each side, left and right, and one from the top.

Consider them when you choose a location.




## 2a Tabletop assembly


- 1 Pull the power cord through the tabletop stand.

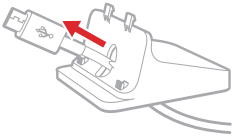


- 2 Plug the power cord into the controller.

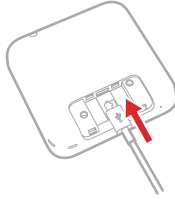

- 3 Connect the tabletop stand to the controller.

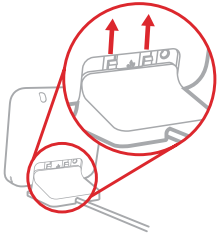

- 4 Plug the power cord into the wall adapter, and plug in the wall adapter.

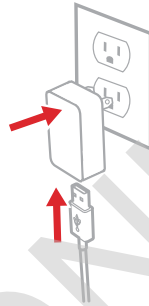


- 5 Place the controller in your selected location.




## 2b Wall mount assembly

- 1 Plug the power cord into the controller.

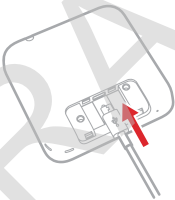


- 2 Snap the back plate onto the controller.

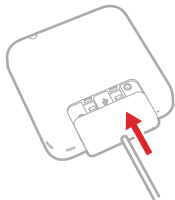

- 3 Attach the wall mount adhesive strips to the controller.



- 4 Plug the power cord into the wall adapter, and plug in the wall adapter.

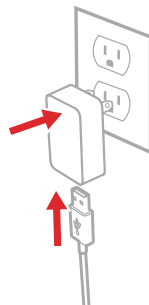


- 5 Attach the controller to the wall in your selected location.



# 3 System setup

1 Connect the controller to power.

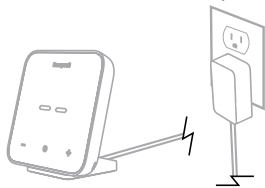

2 Press any button to enter setup.



3a Press 0 to access options for setting -1.



3b Press + to change setting -1 to the desired option.



Setting	Options (Default in bold)
-1 Controller Location	<b>01 – Tabletop</b> 02 – Wall mount

3c Press 0 to select the option for setting -1.

4a Setting -2 is displayed. Press 0 to access options for setting -2.

-2 Temperature Scale

4b Press + to change setting -2 to the desired option.

**01 – °F**  
02 – °C

4c Press 0 to select the option for setting -2.

5a Setting -3 is displayed. Press 0 to access options for setting -3.

-3 Outdoor Unit Configuration

5b Press + to change setting -3 to the desired option.

**01 – Single**  
02 – Multi

5c Press 0 to select the option for setting -3.

6a Setting -4 is displayed. Press 0 to access options for setting -4.

-4 Multi Outdoor Unit Number\*

6b Press + to change setting -4 to the desired option.

**02 – 99**

\*Only shown if Setting -3 is set to 02.

6c Press 0 to select the option for setting -4.

7a Setting -5 is displayed. Press 0 to access options for setting -5.

-5 Ductless Unit Brand

7b Press + to change setting -5 to the desired option.

See page 7 for Ductless Unit Brand ID

7c Press 0 to select the option for setting -5.

8a Setting -6 is displayed. Press 0 to access options for setting -6.

-6 Ductless Unit Model

8b Press + to change setting -6 to the desired option.

See page 7 for Ductless Unit Model ID

8c Press 0 to select the option for setting -5.

9 The screen will display [ ]. Press 0 to save and exit system setup.

[ ] Setup Complete



## Idle mode

The controller goes into Idle mode (the screen is dim) after 45 seconds of inactivity. Press any button to wake up the controller. The wake up button push does not change temperature or settings.

## Change mode

1. Be sure the controller is not in Idle mode, then press **O** to change the system mode.
2. Stop pressing **O** when you reach the mode you want.


The ductless unit will beep when it gets a command from the controller.




Symbol	Mode
	Heat mode - the ductless unit warms the space to the temperature shown on the controller.
	Cool mode - the ductless unit cools the space to the temperature shown on the controller.
[screen is blank]	Off mode - the ductless unit is turned off

## Change temperature

Warmer

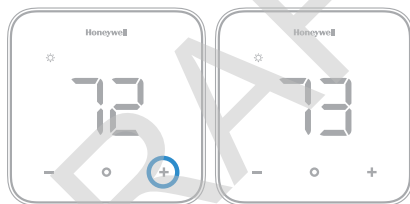

Cooler

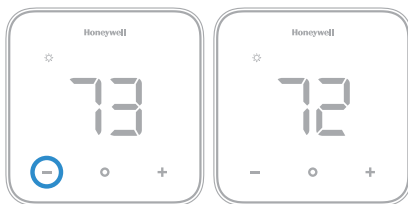

## Room temperature

Any time the controller is not being interacted with, the current room temperature is displayed on screen.

## Viewing set temperature

Be sure the controller is not in Idle mode, then press **+** or **-** once to view the current set temperature. The set temperature will “pulse” on screen. After a short period of time the screen will change to display the room temperature.

## Change temperature

1. Be sure the controller is not in Idle mode, then press **+** or **-** more than once to change the set temperature so it is higher or lower in the current mode.
2. Stop pressing **+** or **-** when you reach the temperature you want.
3. The screen will pulse and then return to the room temperature display.

## Wi-Fi setup

1. Download the Honeywell Home app.
2. Create an account or log in to your account.
3. Select “Add new device” in the app.
4. Choose D6 Pro Wi-Fi Ductless Controller.
5. Follow instructions in the app to configure the controller.



Note: During setup, the Wi-Fi icon  will blink or be on solid. This tells you the controller status in the Wi-Fi connection process.

Blinking blue	Controller is powered up and ready to begin connecting.
Solid blue	Controller is connected to the mobile device through the app.
Solid green	Controller is connected to the Wi-Fi network.
Solid red	Controller is disconnected from the Wi-Fi network.
Blinking red	Controller is disconnected from Wi-Fi network and has lost it's schedule. Reconnect to Wi-Fi network to resume schedule.

## In the Honeywell Home app

In the app you can set the controller to Auto Changeover. The controller will switch from heating mode to cooling mode based on the temperature setting and the room temperature.

When in Auto Changeover mode, **AUTO** will be displayed on the controller screen.

## Enter system setup

You can change your controller settings at any time. To enter system setup:

1. Be sure the controller is not in Idle mode, then press and hold **+** and **o** and **-** for three seconds all at the same time.
2. Change the settings as needed. See “System setup” for more information.

## Software and security questions,

**Q:** How can I be sure my thermostat is running the most up-to-date firmware?

**A:** When your thermostat is connected to Wi-Fi, it will automatically receive over-the-air firmware updates from Honeywell. These firmware updates contain things such as new features as well as security upgrades. Keep your thermostat connected to Wi-Fi to ensure it receives these updates.

**Q:** How can I prevent a cybercriminal from making unauthorized changes to my thermostat?

**A:** If a cybercriminal gains access to your Wi-Fi router, they can tamper with a wide range of online activities, including the settings on your connected devices. Make sure you change the default password on your Wi-Fi router, and when you select a new password, make sure it uses multiple upper- and lower-case letters and special characters

Brand	Id	Model	Id
Mitsubishi	1	MSZ-GL Series(1)	1
		MSZ-GL Series(2)	2
		MSZ-EF Series	3
		MSZ-FH Series	4
		MSZ-GE Series	5
		MSZ-FE Series(1)	6
		MSZ-FE Series(2)	7
		Generic model 594, MSZ-ZB09VC, MSZ-ZB12VC, MSZ-ZC09VC, MSZ-YC09VC-H1, MSZ-YC19VC-H1, MSZ-YE09VA-H1	8
		Generic model 393, MSD-CB09VD-H1, MSD-CB12VD-H1, MSD-EC09VD-H1, MSD-EC12VD-H1	9
		MSZ-HD serie, MSZ-HW serie, MSZ-HW401S-W, MSZ-HW561S-W	10
Mitsubishi Mr. Slim(1)	11		
Mitsubishi Mr. Slim(2)	12		
Daikin	2	LV Series	1
		FT Series	2
		RXN Series/KE Series(indoor)	3
		RXL Series/19 Series(indoor), 20 Series(indoor)	4
		FVXS Series(1)	5
		FVXS Series(2)	6
		FTXN-N Series(1)	7
		FTXN-N Series(2)	8
		FTKN-N Series	9
		FTX-N Series	10
		FTK-N Series	11
Generic model 366, FTWN25JV1, FTWN35JV1	12		
Fujitsu	3	RLS3 Series	1
		RLFW1 Series(1)	2
		RLFW1 Series(2)	3
		RLS3H Series	4
		RL2 Series	5
		RLX	6
		RULX	7
		RULX	8

Brand	Id	Model	Id
LG	4	LA-HYV Series	1
		LS-HSV4 Series	2
		LS-HEV1 Series	3
		LS-HXV Series	4
		LMN-HVT Series(1)	5
		LMN-HVT Series(2)	6
Midea	5	Generic model 40, FSA10M16, FSA13M16, FSAV13M16, FSAV19M16, FWAC08M16, FWAC10M16, FWAC13M16, FWAC19M16, FWAD08M16, FWAD10M16, FWAD13M16, FWAD19M16, PCCA24GWCWD, PCCA36GWCWD, PCCA48GWCWD, WE012GMFI15HLD/WYE012GMFI15RL, ZACS-07 HPN1, ZACS-09 HPN1, ZACSI-09 HPN, ZACSI-12 HPN, ZACSI-18 HPN, ZACSI-24 HPN, MSC-09HRDN1-S, MSC-12HRDN1-S, MSR1-12HRN1, MSR1-18HRN1, MWH-07HR3N1, MWH-09HR3N1, MWH-12HR3N1, MWH-18HR3N1, CHC-28V2H, CHI-28V2H, CCS009CA, CCS009CA-2B, CCS009CA-2BI, CCS012CA, CCS012CA-2B, CCS012CA-2BI, CCS012CD, CCS012CD-2B, CCS012CD-2BI, CCS018CD, CCS018CD-2BI, CCS024CD, CCS024CD-2BI, CHP009CA-2BI, CHP012CA-2BI, CHP012CD-2BI, CHP018CD-2BI, CHP024CD-2BI, CHP030CDI, CHP036CDI, MS25F1, MS25VC3, MS25VCT, RXI-232CM, KFIM12, KTIM036-H2, KTIM12U, KTIM18U, KTIM24, KUIM036-H2, KUIM048-H2, KUIM12U, KUIM18U, KUIM24, KFUF036-C2, KFUF048-C2, KFUF060-C2, MSE-09CR	1
		Generic model 579	2
		Generic model 589	3

Brand	Id	Model	Id
Midea	5	Generic model 46, SAC-V22HE, HP12K, HP18K, HP22K, FRS123LS1, KSE26HRA, DHM12N, DHM18N, DHM24N, DHM30N, DHM36N, 12000 BTU, A37GW2C-I2, A55GW2C-I2, A74GW2C-I2, CIH SERIES, CIC SERIES, SMA SERIES, VMH SERIES, KSIL036-H215, KSINO09-H115, KSINO12-C115, KSINO12-C215, KSINO12-H115, KSINO12-H215, KSINO18-C215, KSINO18-H215	4
		Generic model 54, MSE09M4	5
		VMH09SDKIT25, VMH09SDKIT50, VMH12SDKIT25, VMH12SDKIT50, VMH18SDKIT25, VMH18SDKIT50, VMH24SDKIT25, VMH24SDKIT50, Generic model 55, 38/40MAQ, 38/40MBQ, 38GJQ/40GJ, 38MAQ/40MBC, D Series Single Zone, VMH Inverter Series, DA1215-H1, DA1815-H2, DA2415-H2	6
		Generic model 56, Y8HJZCO09BAMLAFX, Y8HJZCO12BAMLAFX, Y8HJZCO18BAMLAFX, Y8HJZCO21BAMLAFX, Y8HJZCO24BAMLAFX, Y9HJZCO18BAMLAFX, Y9HJZCO24BAMLAFX, Y9HJZH009BAMLAFX, Y9HJZH012BAMLAFX, YPHJYH009	7
		Heat Pump MA*D Ducted Models, Heat Pump MB*C Models, Heat Pump MB*D Ducted Models, Heat Pump MB*F Models, Generic model 512, AURA Series, DA-INVERTER Series, DVC Series, KSID012-H115Q, KSID016-H214Q, KSID022-H215Q, KSID032-H214Q, KSIO009-H124, KSIO012-H123, KSIO018-H221, KSIO024-H219, A-09-HP-C-230, A-12-HP-C-230,	8

Brand	Id	Model	Id
Midea	5	A-18-HP-C-230, A-22-HP-C-230, DIY-12-C-HP-115, DIY-18-C-HP-230, DIY-24-C-HP-230, DIY-32-C-HP-230, O-09HP-C-115, O-12HP-C-115, O-18HP-C-230, O-24HP-C-230, P-09HP-C-230, P-12HP-C-230, P-18HP-C-230, P-24HP-C-230, Aura serie	8
		Generic model 972	9
		Generic model 78, LETO SERIES	10
Gree	6	Generic model 645, 38GRQ, 40GRQ, U铂2代, U雅2代	1
		Generic model 376	2
		I-铂, I-雅, U-铂, U-雅, I-酷, U-酷	3
		Generic model 18, Y502K, CSA120H, EWA120H, GH-PAC-12, GM-PAC-12	4
		Generic model 292, KC-R serie, WAC-307R, WAC-309R, WAC-312R, WAC-318R	5
		Terra Ductless, Terra Mini Split, B-VFH09MA-1, B-VFH12MA-1, B-VFH18MA-1, InverterFlex? Series	6
		Generic model 823	7
		Generic model 1058, A18EM4H4R18, A18EM4H4R24, A20EM4H4R12, A22EM4H4R09, 38/40GVC, 38/40GVM, 38/40GVQ, 38/40GXM, FRS184YS2, FRS224YS2, GSA08, GSA09, GSA12, GSA209A, GSA212A, GSA218A, GSA224A, INVERTER, BMKH09-15YN4GA, BMKH09-22YN4GA, BMKH12-15YN4GA, BMKH12-20YN4GA, BMKH18-15YN4GA, BMKH18-18YN4GA, BMKH24-15YN4GA	8
		Generic model 15	9
Gree	6	ZAS1229A, ZAS1825A, ZAS2429A, ZAS925A, Generic model 429, HW240C1, HW240E, B-VFH09FA-1, B-VFH12FA-1, B-VFH18FA-1	10



Brand	Id	Model	Id
Haier	7	Generic model 20002	1
		ESAQ406P, ESAQ408P, Generic model 417	2
		Generic model 655	3
		Generic model 830	4
		A0010401314J, A0010401511J, AW07LC2VHA, AW09LC2VHA, AW12LC2VHA, AW18LC2VHA, HSU09VHG, HSU09VHG(DB), HSU09VHG(DB)-G, HSU09VHG(DB)-W, HSU09VHGDB, HSU09VHGDBG, HSU09VHGDB-G, HSU09VHGDBW, HSU09VHGDB-W, HSU09XHKG, HSU09XHKG, HSU09XHKG-G, HSU109VHG, HSU109VHGG, HSU109VHG-G, HSU112VHG, HSU112VHGG, HSU112VHG-G, HSU12HXKG, HSU12HXK-G, HSU12HXKW, HSU12HXK-W, HSU12VHG, HSU12VHG(DB), HSU12VHG(DB)-G, HSU12VHG(DB)-W, HSU12VHGDB, HSU12VHGDBG, HSU12VHGDB-G, HSU12VHGDBW, HSU12VHGDB-W, HSU12XHKG, HSU18VHG, HSU18VHG(DB), HSU18VHG(DB)-G, HSU18VHG(DB)-W, HSU18VHGDB, HSU18VHGDBG, HSU18VHGDB-G, HSU18VHGDBW, HSU18VHGDB-W, HSU18VHK, HSU18VHKG, HSU18VHK-G, HSU18VHKW, HSU18VHK-W, HSU24VHG, HSU24VHG(DB), HSU24VHG(DB)-G, HSU24VHG(DB)-W,	5

Brand	Id	Model	Id		
Haier	7	HSU24VHGDB, HSU24VHGDBG, HSU24VHGDB-G, HSU24VHGDBW, HSU24VHGDB-W, HSU24VHK, HSU24VHKG, HSU24VHK-G, HSU24VHKW, HSU24VHK-W, HVAC5620001, YRHD01	5		
		Generic model 1061	6		
		KF-50LW/01HBF12, KF-50LW/02HBF13, KF-72LW/01HBF12, KF-72LW/01HBF13, KFR-50LW/02HBF12, KFR-50LW/02HBF13, KFR-50LW/06HBF13, KFR-72LW/02HBF12, KFR-72LW/02HBF13, KFR-72LW/06HBF13, KFR-76LW/01HBF13	7		
		Generic model 256	8		
		Generic model 406	9		
		Generic model 836, AC562016, HPAC9M, HPM07XC5, AP075M, AP093M, AP095R, AP099R, AP125HD	10		
		HISENSE	8	KFR-39BP, KFR-45LW	1
				Generic model 405	2
				Generic model 9	3
				Generic model 68	4
Generic model 410	5				
Generic model 427	6				
Generic model 10	7				
Generic model 12	8				
Generic model 80	9				
KFR-35G 27FZBPHJ	10				
CHIGO	9	Generic model 640	1		
		YHJH-90A/E2GE, Generic model 613	2		
		Generic model 5	3		
		Generic model 121	4		
		Generic model 122	5		
		Generic model 123	6		
		Generic model 124	7		
		Generic model 125	8		
		Generic model 126	9		
		Generic model 127	10		

Brand	Id	Model	Id
KELON	10	Generic model 12	1
		Generic model 409	2
		Generic model 411	3
		Generic model 13	4
		Generic model 14	5
		Generic model 143	6
		Generic model 485	7
		Generic model 486	8
		Generic model 487	9
		Generic model 489	10
PANASONIC	11	Generic model 674, CS-PA12DKD/bmJ, CS-PA12GKD/bmJ, CS-PA16EKD/bmJ, CS-PA16GKD/bmJ, CS-PA7DKD/bmJ, CS-PA7GKD/bmJ, CS-PA9DKD/bmJ, CS-PA9GKD/bmJ, CS-PW12KKA, CS-PW9KKA	1
		Generic model 673, CS-V12RWA, CS-V12RWA-2, CS-V9RWA, CS-V9RWA-2	2
		Generic model 583	3
		Generic model 323, CS-S9MKA	4
		Generic model 293	5
		RB-S34HWM, Generic model 211	6
		Generic model 47, CS-C10KC1/bmJ, CS-C10P17KS/bmJ, CS-C10P27KS/bmJ, CS-C1208KW/bmJ, CS-C1209KW/bmJ, CS-C1217KW/bmJ, CS-C1218KW/bmJ, CS-C1227KW/bmJ, CS-C1299KW/bmJ, CS-C12B17KN/bmJ, CS-C12B17KY/bmJ, CS-C12KA1/bmJ, CS-C12KB1/bmJ, CS-C12KB2/bmJ, CS-C12KC1/bmJ, CS-C1308KW/bmJ, CS-C1309KW/bmJ, CS-C1317KW/bmJ, CS-C1318KW/bmJ, CS-C13B17KN/bmJ, CS-C13B17KY/bmJ, CS-C13KA1/bmJ, CS-C13KB1/bmJ, CS-C13KB2/bmJ, CS-C15P17KS/bmJ, CS-C1617KW/bmJ, CS-C1618KW/bmJ, CS-C16P17KS/bmJ, CS-C2217KB/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-C2217KGM/bmJ, CS-C2517KB/bmJ, CS-C2517KGM/bmJ, CS-C2527KB/bmJ, CS-C2527KGM/bmJ, CS-C3217KB/bmJ, CS-C3217KGM/bmJ, CS-C3617KB/bmJ, CS-C3617KGM/bmJ, CS-C708KW/bmJ, CS-C709KW/bmJ, CS-C717KW/bmJ, CS-C718KW/bmJ, CS-C7B17KN/bmJ, CS-C7B17KY/bmJ, CS-C7KA1/bmJ, CS-C7KB1/bmJ, CS-C7KB2/bmJ, CS-C8P17KS/bmJ, CS-C908KW/bmJ, CS-C909KW/bmJ, CS-C917KW/bmJ, CS-C918KW/bmJ, CS-C927KW/bmJ, CS-C999KW/bmJ, CS-C9B17KN/bmJ, CS-C9B17KY/bmJ, CS-C9B27KN/bmJ, CS-C9B27KY/bmJ, CS-C9KA1/bmJ, CS-C9KA9/bmJ, CS-C9KB1/bmJ, CS-C9KB2/bmJ, CS-HC10P08KS/bmJ, CS-HC10P09KS/bmJ, CS-HC1227KW/bmJ, CS-HC12B08KY/bmJ, CS-HC12B09KY/bmJ, CS-HC12KA1B/bmJ, CS-HC12KA1G/bmJ, CS-HC12KA1L/bmJ, CS-HC12KA1S/bmJ, CS-HC15B08KY/bmJ, CS-HC15B09KY/bmJ, CS-HC15KA1L/bmJ, CS-HC15P08KS/bmJ, CS-HC15P09KS/bmJ, CS-HC16P08KS/bmJ, CS-HC18P08KS/bmJ, CS-HC18P09KS/bmJ, CS-HC2108KB/bmJ, CS-HC2108KGM/bmJ, CS-HC2109KB/bmJ, CS-HC2109KGM/bmJ, CS-HC2508KB/bmJ, CS-HC2508KGM/bmJ, CS-HC2509KB/bmJ, CS-HC2509KGM/bmJ, CS-HC3208KB/bmJ, CS-HC3208KGM/bmJ, CS-HC3209KB/bmJ, CS-HC3209KGM/bmJ, CS-HC4008KB/bmJ, CS-HC4008KGM/bmJ, CS-HC4009KB/bmJ, CS-HC4009KGM/bmJ, CS-HC7B08KY/bmJ, CS-HC7B09KY/bmJ, CS-HC7KA1B/bmJ, CS-HC7KA1G/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-HC7KA1L/bmJ, CS-HC7KA1S/bmJ, CS-HC8P08KS/bmJ, CS-HC8P09KS/bmJ, CS-HC927KW/bmJ, CS-HC9B08KY/bmJ, CS-HC9B09KY/bmJ, CS-HC9KA1B/bmJ, CS-HC9KA1G/bmJ, CS-HC9KA1L/bmJ, CS-HC9KA1S/bmJ, CS-JC10KC1/bmJ, CS-JC10KC1N/bmJ, CS-JC10KC1S/bmJ, CS-JC12KB1/bmJ, CS-JC12KC1/bmJ, CS-JC12KC1N/bmJ, CS-JC12KC1S/bmJ, CS-JC15KB1/bmJ, CS-JC7KB1/bmJ, CS-JC7KC1/bmJ, CS-JC7KC1N/bmJ, CS-JC7KC1S/bmJ, CS-JC9KB1/bmJ, CS-PC1208KW/bmJ, CS-PC1217KW/bmJ, CS-PC12KC1/bmJ, CS-PC1308KW/bmJ, CS-PC1317KW/bmJ, CS-PC13KC1/bmJ, CS-PC908KW/bmJ, CS-PC917KW/bmJ, CS-PC9KC1/bmJ, CS-SC1227KW/bmJ, CS-SC708KW/bmJ, CS-SC727KW/bmJ, CS-SC7KB1/bmJ, CS-SC908KW/bmJ, CS-SC927KW/bmJ, CS-SC9KB1/bmJ, CS-SC9KB9/bmJ, CZ-RL027DW/bmJ, CZ-RL037DW/bmJ, CS-A10KC1/bmJ, CS-A10P17KS/bmJ, CS-A10P17KT/bmJ, CS-A1208KW/bmJ, CS-A1209KW/bmJ, CS-A1218KW/bmJ, CS-A12B17KN/bmJ, CS-A12B17KY/bmJ, CS-A12B27KN/bmJ, CS-A12B27KY/bmJ, CS-A12KA1/bmJ, CS-A12KB1/bmJ, CS-A12KB2/bmJ, CS-A1308KW/bmJ, CS-A1309KW/bmJ, CS-A1318KW/bmJ, CS-A13B17KN/bmJ, CS-A13B17KY/bmJ, CS-A13KA1/bmJ, CS-A13KA2/bmJ, CS-A13KB1/bmJ, CS-A13KB2, CS-A13KC1/bmJ, CS-A15P17KMZ/bmJ, CS-A15P17KS/bmJ, CS-A15P17KT/bmJ, CS-A15P27KMZ/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-A15P27KT/bmJ, CS-A1618KW/bmJ, CS-A16P17KMZ/bmJ, CS-A16P17KS/bmJ, CS-A16P17KT/bmJ, CS-A2217KB/bmJ, CS-A2217KGM/bmJ, CS-A2517KB/bmJ, CS-A2517KGM/bmJ, CS-A3617KB/bmJ, CS-A3617KGM/bmJ, CS-A708KW/bmJ, CS-A709KW/bmJ, CS-A718KW/bmJ, CS-A7KA1/bmJ, CS-A7KB1/bmJ, CS-A7KB2/bmJ, CS-A908KW/bmJ, CS-A909KW/bmJ, CS-A918KW/bmJ, CS-A927KW/bmJ, CS-A9KA1/bmJ, CS-A9KB1/bmJ, CS-A9KB2/bmJ, CS-HA10P08KS/bmJ, CS-HA10P09KS/bmJ, CS-HA1227KW/bmJ, CS-HA1258KW/bmJ, CS-HA12B08KY/bmJ, CS-HA12B09KY/bmJ, CS-HA12KA1B/bmJ, CS-HA12KA1G/bmJ, CS-HA12KA1L/bmJ, CS-HA12KA1S/bmJ, CS-HA15B08KY/bmJ, CS-HA15B09KY/bmJ, CS-HA15KA1L/bmJ, CS-HA15P08KS/bmJ, CS-HA15P09KS/bmJ, CS-HA16P08KS/bmJ, CS-HA18P08KS/bmJ, CS-HA18P09KS/bmJ, CS-HA2108KB/bmJ, CS-HA2108KGM/bmJ, CS-HA2109KB/bmJ, CS-HA2109KGM/bmJ, CS-HA2608KB/bmJ, CS-HA2608KGM/bmJ, CS-HA2609KB/bmJ, CS-HA2609KGM/bmJ, CS-HA3208KB/bmJ, CS-HA3208KGM/bmJ, CS-HA3209KB/bmJ, CS-HA3209KGM/bmJ, CS-HA4008KB/bmJ, CS-HA4008KGM/bmJ, CS-HA4009KB/bmJ, CS-HA4009KGM/bmJ, CS-HA7B08KY/bmJ, CS-HA7B09KY/bmJ, CS-HA7KA1B/bmJ, CS-HA7KA1G/bmJ, CS-HA7KA1L/bmJ, CS-HA7KA1S/bmJ, CS-HA8P08KS/bmJ, CS-HA8P09KS/bmJ, CS-HA927KW/bmJ, CS-HA958KW/bmJ, CS-HA9B08KY/bmJ, CS-HA9B09KY/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-HA9KA1B/bmJ, CS-HA9KA1G/bmJ, CS-HA9KA1L/bmJ, CS-HA9KA1S/bmJ, CS-JA10KC1/bmJ, CS-JA10KC1N/bmJ, CS-JA10KC1S/bmJ, CS-JA12KB1/bmJ, CS-JA12KC1/bmJ, CS-JA12KC1N/bmJ, CS-JA12KC1S/bmJ, CS-JA13KC1/bmJ, CS-JA13KC1N/bmJ, CS-JA13KC1S/bmJ, CS-JA15KB1/bmJ, CS-JA7KB1/bmJ, CS-JA7KC1/bmJ, CS-JA7KC1N/bmJ, CS-JA7KC1S/bmJ, CS-JA9KB1/bmJ, CS-NA13KB1/bmJ, CS-NA15KB1/bmJ, CS-PA10KC1/bmJ, CS-PA1208KW/bmJ, CS-PA1217KW/bmJ, CS-PA12KC1/bmJ, CS-PA1308KW/bmJ, CS-PA1317KW/bmJ, CS-PA13KC1/bmJ, CS-PA908KW/bmJ, CS-PA917KW/bmJ, CS-SA1208KW/bmJ, CS-SA1227KW/bmJ, CS-SA12KB1/bmJ, CS-SA13KA9/bmJ, CS-SA13KB2/bmJ, CS-SA13KB9/bmJ, CS-SA708KW/bmJ, CS-SA727KW/bmJ, CS-SA7KB1/bmJ, CS-SA908KW/bmJ, CS-SA927KW/bmJ, CS-SA9KB1/bmJ, CZ-RL527DW/bmJ, CZ-RL537DW/bmJ, CS-PC1808FW/bmJ, CS-PC2708FW/bmJ, CS-PC2708FWY/bmJ, CS-PC4508FWY/bmJ, CS-C918KW/bmJ, CS-C927KW/bmJ, CS-C999KW/bmJ, CS-C9B17KN/bmJ, CS-C9B17KY/bmJ, CS-C9B27KN/bmJ, CS-C9B27KY/bmJ, CS-C9KA1/bmJ, CS-C9KA9/bmJ, CS-C9KB1/bmJ, CS-C9KB2/bmJ, CS-HC10P08KS/bmJ, CS-HC10P09KS/bmJ, CS-HC1227KW/bmJ, CS-HC12B08KY/bmJ, CS-HC12B09KY/bmJ, CS-HC12KA1B/bmJ, CS-HC12KA1G/bmJ, CS-HC12KA1L/bmJ, CS-HC12KA1S/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-HC15B08KY/bmJ, CS-HC15B09KY/bmJ, CS-HC15KA1L/bmJ, CS-HC15P08KS/bmJ, CS-HC15P09KS/bmJ, CS-HC16P08KS/bmJ, CS-HC18P08KS/bmJ, CS-HC18P09KS/bmJ, CS-HC2108KB/bmJ, CS-HC2108KGM/bmJ, CS-HC2109KB/bmJ, CS-HC2109KGM/bmJ, CS-HC2508KB/bmJ, CS-HC2508KGM/bmJ, CS-HC2509KB/bmJ, CS-HC2509KGM/bmJ, CS-HC3208KB/bmJ, CS-HC3208KGM/bmJ, CS-HC3209KB/bmJ, CS-HC3209KGM/bmJ, CS-HC4008KB/bmJ, CS-HC4008KGM/bmJ, CS-HC4009KB/bmJ, CS-HC4009KGM/bmJ, CS-HC7B08KY/bmJ, CS-HC7B09KY/bmJ, CS-HC7KA1B/bmJ, CS-HC7KA1G/bmJ, CS-HC7KA1L/bmJ, CS-HC7KA1S/bmJ, CS-HC8P08KS/bmJ, CS-HC8P09KS/bmJ, CS-HC927KW/bmJ, CS-HC9B08KY/bmJ, CS-HC9B09KY/bmJ, CS-HC9KA1B/bmJ, CS-HC9KA1G/bmJ, CS-HC9KA1L/bmJ, CS-HC9KA1S/bmJ, CS-JC10KC1/bmJ, CS-JC10KC1N/bmJ, CS-JC10KC1S/bmJ, CS-JC12KB1/bmJ, CS-JC12KC1/bmJ, CS-JC12KC1N/bmJ, CS-JC12KC1S/bmJ, CS-JC15KB1/bmJ, CS-JC7KB1/bmJ, CS-JC7KC1/bmJ, CS-JC7KC1N/bmJ, CS-JC7KC1S/bmJ, CS-JC9KB1/bmJ, CS-PC1208KW/bmJ, CS-PC1217KW/bmJ, CS-PC12KC1/bmJ, CS-PC1308KW/bmJ, CS-PC1317KW/bmJ, CS-PC13KC1/bmJ, CS-PC908KW/bmJ, CS-PC917KW/bmJ, CS-PC9KC1/bmJ, CS-SC1227KW/bmJ, CS-SC708KW/bmJ, CS-SC727KW/bmJ, CS-SC7KB1/bmJ, CS-SC908KW/bmJ, CS-SC927KW/bmJ, CS-SC9KB1/bmJ, CS-SC9KB9/bmJ, CZ-RL027DW/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CZ-RL037DW/bmJ, CS-A10KC1/bmJ, CS-A10P17KS/bmJ, CS-A10P17KT//bmJ, CS-A1208KW/bmJ, CS-A1209KW/bmJ, CS-A1218KW/bmJ, CS-A12B17KN/bmJ, CS-A12B17KY/bmJ, CS-A12B27KN/bmJ, CS-A12B27KY/bmJ, CS-A12KA1/bmJ, CS-A12KB1/bmJ, CS-A12KB2/bmJ, CS-A1308KW/bmJ, CS-A1309KW/bmJ, CS-A1318KW/bmJ, CS-A13B17KN/bmJ, CS-A13B17KY/bmJ, CS-A13KA1/bmJ, CS-A13KA2/bmJ, CS-A13KB1/bmJ, CS-A13KB2, CS-A13KC1/bmJ, CS-A15P17KMZ/bmJ, CS-A15P17KS/bmJ, CS-A15P17KT//bmJ, CS-A15P27KMZ/bmJ, CS-A15P27KS/bmJ, CS-A15P27KT/bmJ, CS-A1618KW/bmJ, CS-A16P17KMZ/bmJ, CS-A16P17KS/bmJ, CS-A16P17KT/bmJ, CS-A2217KB/bmJ, CS-A2217KGM/bmJ, CS-A2517KB/bmJ, CS-A2517KGM/bmJ, CS-A3617KB/bmJ, CS-A3617KGM/bmJ, CS-A708KW/bmJ, CS-A709KW/bmJ, CS-A718KW/bmJ, CS-A7KA1/bmJ, CS-A7KB1/bmJ, CS-A7KB2/bmJ, CS-A908KW/bmJ, CS-A909KW/bmJ, CS-A918KW/bmJ, CS-A927KW/bmJ, CS-A9KA1/bmJ, CS-A9KB1/bmJ, CS-A9KB2/bmJ, CS-HA10P08KS/bmJ, CS-HA10P09KS/bmJ, CS-HA1227KW/bmJ, CS-HA1258KW/bmJ, CS-HA12B08KY/bmJ, CS-HA12B09KY/bmJ, CS-HA12KA1B/bmJ, CS-HA12KA1G/bmJ, CS-HA12KA1L/bmJ, CS-HA12KA1S/bmJ, CS-HA15B08KY/bmJ, CS-HA15B09KY/bmJ, CS-HA15KA1L/bmJ, CS-HA15P08KS/bmJ, CS-HA15P09KS/bmJ, CS-HA16P08KS/bmJ, CS-HA18P08KS/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-HA18P09KS/bmJ, CS-HA2108KB/bmJ, CS-HA2108KGM/bmJ, CS-HA2109KB/bmJ, CS-HA2109KGM/bmJ, CS-HA2608KB/bmJ, CS-HA2608KGM/bmJ, CS-HA2609KB/bmJ, CS-HA2609KGM/bmJ, CS-HA3208KB/bmJ, CS-HA3208KGM/bmJ, CS-HA3209KB/bmJ, CS-HA3209KGM/bmJ, CS-HA4008KB/bmJ, CS-HA4008KGM/bmJ, CS-HA4009KB/bmJ, CS-HA4009KGM/bmJ, CS-HA7B08KY/bmJ, CS-HA7B09KY/bmJ, CS-HA7KA1B/bmJ, CS-HA7KA1G/bmJ, CS-HA7KA1L/bmJ, CS-HA7KA1S/bmJ, CS-HA8P08KS/bmJ, CS-HA8P09KS/bmJ, CS-HA927KW/bmJ, CS-HA958KW/bmJ, CS-HA9B08KY/bmJ, CS-HA9B09KY/bmJ, CS-HA9KA1B/bmJ, CS-HA9KA1G/bmJ, CS-HA9KA1L/bmJ, CS-HA9KA1S/bmJ, CS-JA10KC1/bmJ, CS-JA10KC1N/bmJ, CS-JA10KC1S/bmJ, CS-JA12KB1/bmJ, CS-JA12KC1/bmJ, CS-JA12KC1N/bmJ, CS-JA12KC1S/bmJ, CS-JA13KC1/bmJ, CS-JA13KC1N/bmJ, CS-JA13KC1S/bmJ, CS-JA15KB1/bmJ, CS-JA7KB1/bmJ, CS-JA7KC1/bmJ, CS-JA7KC1N/bmJ, CS-JA7KC1S/bmJ, CS-JA9KB1/bmJ, CS-NA13KB1/bmJ, CS-NA15KB1/bmJ, CS-PA10KC1/bmJ, CS-PA1208KW/bmJ, CS-PA1217KW/bmJ, CS-PA12KC1/bmJ, CS-PA1308KW/bmJ, CS-PA1317KW/bmJ, CS-PA13KC1/bmJ, CS-PA908KW/bmJ, CS-PA917KW/bmJ, CS-SA1208KW/bmJ, CS-SA1227KW/bmJ, CS-SA12KB1/bmJ, CS-SA13KA9/bmJ, CS-SA13KB2/bmJ, CS-SA13KB9/bmJ, CS-SA708KW/bmJ, CS-SA727KW/bmJ, CS-SA7KB1/bmJ, CS-SA908KW/bmJ,	7

Brand	Id	Model	Id
PANASONIC	11	CS-SA927KW/bmJ, CS-SA9KB1/bmJ, CZ-RL527DW/bmJ, CZ-RL537DW/bmJ, CS-PC1808FW/bmJ, CS-PC2708FW/bmJ, CS-PC2708FWY/bmJ, CS-PC4508FWY/bmJ	7
		CS-F225C, CS-F225C-W, CS-F225CZ, CS-F225CZ-W, CS-F255C, CS-F255C-W, CS-F255CZ, CS-F255CZ-W, CS-F285C, CS-F285C-W, CS-F285CZ, CS-F285CZ-W, CS-F365C2, CS-F365C2-W, CS-F405C2, CS-F405C2-W, CS-F405C2Z, CS-F405C2Z-W, CS-F565C2, CS-F565C2-W, CS-F565C2Z, CS-F565C2Z-W	8
		Generic model 872	9
		Generic model 871	10
		Generic model 537	1
GALANZ	12	Generic model 381	2
		Generic model 277	3
		Generic model 86	4
		Generic model 1082	5
		Generic model 193, MSH- J12NZ, RCT-300	6
		Generic model 488	7
		Generic model 473	8
		Generic model 83	9
		Generic model 70, MS24NN	10
		SAMSUNG	13
Generic model 510	2		
Generic model 301	3		
Generic model 300	4		
Generic model 20032	5		
Generic model 20035	6		

Brand	Id	Model	Id
SAMSUNG	13	AR09HSFSHWKN (ROOM4), AM022FNQDEH/ EU (ROOM4), AM022FNTDEH/ EU (ROOM4), AM028FNQDEH/ EU (ROOM4), AM028FNTDEH/ EU (ROOM4), AM036FNQDEH/ EU (ROOM4), AM036FNTDEH/ EU (ROOM4), AM045FNQDEH/ EU (ROOM4), AM056FNQDEH/ EU (ROOM4), AM056FNTDEH/ EU (ROOM4), AM071FNQDEH/ EU (ROOM4), AM071FNTDEH/ EU (ROOM4), MR-DH00 (ROOM4), Generic model 634	7
		AR09HSFSHWKN (ROOM3), AM022FNQDEH/ EU (ROOM3), AM022FNTDEH/ EU (ROOM3), AM028FNQDEH/ EU (ROOM3), AM028FNTDEH/ EU (ROOM3), AM036FNQDEH/ EU (ROOM3), AM036FNTDEH/ EU (ROOM3), AM045FNQDEH/ EU (ROOM3), AM056FNQDEH/ EU (ROOM3), AM056FNTDEH/ EU (ROOM3), AM071FNQDEH/ EU (ROOM3), AM071FNTDEH/ EU (ROOM3), MR-DH00 (ROOM3), Generic model 633	8

Brand	Id	Model	Id
SAMSUNG	13	AR09HSFSHWKN (ROOM2), AM022FNQDEH/ EU (ROOM2), AM022FNTDEH/ EU (ROOM2), AM028FNQDEH/ EU (ROOM2), AM028FNTDEH/ EU (ROOM2), AM036FNQDEH/ EU (ROOM2), AM036FNTDEH/ EU (ROOM2), AM045FNQDEH/ EU (ROOM2), AM056FNQDEH/ EU (ROOM2), AM056FNTDEH/ EU (ROOM2), AM071FNQDEH/ EU (ROOM2), AM071FNTDEH/ EU (ROOM2), MR-DH00(ROOM2), Generic model 632	9
		AR09HSFSHWKN (ROOM1234), AM022FNQDEH/ EU (ROOM1234), AM022FNTDEH/ EU (ROOM1234), AM028FNQDEH/ EU (ROOM1234), AM028FNTDEH/ EU (ROOM1234), AM036FNQDEH/ EU (ROOM1234), AM036FNTDEH/ EU (ROOM1234), AM045FNQDEH/ EU (ROOM1234), AM056FNQDEH/ EU (ROOM1234), AM056FNTDEH/ EU (ROOM1234), AM071FNQDEH/ EU (ROOM1234), AM071FNTDEH/ EU (ROOM1234), MR-DH00 (ROOM1234), Generic model 631	10
YORK	14	YSHA12FSAADK (1)	1
		YSHA12FSAADK (2)	2
		YCHFZH012BBBCAFX (1)	3
		YCHFZH012BBBCAFX (2)	4
LG	15	C182HR	1
		Generic model 294	2

Brand	Id	Model	Id
LG	15	Generic model 832, B-DMC18SB, B-DMC24SB, B-DMH24SB, B-VMC09SB, B-VMC12SB, B-VMC18SB, B-VMC24SB, B-VMC30SB, B-VMH09SB, B-VMH12SB, B-VMH18SB, B-VMH24SB, B-VMH30SB, LAN096HV, LAN121CNP, LAN180HSV, LAN181CNW, LAN186HV, LAN240HSV, LSN093HE, LSN186HE, LSN246HV, LSN301CE, LSN301HE, LSNCO91PMAO, LSNCL121PMAO, LSNCL183VMAO, LSNJ091OCL, LSNJ0910HL, LSNK1830CL, LSNK1830HL, LSNK2430CL, LSNK2430HL, LSNL1210CL, LSNL1210HL, MW18Y3J, BRO412W1A, BR1224W3A, C36YJ, HM12YJ, M09CJ, M09YJ, M12CJ, M18CJ, M18YJ, M24CJ, M30YJ, M36YJ, MM12YJ, MW09Y3J, MW12C1J, MW12Y3J, MW18C3J, MW24C3J, MW24Y3J, MW30Y3J, MW36Y3J, MWH12Y3J, MWM09Y1J, MWM18Y3J, MWM24Y3J	3
		LP1411SHR, LP1413SHR, LP1415SHR, UWH141, LP1215GXR	4
		Generic model 648	5
		Generic model 615	6
		Generic model 464	7
		Generic model 91, LMN2166H2L, LMN3064H3L	8
		Generic model 17, LSZ244VM-6	9
		Generic model 82	10

Brand	Id	Model	Id
Carrier	16	Generic model 88, PE07F, PE07R, PE09F, PE09R, PE12F, PE12R, PE18F, PE18R, PE24F, PE24R, PI07F, PI07R, PI09F, PI09R, PI12F, PI12R, PI18F, PI18R, PI24F, PI24R, TI09F	1
		Generic model 397	2
		Generic model 669, MFQ091, MFQ121, MFQ123, MFQ173, MFQ223	3
		Generic model 645, 38GRQ, 40GRQ, U铂2代, U雅2代	4
		Generic model 608	5
		VMH09SDKIT25, VMH09SDKIT50, VMH12SDKIT25, VMH12SDKIT50, VMH18SDKIT25, VMH18SDKIT50, VMH24SDKIT25, VMH24SDKIT50, Generic model 55, 38/40MAQ, 38/40MBQ, 38GJQ/40GJ, 38MAQ/40MBC, D Series Single Zone, VMH Inverter Series, DA1215-H1, DA1815-H2, DA2415-H2	6
		Generic model 56, Y8HJZC009BAMLAFX, Y8HJZC012BAMLAFX, Y8HJZC018BAMLAFX, Y8HJZC021BAMLAFX, Y8HJZC024BAMLAFX, Y9HJZC018BAMLAFX, Y9HJZC024BAMLAFX, Y9HJZH009BAMLAFX, Y9HJZH012BAMLAFX, YPHJYH009	7
		Generic model 292, KC-R serie, WAC-307R, WAC-309R, WAC-312R, WAC-318R	8

Brand	Id	Model	Id
Carrier		Heat Pump MA*D Ducted Models, Heat Pump MB*C Models, Heat Pump MB*D Ducted Models, Heat Pump MB*F Models, Generic model 512, AURA Series, DA-INVERTER Series, DVC Series, KSID012-H115Q, KSID016-H214Q, KSID022-H215Q, KSID032-H214Q, KSIO009-H124, KSIO012-H123, KSIO018-H221, KSIO024-H219, A-09-HP-C-230, A-12-HP-C-230, A-18-HP-C-230, A-22-HP-C-230, DIY-12-C-HP-115, DIY-18-C-HP-230, DIY-24-C-HP-230, DIY-32-C-HP-230, O-09HP-C-115, O-12HP-C-115, O-18HP-C-230, O-24HP-C-230, P-09HP-C-230, P-12HP-C-230, P-18HP-C-230, P-24HP-C-230, Aura serie	9
Frikko	17		1
			2



**This device is restricted to indoor use.**

## **FCC Regulations**

(15C) This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

(15B) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Radio Frequency (RF) Energy**

- This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter and must be installed to provide a separation distance of at least 20cm from all persons.