






















Included In This Package

- BTS200 Magnetica
- Micro USB charging cable
- User Manual

Overview

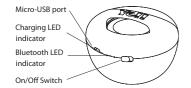


LED Indicators

	Indicator	Status
*	RED	Charging
	BIUE	Fully Charged
ВТ	Flashing BLUE	Pairing Mode
	BLUE	Connected

How to Charge BTS200


- 1. Plug the BTS200 into your computer or USB compatible wall charger via the included Micro USB Cable.
- 2. When the BTS200 is fully charged, disconnect the cable.

Note: Approximately 2 - 3 hours required for full charge. Battery will last up to 4-5 hours when connected wirelessly.

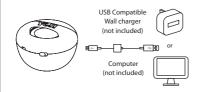

Getting Connected via Bluetooth

1. Switch on Magnetica. The speaker is discoverable and ready for pairing. The status indicator blinks blue.

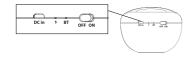

- 2. On your Bluetooth music device, turn on Bluetooth and scan for devices in its Bluetooth menu.
- 3. When the "Ye!! BTS200" appears on the device list of your device, select "Ye!! - BTS200". The status indicator turns solid blue after pairing is established. The speaker is ready to play music.

Example: iPad / iPhone

Press Settings > General > Bluetooth > Bluetooth ON > Ye!! - BTS200 > Pair



Example: Android 4.3 Jelly Bean Smartphone Press Settings > Bluetooth ON > Scan > Ye!! - BTS200 > Settings > Check the Media audio box

Wi-Fi

Bluetooth

Data usage





Reconnecting Bluetooth Device

Keep in mind that the Bluetooth Speaker has a 33 feet range in open field. If you move out of range or turn off the Bluetooth feature on your Bluetooth device, the Bluetooth Speaker will disconnect from your device. To reconnect, simply follow the instruction in the "Getting Connected" section.

Changing Connected Bluetooth Device

- 1. Disable the Bluetooth function of your Bluetooth device.
- 2. The Bluetooth Speaker can now be connected to the different Bluetooth device.
- 3. Following the instructions in the "Getting Connected" section

Specifications

Model No.:	BTS200
Output Power:	3W
Input Voltage:	DC 5V / 1A
Charge Time:	2 - 3 hours
Input:	Wireless Bluetooth
Playback Time:	Up to 4-5 hours on Bluetooth
Bluetooth Version:	Bluetooth 4.1
Operating Distance:	Up to 33 feet (10 metres)
Dimensions:	Dia 85 x 50 mm
Weight:	132 grams

Troubleshooting

No connection between Bluetooth Speaker and your Bluetooth device.

- Make sure the Bluetooth Speaker is fully charged
- · Make sure the BTS200 is switched on.
- · Make sure your Bluetooth device is available and supports Bluetooth Advance Audio Distribution profile.
- Make sure the Bluetooth Speaker is within range of your Bluetooth device.

Audio is not coming out from the Bluetooth Speaker after Bluetooth device successfully paired.









FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.