

Ye!!
amplify your life



 
Stellar+ | BTS310
Portable Bluetooth Speaker with Lighting
User Manual



Included In This Package

- Stellar+
- Micro USB Cable
- 3.5mm AUX Cable
- Wrist Strap
- User Manual

Overview

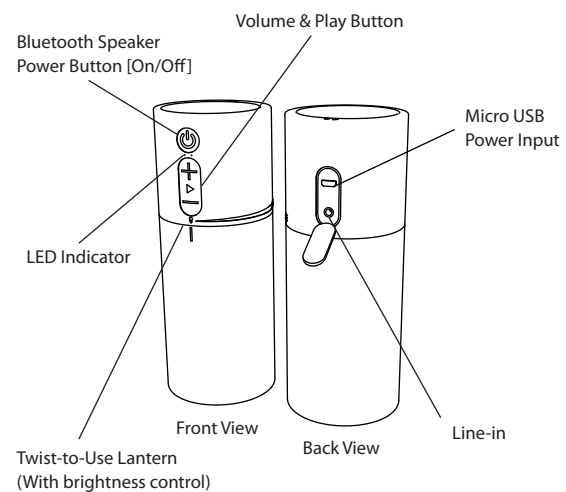


LED Indicators

| Indicator | Status |
|---------------|---------------|
| RED | Charging |
| GREEN | Fully Charged |
| BLUE | Paired |
| FLASHING BLUE | Pairing Mode |


How to Charge Stellar+

1. Plug the Stellar+ into your computer or USB compatible wall charger via the included Micro USB Cable.
2. When the Stellar+ is fully charged, disconnect the cable.

 Note: Approximately 4 - 5 hours required for full charge. Battery will last up to 6 hours when connected wirelessly and up to 8 hours when connected through Line-in.

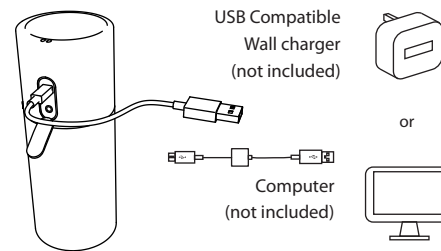


Using Stellar+

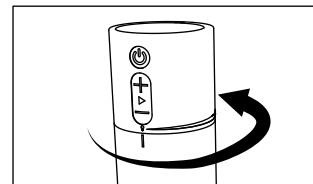 

1. Twist Stellar+ to the end of the right hand side and the lantern will turn on.
2. Twist Stellar+ back to the middle and it will turn off all the light.

 
Getting Connected

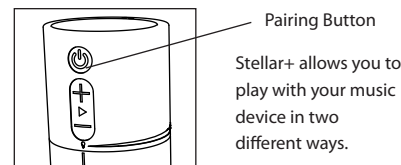


Bluetooth Pairing

1. Switch the Bluetooth Speaker to the BT mode.
2. The speaker is discoverable and ready for pairing.
3. The status indicator blinks blue.
4. On your Bluetooth music device, turn on Bluetooth and scan for devices in its Bluetooth menu.
5. When the "Ye!! - BTS310" appears on the device list of your device, select "Ye!! - BTS310". The status indicator turns solid blue after paired.

 Example: iPad / iPhone / iPod Touch
Press Settings > General > Bluetooth > Bluetooth ON > Ye!! - BTS310 > Pair

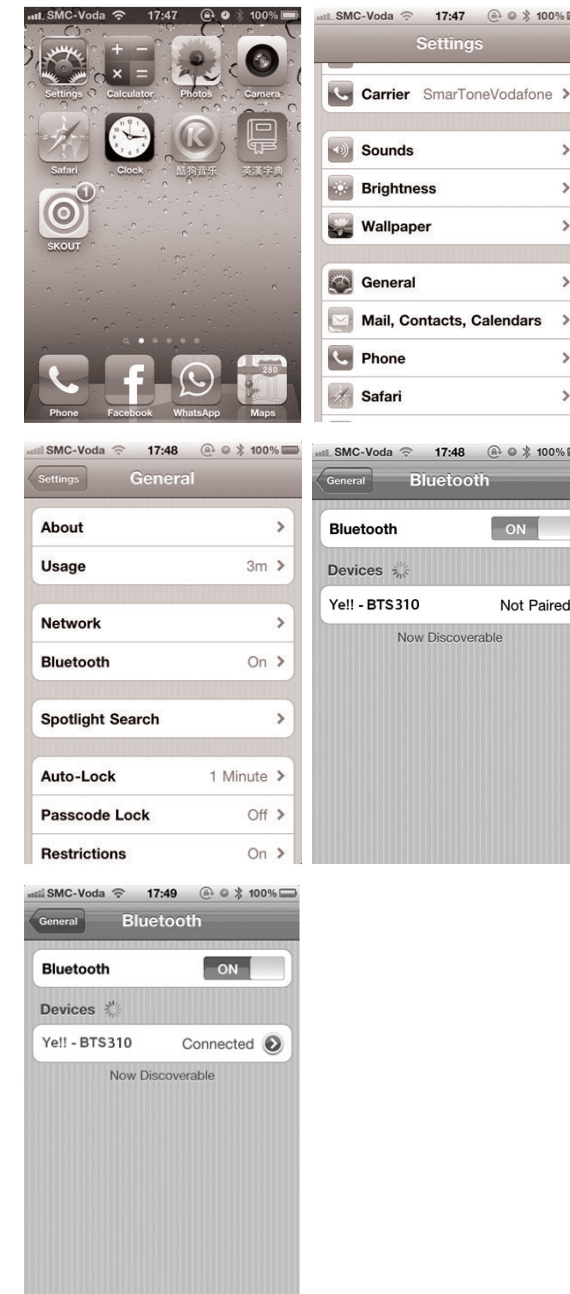

 Example: Android 4.3 Jelly Bean Smartphone
Press Settings > Bluetooth ON > Scan > Ye!! - BTS310 > Settings > Check the Media audio box

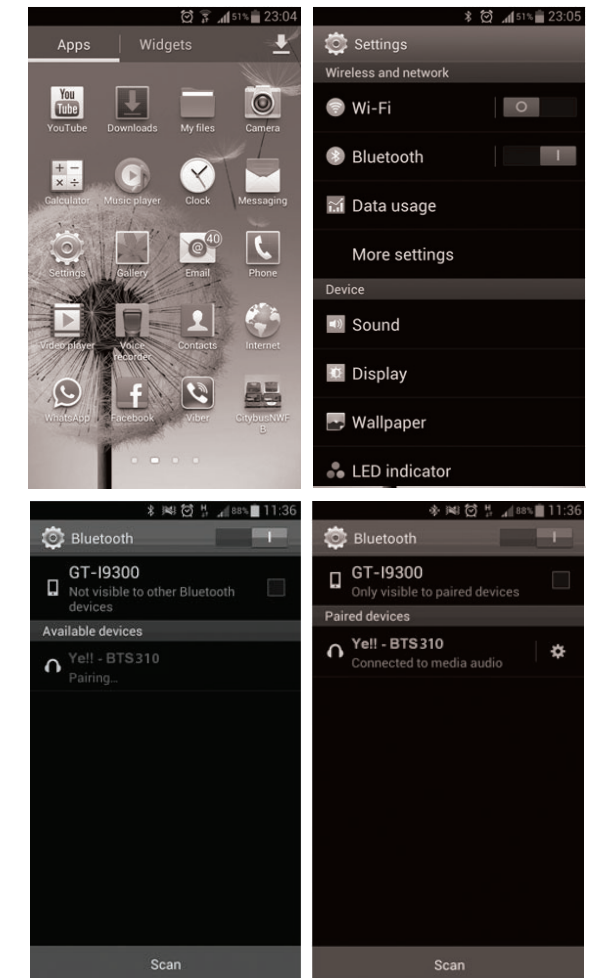


Reconnecting Bluetooth Device

Keep in mind that the Bluetooth Speaker has a 10 meter range in open field. If you move out of range or turn off the Bluetooth feature on your Bluetooth device, the Bluetooth Speaker will disconnect from your device. To reconnect, simply follow the instruction in the "Getting Connected" section.

Changing Connected Bluetooth Device

1. Disable the Bluetooth function of your Bluetooth device.
2. The Bluetooth Speaker can now be connected to the different Bluetooth device.
3. Following the instructions in the "Getting Connected" section

 Play Audio from Non-Bluetooth Device

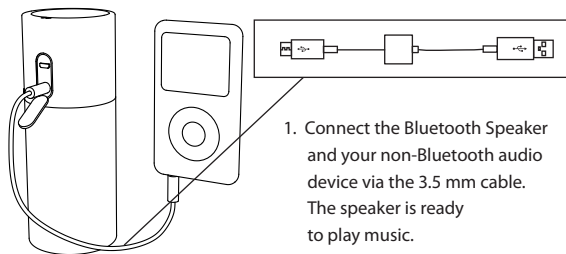

Specifications

| | |
|--------------------|--|
| Model No. | BTS310 |
| Output Power | 5W |
| Input Voltage | DC 5V / 1A |
| Input | Wireless Bluetooth & 3.5mm wired auxiliary |
| Playback Time | Up to 8 hours on Bluetooth |
| Bluetooth Version | Bluetooth 2.1 with EDR |
| Operating Distance | Up to 33 feet (10 metres) |
| Dimensions | 200 x D90 mm |
| Weight | 533 grams |

Troubleshooting

No connection between Bluetooth Speaker and your Bluetooth device.

- Make sure the Bluetooth Speaker is fully charged
- Make sure the BT mode is switched on.
- Make sure your Bluetooth device is available and supports Bluetooth Advance Audio Distribution profile.
- Make sure the Bluetooth Speaker is within range of your Bluetooth device.

Audio is not coming out from the Bluetooth Speaker after Bluetooth device successfully paired.

- Make sure the Bluetooth device volume is set to a comfortable listening level.

Audio is not coming out from the Bluetooth Speaker after the non-Bluetooth device connected with the micro USB to USB and 3.5 mm splitter cable.

- Make sure the 3.5 mm is correctly and firmly connected to the Bluetooth Speaker and non-Bluetooth device.
- Make sure the non-Bluetooth device is set to a comfortable listening level.

Safety Information

Read all information and warning before the use of this product. Improper use of this product may lead to product damage. You (the buyer) other than the dealer will be held liable for such as overheating, toxic fume, fire or explosion.

- Do not attempt to charge the speaker by using any other method other than USB Power Adapter or computer.
- To reduce the risk of fire or electric shock, do not expose the speaker to rain or moisture while charging.
- The speaker should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on or near it while being charged or charging other devices. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.
- Do not place any flame sources, such as lighted candles, on or near the speaker.
- Do not expose the speaker to excessive heat, including direct sunlight or fire or the like.
- Make no modifications to the product or accessories.
- If the battery begins to leak, do not allow the liquid to come in contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical attention immediately.
- Do not step on, throw, or drop the speaker, or expose it to a strong shock.
- Do not attempt to service the speaker yourself. Opening or removing covers may expose you to dangerous voltages or other hazards and will void the manufacturer's warranty. To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Precautions

1. The radio waves emitted by the Bluetooth Speaker and Bluetooth device can affect operation of nearby electronics including medical devices.
2. Keep the unit in a cool, dry place.

FCC ID:2AANE-BTS310

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These

limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

For more information, please visit yell.voguestrap.com



Voguestrap provides a 1 year warranty with the purchase of your product. To register your product, please visit yell.voguestrap.com

If at any time during the 1 year warranty period following the purchase the product fails due to defects in material or workmanship, return the defective product (With freight prepaid) with proof of purchase.

Please ship to the following address:

Voguestrap
Attn. Quality Assurance
5809 Foster Ave
Brooklyn, New York 11234-1006

What IS covered under Voguestrap Warranty?

Voguestrap warrants that our product(s) will be free from defects in workmanship and materials under normal use for one year from original purchase date. This limited warranty is non-transferable and covers only the product. Refunds are not given. An original or copy of a sales receipt from the original Voguestrap Authorized sales retailer is required for warranty service (Repair or Exchange)

What is NOT covered under Voguestrap Warranty?

- Normal wear and tear of Product use
- Misuse, lack of care, accident, abuse or other nonstandard use
- Use of the Product other than for its deliberate purpose
- Damage caused by improper or unauthorized repair or maintenance
- Product that has been tailored or altered
- Any product that is not manufactured by Voguestrap

yell.voguestrap.com

Designed by Ye!! in Hong Kong
Made in China