






BTS 710 Portable Bluetooth Speaker User Manual

Included In This Package

- BTS710 Portable Bluetooth Speaker
- Micro USB to USB and 3.5 mm splitter cable
- User Manual
- Hand Strap

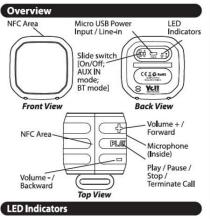

Indicator RED Charging GREEN Fu**ll**y Charged AUX/BT Flashing BLUE Pairing Mode BLUE Connected /

 
Status

AUX IN Mode

How to Charge BTS710

- 1. Plug the BTS710 into your computer or USB compatible wall charger via the included Micro USB to USB and 3.5 mm Splitter Cable.
- 2. When the BTS710 is fully charged, disconnect the cable.

Note: Approximately 3-4 hours required for full charge. Battery will last up to 6 hours when connected wirelessly and up to 10 hours when connected through Line-in.




Getting Connected

The BTS710 allows you to pair with your Bluetooth music device in two different


1. NFC One Touch Pairing

 - 1. Switch the Bluetooth Speaker to the BT
- 2. Activate the NFC feature on your music device.
- 3. Touch the NFC area of the Bluetooth Speaker with the NFC area of your music
- 4. Press "confirm" the connection from your music device.



2. Conventional Bluetooth Pairing

 1. Switch the Bluetooth Speaker to the BT mode. The speaker is discoverable and ready for pairing. The status indicator blinks blue.



- 2. On your Bluetooth music device, turn on Bluetooth and scan for devices in its Bluetooth menu.
- 3. When the "Ye!! BTS" appears on the device list of your device, select "Ye!! -BTS". The status indicator turns solid blue after pairing is established. The speaker is ready to play music.

Example: iPad / iPhone / iPod Touch Press Settings > General > Bluetooth > Bluetooth ON > Ye!! - BTS > Pair



Example: Android 4.3 Jelly Bean Smartphone Press Settings > Bluetooth ON > Scan > Ye!! - BTS > Settings > Check the Media audio box



FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT, SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE FOUIPMENT

Changing Connected Bluetooth Device

- 1. Disable the Bluetooth function of your Bluetooth device.
- 2. The Bluetooth Speaker can now be connected to the different Bluetooth
- 3. Following the instructions in the "Getting Connected" section

Play Audio from Non-Bluetooth Device

- 1. Switch the Bluetooth Speaker to the AUX IN mode. The status indicator turns solid
- 2. Connect the Bluetooth Speaker and your non-Bluetooth audio device via the included micro USB to USB and 3.5 mm splitter cable. The speaker is ready to play music.



Music Control

Music Controls	
Previous Song	Press the – buttor
Next Song	Press the + buttor
Increase the volume	Press and hold the + buttor
Decrease the volume	Press and hold the - buttor
Play / Pause	Press "PLAY" buttor

Make and Receive Calls

To make a call, dial from your Smartphone's keypad and press "Send" or "OK". Press the PLAY button on the speaker when an incoming call arrives.

When you finished, press the PLAY button again to terminate the call.

Specifications

Model No.	BTS710
Output Power	5W
Sensitivity	GFSK -91dBm
Audio Signal to Noise Ratio	94dB SNR
Battery Capacity	2,200 mAh Lithiumion Rechargeable Battery
Input Voltage	DC 5V / 1A
Charge Time	3 - 4hours
P l ayback Time	Up to 6 hours on Bluetooth Up to 10 hours on Line-in

Operating	Up to 33 feet (10 metres)
Distance	3
Bluetooth Version	Bluetooth 3.0 with EDR
Dimensions	76 x 76 x 75 mm
Net Weight:	257 grams

Troubleshooting

No connection between Bluetooth Speaker and your Bluetooth device.

- · Make sure the Bluetooth Speaker is fully charged
- · Make sure NFC function is enabled on your device and place it correctly on the NFC area of the speaker.
- · Make sure the BT mode is switched on.
- Make sure your Bluetooth device is available and supports Bluetooth Advance Audio Distribution profile.
- · Make sure the Bluetooth Speaker is within range of your Bluetooth device.

Audio is not coming out from the Bluetooth Speaker after Bluetooth device successfully paired.

· Make sure the Bluetooth device volume is set to a comfortable listening level.

Audio is not coming out from the Bluetooth Speaker after the non-Bluetooth device connected with the micro USB to USB and 3.5 mm splitter cable.

- Make sure the Micro USB to USB and 3.5 mm is correctly and firmly connected to the Bluetooth Speaker and non-Bluetooth device.
- · Make sure the non-Bluetooth device is set to a comfortable listening level.

Precautions

- 1. The radio waves emitted by the Bluetooth Speaker and Bluetooth device can affect operation of nearby electronics including medical devices.
- 2. Keep the unit in a cool, dry place.

For more information, please visit www.yelltowin.com

Designed by Ye!! in Hong Kong Assembled in China

> Patent Pending No. 201120398615.6 811-BTS710-03-W



