



Open size: 380mm(W) X 100mm(H)
 Fold size: 190mm (W) x 100mm (H)



Make sure the Bluetooth device volume is set to a comfortable listening level.

Audio is not coming out from the Bluetooth Speaker after the non-Bluetooth device connected with the micro USB to USB and 3.5 mm splitter cable.

- Make sure the 3.5 mm aux cable is correctly and firmly connected to the Bluetooth Speaker and non-Bluetooth device.
- Make sure the non-Bluetooth device is set to a comfortable listening level.

Precautions

1. The radio waves emitted by the Bluetooth Speaker and Bluetooth device can affect operation of nearby electronics including medical devices.
2. Keep the unit in a cool, dry place.

For more information, please visit www.yelltowin.com

Designed by Ye!! in Hong Kong
 Assembled in China



Ye!!
 inspire you always




Sound X | BTX1
 Portable Bluetooth Speaker
 User Manual



Included In This Package

- BTX1 Portable Bluetooth Speaker
- Micro USB charging cable
- 3.5mm Aux cable
- User Manual

 Overview

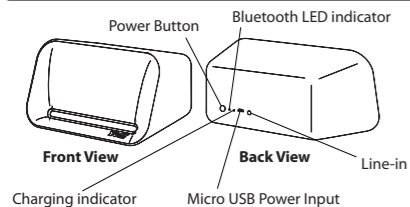

LED Indicators


	Indicator	Status
⚡	BLUE	Power On
	RED	Charging
BT	Flashing BLUE	Pairing Mode
	BLUE	Bluetooth Connected

How to charge BTX1

1. Plug the BTX1 into your computer or USB compatible wall charger via the included Micro USB Cable.

2. When the BTX1 is fully charged, disconnect the cable.

 
Note: Approximately 3 – 4 hours required for full charge. Battery will last up to 3-4 hours when connected wirelessly and up to 5-6 hours when connected through Line-in.

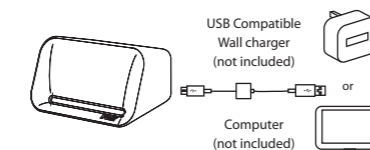

Getting Connected via Bluetooth

Bluetooth Pairing

 1. Press the power button to turn on the device. The speaker is discoverable and ready for pairing. The status indicator blinks blue.
2. On your Bluetooth music device, turn on Bluetooth and scan for devices in its Bluetooth menu.

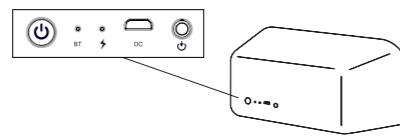


3. When the “Ye!! – BTX1” appears on the device list of your device, select “Ye!! – BTX1”. The status indicator turns solid blue after pairing is established. The speaker is ready to play music.

Example: iPad / iPhone
Press Settings > General > Bluetooth > Bluetooth ON > Ye!! – BTX1 > Pair



 Example: Android 4.3 Jelly Bean Smartphone
Press Settings > Bluetooth ON > Scan > Ye!! – BTX1 > Settings > Check the Media audio box

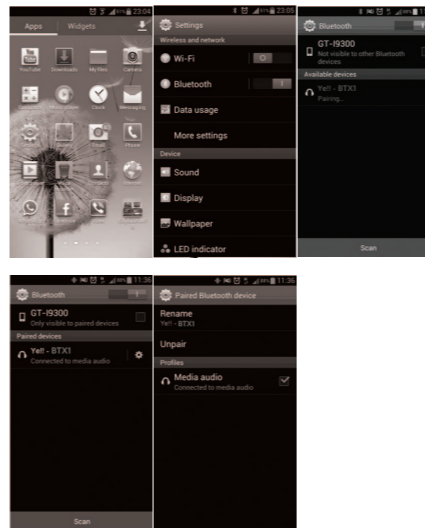

Reconnecting Bluetooth Device

 
Keep in mind that the Bluetooth Speaker has a 33 feet range in open field. If you move out of range or turn off the Bluetooth feature on your Bluetooth device, the Bluetooth Speaker will disconnect from your device. To reconnect, simply follow the instruction in the “Getting Connected” section.

Changing Connected Bluetooth Device

1. Disable the Bluetooth function of your Bluetooth device.
2. The Bluetooth Speaker can now be connected to the different Bluetooth device.
3. Following the instructions in the “Getting Connected” section

Play Audio from Non-Bluetooth Device

1. Turn on BTX1, both LED indicator turn on flashing blue
2. Connect the Bluetooth Speaker and your non-Bluetooth audio device via the included 3.5 mm aux cable. The Bluetooth indicator will turn off and the power indicator will turn on. The speaker is ready to play music.



Specifications

Model No.:	BTX1
Output Power:	10W x 2
Input Voltage:	DC 5V / 2A
Charge Time:	3 - 4 hours
Input:	Wireless Bluetooth/Line in
Playback Time:	Up to 6 hours on Bluetooth Up to 5-6 hours on Line-in
Bluetooth Version:	Bluetooth 4.1 with EDR
Operating Distance:	Up to 33 feet (10 metres)
Dimensions:	201 x 110 x 123 mm
Weight:	792 grams

Troubleshooting

No connection between Bluetooth Speaker and your Bluetooth device.

- Make sure the Bluetooth Speaker is fully charged
- Make sure the BTX1 is switched on.
- Make sure your Bluetooth device is available and supports Bluetooth Advance Audio Distribution profile.
- Make sure the Bluetooth Speaker is within range of your Bluetooth device.

Audio is not coming out from the Bluetooth Speaker after Bluetooth device successfully paired.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.