

CPL100 MANUAL

PROGRAMMING SPECIFICATIONS

Transmitter Programming

1. Ignition ON
2. Press and Hold Override Button for 10"
3. Parking Lights will flash and horn will honk 3 times

Selectable Feature Programming

1. Ignition ON
2. Press and Hold Override Button for 10"
3. Parking Lights will flash and horn will honk 3 times
4. Press and release programming button
5. Parking lights will flash and horn will honk 4 times to acknowledge feature programming

Selectable Feature Chart

	LED flash 1	LED flash 2	LED flash 3
Security Function	ON	off	
Passive Locks	On	Off	
2 stage unlock	2 stage	1 stage	
Passive Arming	on	off	
Entry Delay	on	off	
Siren/ Horn	siren	horn	
Door trigger delay	instant	30 second	
Chirps	On	Off	
Extended Locks	0.9	3	double pulse U/L
Ignition Lock	On	Off	
Tan wire Output	Trunk	2nd Unlock	illuminated Entry
Unlock Sense Input	NEG	POS	
Horn output timing	16ms	30ms	45ms
ITS Functionality	off	On	

Changing Selectable Feature Programming

Once you have entered selectable feature programming (4 chirps)

Press override button to scroll through options, each press of the override button advances you to the next option. The system will honk the horn and flash the lights for each feature. For example when the user is in Feature 3 the system will horn 3 times and parking lights will flash 3 times. The LED will flash the setting that the system is currently set to.

To change a desired feature press the button located on the module. The LED will change its number of flashes to represent the setting.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions. □

1)•This device may not cause harmful interference, and □

2)•This device must accept any interference received, including interference that may cause undesired operation. □

□

Per FCC 15.21, you are cautioned that changes or modifications not expressly approved by the part responsible for □ compliance could void the user's authority to operate the equipment. □

□

Defaulting Selectable Features

1. Ignition ON
2. Press and Hold Override Button for 10"
3. Parking Lights will flash and horn will honk 3 times
4. Press button on Module
5. System will default all setting and honk 4 times which will place the user at the selectable feature programming bank

Adjusting the Shock Sensor

1. Turn the adjustment screw clockwise (increasing sensitivity)
2. Turn the adjustment screw counter clockwise (decreasing sensitivity)

Testing the Shock Sensor

Arm the alarm. Wait for 6" for the zone to stabilize, and then firmly strike the vehicle's bumper.

LOT MODE PROGRAMMING SPECIFICATIONS:

Transmitter Programming

1. Ignition ON
2. Press and Hold Override Button for 10"
3. Parking Lights will flash and horn will honk 3 times
4. Punch in Vehicle ID from ACM Keypad and press LOCK
5. System will chirp 3 times to acknowledge LOT MODE

Selectable Feature Programming

1. Ignition ON
2. Press and Hold Override Button for 10"
3. Parking Lights will flash and horn will honk 3 times
4. Press and release programming button
5. Parking lights will flash and horn will honk 4 times to acknowledge feature programming

LOT MODE defaults feature Chart

	LED flash 1	LED flash 2	LED flash 3
Security Function	ON	off	
Passive Locks	On	Off	
2 stage unlock	2 stage	1 stage	
Passive Arming	on	off	
Entry Delay	on	off	
Siren/ Horn	siren	horn	
Door trigger delay	instant	30 second	
Chirps	On	Off	
Extended Locks	0.9	3	double pulse U/L
Ignition Lock	On	Off	
Tan wire Output	Trunk	2nd Unlock	illuminated Entry
Unlock Sense Input	NEG	POS	
Horn output timing	16ms	30ms	45ms
ITS Functionality	off	On	