

6704 FIVE-BUTTON TRANSMITTER

This transmitter is a replacement RF transmitter. The transmitter comes with 4 push-button and one side small button.

- 1). Press button I to control first receiver (channel 1).
- 2). Press button II to control second receiver (channel 2).
- 3). Press button III to control third receiver (channel 3)
- 4). Press button IV to control fourth receiver (channel 4).
- 5). The side button provides four independent channels to control appliances through single transmitter. Pressing the side button to “shift” the buttons to the next set of the four channels (channel 5, 6, 7 and 8).

TRANSMITTER BATTERY REPLACEMENT

If the range of your transmitter deteriorate, it is possible that you need to replace the battery.

- 1). Release the screw from the back of transmitter and remove upper transmitter case with a phillips screwdriver.
- 2). Remove old battery from transmitter.
- 3). Install a new battery (12 volt) noting the (+) and (-) marks in the battery area of the transmitter.
- 4). Replace upper transmitter case with care, don't damage the inside components.
- 5). Tighten the screw on the back of transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.