

6906

FOUR-BUTTON TRANSMITTER

The 6906 transmitter is a replacement RF transmitter. The transmitter comes with 4 push-button switches.

- 1). Press LOCK push-button switch on control first receiver (Your alarm system).
- 2). Press UNLOCK push-button switch to control second receiver (It can be an alarm system or electric device).
- 3). Press TRUNK push-button switch to control third receiver (It can be an alarm system or electric device).
- 4). Press PANIC push-button switch to control fourth receiver (It can be an alarm system or electric device).

Unique optional passive/active transmitter :

This is a passive/active transmitter that allows you to control the alarm or electric device passively or actively. Slide the passive switch ton 'ON' position on the front case for passive operation.

TRANSMITTER BATTERY REPLACEMENT

If the range of your transmitter deteriorate, it is possible that you need to replace the battery.

- 1). Release the screw from the back of transmitter and move upper transmitter case.
- 2). Remove old battery from transmitter.
- 3). Install a new battery (12 volt) noting the (+) and (-) marks in the battery area of the transmitter.
- 4). Replace upper transmitter case with area, don't damage the inside components.
- 5). Tighten the screw on the back of transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference receiver, including interference that may cause undesired operation.