## M3RF3

## THREE-BUTTON TRANSMITTER

The M3RF3 transmitter is a replacement RF transmitter. The transmitter comes with 3 push-button switches

- 1) Press push-button switch on control first receiver (Your alarm system)
- press push-button switch to control second receiver (It can be an alarm system or electric device).
- Press \* push-button switch to control third receiver (It can be an alarm system or electric device).

## TRANSMITTER BATTERY REPLACEMENT

If the range of your transmitter deteriorate, it is possible that you need to replace the battery

- 1). Release the screw from the back of transmitter and move upper transmitter case.
- 2). Remove old battery from transmitter
- 3) Install a new battery (12volt) noting the (+) and (-) marks in the battery area of the transmitter
- 4). Replace upper transmitter case with area, don't damage the inside components
- 5). Tighten the screw on the back of transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference receiver, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment