

# **TX-840**

## **FOUR-BUTTON TRANSMITTER**

The TX840 transmitter is a replacement RF transmitter. The transmitter comes with 4 push-button switches (Arm / Disarm / Trunk release / Snowflake button).

- 1) Press Lock button switch on control to arm your car and lock the door
- 2) Press Unlock button switch on control to disarm your car and unlock the door
- 3) Press the Trunk release button to activate trunk release or combine with lock button or unlock button or snowflake button for output channel #4, #5, #6 activation.
- 4) Remote start – press Snowflake button 4 for 2 second to remote start the vehicle, press the same button again for stop the remote engine start

### **TRANSMITTER BATTERY REPLACEMENT**

If the range of your transmitter deteriorate, it is possible that you need to replace the battery.

- 1) Release the screw from the back of transmitter and remove upper transmitter case.
- 2) Remove old battery from transmitter.
- 3) Install a new battery (12 volt) noting the (+) and (-) marks in the battery area of the transmitter.
- 4) Replace upper transmitter case with area, do not damage the inside components.
- 5) Tighten the screw on the back of transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received: including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio TV interference caused by unauthorized modification to this equipment. Such modifications could void the user's authority to operate the equipment.