

User Manual

WISE-4210 Series

ADVANTECH

Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2018 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Warnings, Cautions and Notes

Warning! Warnings indicate conditions, which if not observed, can cause personal injury!



Caution! Cautions are included to help you avoid damaging hardware or losing data. e.g. There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



Note! Notes provide optional additional information.



Document Feedback

To assist us in making improvements to this manual, we would welcome comments and constructive criticism. Please send all such - in writing to: support@advan-tech.com

Package List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

WISE-4210-APNA/UA

- 1 x WISE-4210-APNA/UA module
- 1 x Mounting bracket
- 1x China RoHS (UA series only)

WISE-4210-S231NA/UA

- 1 x WISE-4210-S231NA/UA module
- 1 x Mounting bracket
- 1x China RoHS (UA series only)

WISE-4210-S251NA/UA

- 1 x WISE-4210-S251NA/UA module
- 1 x Mounting bracket
- 1x China RoHS (UA series only)

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 15. The power cord or plug is damaged.
 16. Liquid has penetrated into the equipment.
 17. The equipment has been exposed to moisture.
 18. The equipment does not work well, or you cannot get it to work according to the user's manual.
 19. The equipment has been dropped and damaged.
 20. The equipment has obvious signs of breakage.
21. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
22. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
23. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

NCC 警语

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada statement:

This device complies with ISED's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

DETACHABLE ANTENNA USAGE

This radio transmitter (IC: M82-WISE4210 / Model: WISE-4210-S231, WISE-4210-S251, WISE-4210-AP) has been approved by ISED to operate with the antenna type listed below with maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: M82-WISE4210 / Model: WISE-4210-S231, WISE-4210-S251, WISE-4210-AP) a été approuvé par ISED pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Approved antenna(s) list

Type	Gain	Brand	Manufacturer
Dipole	2dBi	PSA	1750008836-01 1750008837-01

Contents

Chapter 1	Product Overview	1
1.1	Series Family and Specifications	2
1.2	Mechanical Design and Dimensions	2
	Figure 1.1 WISE-4210 Dimension Front & Side	2
1.3	LED Definition	3
1.3.1	WISE-4210-AP	3
	Figure 1.2 WISE-4210-AP LED Indicator	3
	Figure 1.3 WISE-4210-AP LAN Port LED	3
1.3.2	WISE-4210-S231	4
	Figure 1.4 WISE-4210-S231 LED Indicator	4
1.3.3	WISE-4210-S251	7
	Figure 1.5 WISE-4210-S251 LED Indicator	7
1.4	Membrane Button	10
	Figure 1.6 WISE-4210 Membrane Button	11
1.5	Battery Power Switch	12
	Figure 1.7 WISE-4210 Battery Switch	12
1.6	Package Information	12
Chapter 2	General Specification	15
2.1	General Specification	16
2.1.1	Wireless Interface	16
2.1.2	General	16
2.1.3	Power	17
2.1.4	Software	17
2.1.5	Configuration Interface	18
2.2	WISE-4210-AP	18
2.2.1	Uplink Communication Port	18
2.2.2	Pin Assignment	18
	Figure 2.1 WISE-4210-AP Pin Assignment	18
2.2.3	Block Diagram	19
	Figure 2.2 WISE-4210-AP Block Diagram	19
2.3	WISE-4210-S231	19
2.3.1	I/O Specifications	19
2.3.2	Pin Assignment	20
	Figure 2.3 WISE-4210-S231 Pin Assignment	20
2.3.3	Block Diagram	20
	Figure 2.4 WISE-4210-S231 Block Diagram	20
2.4	WISE-4210-S251	20
2.4.1	I/O Specifications	20
2.4.2	Pin Assignment	21
	Figure 2.5 WISE-4210-S251 Pin Assignment	21
2.4.3	Block Diagram	21
	Figure 2.6 WISE-4210-S251 Block Diagram	21
2.4.4	Application Wiring	22
	Figure 2.7 WISE-4210-S251 Digital Input Wiring Diagram	22
	Figure 2.8 WISE-4210-S251 RS-485 Wiring Diagram	22
Chapter 3	Hardware Installations	23
3.1	Interface Introduction	24
	Figure 3.1 WISE-4210 Interface Introduction	24
3.2	Mounting	24

	Figure 3.2 WISE-4000 Series Mounting Kit Dimensions	25
3.2.1	DIN-Rail Mounting	25
	Figure 3.3 DIN Mounting Install	25
	Figure 3.4 DIN Mounting Front	26
	Figure 3.5 DIN Mounting Back	26
3.2.2	Wall Mounting	27
	Figure 3.6 Wall Mounting Install 1	27
	Figure 3.7 Wall Mounting Install 2	28
3.2.3	Pole Mounting	29
	Figure 3.8 Pole Mounting Front	29
	Figure 3.9 Pole Mounting Back	30
3.3	Wiring and Connections	30
3.3.1	Power Supply Wiring	30
	Figure 3.10 WISE-4210-AP Power Wiring	30
	Figure 3.11 WISE-4210-S231 Power Wiring	31
	Figure 3.12 WISE-4210-S251 Power Wiring	31
3.3.2	Battery Installation	31
	Figure 3.13 WISE-4210 Battery Socket	31
	Figure 3.14 WISE-4210 Battery Switch	32
3.3.3	I/O Units	32

Chapter 4 System Configuration..... 33

4.1	Connection	34
4.1.1	WISE-4210-AP Connection	34
	Figure 4.1 WISE-4210-AP LAN port	34
4.1.2	WISE-4210-Sxxx Node Connection	34
	Figure 4.2 USB configuration port of WISE-4210-Sxxx node	34
4.2	Configuring WISE-4210-AP with Browser	35
4.2.1	System Requirements	35
4.2.2	Factory Default Settings	35
4.2.3	Module Authorization	35

Chapter 1

Product Overview

1.1 Series Family and Specifications

Function	Model	Description
Wireless Access Point	WISE-4210-AP	LPWAN IoT Wireless Sensor Node Access Point
Wireless Sensor Node	WISE-4210-S251	LPWAN IoT Wireless Sensor Node with 6-ch DI and 1-port RS-485
Wireless Sensor Node	WISE-4210-S231	LPWAN IoT Wireless Sensor Node with Temperature and Humidity Sensor

1.2 Mechanical Design and Dimensions

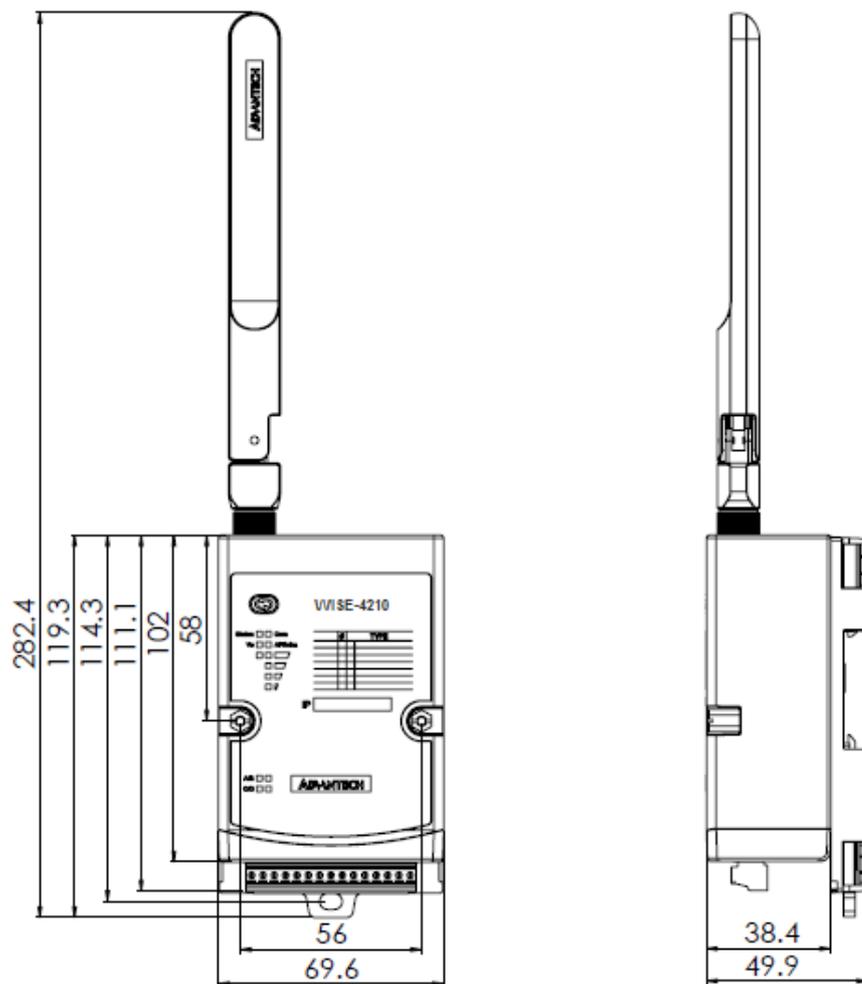


Figure 1.1 WISE-4210 Dimension Front & Side

1.3 LED Definition

1.3.1 WISE-4210-AP

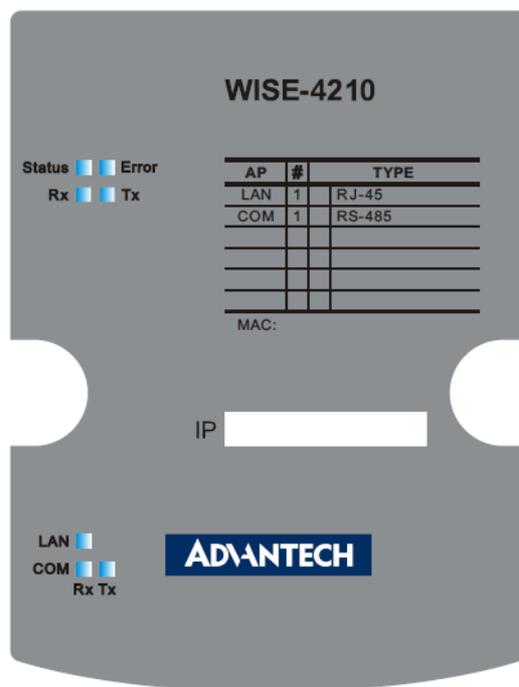


Figure 1.2 WISE-4210-AP LED Indicator

LED	Color	Indication	Behavior
Status	Green	Blink	Operating normally
Error	Red	Blink	I/O error or RF related error
Rx	Green	Blink	Receiving data from LPWAN nodes

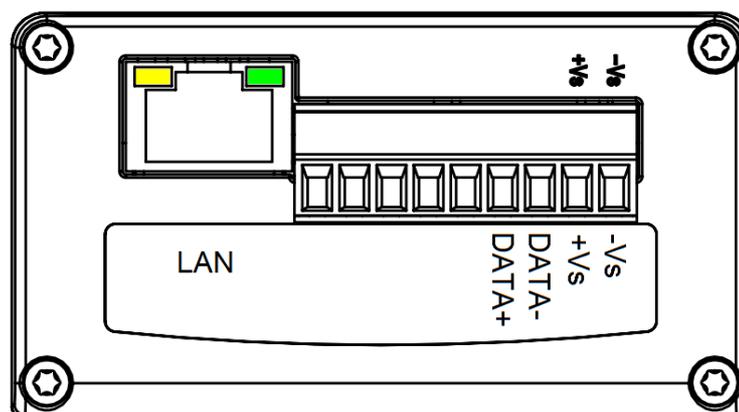


Figure 1.3 WISE-4210-AP LAN Port LED

LED	Color	Indication	Behavior
Link	Green	ON	Both ends of devices are connected
Speed	Yellow	ON	100 Mbps
		OFF	Less than 100 Mbps

1.3.2 WISE-4210-S231

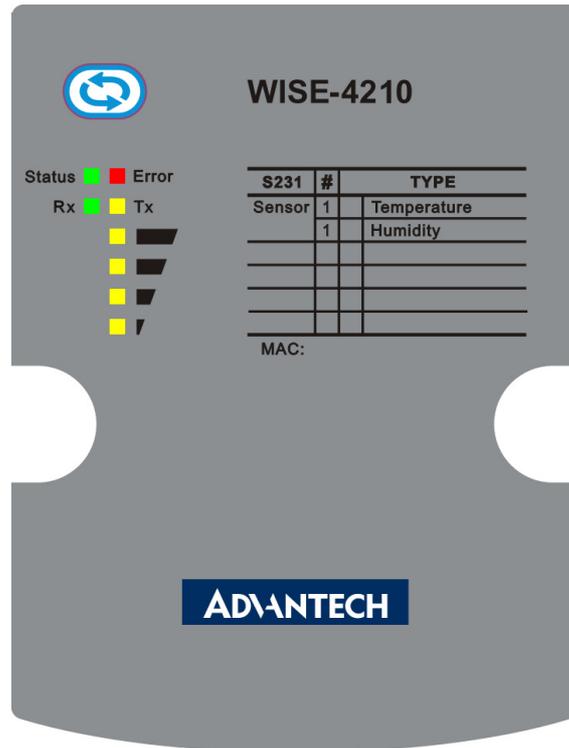


Figure 1.4 WISE-4210-S231 LED Indicator

	LED	Color	Indication	Behavior
	Status	Green	Fast Blink (2Hz)	Initial Status
			Slow Blink (0.5Hz)	Push Status
Normal Mode	Error	Red	Slow Blink (0.5Hz)	Battery Voltage Low
		Red+Green	Error fast blinking+ Signal Indicator1 blinking	RF related error
	Red+Green	Error fast blinking+ Signal Indicator2 blinking	I/O related error	
	Rx	Green	NA	NA
	Tx	Green	Steady on	Sending data to Gateway (Push Only)*
Signal Indicators/ Battery Level	Yellow	On*4	Battery Level: 80~100%	Full Signal
		On*3	Battery Level: 60~80%	Good Signal
		On*2	Battery Level: 40~60%	Moderate Signal
		On*1	Battery Level: 20~40%	Poor Signal
		All off	Battery Level Lower than 20%	No Signal

*Automatically disable after 15 secs when battery power is used.

Site Survey Mode	Status	Green	Steady on	Site Survey Mode		
	Error	Red	Slow Blink (0.5Hz)	Battery Voltage Low		
		Red+Green	Error fast blinking+ Signal Indicator1 blinking	RF related error		
		Red+Green	Error fast blinking+ Signal Indicator2 blinking	I/O related error		
		Rx	Green	NA	NA	
	Tx	Green	Steady on	Sending data to Gateway (Push Only)*		
	Signal Indicators/ Battery Level	Yellow	On*4	Battery Level: 80~100%	Full Signal	
			On*3	Battery Level: 60~80%	Good Signal	
			On*2	Battery Level: 40~60%	Moderate Signal	
			On*1	Battery Level: 20~40%	Poor Signal	
All off			Battery Level Lower than 20%	No Signal		
Signal Indicators/ Battery Level	Yellow	Stead on	Signal Indicators			
*Automatically disable after 15 secs when battery power is used.						
OTA Mode	Error	Red	Slow Blink (0.5Hz)	Battery Voltage Low		
		Red+Green	Error fast blinking+ Signal Indicator1 blinking	RF related error		
		Red+Green	Error fast blinking+ Signal Indicator2 blinking	I/O related error		
		Rx	Green	Steady on	OTA Rx Mode	
	Tx	Green	Steady on	OTA Tx Mode		
	Signal Indicators/ Battery Level	Yellow	On*4	Battery Level: 80~100%	Full Signal	
			On*3	Battery Level: 60~80%	Good Signal	
			On*2	Battery Level: 40~60%	Moderate Signal	
			On*1	Battery Level: 20~40%	Poor Signal	
			All off	Battery Level Lower than 20%	No Signal	

1.3.3 WISE-4210-S251

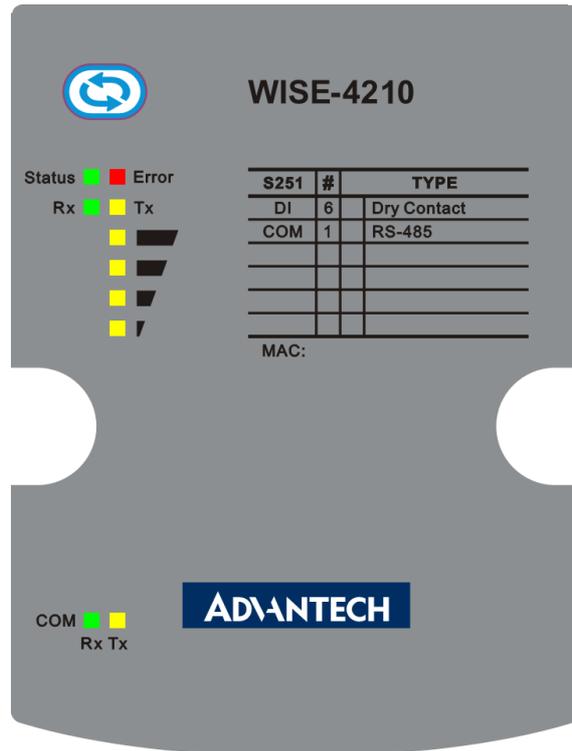


Figure 1.5 WISE-4210-S251 LED Indicator

	LED	Color	Indication	Behavior	
Normal Mode	Status	Green	Fast Blink (2Hz)	Initial Status	
			Slow Blink (0.5Hz)	Push Status	
	Error	Red+Green	Red	Slow Blink (0.5Hz)	Battery Voltage Low
			Red+Green	Error fast blinking+ Signal Indicator1 blinking	RF related error
			Red+Green	Error fast blinking+ Signal Indicator2 blinking	I/O related error
			NA	NA	NA
	Rx	Green	NA	NA	
	Tx	Green	Steady on	Sending data to Gateway (Push Only)*	
	Signal Indicators/ Battery Level	Yellow	On*4	Battery Level: 80~100%	Full Signal
			On*3	Battery Level: 60~80%	Good Signal
			On*2	Battery Level: 40~60%	Moderate Signal
			On*1	Battery Level: 20~40%	Poor Signal
			All off	Battery Level Lower than 20%	No Signal

*Automatically disable after 15 secs when battery power is used.

	Status	Green	Steady on	Site Survey Mode	
		Red	Slow Blink (0.5Hz)	Battery Voltage Low	
	Error	Red+Green	Error fast blinking+ Signal Indicator1 blinking	RF related error	
			Error fast blinking+ Signal Indicator2 blinking	I/O related error	
	Rx	Green	NA	NA	
	Tx	Green	Steady on	Sending data to Gateway (Push Only)*	
Site Survey Mode	Signal Indicators/ Battery Level	Yellow	On*4	Battery Level: 80~100%	Full Signal
			On*3	Battery Level: 60~80%	Good Signal
			On*2	Battery Level: 40~60%	Moderate Signal
			On*1	Battery Level: 20~40%	Poor Signal
			All off	Battery Level Lower than 20%	No Signal
			Stead on	Signal Indicators	

*Automatically disable after 15 secs when battery power is used.

Error	Red	Slow Blink (0.5Hz)	Battery Voltage Low	
	Red+Green	Error fast blink- ing+ Signal Indicator1 blinking	RF related error	
	Red+Green	Error fast blink- ing+ Signal Indicator2 blinking	I/O related error	
Rx	Green	Steady on	OTA Rx Mode	
Tx	Green	Steady on	OTA Tx Mode	
OTA Mode	Yellow	On*4	Battery Level: 80~100%	Full Signal
		On*3	Battery Level: 60~80%	Good Signal
	Signal Indicators/ Battery Level	On*2	Battery Level: 40~60%	Moderate Signal
		On*1	Battery Level: 20~40%	Poor Signal
		All off	Battery Level Lower than 20%	No Signal

1.4 Membrane Button

WISE-4210-Sxxx end nodes have one membrane button on name plate. This button is design for switching different LED display mode or operation mode.

Note! *WISE-4210-AP doesn't have membrane button, please use LAN port to do further configuration.*




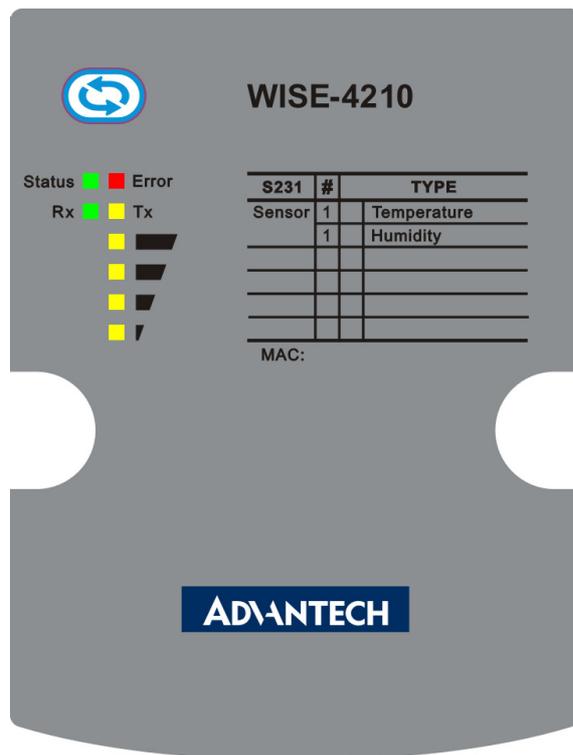


Figure 1.6 WISE-4210 Membrane Button

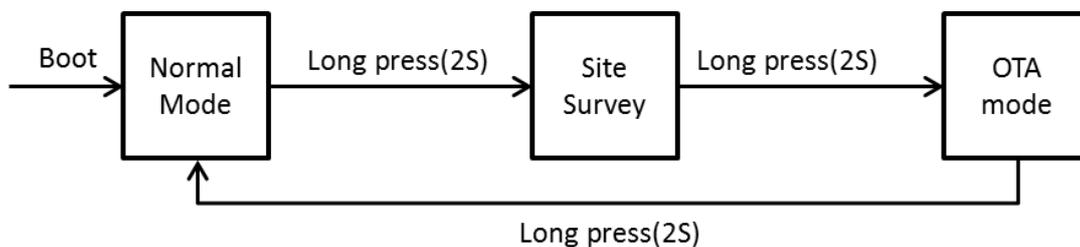

	Normal Mode	Site Survey Mode	OTA Mode				
Mode	Power Saving Mode	Non-power saving Mode		Rx Status	Tx Status (by USB port)	Low Battery	Update FW fail
Behaviour	Light Press LED turn on→Get battery level→LED turn off*	Get battery level	Tx site survey packet	Read battery level	Tx Configuration	NA	Reset OTA mode
	Long Press	Leave normal mode	Leave normal mode	Leave normal mode	Tx Firmware	Leave OTA mode	NA

*(LED indicator will go off automatically 15 secs later when using battery power.)

1.5 Battery Power Switch

Open the rubber cover on the side of WISE-4210-Sxxx nodes, there is a battery switch to turn on or turn off the battery power supply.

Note! This switch is only available for WISE-4210-Sxxx nodes, not for WISE-4210-AP.



This switch only controls the power supply from batteries. It did not control the power supply of line power from terminal block.

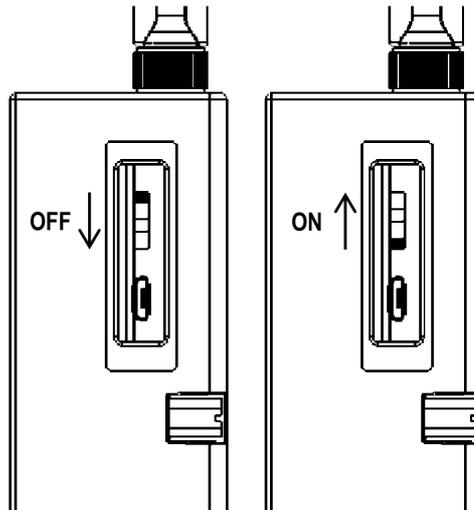


Figure 1.7 WISE-4210 Battery Switch

1.6 Package Information

WISE-4210-APNA/UA

- 1 x WISE-4210-APNA/UA module
- 1 x Mounting bracket
- 1x China RoHS (UA series only)

WISE-4210-S231NA/UA

- 1 x WISE-4210-S231NA/UA module
- 1 x Mounting bracket
- 1x China RoHS (UA series only)

WISE-4210-S251NA/UA

- 1 x WISE-4210-S251NA/UA module
- 1 x Mounting bracket
- 1x China RoHS (UA series only)

Note! AS923/EU868 version of WISE-4210 need to order antenna separately



- **1750008836-01** 863-870MHz 2dBi Dipole Antenna for WISE-4210
- **1750008837-01** 902-928MHz 2dBi Dipole Antenna for WISE-4210

Note! Battery needs to order separately



- **1760002647-01** 3.6V/2500mAh AA Cylindrical Battery (non-rechargeable)

Note! Micro-B USB cable for configuring WISE-4210-Sxxx nodes is available for ordered:



- **1700023619-01** 1M micro USB type-B male to USB type-A male cable

Chapter 2

General Specification

2.1 General Specification

2.1.1 Wireless Interface

- IEEE Standard
 - 625bps: IEEE 802.15.4g FSK Modulation
 - 50kbps: IEEE 802.15.4g GFSK Modulation
- Frequency Band
 - 923MHz (920.60~924.60), BW: 400kHz
 - 868MHz (865.00~869.00), BW: 400kHz
- Data Rate: 625bps, 50kbps
- -- Antenna Gain
 - 902~928MHz:1.33 dBi
 - 863~870MHz:2.19 dBi
- -- Transmit Power (CE): 14dBm±1dBm
- Receiver Sensitivity: -100dBm
- Topology: Star
- Network Capacity: 64 end nodes (WISE-4210-S2xx)

Note! *Outdoor Range is estimated with line of sight. The real transmitting distance would be affected by the environment of application site. Please perform site survey to determine the set up range of wireless network.*



2.1.2 General

- I/O connector
 - WISE-4210-AP: RJ-45 LAN port
 - 3.5-mm spacing plug-in screw terminal block
 - WISE-4210-S251: 3.5-mm spacing plug-in screw terminal block
- Power connector:
 - WISE-4210-AP: 3.5-mm spacing plug-in screw terminal block
 - WISE-4210-S231: 3.5-mm spacing plug-in screw terminal block
 - WISE-4210-S251: 3.5-mm spacing plug-in screw terminal block
- Watchdog timer (WDT)
 - System: 1.6 s
 - Communication
 - Programmable (FSV)
- Real-time clock (RTC) accuracy: ±1 min/month
- Enclosure: PC
- Mounting: DIN 35 rail, wall, pole, and stack
- Dimensions (W x H x D): 69 x 102 x 38 mm
- Operation temperature: -25~70°C (-13~158°F)
- Storage temperature: -40~85°C (-40~185°F)
- Operating humidity: 10~95% RH (non-condensing)
- Storage humidity: 0~95% RH (non-condensing)

Note!  *Equipment will operate below 30% humidity. However, static electricity problems occur much more frequently at lower humidity levels. Make sure you take adequate precautions when you touch the equipment. Consider using ground straps, anti-static floor coverings, etc. if you use the equipment in low humidity environments.*

Note!  *Measuring temperature and humidity will depend on sensor type. Whether the device is measuring temperature or humidity depends on the settings of the sensors.*

2.1.3 Power

- Power input voltage: 10 ~ 50 V_{DC}
- Power consumption (peak):
 - WISE-4210-AP: 0.8 W @ 24 V_{DC}
 - WISE-4210-S231: 0.1 W @ 24 V_{DC}
 - WISE-4210-S251: 0.2 W @ 24 V_{DC}
- Battery socket (WISE-4210-Sxxx nodes only)
 - AA 3.6VDC battery x 3 (parallel connection)
- Battery life (2400mAh battery x3) @ 25°C:
 - 625bps: 5 years with 10 minute update rate
 - 50kbps: 5 years with 1 minute update rate

Note!  *The battery life is estimated with 2400mAh battery, SB-AA11 by Vitzrocell Co.,Ltd.*

Testing condition:

- WISE-4210-S231: Temperature/Humidity sensor
- WISE-4210-S251: Digital input only

Note!  *The battery life is estimated in the environment at 25°C. If the battery operated in low temperature, the battery life would be lower. Here is the estimation for battery SB-AA11 at different temperature:*

- SB-AA11 @ 0°C: Less than 30%
- SB-AA11 @ -10°C: Less than 18%
- SB-AA11 @ -25°C: Less than 13%

2.1.4 Software

- Utility: WISE Studio
- Driver: ADAM .NET Class Library
- WISE-4210-AP Protocols: TCP/IP, UDP, HTTP, HTTPS, DHCP, ARP, SNTP
- WISE-4210-AP supports RESTful Web API .JSON format

2.1.5 Configuration Interface

WISE-4210-AP

- Interface: LAN port
- Connector: RJ-45

WISE-4210-Sxxx Nodes

- Interface: USB virtual COM port
- Connector: Micro-B USB
- USB chipset: Silicon Labs CP210x
- Driver: CP210x USB to UART Bridge VCP Drivers (<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>)

2.2 WISE-4210-AP

2.2.1 Uplink Communication Port

LAN port

- Ethernet: IEEE 802.3u 10/100Base-T(X)
- Connector: 1-port RJ-45
- Protocol: Modbus/TCP, RESTful web API

RS-485 port

- Signal: DATA+, DATA-
- Connector: 3.5-mm spacing plug-in screw terminal block
- Protocol: Modbus/RTU

2.2.2 Pin Assignment

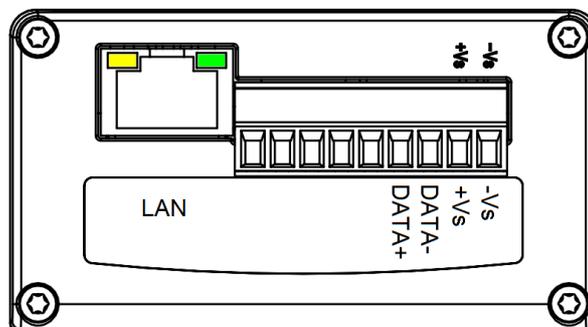


Figure 2.1 WISE-4210-AP Pin Assignment

2.2.3 Block Diagram

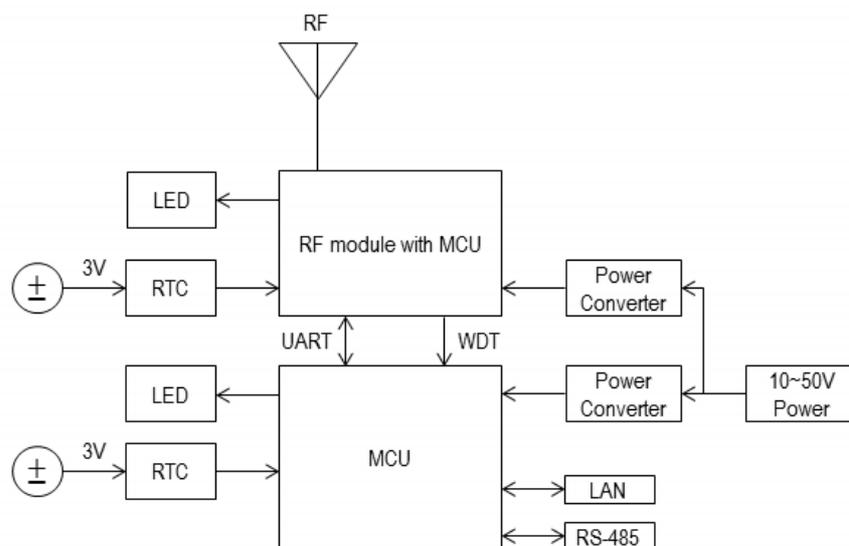


Figure 2.2 WISE-4210-AP Block Diagram

2.3 WISE-4210-S231

2.3.1 I/O Specifications

Temperature Sensor Input

- Operating Range: $-25^{\circ}\text{C} \sim 70^{\circ}\text{C}$ ($-4^{\circ}\text{F} \sim 157.9^{\circ}\text{F}$)
- Data Resolution: $0.1 (^{\circ}\text{C}/^{\circ}\text{F}/\text{K})$
- Accuracy: $\pm 1.0^{\circ}\text{C}$ (Vertical Installation)
- Update Rate: Minimum 1 second
- Response Time: 15 seconds (Achieving 63% of a step function)
- Long Term Drift: $0.05^{\circ}\text{C}/\text{Year}$ ($0.09^{\circ}\text{F}/\text{Year}$)

Humidity Sensor Input

- Operating Range: 10~90% RH
- Resolution: 0.1% RH
- Accuracy:
 - $\pm 4\%$ for 0%~50% RH
 - $\pm 6\%$ for 50%~60% RH
 - $\pm 10\%$ for 60%~90% RH
- Update Rate: Minimum 1 second
- Response Time: 10 seconds (Achieving 63% of a step function)
- Long Term Drift: 0.5% RH/Year

2.3.2 Pin Assignment

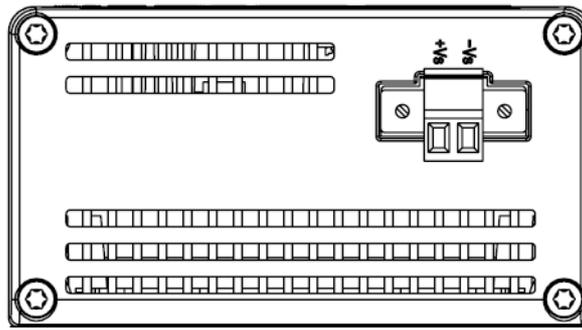


Figure 2.3 WISE-4210-S231 Pin Assignment

2.3.3 Block Diagram

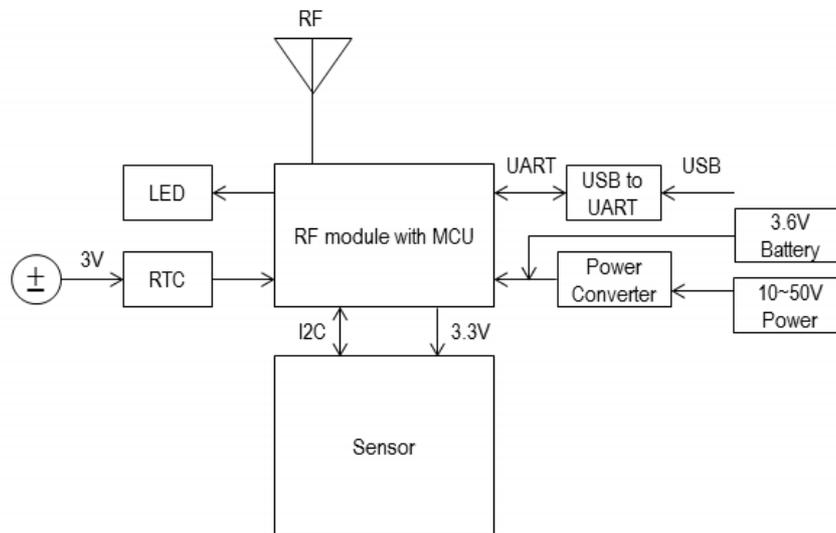


Figure 2.4 WISE-4210-S231 Block Diagram

2.4 WISE-4210-S251

2.4.1 I/O Specifications

- Channels: 6
- Logic level (dry contact)
 - 0: Open
 - 1: Close DI COM
- Isolation: 3,000 Vrms
- Supports 32-bit counter input function (maximum signal frequency, 3 kHz)
- Supports keep/discard counter value on power-off
- Supports frequency input function (maximum signal frequency, 3 kHz)
- Supports inverted digital input status

2.4.2 Pin Assignment

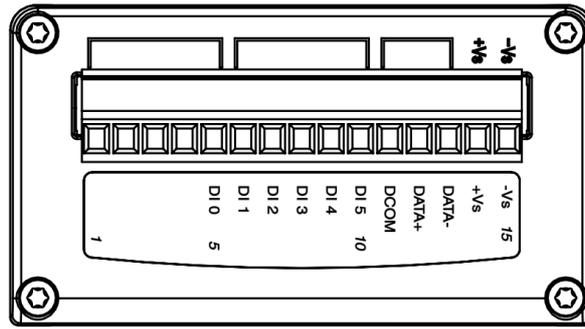


Figure 2.5 WISE-4210-S251 Pin Assignment

2.4.3 Block Diagram

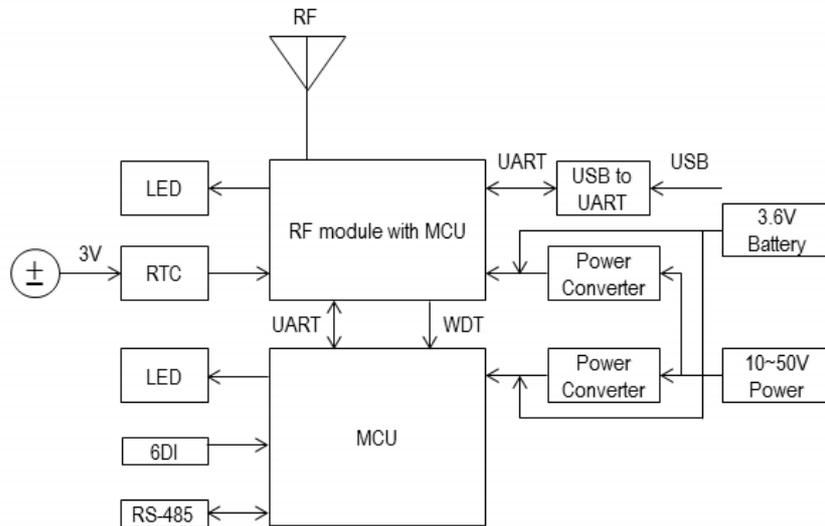


Figure 2.6 WISE-4210-S251 Block Diagram

2.4.4 Application Wiring

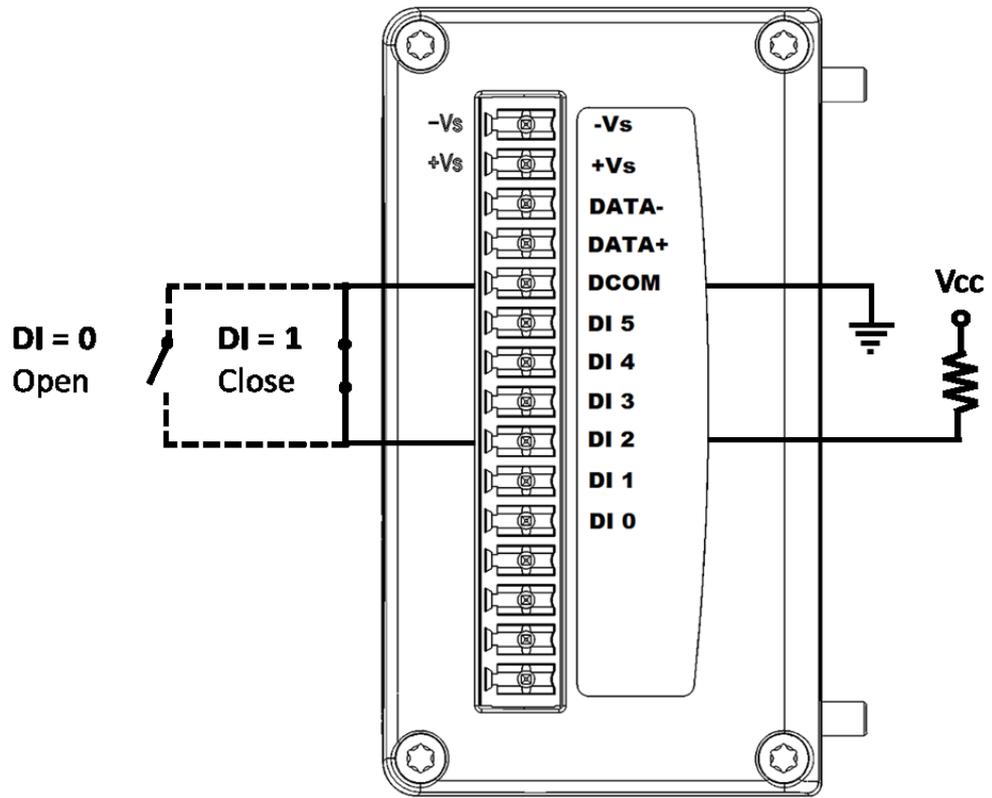


Figure 2.7 WISE-4210-S251 Digital Input Wiring Diagram

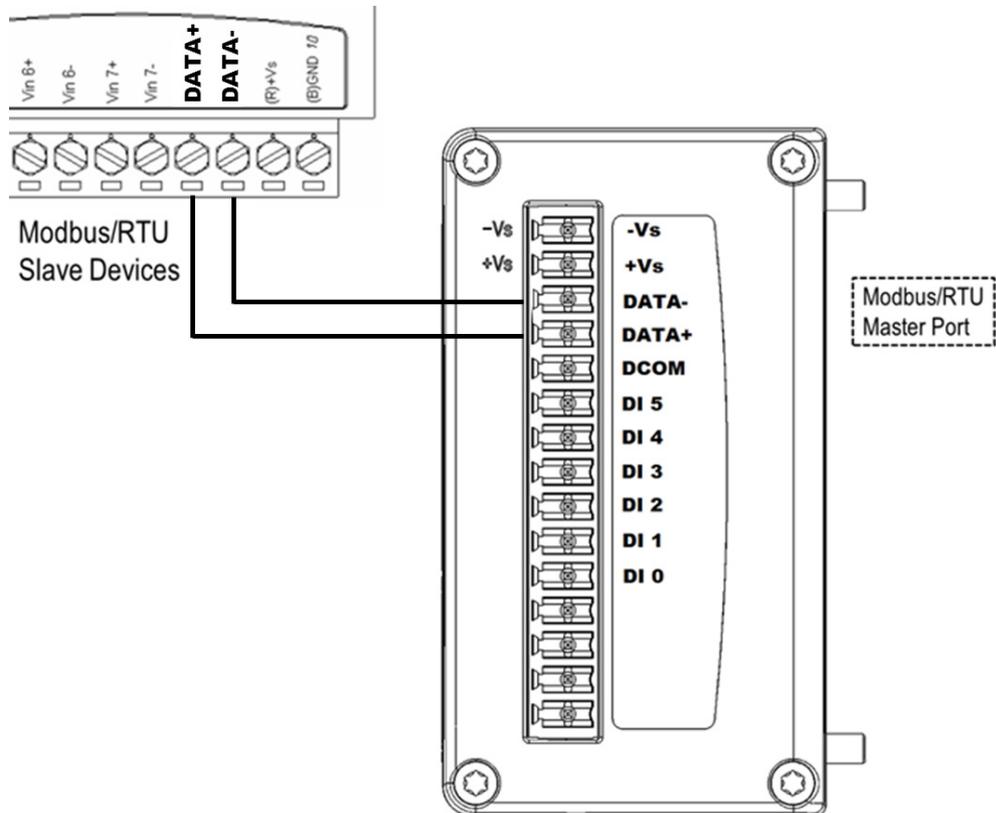


Figure 2.8 WISE-4210-S251 RS-485 Wiring Diagram

Chapter 3

Hardware Installations

3.1 Interface Introduction

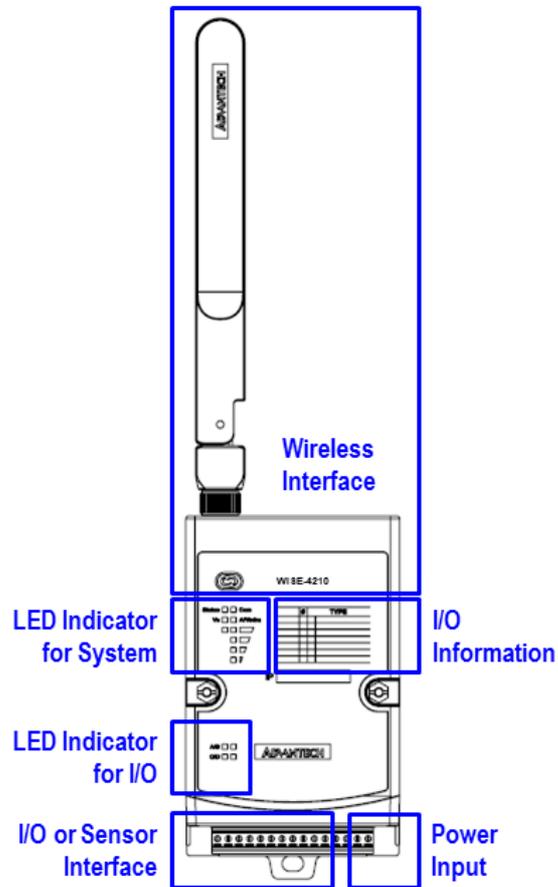


Figure 3.1 WISE-4210 Interface Introduction

3.2 Mounting

Like all WISE-4000 series modules, the WISE-4210 series of wireless sensor nodes are designed as compact units. Applicable installation methods are briefly described in the following sections.

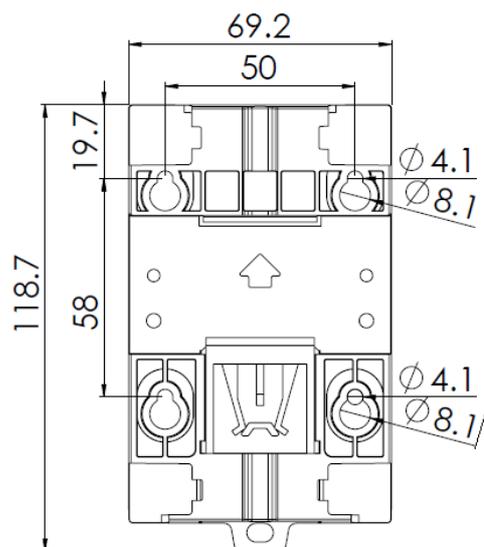


Figure 3.2 WISE-4000 Series Mounting Kit Dimensions

3.2.1 DIN-Rail Mounting

WISE-4470 modules can be fixed to a cabinet with mounting rails. Use a flathead screwdriver to fasten the DIN rail adapter to your module. You can then use the end brackets included in the package in order to keep it from sliding.

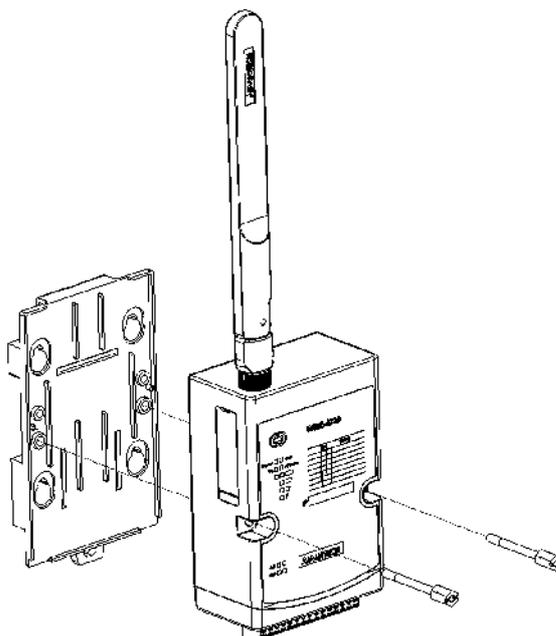


Figure 3.3 DIN Mounting Install

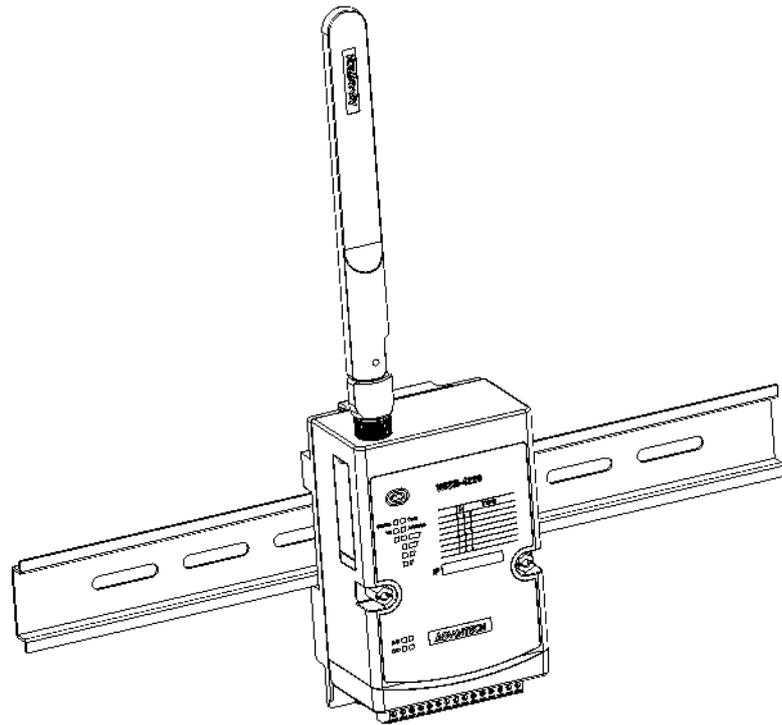


Figure 3.4 DIN Mounting Front

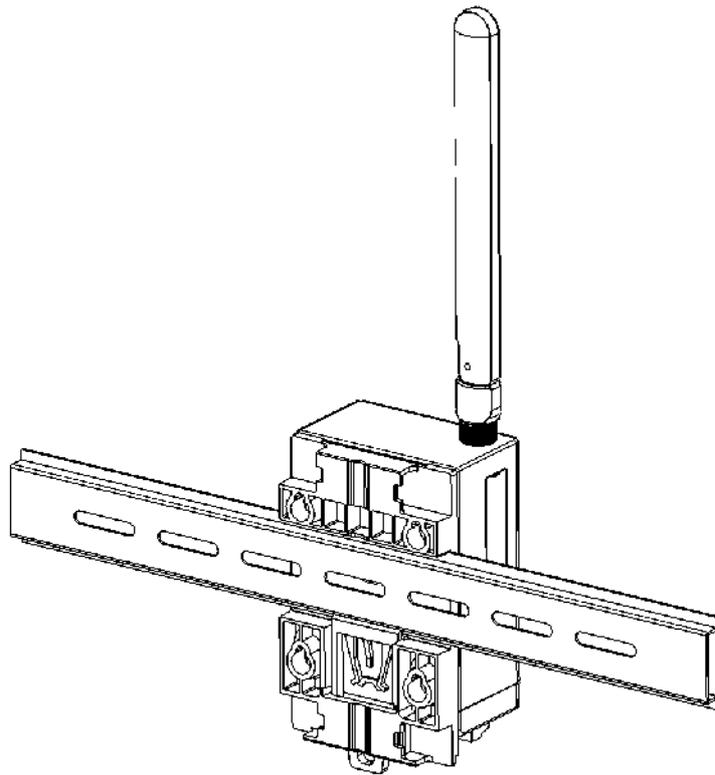


Figure 3.5 DIN Mounting Back

3.2.2 Wall Mounting

The plastic wall-mounting bracket that comes with the module can be used to mount it on a wall, panel, or cabinet.

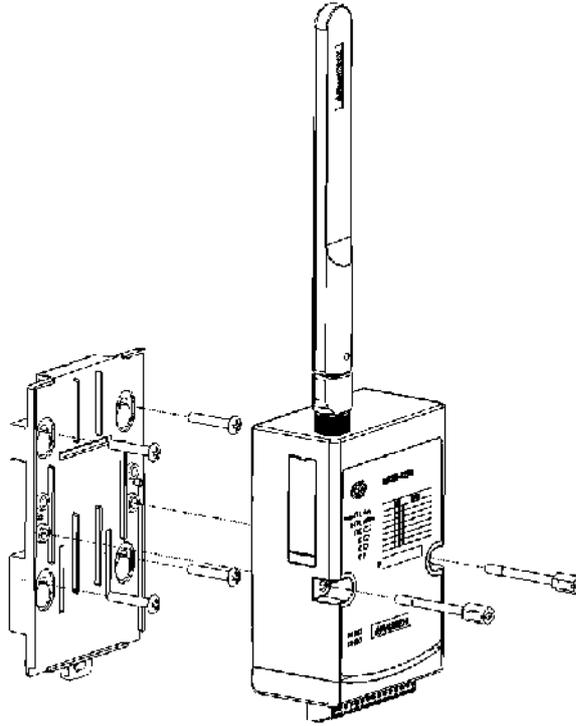


Figure 3.6 Wall Mounting Install 1

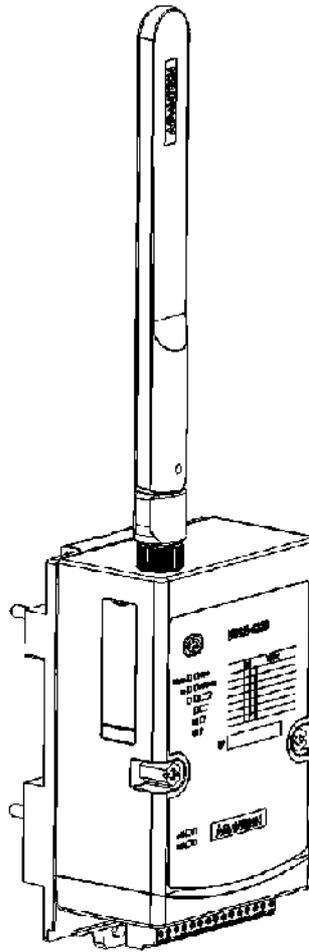


Figure 3.7 Wall Mounting Install 2

3.2.3 Pole Mounting

Put the pole mounting ring through the middle hole of it. Note that you should unlock the pole mounting ring with a screw driver before putting it through the device. Then mount the WISE-4200 module steadily to the pole by locking the pole mounting ring tightly.

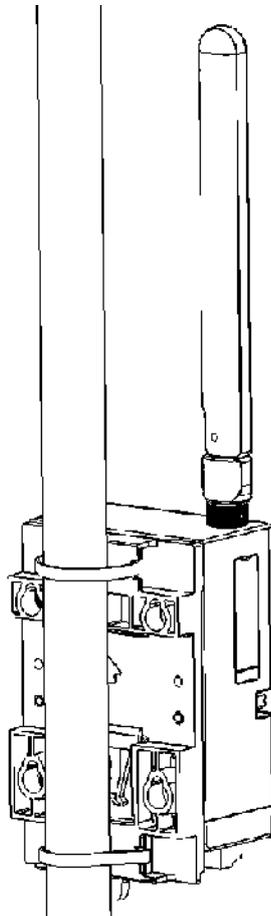


Figure 3.8 Pole Mounting Front

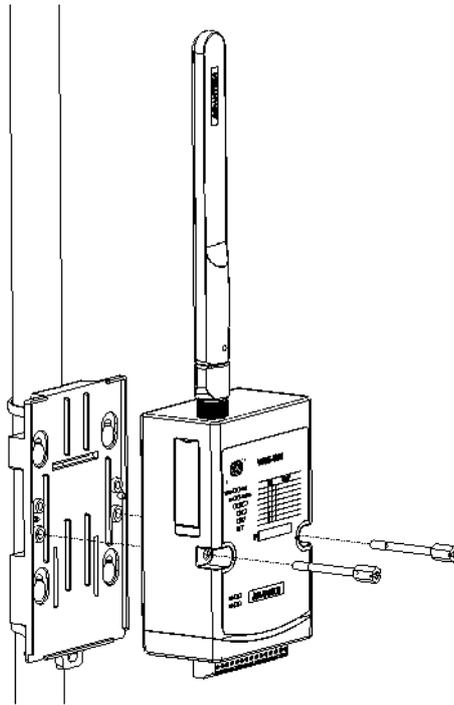


Figure 3.9 Pole Mounting Back

3.3 Wiring and Connections

This section provides basic information on wiring the power supply and I/O units.

3.3.1 Power Supply Wiring

WISE-4210 modules are designed to support a standard industrial unregulated 24- V_{DC} power supply. For other applications, they can also accept +10 to +50 V_{DC} input with 200 mV of peak-to-peak power ripple. The immediate ripple voltage should be maintained between +10 and +50 V_{DC} . The screw terminals labeled "+Vs" and "-Vs" are for the power supply wiring.

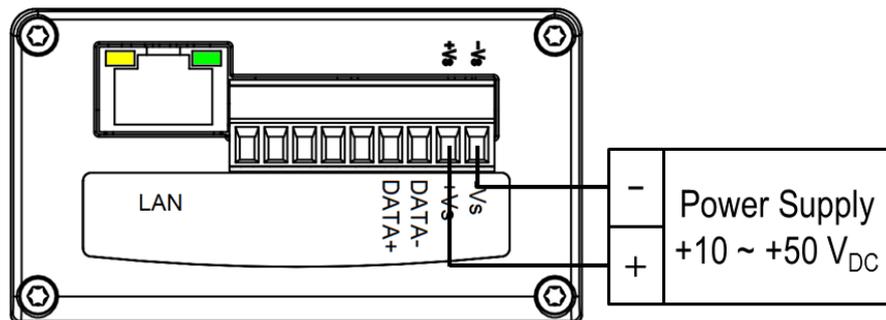


Figure 3.10 WISE-4210-AP Power Wiring

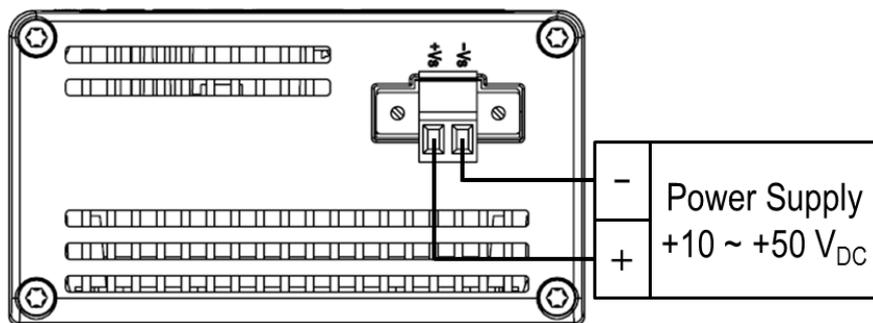


Figure 3.11 WISE-4210-S231 Power Wiring

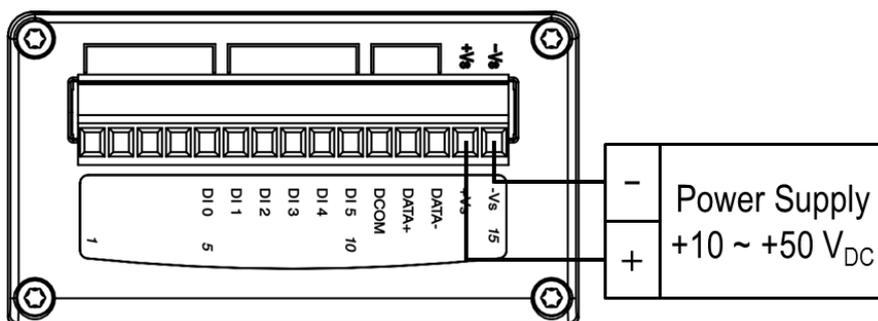


Figure 3.12 WISE-4210-S251 Power Wiring

3.3.2 Battery Installation

Open the battery cover on the back of module. There are 3 battery sockets for 3.6VDC AA batteries. Since the batteries are parallel connection, batteries are installed in same direction, positive pole (+) on left and negative pole (-) on right.



Figure 3.13 WISE-4210 Battery Socket

Open the rubber cover on the side of WISE module, there is a battery switch to turn on or turn off the battery power supply.

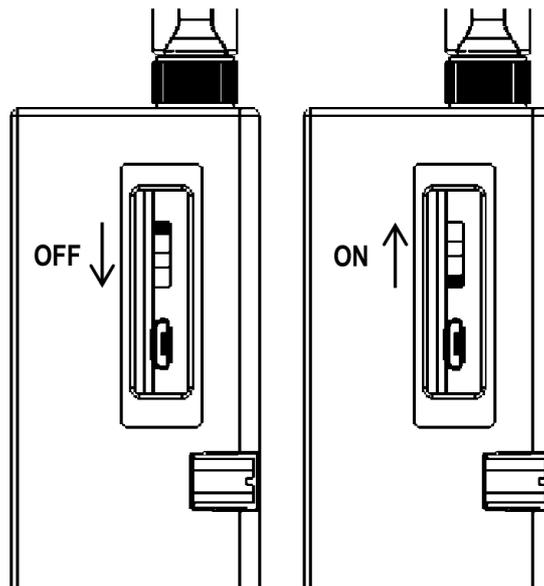


Figure 3.14 WISE-4210 Battery Switch

Note! This switch is only available for WISE-4210-Sxxx nodes, not for WISE-4210-AP.



Note! Battery needs to order separately



- **1760002647-01** 3.6V/2500mAh AA Cylindrical Battery (non-rechargeable)

3.3.3 I/O Units

WISE-4210 uses a plug-in screw terminal block for the interface between WISE-4210 and field devices. The following information is critical when connecting electrical devices to I/O modules.

- Use the correct wire gauge (note that the terminal block accepts wires from 0.5 to 2.5 mm)
- Use a continuous length of wire (do not join separate wires to form a continuous length)
- Use the shortest wire length possible
- Use wire trays for routing wherever possible
- Avoid running wires near to high-energy wiring
- Avoid running input wiring near output wiring
- Avoid creating sharp bends or kinks in the wires

Chapter 4

System Configuration

4.1 Connection

4.1.1 WISE-4210-AP Connection

WISE-4210 uses RJ-45 LAN port for configuration. Connect your computer to Ethernet port of WISE module with RJ-45 cross-over Ethernet cable, and configure the IP address of your computer as same IP domain as default IP address of module: 10.0.0.1

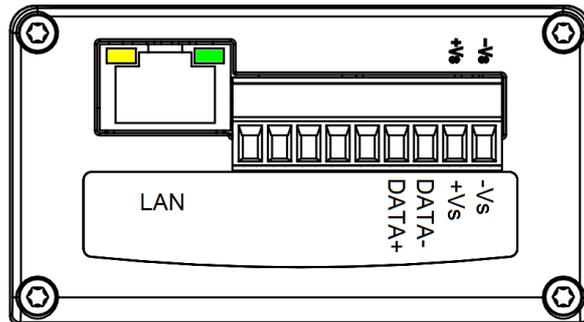


Figure 4.1 WISE-4210-AP LAN port

4.1.2 WISE-4210-Sxxx Node Connection

WISE-4210-Sxxx node use micro-B USB port for configuration. After remove the rubber cover on the side of WISE module, there is a micro-B connector. Connect this port to computer's USB port for configuration. The USB driver would be need for creating virtual COM port of computer. Please refer to following link to get the latest USB driver: CP210x USB to UART Bridge VCP Drivers (<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>)

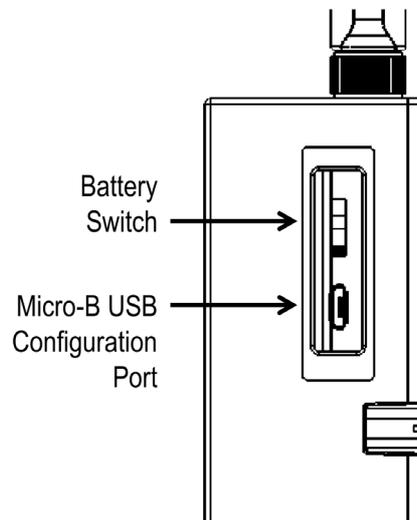


Figure 4.2 USB configuration port of WISE-4210-Sxxx node

Note! Micro-B USB cable for configuring WISE-4210-Sxxx nodes is available for ordered:



- **1700023619-01** 1M micro USB type-B male to USB type-A male cable

4.2 Configuring WISE-4210-AP with Browser

4.2.1 System Requirements

The web utility of WISE-4210-AP is developed with public HTML 5, but for detailed indication and data transmission mode, the type of web utility will depend on web page of the operating system.

For mobile devices, the minimum system requirements of web browsers are as below:

- Safari 6 in Apple iOS
- Web Browser in Google Android 4.0 (Ice Cream Sandwich)
- Chrome in Google Android 4.0 (Ice Cream Sandwich)

Mobile Browser	Chrome	Android	Safari
Configuration	Y	Y	Y
File Upload	N	N	N
Data Log Chart	Y	Y	Y
Data Log Export	N	N	N

For PC platforms, the minimum requirements of web browsers are as below:

- Internet Explorer (version 11)
- Google Chrome (version 30)
- Mozilla Firefox (version 25)

Mobile Browser	Chrome	Firefox	Safari	IE11	IE10
Configuration	Y	Y	Y	Y	Y
File Upload	Y	Y	N	Y	N
Data Log Chart	Y	Y	Y	Y	Y
Data Log Export	Y	Y	N	N	N

4.2.2 Factory Default Settings

- IP Mode: Static IP Address
- Default IP: 10.0.0.1
- Subnet Mask: 255.0.0.0
- Default Gateway: 0.0.0.0
- IP Mode: Static
- HTTP Port: 80

4.2.3 Module Authorization

Account	Default Password	Access Ability
root	00000000	All privileges
admin	00000000	All privileges except access control configuration
user	00000000	View module status only. Not allow to change configurations

Functions	Account		
	root	admin	user
Device information	View	View	View
Device setting	Edit	Edit	Deny
System Restart	Edit	Edit	Edit
Module Locate	Edit	Edit	Edit
Change passwords	Edit	Deny	Deny
Reset Password	Edit	Deny	Deny
Reset to default	Edit	Deny	Deny
Access control configurations	Edit	Edit	Deny
Group configurations	Edit	Edit	Deny
Download/upload processes	Edit	Edit	Deny
Network configurations	Edit	Edit	View
I/O configurations	Edit	Edit	View
I/O statuses monitor	View	View	View
Reset AI calibration to default	Edit	Deny	Deny
MODBUS addresses	Edit	Edit	View
Data log configuration and query	Edit	Edit	View
Clear data log	Edit	Edit	Deny

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2018