


A.2.3 – License the .OCX files

- Run the Ptllic32.exe file located in :
 C:\Program_files\7390LT-Craft Terminal\Ptllic32.exe
 The "Power TCP" windows appears.
- Click on the "Licensing" button
 The following window appears:

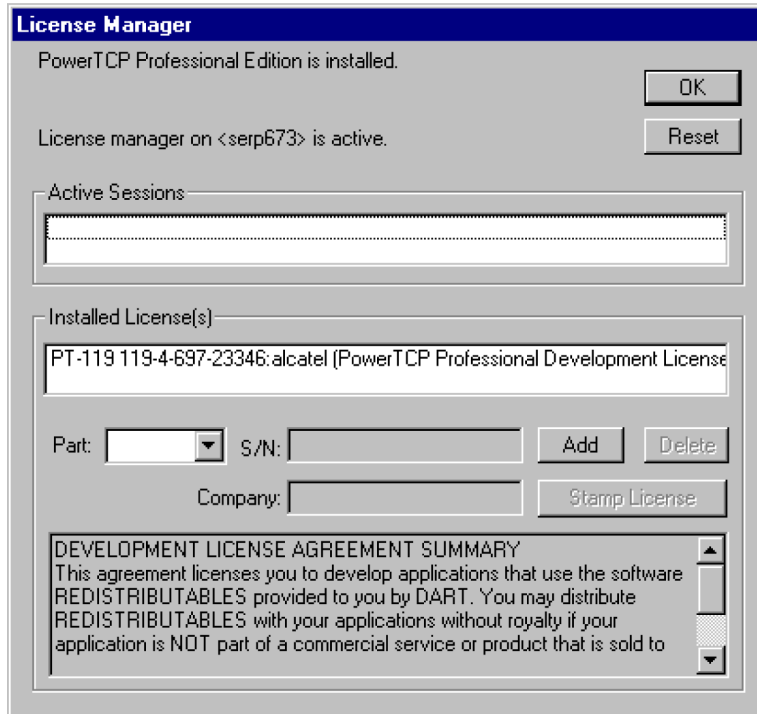

- Enter the following values

Field	Value
Part	PT-119
S/N	119-4-697-23346
Company	Alcatel CIT

- Click on Add
 The license is printed in the box "Installed License"
- Click on the license
- Click on the "Stamp license" button
- Select the following OCX file to stamp the license:
 C:\WinNT\System32\ptsnmp32.ocx
 A window appears on the screen mentioning that the licensing has been done successfully.
- Move back to the main window (see window above), click on the license detailed in the box "Installed License", and then click on the Delete button.

A.2.4 – Craft.ini configuration

In the Craft.ini file (C: \ProgramFiles\7390LT\Craft.ini) enter the following values :

Parameter	Value
IP Address	BS IP address
Local Port	161 (port from where SNMP instructions are sent from the 7390LT)
Remote port	161 (port from where SNMP responses are received on to the 7390LT)
Trap port	161 (port where SNMP Trap messages are received on to the 7390LT)

A.2.5 – Running 7390LT

1. From the "Start menu->programs" Click on **"7390LT-Craft terminal"**
2. See the User manual to operate the application.

A.2.6 – NFS Server installation

This step is necessary to implement the 7390LT "Software download" functionality.

If the NFS server installation was done, move on to the next section.

A.2.6.1 – NFS server product references

Reference	Description
Product	Omni-NFS Server for NT/98/95 - Xlink Technology
Version	4.01 / 4.10 / 4.11 / 4.12
Serial Number/Password	Cf. certificate of Authenticity
Documentation	Omni-NFS for Windows 98/95 & NT - User Guide


A.2.6.2 – Installation of NFS server

- Depending of the NFS versions, screens can change from a version to another (following screens are NFS versions 4.01).
- Log on to an account with administrator rights

From the Windows NT Explorer:

- Click on the D: drive
- Double-click on the Setup.exe program

The following window is displayed:

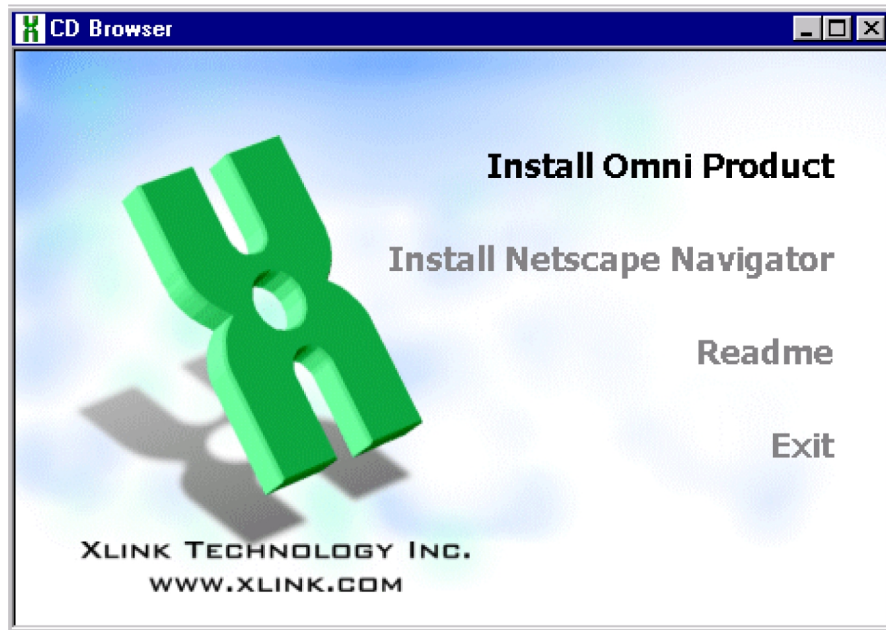

- Click on the menu: "Install Omni Product"

A window requesting the product serial number and a password appears.

- Enter the requested information (see [A.2.6.1 – NFS server product references](#)) and click OK

A window containing the following phrase appears:

"This program requires a member of Administrator group to setup"

- Click "YES"


A window titled "Omni-NFS", "full screen" is displayed along with a small "Welcome" window

- Click "Next"

A window titled "Software License agreement" appears

- Click "YES"

The following window appears:

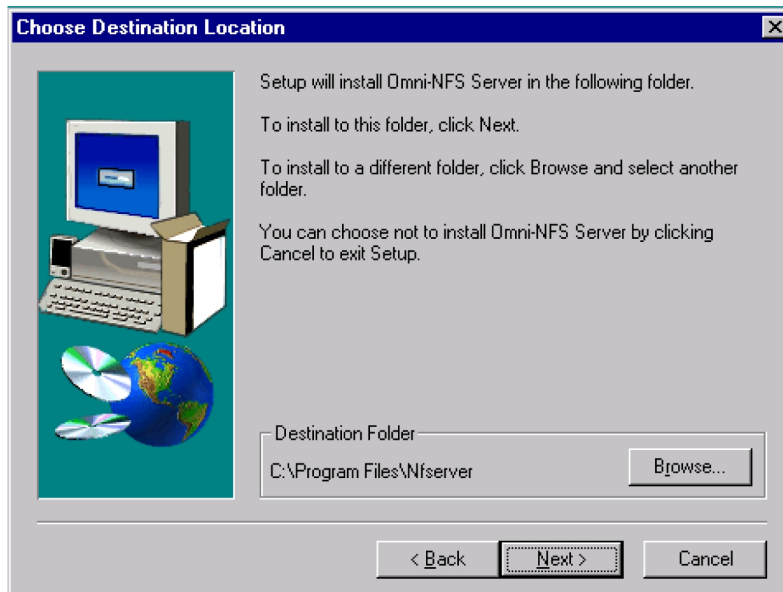

- Click "Next"

A window titled "Select Program Folder" appears.

- Click "Next"

Installation begins.

After about ten seconds, the following window appears:



- Click "Yes, I want to restart my computer now" then "Finish"

The PC reboots.

- Log on to an Administrator account before going to stage [A.2.6.3 – Configuring the NFS server](#).


A.2.6.3 – Configuring the NFS server

Note: You must be logged on the PC as a member of the administrator group in order to configure NFS server.

- Run the wnfsd.exe program: C:\Program_files\Infserver\wnfsd.exe


Note: another possible path is: Start - Programs - Omni-NFS Server for Win NT-98-95 - NFS Server Configuration.

A window similar to the following appears:

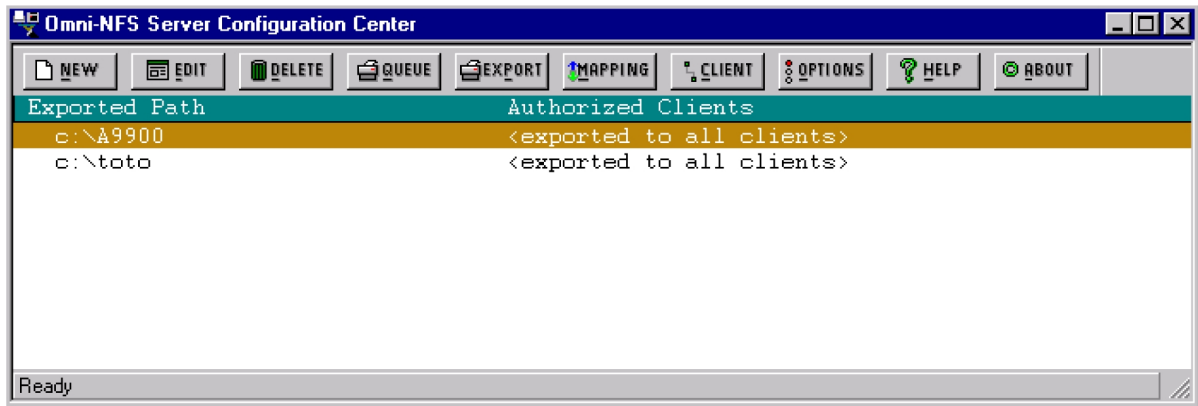


- Click on "New" in the tool bar

The following window appears:

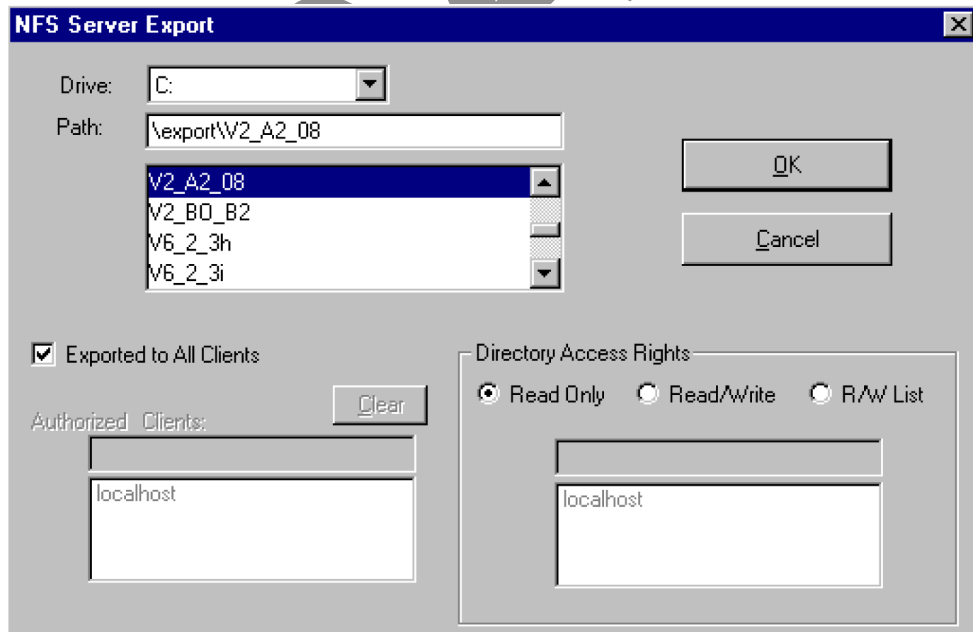

For the path, select the directory where the Craft Terminal software packages are to be installed.

	<p>The directory chosen for installation of the software packages must be in CAPITAL LETTERS. The complete path of the directory must be exported. Example: C:\export\V2-A2-08.</p> <p>A nonexistent directory can appear to be exported without any problem but this does not mean that it has been consequently created.</p>
---	--

Choose the following options:

- Exported to All Clients
- Directory Access Rights: **Read only for the software Package directory**
Read / Write for the Backup / Restore directory
Read / Write for the Mib Migration directory (C: \A9900WW)


Click OK.

Note: in case of access error to a sub-directory of an exported directory, export each of the directories containing a package.

The "MAPPING" step is absolutely mandatory.

Click on the "MAPPING" button

- In the windows "Windows NT Accounts" select then NT account in which we logged in.
- Enter User ID 851 (because the user ID of the ANT board is 851).
- Click on "Add==>" button.
- Click "OK"

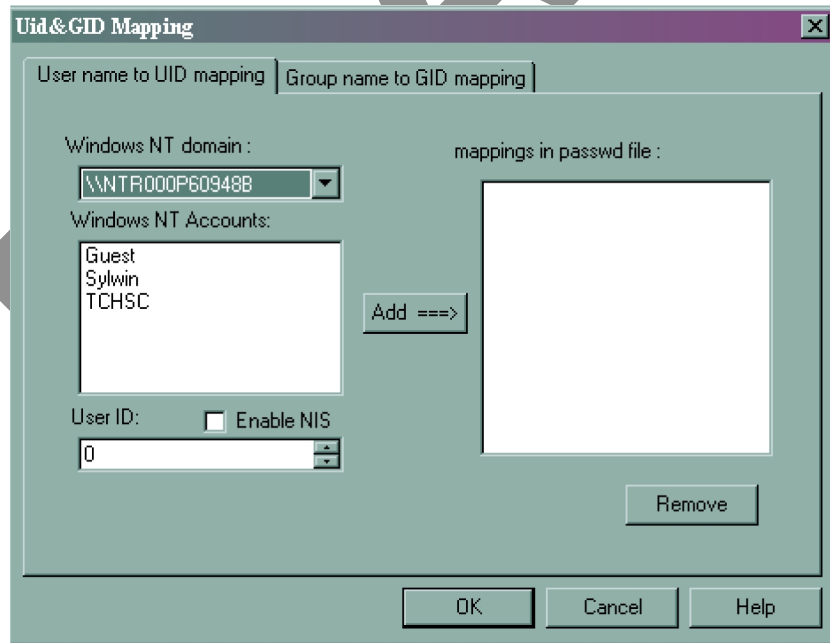


A.2.7 – Installation of Software Packages


From Windows NT Explorer, copy the directories containing the software packages to be downloaded to the NFS assembly directory and export each of them.

A.2.8 – FTP Server configuration

1. From the "start" menu select "programs->Omni-NFS->FTP Server"
2. The following window will appear. Click on "setup" button.

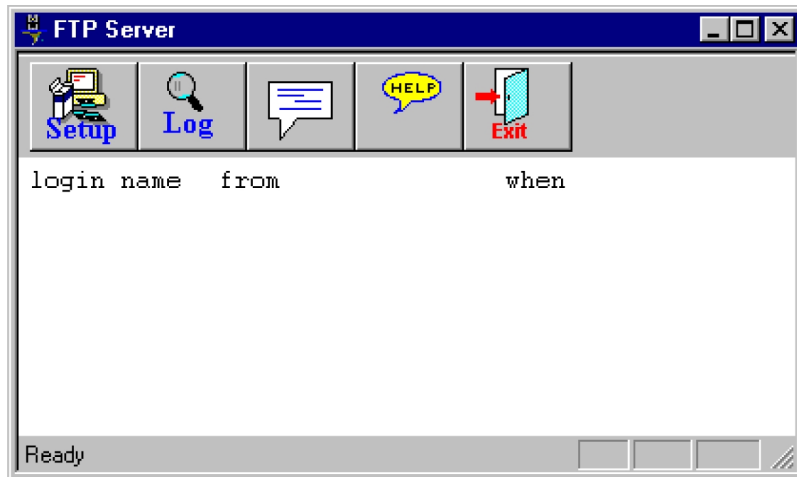

3. The following window will appear. Click on Users.

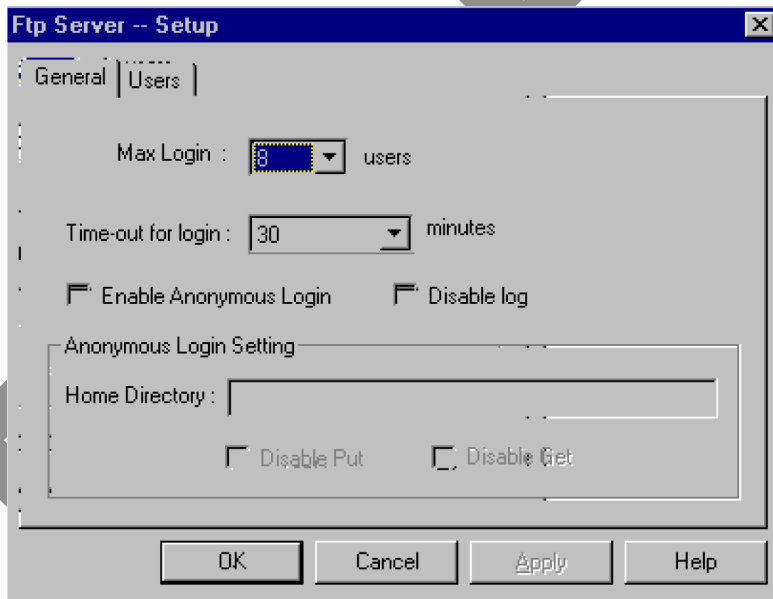

4. Fill the window with the values showed in the following table.

Parameter	Value
User Name	ANT7390 (it depends on the FTP client in the agent)
Password	ww7390 (it depends on the FTP client in the agent)
Full Name	
Home directory	../7390LT-craft terminal/FTP Nota: The local folder depends on the destination folder chosen to install the LT software.