

Quick Start Guide

 
For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual (English version only). Moreover, from the website you can also consult FAQ (English version only).

SAR
This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 24 of this user guide. When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

Warning: Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

ALCATEL **one touch**

Your mobile.....

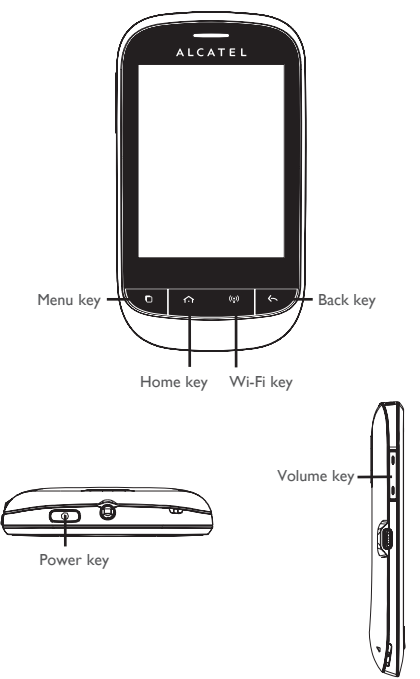

- ### 1.1 Keys
- Menu key**
- Options menu (Select/OK/Done/Save).
 - Home key**
- Return to the Home screen
 - Wi-Fi key**
- Quickly access Wi-Fi
 - Back key**
- Return to previous menu
 - Volume key (side key)**
- Adjust general volume
 - Power key**
- Lock the screen (press)
- Turn your screen on/off (press)
- Power on/off (press and hold)
- Mute an incoming call

- ### 1.2 Main screen icons ⁽¹⁾
- In one touch 720:
- Battery charge level**
 - Vibrate alert:** your phone vibrates, but does not ring or beep.
 - Bluetooth status (Activated).**
 - Headset connected.**

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

 
- Screen locked.**
- Call forwarding activated:** your calls are forwarded.
- Alarm or appointments programmed.**
- Level of network reception.**
- Voicemail message arrived.**
- Missed calls.**
- Radio is on.**
- Wap alerts ⁽¹⁾.**
- Roaming.**
- SIM card missing.**
- GPRS connection status (Activated).**
- GPRS connecting.**
- Sending a MMS.**
- MMS receiving.**
- Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm.
- SMS unread.**
- MMS unread.**

⁽¹⁾ Depending on your network operator.


- Flight mode.**
 - microSD card inserted.**
- In one touch 720D:
- Call forwarding activated:** your calls are forwarded.
 - Level of network reception.**
 - GPRS connection status (Activated).**
 - GPRS connecting.**

2 Getting started.....

- ### 2.1 Set-up
- Removing and installing the back cover**
- Removing and installing the battery**

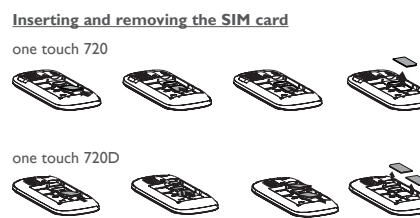

 Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

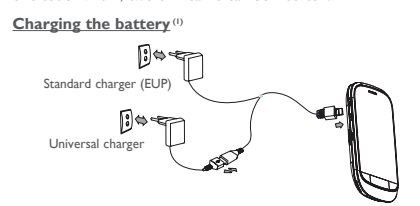

- Connect the battery charger to your phone and mains socket respectively.
- The charging may take about 20 minutes to start if the battery is flat.
 - Be careful not to force the plug into the socket.
 - Make sure the battery is correctly inserted before connecting the charger.
 - The mains socket must be near to the phone and easily accessible (avoid electric extension cables).

⁽¹⁾ Depending on your country.

6 Apps ⁽¹⁾.....

Apps is an online software store, where you can download and install applications and games to your phone. All downloaded files can be found in "Apps mgr." that can be accessed from main menu.

7 Wi-Fi.....

To access this function, tap to enter the main menu, and select or press directly..

8 Web.....

Not only does Web give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

9 Facebook.....

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users interact, such as Wall, etc. To open an account online, please go to: <http://m.facebook.com>

⁽¹⁾ Depending on your network operator.

10 mTweet.....

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables phone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers. To open an account online, please go to: <http://m.twitter.com>

11 Camera.....

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them in your "File mgr.\My photos".
- send them directly by MMS, Email or Bluetooth.
- customise your main screen.
- select them as incoming call image to a contact in your directory.

12 Email.....

Your phone has an email client with the settings predefined for a few popular email services like - GoogleMail, Windows live, Yahoo, AOL, etc ⁽¹⁾. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

⁽¹⁾ Depending on your network operator.

13 Image.....

A library links to the images in "My photos" in phone to be shown in list, slide, set as Wallpaper, Power on/off display, and Incoming call image, or sent by MMS, Email, Bluetooth.

14 Music.....

Access this feature from the main menu by selecting "Music". You will have full flexibility of managing music both on your mobile and memory card.

15 Video.....

"My videos" album contains video clips recorded, received or downloaded.

16 Radio.....

Your phone is equipped with a radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ Depending on your network operator and market.

17 Voice recorder.....

Accessing "Voice rec." from the main menu allows you to make voice or sound recordings.

18 Settings.....

From the main menu, select the menu icon and select the function of your choice in order to customise your telephone: **Phone settings, Call settings, Black white list, Security, Network, Connectivity and Default Browser setting.**

- ### SIM mode Settings ⁽¹⁾
- Dual SIM activated** Keep both of your SIM cards active.
 - Only SIM1 activated** Only keep SIM1 active.
 - Only SIM2 activated** Only keep SIM2 active.
 - Flight mode** Voice calls, Bluetooth and Messages functions are barred.

⁽¹⁾ one touch 720D only.

19 Call log.....

- ### 19.1 Access
- You may access this function from the main menu "Call log".
- Missed calls/Call rejected by SMS
 - Outgoing calls (Redial)
 - Answered calls/Rejected calls

- ### 19.2 Available options
- When you touch , you can have access to **Delete, Send message, Edit before call**, etc.

20 Calendar.....

Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked.

 
Voice calendar
You can record a reminder using your voice at the date/time you choose!
To create the voice reminder, just touch on the tool bar.

21 Tasks.....

Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.


⁽¹⁾ Depending on your country.

Inserting and removing the SIM card

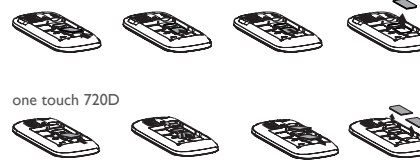

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

 Charging the battery ⁽¹⁾

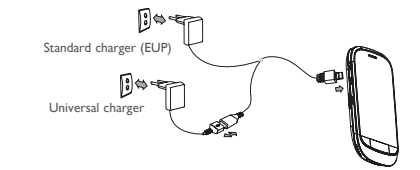

- Connect the battery charger to your phone and mains socket respectively.
- The charging may take about 20 minutes to start if the battery is flat.
 - Be careful not to force the plug into the socket.
 - Make sure the battery is correctly inserted before connecting the charger.
 - The mains socket must be near to the phone and easily accessible (avoid electric extension cables).

⁽¹⁾ Depending on your country.

- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ().
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.

The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the key until the phone powers on.

2.3 Power off your phone

Hold down the key until the phone powers off.

2.4 Using the touchscreen

- Touch** To access an application, touch it with your finger.
- Drag** Place your finger on the screen to drag the object to the destination.
- Scroll** Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

⁽¹⁾ one touch 720D only.

3 Making a call.....

Touch on the tool bar to place a call. For dual SIM model, you can select either SIM1 or SIM2 when you wish to place a call ⁽¹⁾. If you make a mistake, you can delete the incorrect digits by pressing .

To hang up the call, press the key.

4 Contacts.....

4.1 Consulting your Contacts

To access the Contacts, touch from tool bar to enter the main menu, and select "Contacts".

For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu ⁽¹⁾.

4.2 Adding a contact

You can add a new contact by touching .

⁽¹⁾ one touch 720D only.

5 Messaging.....

5.1 Create message

From the main menu select "Messaging" to create text/multimedia message. For dual SIM model, you can type a message and select to send it to a recipient in either the SIM1 or SIM2 directory ⁽¹⁾. You can type a message and you can also modify a predefined message in **Templates** or customise your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select to access all the messaging options. You can save your messages that you send often to **Draft** or **Templates** (MMS only).

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

⁽¹⁾ one touch 720D only.

22 Notes.....

You can create a note in text format by accessing "Notes" from the main menu.

25 Converter.....

You can use the Weight and Length conversion by selecting the unit you wish to convert via , then touch to input the digits. Finally confirm with .

30 Java.....

Your Alcatel phone may include ⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your phone.

- 30.1 Java applications** Select "Java applications" to launch applications.
- 30.2 Download application** With this menu, you can download new applications and games to your phone.
- 30.3 Java settings** This menu allows you to manage Java settings, in which you may set **Audio, Backlight, Vibration and Heap size**.
- 30.4 Java network** This menu allows you to select the network for Java.
- 30.5 Trusted certificates** View detailed information of the trusted certificates supported by your phone.

31 Wap.....

Access Wap options: **Homepage, Bookmarks, Recent pages, Offline pages, Go to URL, Service inbox, Settings**.

⁽¹⁾ Depending on your network operator.

32 Bluetooth™.....

Access this feature by pressing to enter the main menu, then selecting "Bluetooth".

33 News.....

It is a huge time saver providing news updates from a website in a simple form. Once subscribed to a channel, it gives you the ability to track and manage all your favourite RSS content on your mobile phone at anytime, anywhere!

34 Weather ⁽¹⁾.....

Your phone is equipped with a weather function for consulting up to 3-day forecasts of favourite cities.

35 Services.....

Contact your network operator to check service availability.

36 Profiles.....

With this menu, you may personalise ringtones for different events and environments.

⁽¹⁾ Depending on your network operator.

