


CD Music System

RS2929B



It's important to read this User Manual prior to using your new product for the first time.

 REMOTE CONTROL

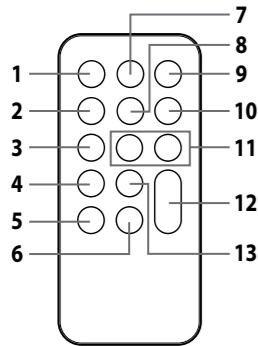


1. **STANDBY/ON button**
2. **SLEEP button**
3. **PROG/MEM button**
4. **RANDOM button**
5. **MEM.UP button**
6. **STOP button**
7. **PRESET EQ button**
8. **TIMER button**
9. **FUNCTION button**
10. **PAIR button**
11. **LEFT/RIGHT/TUNE - / + button**
12. **VOLUME +/- buttons**
13. **PLAY/PAUSE button**

USING THE REMOTE CONTROL CORRECTLY

- Point the remote control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 19 feet (6 meters).

 TO CHANGE REMOTE BATTERY

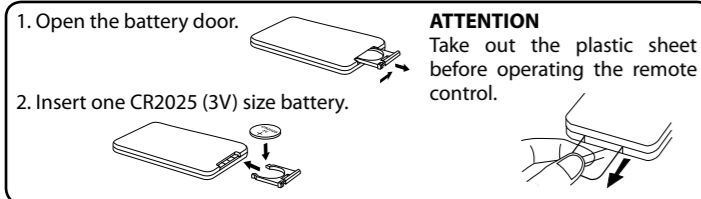

BATTERY REPLACEMENT

When the battery becomes weak, the operating distance of the remote control is greatly reduced and you will need to replace it.

NOTE: If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.

WARNING: Do not dispose of battery in fire; battery may explode or leak.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

SAFETY PRECAUTIONS

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Customers in Canada

This apparatus complies with the Class B limits for radio noise emission set out in radio interference regulations. CAN ICES-3 (B) / NMB-3 (B)

Warning:

- The AC adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the unit from the mains completely, the AC adapter should be disconnected from the mains socket outlet completely.
- The AC adapter of unit should not be obstructed OR should be easily accessed during intended use.
- Minimum 10 cm (4 inches) distances around the unit for sufficient ventilations.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No naked flame sources such as lighted candles should be placed on the unit.

On Safety

- Should any objects or liquids fall into the unit, disconnect the power supply and have the unit checked by qualified personnel before any further operation.
- The unit shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the unit.

On Use

- Never use the unit where it would be subject to:
- Heat sources such as radiators or air ducts.
 - Direct sunlight.

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1
PRODUTO LASER CLASSE 1

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE.
TO AVOID ELECTRICAL SHOCK, DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

DO NOT TOUCH THE LENS
CAUTION: INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS DEFEATED,
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

 
IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power plug from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightening storms or when unused for a long period of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Portable Cart Warning

LOCATION OF CONTROLS

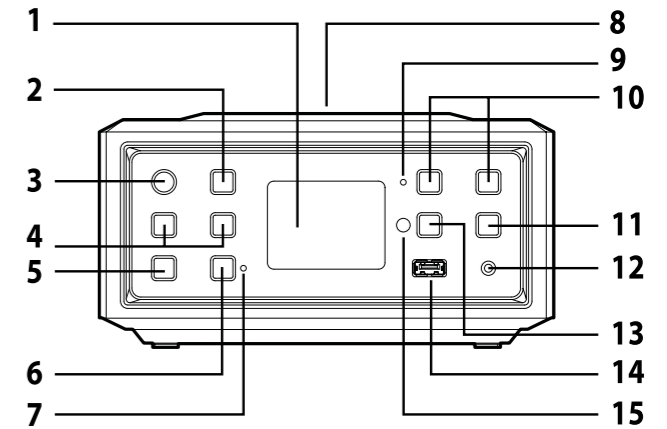


- | | |
|--|---|
| 1. DISPLAY | 9. Timer indicator |
| 2. FUNCTION button | 10. VOLUME +/- button |
| 3. STANDBY/ON button | 11. STOP button |
| 4. LEFT/RIGHT/TUNE - / + button | 12. Line in jack |
| 5. PROG/MEM button | 13. PLAY/PAUSE button |
| 6. PAIR button | 14. USB port (for charging only) |
| 7. Bluetooth® indicator | 15. Remote sensor |
| 8. CD Door | |

SYSTEM CONNECTIONS

SPEAKER CONNECTIONS

Connect the right speaker to the R terminal and the left speaker to the L terminal.

 NOTE: Connecting speakers other than the speakers supplied with the unit may damage the unit.

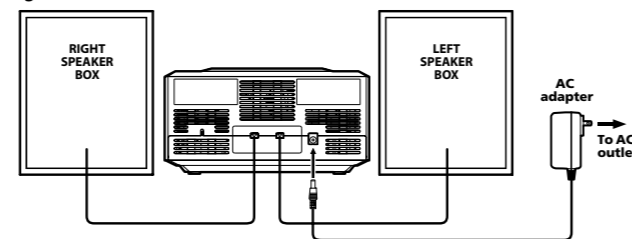

USING THE AC ADAPTER

Using an AC adapter other than the one supplied with the unit may damage the unit. This AC adapter operates on AC 100-240V ~ 50/60Hz.

CAUTIONS:

- Before use, ensure the rated voltage of the adapter matches your local voltage.
- The included AC adapter is for use with this unit only. Do not use it with other equipment.
- If you are not going to use the unit for a long time, disconnect the AC adapter from the wall outlet.
- Whenever the AC adapter is plugged in to a wall outlet, electricity is running through the unit, even when the power switch is turned off.

CHARGE YOUR SMARTPHONE/TABLET

You can charge your smartphone/tablet through the USB socket with a USB cable (not supplied).

- Connect a USB cable (not supplied) to the USB socket on the front of the unit and the dock connector on your smartphone/tablet.

LINE IN CONNECTION

CONNECTING TO LINE IN FOR OTHER SOUND SOURCES

You can connect audio devices such as your CD player or MP3 player to the unit via the LINE IN jack. To do this, connect an audio cable from the line out or headphone out jack of the other audio device to the LINE IN jack on the rear of unit. Press the **FUNCTION** button to switch to AUX mode.

Note: We recommend you unplug the device from the LINE IN jack when not in use.

CLOCK SETTING

Setting the clock can only be done in STANDBY mode.

- If the unit is plugged in with the supplied AC adapter and the unit is in standby mode.

- Press and hold the **PROG/MEM** button until the hour digits blink.



- Press the **LEFT/RIGHT** button to adjust the desired hours and press the **PROG/MEM** button once to confirm, then the minute digits blink.



- Press the **LEFT/RIGHT** button to adjust the desired minutes and press the **PROG/MEM** button once to start clock.



12:00 PM = NOON time, and "PM" appears.

LISTENING TO THE RADIO

- Press the **STANDBY/ON** button to turn the unit on.
 - Press the **FUNCTION** button to switch to TUNER mode.
 - Press the **LEFT/RIGHT** button to tune in to a station.
- Adjust the volume.

Searching for a Station Automatically

- Press and hold the **LEFT/RIGHT** button until the tuner starts searching for a station, then release. After tuning in a station, the search stops.
- The search may not stop at a station with a very weak signal.

Presetting Stations

The unit can store a total of 10 stations in memory. Presetting allows you to tune in to a station directly.

- Tune in to a desired station.
- Press the **PROG/MEM** button. The preset number will blink and the "MEM" indicator will be shown on the display.
- Press the **MEM.UP** button to select the preset number.
- Press the **PROG/MEM** button again to store it in memory.
- Repeat steps 1-4 to store other stations.

Tuning in to a Preset Station

Press the **MEM.UP** button to select a preset number.

For Better Reception

Fully unwind the antenna wire. Extend the antenna wire and place it in the position that sounds best.

Note: Do not connect the FM antenna to an outside antenna.

When the reception is good, the "STEREO" icon will appear on the display.

After listening to the radio, press the **STANDBY/ON** button to turn the unit off.

PLAYBACK VIA BLUETOOTH® ENABLED DEVICES

The unit can be paired and connected to the Bluetooth® enabled devices such as a smart phone.

Note : You must disconnect the LINE IN cable and device from the unit when you are ready to pair and connect your Bluetooth® device.

INITIAL DEVICE PAIRING AND CONNECTION

In order to pair and connect your Bluetooth® device for the first time:

1. Press the **STANDBY/ON** button to turn on the unit. Press the **FUNCTION** button to Blue mode and "b t" is shown on the display. The Bluetooth® indicator light glows blue and flashes which means the unit is in Bluetooth® mode and ready to pair.
2. Turn on the Bluetooth® device you wish to pair and connect.
3. Press and hold the **PAIR** button on the unit for 3 seconds. The Bluetooth® indicator light will start flashing rapidly which means it is pairing.
4. On your Bluetooth® enabled device, search for the "RS2929B" in the list of discovered devices and select it. It may take the unit and Bluetooth® enabled device a few seconds to pair.
5. When the Bluetooth® indicator glows a solid blue, the unit and the Bluetooth® enabled device are now paired and connected.
6. You can now enjoy audio from the unit.

Notes:

- If your Bluetooth device (e.g. Smart phone etc.) need the PIN code while pairing, please enter 4-digit number: 0000.
- The unit can only be connected to one Bluetooth® device at a time.

RECONNECTING A BLUETOOTH® ENABLED DEVICE

Bluetooth® enabled devices must be reconnected when the device has been turned off or the unit has been turned off.

1. Turn on the Bluetooth® device that has already been paired with the unit.
2. Press the **STANDBY/ON** button to turn on the unit. Press the **FUNCTION** button to Blue mode and "b t" is shown on the display. The Bluetooth® indicator light glows blue and starts flashing rapidly, and it auto searches for the last paired Bluetooth® device in memory.
3. Depending on your Bluetooth® device, your device may automatically connect to the unit. If the device does not automatically connect to the unit, press and hold the

TIMER SETTING

The timer function will turn the unit on at a preset time.

TO SET TIMER

1. In standby mode, press and hold the **TIMER** button on the remote control until the **TIMER** indicator blinks.
2. Press the **◀▶** button to adjust the desired hours and press the **TIMER** button once to confirm, then the minute digits blink.
3. Press the **◀▶** button to adjust the desired minutes and press the **TIMER** button once to confirm, then the **TUNER** indicator blinks.
4. Press the **◀▶** button to choose the unit will wake up to "CD" or "RADIO" when the timer reaches the preset time, then press the **TIMER** button once to confirm.
5. Press the **◀▶** button to adjust the volume, then press the **TIMER** button once to confirm. The "TIMER" indicator stops blinking and remains on.

- For RADIO alarm, first tune in to a desired station.
- For CD alarm, first press the CD button to CD mode and insert one CD into the unit.

TO CANCEL TIMER

- Press the **TIMER** button on the remote control twice and the "TIMER" indicator goes out.

SLEEP TIMER SETTING

The sleep timer automatically turns the unit off at a certain time.

1. While the unit is on, press the **SLEEP** button on the remote control and "00" appears on the display.
2. Press the **SLEEP** button repeatedly to select the desired sleep time as below:

0 FF → 9 0 → 8 0 → 7 0 → 6 0 → 5 0 → 4 0 → 3 0 → 2 0 → 1 0

3. After setting a desired sleep time, the "SLEEPzZz" appears on the display.
4. The unit will automatically turn off once it reaches the sleep time.
- To clear the preset sleep time press the **SLEEP** button on the remote control to select "0 FF" and the "SLEEPzZz" disappears on the display.

PLAYBACK VIA BLUETOOTH® ENABLED DEVICES

PAIR button on the unit for 3 seconds until the Bluetooth® indicator light starts flashing rapidly, then search for the "RS2929B" in its list of your Bluetooth® devices and select it.

4. Once the Bluetooth® indicator turns a solid blue, the Bluetooth® enabled device is paired and connected.
5. You can now enjoy audio from the unit.

PAIR AND CONNECT WITH ANOTHER NEW DEVICE

In order to pair the unit to a new device, you must first disconnect the currently paired and connected Bluetooth® device from the unit.

1. On the currently paired and connected Bluetooth® device, select the "RS2929B" from the list of currently paired and connected devices, and disconnect it. Please refer to your Bluetooth® enabled device User's Guide for direction on how to disconnect a device. Or turn off the Bluetooth® device.
2. Follow the Initial device pairing and connection instructions above.

PRESET EQ

This system supports a variety of equalizers and sound effects. During playback, press the **PRESET EQ** button to select a desired music mode. Each time the **PRESET EQ** button is pressed, the music mode will be changed to the next one as follows:

OFF → POP → roc (ROCK) → CLR (CLASSIC)



TROUBLESHOOTING GUIDE

PROBLEMS

BLUETOOTH®
Bluetooth® devices doesn't pair with this unit.

SOLUTIONS

- Make sure your Bluetooth® device is working properly.
- Make sure the source is Bluetooth® mode.
- Check your device's manual for details on Bluetooth® pairing and linking.

CD

Disc in place but unit won't play

- Make sure CD button is pressed.
- Make sure disc label is facing up.
- Make sure disc is clean.
- Pause mode is activated.
- Disc may be damaged or dirty; check disc.
- Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.

RADIO

Poor FM reception

- Make sure FM antenna wire is fully extended.
- Electrical interference in your home can cause poor reception. Move the unit away from them (especially those with motors and transformers).
- Rotate the unit horizontally.

OTHERS

System does not turn on

- Make sure AC adapter is secure in the outlet, and outlet has power.

No sound

- Make sure the current mode is correct.
- Make sure you've turned on the connected device, and music are being played back.
- Check if volume is set to zero.

Design and specifications are subject to change without notice.

CD PLAYBACK

1. Press the **STANDBY/ON** button to turn the unit on.
2. Press the **OPEN** knob to open the CD door. Place a disc in the center with the label side up and then close the CD door gently.
3. Press the **FUNCTION** button to CD mode and "--" is shown on the display. Then the total track no. is shown on the display.
4. Press the **PLAY/PAUSE** button to start playing.
- Adjust the volume.

To Pause Playback

- Press the **PLAY/PAUSE** button.
- To resume playback, press the **PLAY/PAUSE** button again.

To Stop Playback

- Press the **STOP** button.

Skipping to Another Track

- Press either the **◀▶** button according to the desired direction. Press the **◀** button to skip to the start of the current track or skip to previous tracks. Press the **▶** button to skip to the beginning of the next track.

Locating a Particular Point on a Track

- Keep either the or button pressed during playback, according to the desired direction, and release at the desired point.

REPEAT PLAYBACK

Repeat Current Track

- Press the **MEM.UP** button until "REP" blinks on the display. The current track will be played repeatedly.

Repeat the Entire CD

- Press the **MEM.UP** button until "REP" stops blinking and remains on. All tracks will be played repeatedly.

Cancel Playback Mode

- Press the **MEM.UP** button until "REP" disappears.

LIMITED WARRANTY

AVC MULTIMEDIA ("AVC") makes the following limited warranty. This limited warranty extends to the original consumer purchaser and is limited to non-commercial use of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at **AVC's** sole discretion.

During a period of one year from the effective warranty date, **AVC** will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our **Customer Support Center at 1-800-506-5746 or 1-877-252-6873, during the hours listed in the box below.** The determination of service will be made by **AVC** Customer Support. **PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION.** New or remanufactured replacements for defective parts or products will be used for repairs by **AVC** at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the **AVC** service facility you must use the original carton box and packing material or an equivalent as designated by **AVC**.

Your Responsibility

- (1) You must retain the original sale receipt to provide proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- (3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of **AVC**, or to products or parts thereof which have had the serial number removed or changed.

RANDOM PLAYBACK

All tracks on the disc can be played in random order (Using the remote control only).

Random Playback

- Press the **RANDOM** button on the remote control until "r" appears on the display. All tracks will be played randomly. After all tracks have played, the unit will stop automatically.

Cancel Random Playback

- Press the **RANDOM** button on the remote control until "r" disappears. The unit will return to normal playback.

PROGRAMMABLE CD PLAYBACK

A program of up to 20 tracks can be set to play in a preset order.

1. In CD stop mode, press the **PROG/MEM** button and the "MEM" & "P 1" will blink on the display.
2. Press the **◀▶** button to select the desired track and press the **PROG/MEM** button to store the track in memory.
3. To add additional tracks, repeat step 2 (up to 20 tracks).
4. To start playback, press the **PLAY/PAUSE** button.

To check the program:

- Press the **PLAY/PAUSE** button and the **▶▶** button. Each time the **▶▶** button is pressed, the track number appears on the display.

To change the programmed tracks during program playback:

- Press the **STOP** button and press the **PROG/MEM** button repeatedly to search the program number, then press either the **◀** or **▶** button to select the desired track. Press the **PROG/MEM** button again to register the newly selected track into program.

To erase the whole program, do one of the following:

- Press the **FUNCTION** button to the other mode.
- Press the **STOP** button and open the CD door.

LIMITED WARRANTY

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1-800-506-5746, 1-877-252-6873 or www.RCAav.com**
Hours: Monday–Thursday: 9am–7pm, Friday: 9am–5pm, Saturday: 9am–NOON Eastern time.
Important: You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall **AVC** be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **AVC** arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please visit our web site at **www.RCAav.com**
Important: Also keep your "Bill of Sale" as proof of purchase.

Model no Product name
Type of set Serial no
Invoice no Date purchased

Dealer name

FOR SERVICE AND REPAIR, PLEASE VISIT **www.RCAav.com**

Specifications and external appearance are subject to change without notice.

© 2013 AVC MULTIMEDIA