 


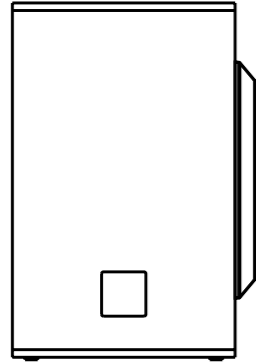


SUBWOOFER
SBT1739-SWE
USER MANUAL



It is important to read this instruction book prior to using your new product for the first time.

 LOCATION OF CONTROLS

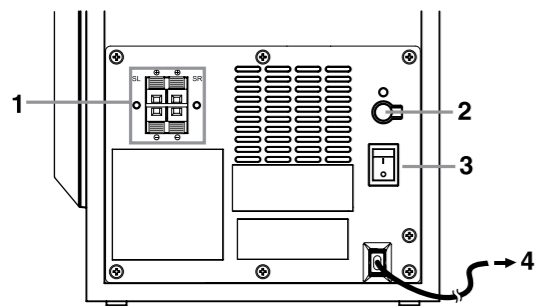

1. Rear speakers terminal
2. Wireless link button/
Wireless link pairing indicator
3. Power switch
4. Power cord to wall outlet

SAFETY INSTRUCTIONS

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this user manual.

WARNING: THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON APPARATUS.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE APPLIANCE TO RAIN OR MOISTURE.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

CAUTION: TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF POWER OUTLET, THEN FULLY INSERT.

The symbol for Class II (Double Insulation)

ON PLACEMENT

- Do not use the unit in places that are extremely hot, cold, dusty, or humid.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.

ON SAFETY

- When connecting or disconnecting the AC power cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.
- No naked flame sources such as lighted candles should be placed on the AC power cord and the unit.
- Leave a minimum of 10 cm around the apparatus for ventilation.
- Attention should be drawn to the environmental aspects of battery disposal.
- Use of apparatus in moderate climates.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room and let the unit dry before use.

RATING PLATE LOCATION

- The rating plate is located at the rear of unit.

WARNING:

- Should any trouble occur, disconnect the AC power cord and refer servicing to a qualified technician.
- Mains plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the mains plug of the apparatus shall be disconnected from the mains socket outlet completely.

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS

 
1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type. A polarized power plug has two blades with one wider than the other. A grounding type power plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided power cord does not fit into your AC power outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the AC power cord from being walked on or pinched particularly at the power plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the AC power cord is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CONNECTIONS

CONNECT THE LEFT/RIGHT REAR SPEAKERS

Connect the speaker wire from the back of each speaker to the corresponding terminal at the back of the Wireless Subwoofer. Press down the tab to open the terminal and insert the wire. Release the tab to lock wire in the terminal.

Note:
When connecting the speakers, make sure speaker wires connect to correct terminals as shown below. If the cords are reversed, the sound will be distorted.

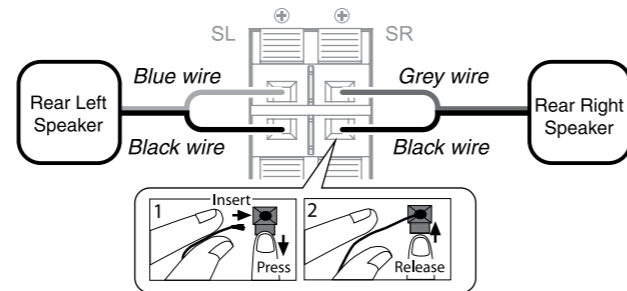

CONNECT THE WIRELESS SUBWOOFER

In order to use the subwoofer, you must pair it with the Soundbar RTS739BWS.

1. Connect the power cord to a wall outlet.
2. Turn on the Soundbar.
3. Turn the POWER switch on the back of the subwoofer to ON "I" position.
4. The Soundbar and the subwoofer will automatically pair up. The wireless link pairing indicator will turn red when the wireless link is activated.

PLACEMENT

POSITIONING SPEAKERS

SUBWOOFER

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.).

It is not recommended to place the subwoofer near the TV set. Place the subwoofer at least 12" away from the TV.

REAR SPEAKERS (SURROUND SPEAKERS)

Place Surround speakers to either side of the listening area, not behind it and if space permits, install Surround speakers 2-3 feet above viewers. This help to minimize localization effects.

