

HPR Series Usage Instructions



Regularity Notices and Conformity



Information to the user (FCC Part 15.105)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Modification warning (FCC Part 15.21)

Warning: Any changes or modifications not expressly approved by Aleis could void the user's authority to operate this equipment.

The following antennas are approved to be used with this device:

Biomark Handheld 7" Loop Antenna, Model number HPR-ANT

Canada

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Contents

The Reader	Page 4
Equipment Supplied	Page 6
Charging the Reader	Page 6
Connecting the Accessories	Page 6
Switching the Reader On/Off	Page 6
Reading RFID Tags	Page 7
Testing the Unit	Page 7
Customizing the Reader	Page 8
Viewing Tag Numbers	Page 10
Deleting Tags	Page 11
Coping Tag Numbers	Page 11
Using Bluetooth	Page 11

The Reader



Reader



Reader End



Desk Stand Attached



Antenna

Equipment Supplied

1. Biomark HPR Unit, (the Reader)
2. Biomark HPR Loop Antenna
3. Fish-Shaped FDX RFID Test Tag
4. AC to DC Adapter (Elpac Power Systems)
5. 2m Antenna Cable
6. 2m USB Cable
7. USB Stick with PC Application
8. Desk Stand
9. 0.5m USB Cable for Memory Stick

Charging the Reader

Plug the AC charger into the center plug on the end of the Reader.
Connect to AC power.

The battery charge indicator will light orange while the battery is charging, and change to green once the battery is charged.

Connecting the Accessories

The unit should be connected to the loop antenna with the supplied cable. The threaded locking collets should be fully screwed onto their mating connectors. Depending on what is required, the unit can also be connected to a USB port on a PC, or USB Flash Drive.

Switching the Reader On and Off

The unit can be powered on by any of the following methods:

 
1. Connecting the unit to the AC Adapter
2. Connecting the unit to the USB Port on a PC
3. Holding the OK button for more than 1 second.

NOTE: Once the unit has been powered up, it will take around 30 seconds to boot into the software.

The unit can be powered off by holding the OK button for more than 1 second. A menu will pop up asking the user to confirm the shutdown. In the event of a software crash, the unit can be forced off by holding the OK button down for longer than 10 seconds.

Reading RFID tags with the Reader

The reading is automatically started when the unit is powered up and stopped by pushing the "Stop" button on the device. The text at the top of the display will toggle between "Reading" and "Standby" when the " Stop/Read" button is pressed.

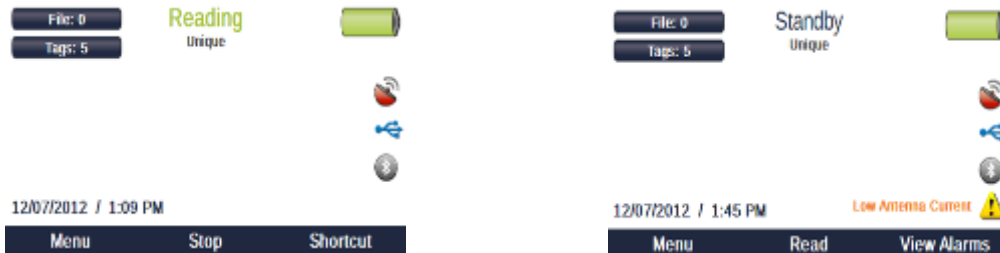

NOTE: If the AC Adapter isn't connected to the unit, a fully charged battery will run flat after approximately 3 hours of continuously being in READING mode.

Testing The Unit

 
The supplied Fish RFID Test Tag can be placed near the loop antenna to verify correct operation of the unit. When the RFID tag is placed on-axis (fish pointing into the loop), the tag should have read range of approximately 10cm from the centre of the loop. The unit will beep and the tag read indicator will flash blue while the tag is being read.

NOTE: The antenna and tag must not be placed on or near any metallic object while reading, as this will significantly reduce the tag read range.




To Customize Your Reader


- Press Stop Key if Reader is in “Reading” mode.
- Press Menu key.

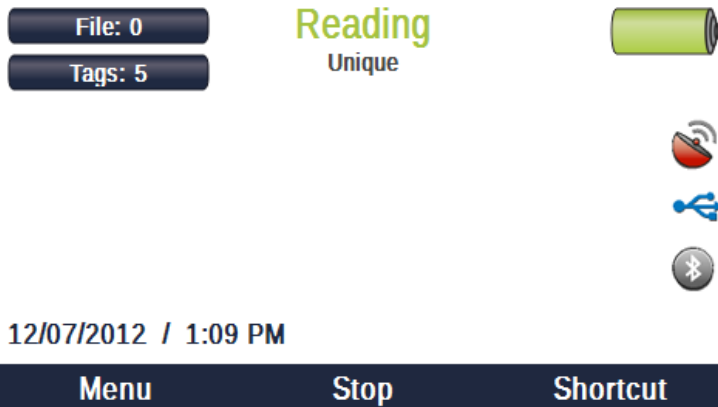

- Press Up Arrow for Settings.

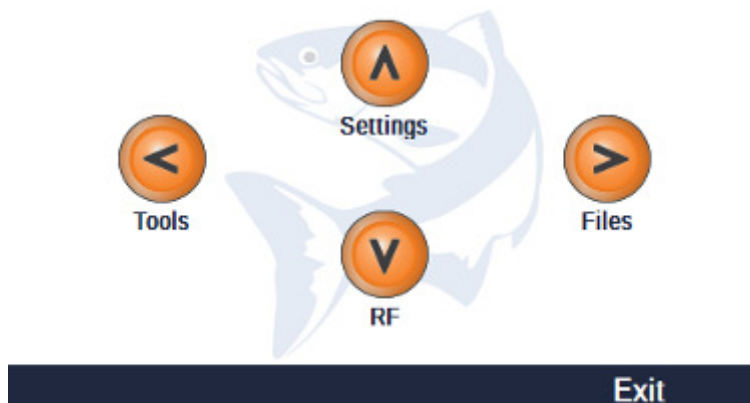 


- Press Up Arrow for Device.

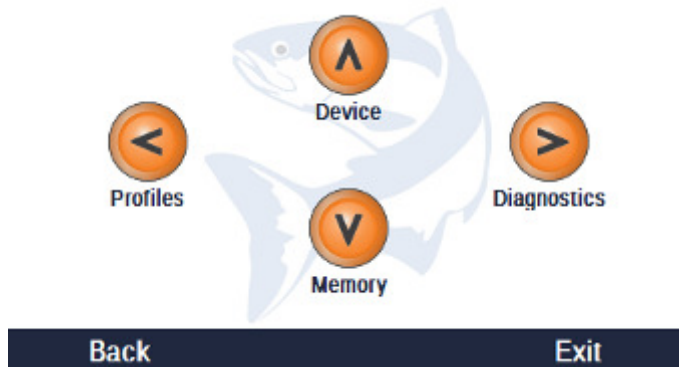 


Areas which can be customized are:

 - Reader ID
- Time zone
- Backlight Brightness
- Beep Volume
- Auto Sleep Time
- Auto Shutdown Time
- Timestamp Format
- Tag Format
- Bluetooth Enable
- Bluetooth Password
- Charge Current

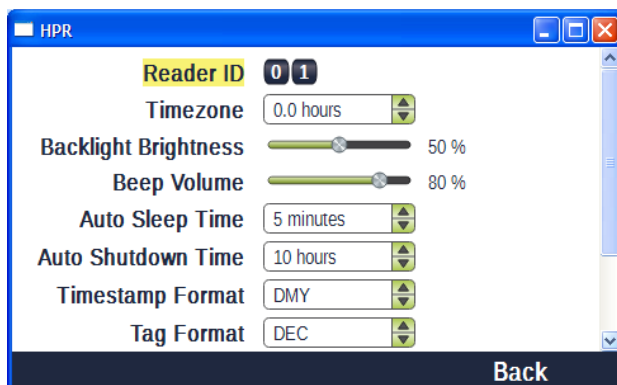


11

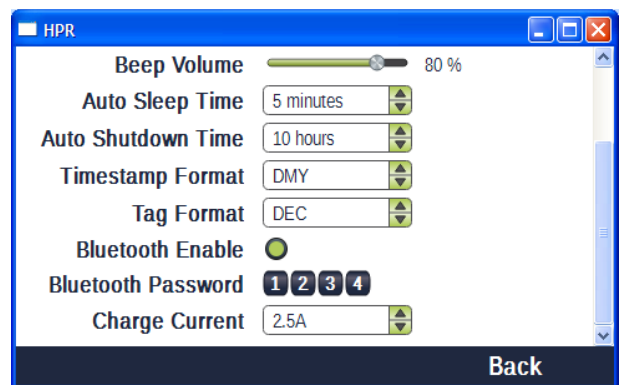 

To View Tag Numbers

- Goto Menu.
- Files.
- Use Up/Down Arrows to Select File.
- Press Actions.
- Pop Box will appear.

 Using arrow keys select View Tags

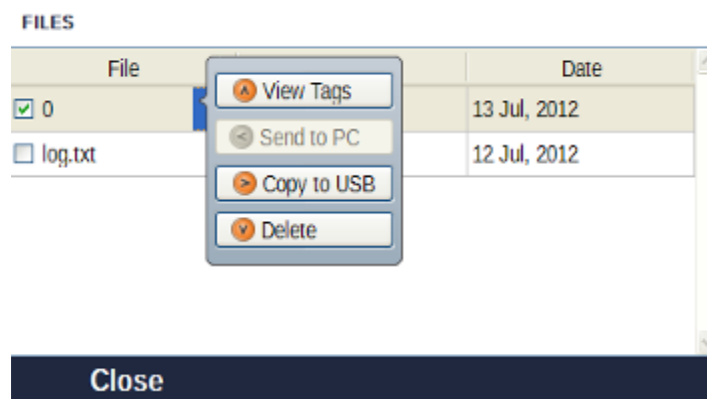

All Tags in this file will be displayed.

TAG BROWSER

	RFID	Timestamp	Type	Geo
1	982000041697548	12-07-2012 11:15:29	HDX	<input checked="" type="checkbox"/>
2	000000123456789	12-07-2012 11:21:06	HDX	<input type="checkbox"/>
3	982000041697548	12-07-2012 11:21:38	HDX	<input checked="" type="checkbox"/>
4	982000041697548	12-07-2012 11:28:05	HDX	<input checked="" type="checkbox"/>
5	000001234567890	12-07-2012 12:07:29	HDX	<input type="checkbox"/>
6	000000000000000	13-07-2012 11:27:21	HDX	<input type="checkbox"/>

Back

To Delete Tags

Use down arrow "Delete". A message "Are you sure you want to delete Tag File ##?" will appear. This will delete ALL tag numbers in this file.

To Copy Tag Numbers to USB

Plug USB into cable then plug cable into Reader. Use right arrow to select "Copy to USB". This will copy all tags in this file to USB.

To Copy Tag Numbers to Computer

Run the HPR-PC software.

Plug Reader into computer via USB port (or Bluetooth). Use left arrow to select "Copy to Computer". This will copy all tags in this file to computer.

Using the Bluetooth

1. Use whatever Bluetooth software is installed in the PC to pair with the device. It will be named "HPR-*ID*", where *ID* is the Reader's ID. The password is the number set in "Menu/Settings/Device" on the Reader.
2. Ensure that the Bluetooth software has assigned a COM port to the device and note the number.
3. Run the HPR-PC software.
4. Select the appropriate COM port from the listed ports under the "Bluetooth" heading.
5. When a tag is read with the device, the tag number will be displayed.