# Attenti One Piece GPS Offender Tracking Device 4 with Beacon User Manual

**January 16, 2018** 



Copyright ©2018 Attenti. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Attenti.

The information in this document is subject to change without notice. The software mentioned in this document is furnished under license and may only be used or copied in accordance with the terms of such license. Contact software manufacturers directly for terms of software licenses for any software mentioned in this document not originating from Attenti.

All brand or product names are the trademarks or registered trademarks of their respective holders.



#### SAFETY INFORMATION

Please read, understand, and follow all safety information contained in these instructions prior to the use of this Attenti device. Retain these instructions for future reference.

#### Intended Use:

This Attenti device is part of an electronic monitoring system, which performs data transfer using cellular network to a monitoring platform. This device has not been tested for and is not intended for use on airplanes, in hazardous environments, in healthcare facilities, or where cellular phones or other intentional transmitters are restricted.

Explanation of Signal Word Consequences	
MARNING:	Indicates a hazardous situation which, if not avoided, could result in serious injury or death
📤 CAUTION:	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury and/or property damage.
NOTICE:	Indicates a situation which, if not avoided, could result in property damage.

Safety information for <u>Trained Customer</u> (e.g., officer, agency representative, ministry of justice) and <u>Offender.</u>



#### WARNING

• Avoid placing a device next to an implanted electronic device (e.g., don't carry the device in a shirt or jacket pocket directly near an implanted device).

#### • To reduce the risks associated with fire or explosion:

- Do not intentionally open or damage the device.
- Do not enter areas with potentially explosive atmosphere. Potentially explosive areas are often, but not always, clearly marked.

#### To reduce the risks associated with hazardous voltage:

- Do not modify AC/DC power adapter plug.
- Do not force the power plug into an outlet where it does not fit.
- Use only a Attenti provided power adapter to recharge or power the device.
- Do not unplug AC/DC adapter by power cord. Handle the adapter by the body only.
- Do not modify, decorate, or attempt to service the device. Return to Attenti authorized personnel or location for repair or service. There are no user serviceable parts.
- Do not attempt to charge the device using an outdoor outlet. Only use the AC/DC adapter indoors.
- Do not expose power adapter to rain, steam or wet conditions.





- To reduce the risks associated with hot surfaces:
  - Do not touch thermal pads on device or charger if charging is interrupted.

Safety information for <u>Trained Customer</u> only.



- To reduce the risks associated with fire or explosion:
  - Do not attempt to access or replace battery. Battery is not user-replaceable. The device shall be opened by Attenti authorized service only.
  - Ensure storage temperature of device is within the range as specified in device manual.



- To reduce the risks associated with sharp points:
  - Use caution when handling pin trays.

Safety information for Offender only.



#### WARNING

- To reduce the risks associated with fire or explosion:
  - Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
  - Do not use device outside of the operation temperature range specified in device manual.
     Contact the agency representative from which you are monitored to get operation temperature range.
- To reduce the risks associated with hazardous voltage:
  - If the device or power cord becomes damaged, contact the agency representative from which you are monitored.

#### NOTICE

• Only authorized personnel can turn off or remove the device.



## **Table of Contents**

1 Piece Tracking Device 4 (TD4) with Beacon Overview5
1 Piece (TD4) Features 6
1 Piece (TD4) Operating Features7
Communication
LEDs9
Beacon Overview
Beacon Operating Features
Enrollment
Enroll a Contact
Contact Information Page20
Enroll an Offender
Supervision Level
Map Offender's Address
Offender General Information Page
Create Home Inclusion Zone Schedule28
Create Exclusion Zone
Attaching the 1 Piece (TD4)36
Unassigning Hardware41
Removing the 1 Piece (TD4)45
1 Piece (TD4) Self Test47
Appendix48
Rule Definitions



# 1 Piece Tracking Device 4 with Beacon Overview

Attenti's One-Piece GPS Offender Tracking Device 4 (TD4) utilizes GPS satellites to establish an offender's location and uses cellular networks to transmit the location data to Attenti. It is a one-piece device that is worn on an offender's ankle and is able to function in active and passive mode.

The Beacon is an optional home unit placed in an offender's home which communicates with a 1 Piece through radio frequency. This ensures the offender is within range of the Beacon during a scheduled home curfew. The home unit will also act as a beacon to display when the offender is in the "home" or "away" status.





<u>Battery Life:</u> The device should be given a full charge (4.2 volts) to supply a full day of battery life. It takes approximately 2 to 2½ hours to acquire a full charge. The battery will last approximately 24-30 hours if fully charged. The daily life of the battery is dependent upon the call-in interval of the device, how often it goes to rest, and how many violations are created. The battery must be charged each day in order to continue to track your offender's locations.

Note: Battery tests are conducted using specific Attenti devices in controlled testing environments. Actual performance and results may be affected by cellular network, location, signal strength, feature configuration, usage, and many other factors. Battery life and charge cycles vary by use and settings.

<u>Vibrate feature:</u> The 1 Piece (TD4) device will vibrate upon violation and when the device receives an alert from the officer. If the offender causes a violation, the 1 Piece (TD4) will vibrate three times consecutively and once every ten minutes until they clear the violation.

If the officer sends the offender a notification (an alert) to contact them, the 1 Piece (TD4) will vibrate for ten consecutive seconds. As soon as the offender acknowledges the notification, the vibration will stop. All three LED lights will be flashing red to indicate that the offender needs to acknowledge the officer's notification. If the offender doesn't acknowledge the notification, then every ten minutes it will vibrate once until they acknowledge the notification.

Storing GPS Points: The 1 Piece (TD4) will store an offender's location (GPS point) when in motion (moving) every minute. If the 1 Piece (TD4) does not experience any motion for two consecutive minutes, the 1 Piece (TD4) will go to "rest" and collect a GPS point every hour instead of each minute. As soon as any motion is generated, the 1 Piece (TD4) will resume recording points on a minute-to-minute basis. However, if the offender causes a geographic zone violation, the 1 Piece (TD4) will begin to store a point every 15 seconds.

<u>Call-in intervals:</u> The 1 Piece (TD4) will contact Attenti every hour while in active mode and every six hours while in passive mode. While in active mode, it will also contact Attenti immediately upon violation.

<u>Automatic Redial:</u> If the 1 Piece (TD4) is unable to communicate with Attenti because of poor cellular coverage, it will continue to try to call and download its information until it is successful.

**Waterproof:** The 1 Piece (TD4) is waterproof down to 66 feet.



# 1 Piece (TD4) Operating Features, Cont.

**Rubber strap**: The 1 Piece (TD4) strap is designed to last nine months to one year.

<u>Magnetized Charger</u>: The 1 Piece (TD4) has a magnetized charger to prevent an accidental disconnect when the battery is being recharged.





## **Communication**

The 1 Piece (TD4) has a SIM card, which is similar to the data transmitter/receiver found in most cellular phones. The 1 Piece (TD4) uses the SIM card to transmit and download the GPS points it has received to Attenti's servers. The call-in intervals vary, depending on whether or not the 1 Piece (TD4) is in active mode or passive mode. The differences between the two modes are explained below:

#### Active Mode:

- The standard 1 Piece (TD4) call-in interval is once every hour while in compliance.
- The 1 Piece (TD4) will call Attenti as soon as a violation occurs. Note: The call-in intervals can be adjusted.

#### Passive Mode:

- The standard 1 Piece (TD4) call-in interval is once every six hours.
- The 1 Piece (TD4) will not call Attenti when a violation occurs. The officer will only be made aware of violations when they view the GPS maps or the Daily Event Summary Report (DESR) that is emailed to the officer.
- Violations will also be displayed in Case Management and on the Offender Monitor.



## **LEDs**

There are three LEDs on the top of the 1 Piece (TD4), identified as **Power**, **GPS**, and **Zone**. The three LEDs work separately and provide the offender with information. The 1 Piece (TD4) will vibrate to provide an indication that the offender must look at the LEDs.





## **LEDs**

#### **Power**

This LED indicates the condition of the 1 Piece battery.

#### **Prior to Activation:**

Before activating the device, the officer should conduct a battery test. To do this, simply hold down the silver activation button for three seconds and observe the condition of the Battery LED.

- If the "PWR" LED is green, there is a sufficient charge to activate the 1 Piece.
- If the "PWR" LED is red, or does not light up at all, the 1 Piece needs to be charged.

#### **After Activation:**

- If the "PWR" LED is blinking green, there is a sufficient charge.
- If the "PWR" LED is blinking red, the 1 Piece needs to be charged.

#### 1 Piece on Charger:

When the 1 Piece is connected to the charger, the Power LED will be solid (not flashing) green or red.

- If the LED is red: The 1 Piece is **not fully charged** and should not be disconnected from the charger
- If the LED is **green**: The 1 Piece battery **has been completely charged** and the charger may be disconnected
- When the 1 Piece is connected to the charger, it will vibrate once indicating a good connection. When the battery is fully charged, the 1 Piece will vibrate once indicating that it is okay to remove from the charger.



# 1 Piece (TD4) Operating Features, cont.

## **LEDs**

#### <u>GPS</u>

## Officer:

• During activation, the officer will see this LED flashing green in unison with the flashing "Zone" LED.

## Offender:

- In normal conditions, the GPS LED will be off.
- The offender will see this LED flashing **red** to indicate a Motion No GPS warning or violation. When the violation has cleared, the LED will stop blinking.



# 1 Piece (TD4) Operating Features, cont.

## **LEDs**

## **Zone**

## Officer:

• During activation, the officer will see this LED flashing green in unison with the flashing "GPS" LED.

## Offender:

- In normal conditions, the Zone LED will be off.
- The offender will see this LED flashing **red** to indicate an Inclusion or Exclusion Zone warning and/or violation. When the violation has been cleared, the LED will stop blinking.



## **Beacon Overview**

- Radio Frequency communication with 1 Piece (TD4).
- Adjustable ranges: The default range between the Beacon and the 1 Piece (TD4) is up to 150 feet (high). The range can be adjusted to medium: up to 100 ft. and low: up to 50 feet. All ranges are approximate and based on environmental conditions.
- 24 Hour Backup Battery.
- Battery backup takes 4 hours to recharge.
- The Power LED indicates that the Beacon is on and functioning properly.
- If the LED is not lit, the device has not received power from a wall outlet for more than twenty-four hours and the backup battery has died. The device must be plugged in immediately.
- Motion Sensor.





## **Beacon Operating Features**

#### **Home/Away Status**





When the 1 Piece (TD4) is in range of the Beacon, it will start receiving signals from the Beacon and will record a "Home" status. The 1 Piece (TD4) will remain in the "Home" status until it is taken out of range of the Beacon.

When the 1 Piece (TD4) is taken out of range of the Beacon, it will stop receiving signals from the Beacon. When the 1 Piece (TD4) is out of range for **five** consecutive minutes, it will record an "Away" status.

Note: The "Home" status indicates that the 1 Piece (TD4) is within range of the Beacon. The "Away" status indicates that the 1 Piece (TD4) is not within range of the Beacon.

#### **GPS Off/No GPS Icons**





When the 1 Piece (TD4) is within range of the Beacon, in the "Home" Status, for **two** consecutive minutes, GPS will be turned off. While GPS is turned off, an icon will appear on the EM Manager (Smart View) map in place of the "No GPS" icon. The icon will read "GPS Off."

GPS will be reacquired when the offender moves out of range of the Beacon for **one** minute or when a Base Location Un-trusted or A/C Power Loss violation has been generated.

While the offender is in the "Away" status, if the offender loses GPS, the "No GPS" icon will appear on the EM Manager (Smart View) map.



# **Beacon Operating Features, Cont.**

## A/C Power Loss/Base Location Un-Trusted

If the A/C Power or the Base Location Un-Trusted violations occur during the "Home" status:

The 1 Piece (TD4)'s GPS will turn back on. After 60 minutes, the 1 Piece (TD4) will check to see if the violation has been cleared. If the violation has cleared, the GPS will turn off. If the violation has not cleared, the GPS will stay on and the 1 Piece (TD4) will continue to check the status of the violation every hour until the violation clears.



## **Enrollment**

## **EM Manager (Smart View) Log In**

To access the secure website, go to <a href="https://smartview.ptm.com">https://smartview.ptm.com</a>. You will be required to enter a user ID and password. When using EM Manager (Smart\* View) for the first time, you will create your own password. Enter your User ID (often your three initials and last four digits of your social security number), the temporary password that was emailed to you, and click OK. The next screen will tell you that your password has expired. Create your password, (the password you select must contain at least 8 characters), and click OK. You will now be logged into EM Manager (Smart View.)

Note: If you forget your password, click the *Forgot Password* link. A new temporary password will be emailed to you. To create your new password, follow the instructions contained within the email.






## **Enroll a Contact**


The *Enroll Contact* link is located on the left side of the Home page (see below). It is here that you will enter the officer's information (name, address, phone number, etc.), report types, and default notification settings.

- 1. Click the Enroll Contact link on the left side of the Home page.
- 2. You will be redirected to the Enroll Contact page (see below). Enter all Contact information.
- 3. Click Save.

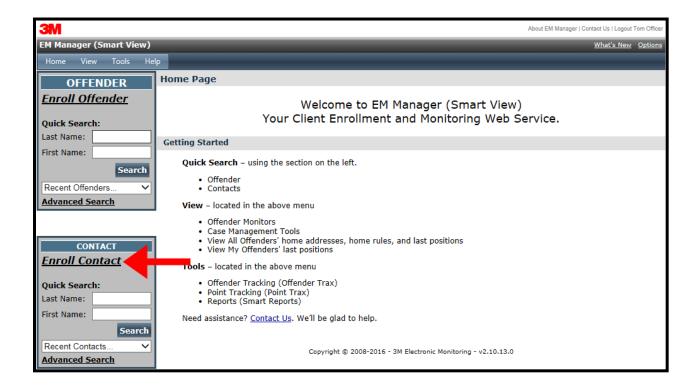



# **Enroll a Contact, Cont.**

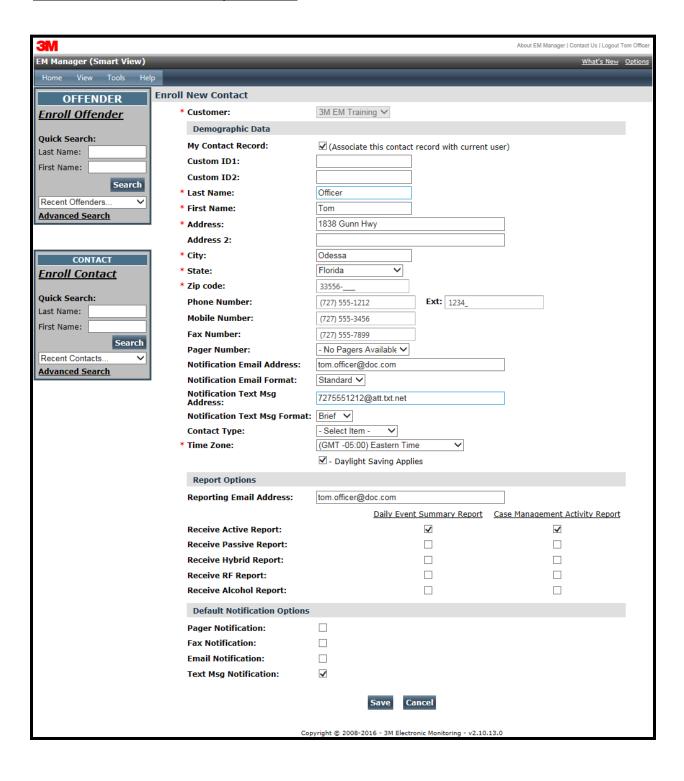



# **Enroll a Contact, Cont.**

## **Demographic Data**

Enter the Contact's information.

• All fields with red asterisks (\*) are required fields.

#### **Report Options**

Enter an email address where the selected reports will be sent.

Choose Daily Violation Summary Report and/or Case Management Activity Report.

## **Default Notification Options**

Select the type of Notification you would like to be your default method. The notification method is dependent upon the information that you enter into the Notification Email or Text Message fields.

- Pager
- Fax
- E-mail
- Text Message

#### **Finish Enrollment**


When you have completed the form, click **Save**.



## **Contact Information Page**

When you click **Save**, you will be taken to the Contact Information page (see below). Here, you can edit the contact information, as well as disable the contact.

- 1. To edit the contact information, move your cursor over the Contact Functions menu and left click Edit.
- 2. To disable the contact, move your cursor over the Contact Functions menu and left click Disable Contact.

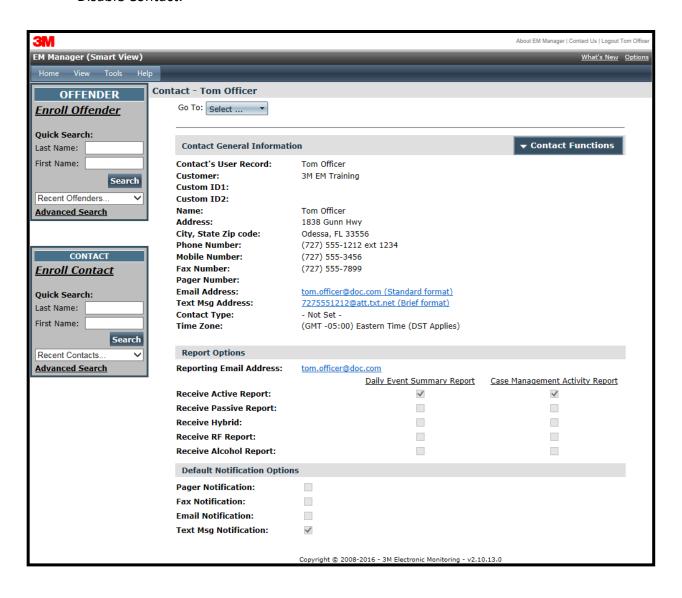




## **Enroll an Offender**

The Enroll Offender link is located on the left side of the Home page (see below).

1. Click the Enroll Offender link.

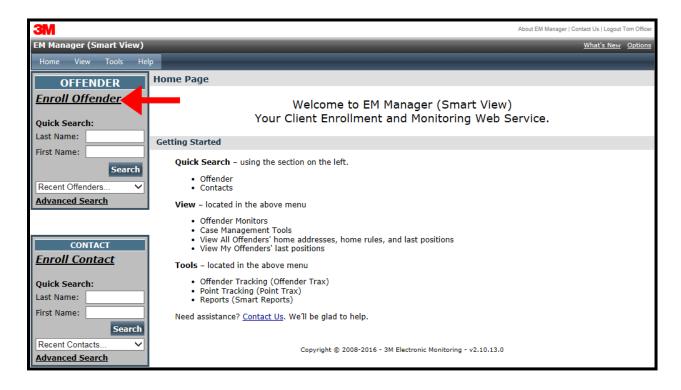




# **Supervision Level**

Clicking on the *Enroll Offender* link will redirect you to the Level of Supervision page (see below).


- 1. Click on the Level of Supervision drop down menu.
- 2. Select the Level of Supervision (see below).
- 3. Click the Continue button.

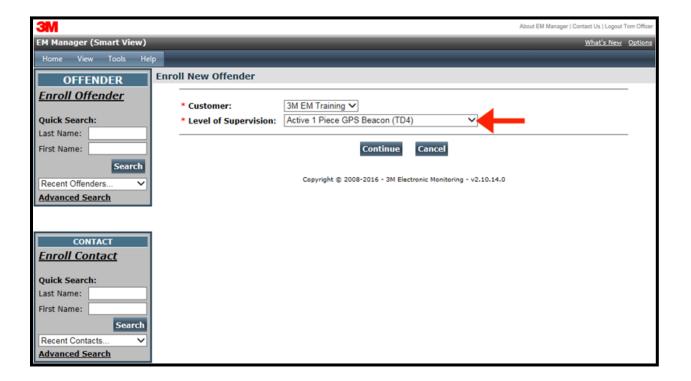



## **Offender Enrollment**

After selecting the Level of Supervision, you will be redirected to the Enroll Offender page (see below). It is here that you will select an Assigned Officer, enter the Offender's Information, select the Notification Contact and Method, Assign Hardware, and select the Basic Rule Setup.

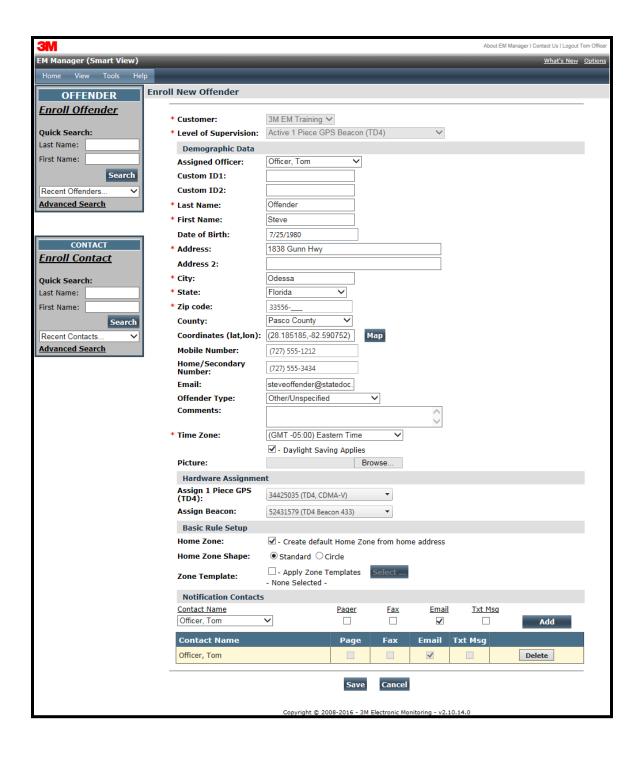



## Offender Enrollment, Cont.

## **Demographic Data**

- 1. Enter the Offender's Information.
  - All fields with red asterisks (\*) are required fields
- 2. Click the **Map** button to geo-code the offender's address.
- 3. Select the Offender Type.
- 4. Select the Time Zone.

#### **Hardware Assignment**

- 5. Locate the serial number on the device(s).
- 6. Click on the drop down menu and select that serial number for the device.

#### **Basic Rule Setup**

- 7. Do **NOT** check the box next to Home Zone in the Basic Rule Set Up. No home zone is needed if a Beacon is being utilized.
- 8. Choose the appropriate Contact from the Notification Contact drop down list. The selected Contact will be notified for **all** rules.
- 9. Click the **Add** button.
- 10. Select the type of Notification (if you haven't chosen your Default Notification Method on your Contact record)
  - Pager
  - Fax
  - E-mail
  - Text Message


#### **Finish Enrollment**

11. When you have completed entering the information, click **Save**.



# **Map Offender's Address**


Clicking the **Map** button on the Offender Enrollment screen will generate a map that displays a pushpin at the offender's residence. Ensure that the pushpin location is correct and click the **Submit** button. It is also possible to edit the location by clicking the **Edit Pushpin** button.

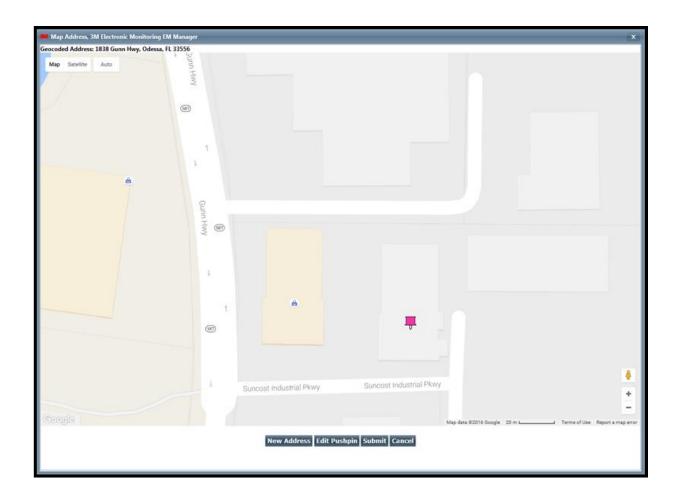



## **Offender General Information Page**


When Enrollment has been completed, you will be redirected to the Offender General Information page (see below). Here, you can Edit Offender Information, Disable the Offender, View GPS Points, Unassign Hardware, Edit Rules, Send Alerts, and Download Points.

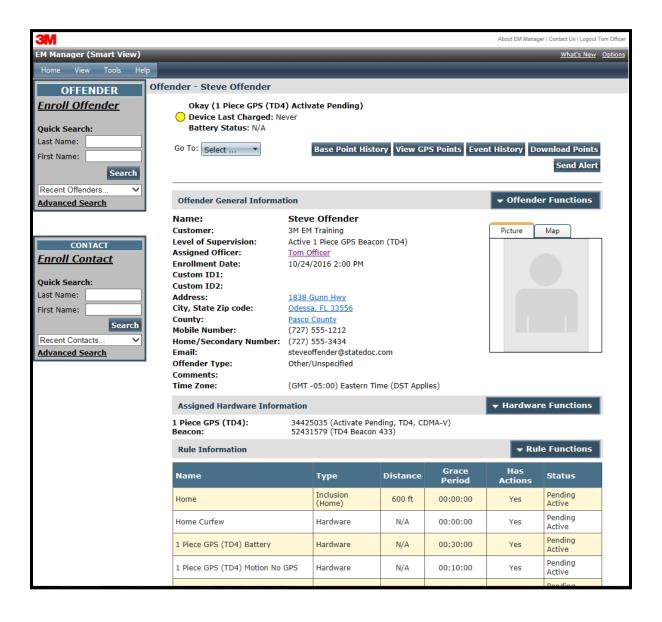



## **Create Schedule for Home Inclusion Zone**


1. Click on the Home Curfew Rule (see below).

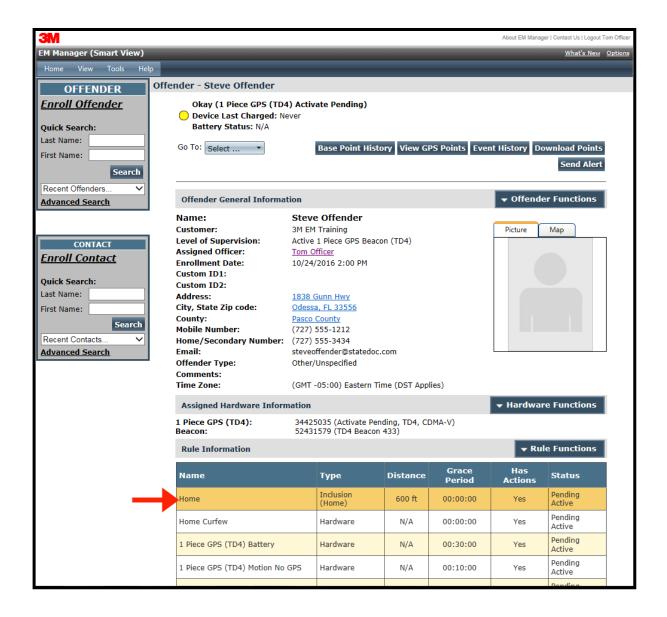



## **Create Schedule for Home Inclusion Zone, Cont.**


2. Move your cursor over the Rule Functions menu and left click Edit.

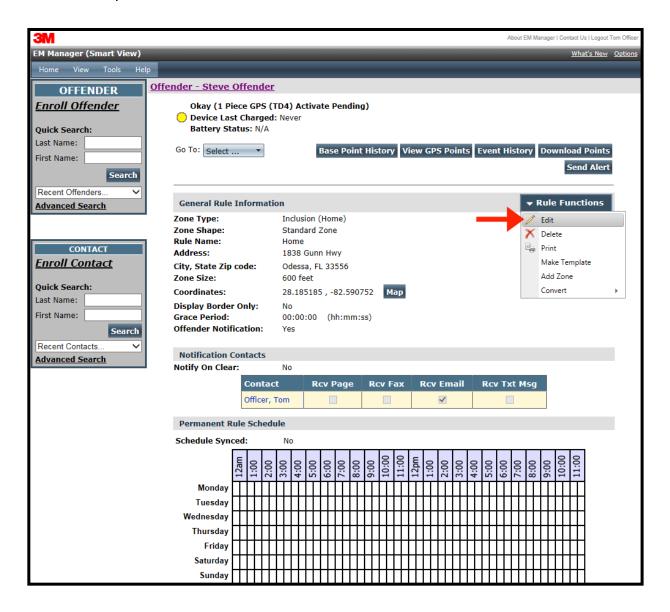



## **Create Schedule for Home Inclusion Zone, Cont.**


3. You will be redirected to the Edit Rule page. Scroll down to the Permanent Rule Schedule.

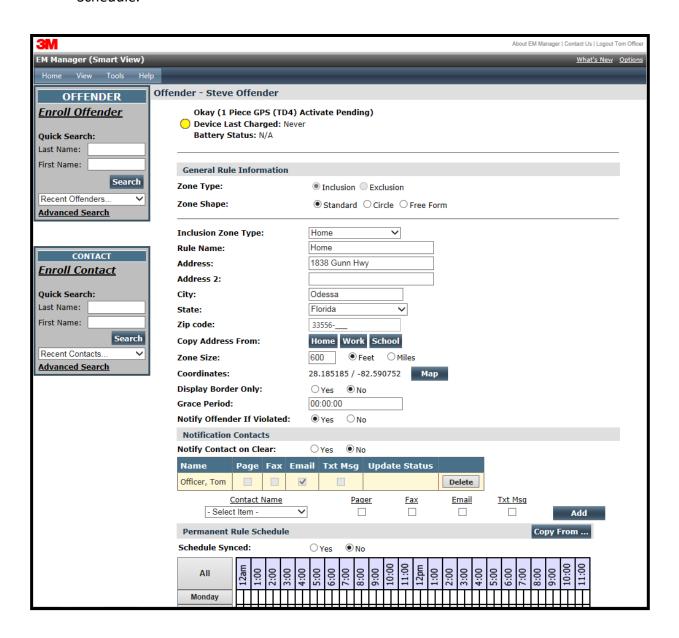



## **Create Schedule for Home Inclusion Zone, Cont.**

- 4. Each block represents a 30 minute increment of time. Left-click and drag the cursor along the blocks during the times that the offender is required to be home. As you move the cursor, the blocks will turn blue. The white blocks that remain equal the times that the offender is allowed to be out of the home (see below).
- 5. Click the **Save** button.

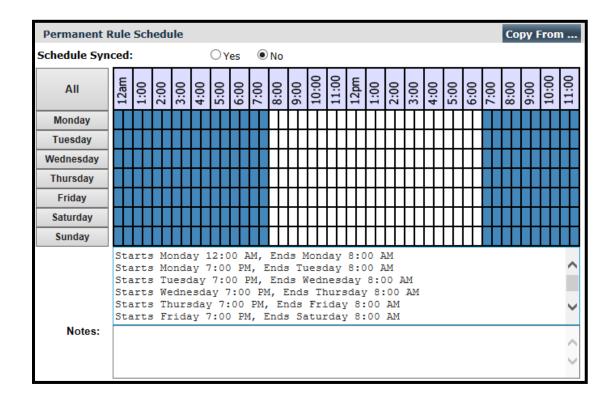




## **Create Exclusion Zone**

You can create an Exclusion Rule to ensure that the offender is not entering areas which are forbidden – such as schools, playgrounds, and victims' residences.


- 1. Move your cursor over the Rule Functions menu (see below).
- 2. Left click Add Zone.

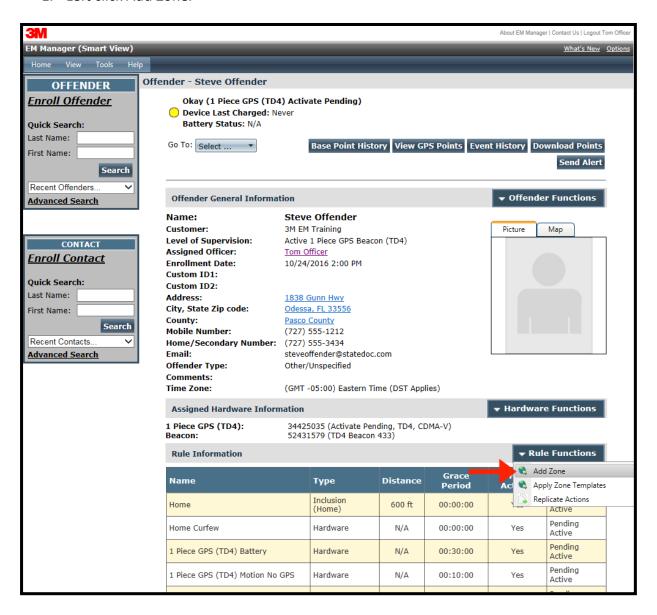



# **Create Exclusion Zone, Cont.**


- 3. Choose a Zone Shape.
- 4. Choose Exclusion as the Zone Type.
- 5. Click the Continue button.

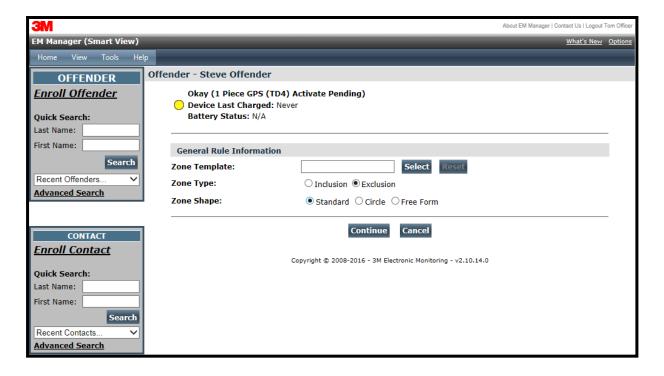



## **Create Exclusion Zone, Cont.**


- 6. Enter the Rule Name (school, playground, etc.).
- 7. Enter the address information and the zone size. The default is 600 ft.
- 8. Select Yes or No if you want to notify the offender upon violation.
- 9. Choose the appropriate Contact from the Notification Contact drop down list. The contact's default notification method will appear selected.
- 10. Click the Add button.
- 11. Click the Map button.

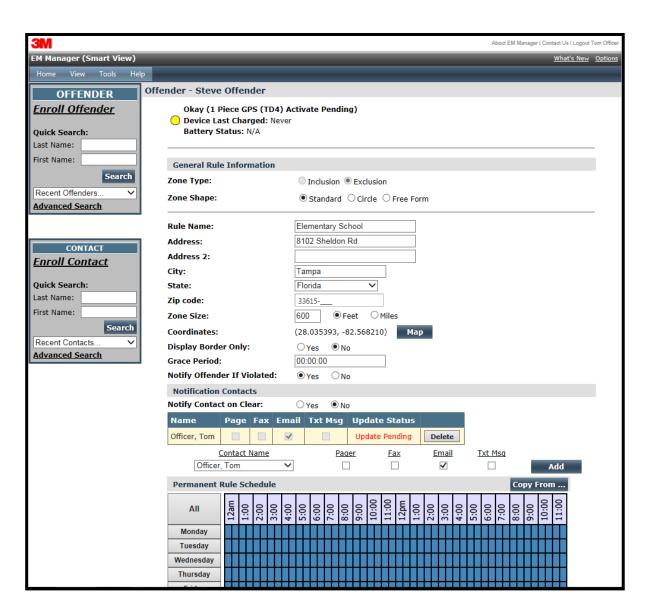



# **Create Exclusion Zone, Cont.**


- 12. Ensure that the address and zone size is correct.
- 13. If you want to resize or move the zone, click the **Move/Resize** button.
- 14. If you move or resize the zone, click the **Finish Move/Resize** button.
- 15. Click the **Submit** button.

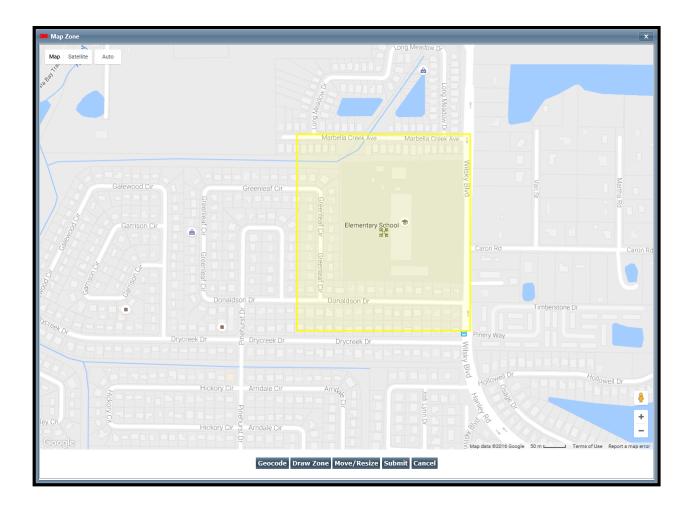



# **Attaching the 1 Piece (TD4) with Beacon**



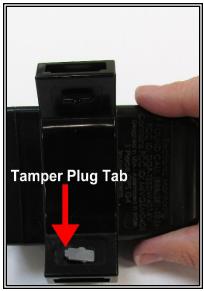



## **Step 1:**

Press and hold the Activate Button on the top of the 1 Piece. If the "PWR" LED is Green, proceed with activation. If the "PWR" LED is Red or does not light up at all, the 1 Piece needs to be charged prior to activating.

## Step 2:

Push tamper plugs into the back of the brackets of the 1 Piece.


Be sure to insert the side without the tamper plug tab first (see above).

After the right side has been secured, press the left side of the tamper plug down.







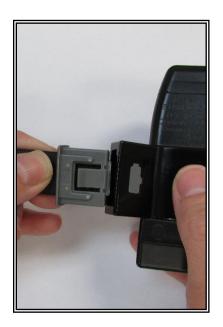

### **Step 3:**

Place the pin tray on a flat, stable surface (such as a desk) and push one end of the strap completely into the pin tray.


# Step 4:

Examine the strap to ensure that it is cut evenly and that there is no gap between the end of the strap and the edge of the pin tray.

### Step 5:

Insert strap with attached pin tray into one side of the 1 Piece until it snaps in place.



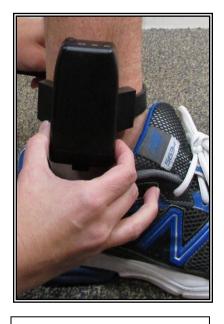





## **Step 6:**

Place the 1 Piece on the offender's leg, just above the ankle bone.

## <u>Step 7:</u>

Wrap the strap around the offender's leg and measure to the edge of the bracket, so that it allows approximately ¼ inch of space between the offender's leg and the strap to ensure comfort.

### **Step 8:**

Use the strap cutters and cut the strap according to the measurement.

Note: Ensure that the end of the strap has been cut evenly.









### **Step 9:**

Place the remaining pin tray on a flat, stable surface (such as a desk) and push one end of the strap completely into the pin tray.

## Step 10:

Examine the strap to ensure that it is cut evenly and that there is no gap between the end of the strap and the edge of the pin tray.

### **Step 11:**

Place the 1 Piece on the offender's leg, just above the ankle bone. Wrap the strap around the offender's leg and insert the strap with attached pin tray into the bracket until it snaps in place.







#### **Step 12:**

Press and hold the Activate Button on the top of the 1 Piece until it vibrates.

- **A.** The 1 Piece will vibrate once and the "PWR" LED will begin to blink **green**, indicating the 1 Piece is powered on.
- **B.** The "GPS" and "ZONE" LED's will blink **green** once every second. This indicates that the 1 Piece is attempting to make a wireless call.
- **C.** The "GPS" and "ZONE" LEDs will blink **green** twice every second. This indicates that the 1 Piece is attempting to acquire GPS. The 1 Piece must now be taken outside to acquire GPS.
- **D.** Once GPS has been acquired, the 1 Piece will vibrate three times. The "PWR" LED will continue to blink **green** and the "GPS" and "ZONE" LEDs will stop blinking. This indicates that activation has been successfully completed.


### Step 13:

Plug the Beacon's attached A/C adapter into a wall outlet. Be sure to place the Beacon on a hard surface in an area where it will not be moved frequently. Unnecessary movement will likely trigger one or more violations.



# **Unassigning Hardware**


1. Move your cursor over the Hardware Functions menu and left click Unassign.

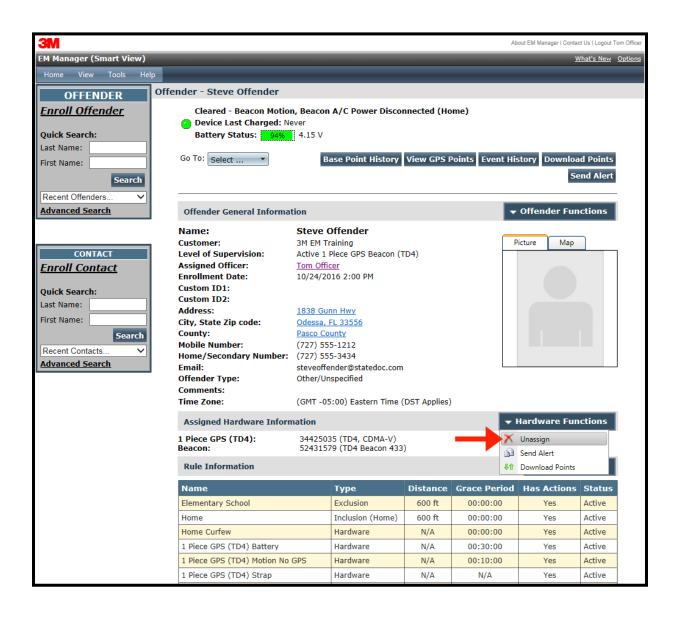



# **Unassigning Hardware, Cont.**


- 2. Click the checkbox next to the 1 Piece (TD4) and Beacon (see below).
- 3. Click on the drop-down menu and select an Unassignment Reason. This is required.

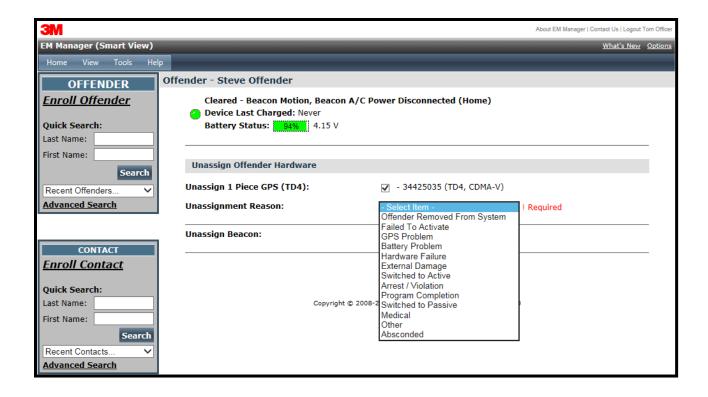



# **Unassign Hardware, Cont.**


- 4. Click the **Save** button. A popup will generate with a warning that the unassignment is immediate.
- 5. Click OK.

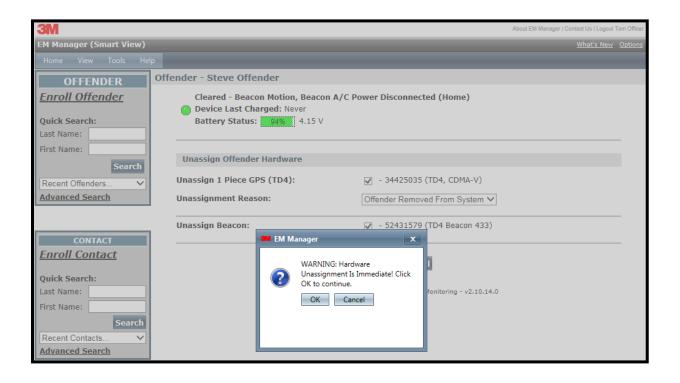



# **Unassign Hardware, Cont.**


6. You will be returned to the Offender Information page, where the Beacon will be unassigned and the 1 Piece (TD4) will be pending unassignment. The 1 Piece (TD4) is now required to call Attenti and transmit its final data. It will only be unassigned once this final call has occurred.

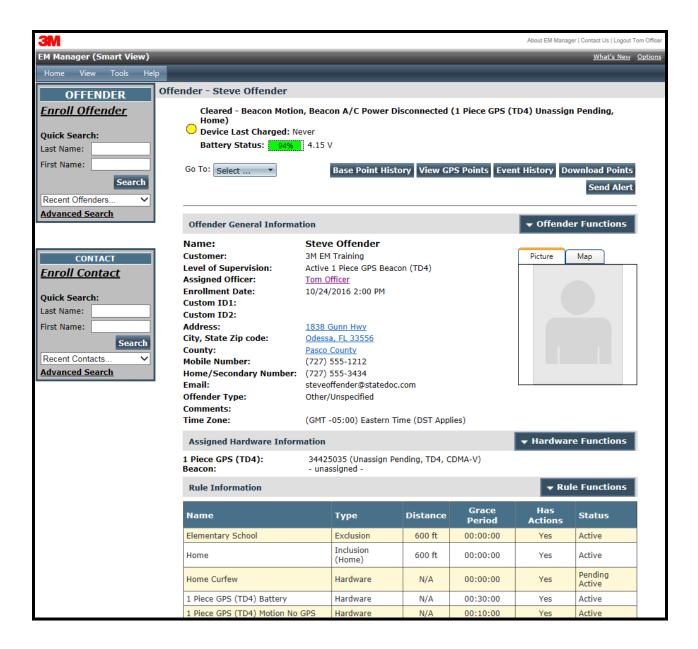



## Removing the 1 Piece (TD4)



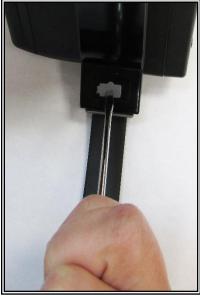



## **Step 1**:

Use the strap cutters to make a cut in the center of the strap. Remove the device from the offender's leg.

## <u>Step 2:</u>

Use a flathead screwdriver to press on the center of the tamper plugs until the head of the screwdriver pierces the tamper plugs.

## <u>Step 3:</u>

Use the screwdriver to remove the tamper plugs from the brackets.



# Removing the 1 Piece (TD4), cont.





### **Step 4:**

Use the screwdriver to press down the latch attached to the pin tray.

### <u>Step 5:</u>

While keeping the latch depressed, pull the strap with the attached pin trays out of each bracket.
Discard the tamper plugs and straps.

Note: Do NOT reuse the tamper plugs.

Note: Do NOT remove tamper plugs from the brackets of the 1 Piece unless there is a strap with an attached pin tray inside the bracket.



# 1 Piece (TD4) Self Test

To Begin the 1 Piece (TD4) Self Test:

- Make sure the 1 Piece (TD4) is not assigned to an offender.
- Make sure the 1 Piece (TD4) does NOT have a strap connected.
- Make sure that the 1 Piece (TD4) is in an area with access to a wireless network and GPS.
- Press and hold the Activate Button until the 1 Piece (TD4) vibrates (approximately five seconds).
- The PWR/ZONE/GPS LEDs will begin to blink green, verifying the test is in progress.
- Only the Zone and GPS LEDs will be utilized for the test.
- The test results will be displayed on the Zone/GPS LEDs within ten minutes.
- To stop the test, press and hold the Activate button until it vibrates.



#### Test Results:

- ZONE/GPS LED solid green = passed all tests.
- ZONE/GPS LED blinking red ONE time = Modem Failure.
- ZONE/GPS LED blinking red TWICE = GPS Failure.
- ZONE/GPS LED blinking red THREE times = Tamper Failure.
- The test results will be displayed on the Zone/GPS LEDs for one hour.



# **Appendix**

# **Rule Definitions**

#### **Home/Away Status**

 When the 1 Piece (TD4) is in range of the Beacon, it will start receiving signals from the Beacon. When these signals are received by the 1 Piece (TD4), it will record a "Home" status. Likewise, when the 1 Piece (TD4) is unable to receive signals from the Beacon for five consecutive minutes, it will record an "Away" status. This indicates the 1 Piece (TD4) is out of range of the Beacon.

#### **Home Curfew**

• If the 1 Piece (TD4) has a home schedule set and the 1 Piece (TD4) is not in range of the Beacon during this time, a curfew alarm will be generated. Note: The curfew alarm will not occur until a five minute internal buffer and any user added grace period has expired. The device will vibrate three times consecutively, and once every ten minutes thereafter, while in violation if the Notify with Vibrate feature is checked. The Zone LED will blink red until the violation is cleared.

#### 1 Piece (TD4) Battery

• The battery is getting low and the device needs to be charged. The device must be charged for a minimum of two hours daily (the hours do not have to be consecutive). When the battery needs to be charged, the device will vibrate three times consecutively and then once every ten minutes until it is connected to the charger. During this time, the Power LED will blink red.

#### **Motion No GPS**

 The 1 Piece (TD4) has accumulated excessive motion in a 60 minute period without receiving a signal from the GPS satellites. The device will vibrate three times consecutively, and once every ten minutes thereafter, until the violation has cleared by acquiring GPS. During this time, the GPS LED will blink red until the violation is cleared.



# **Violations and Definitions, Cont.**

### 1 Piece (TD4) Strap

• The strap has been compromised or removed from the 1 Piece (TD4). There will not be any notification to the offender that this has occurred unless the officer selects the **Notify Offender with Vibrate** option on this rule.

#### 1 Piece (TD4) Unable to Connect

• The 1 Piece (TD4) has a defined call-in interval that is determined by the contract. If the 1 Piece (TD4) is unable to call Attenti at its defined call-in interval, a default 90 minute grace period will go into effect. If the default 90 minute grace period expires and the 1 Piece (TD4) has still not called Attenti, the database will create this alarm. This is normally due to poor cellular coverage in the area. The offender is not notified of the Unable to Connect alarm. Once the 1 Piece (TD4) is able to use the cellular network to call in, it will report any alarms that occurred during this time and download all tracking data.

### 1 Piece (TD4) Tamper

• The 1 Piece (TD4) has been compromised in some form. There will not be any notification to the offender that this has occurred unless the officer selects the **Notify Offender with Vibrate** option on this rule.



## **Appendix**

#### **Geographic Rules**

**Zone Rules**- The offender has violated a Zone set up by the user. The device will vibrate three times consecutively, and once every ten minutes thereafter, while in violation if the Notify with Vibrate feature is checked. The Zone LED will blink **red**.

#### • Inclusion Zone

 Geographic areas like home, work, or school where the offender is confined during an officer defined schedule.

#### Exclusion Zone

o Geographic areas used to define off-limits areas to the offender.

#### **Beacon A/C Power Disconnect**

 A Beacon A/C Power Disconnect alarm will be generated if the Beacon is disconnected from or loses power

#### **Beacon Battery**

• The backup battery in the Beacon is designed to last 24 hours. This alarm will be generated when the battery is getting low. Once the alarm is generated, the offender will have approximately 30 minutes to plug the Beacon into a wall outlet before the battery dies. Once plugged back into a wall outlet, the backup battery will take approximately 4 hours to be recharged.

#### **Beacon Location Untrusted**

The Beacon Location Untrusted alarm will be generated if any of the following conditions occur:

- If the A/C power is lost in conjunction with motion detection
- If the Beacon detects excessive motion, whether or not it has A/C power
- If the Beacon detects loss of power for over one hour
- If the Beacon backup battery dies

#### **Beacon Motion**

Beacon motion occurs anytime the Beacon detects motion to its internal sensor.



FEDERAL COMMUNICATIONS COMMISSION (FCC) Part 15 STATEMENT: The equipment complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna,
- 2. Increase the separation between the equipment and the receiver,
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

