

Wireless Selfie Remote

Thank you for choosing our Wireless Selfie Remote products. It is a kind of Bluetooth Low-energy product which based on the Bluetooth 3.0 version. Use it to capture the perfect moment everyday and get addicted to taking photos with your family and friends.



Specifications:

Dimensions: 52 x 31 x 11 mm

Compatibility: Android 4.2.2 OS or newer / iOS 6.0 or newer

Communication: Bluetooth Version 3.0

Transmit frequency: 2.4GHz ~ 2.4835GHz

Communication distance: 10m (30 ft)

Battery life: CR2032 x 1 cell, about 3-6 months if usage is 10 times a day

How To Use

1. Switch on/off

Switch on: Long press and hold the central button 2 seconds until you see the Red LED flash. If no connection after power on in 3 minutes, the devices will be turned off automatically.

Switch off: Long press and hold the button until see the red Led flash 3 times

2.Paring

- A,Turn on the shutter and LED starts flash quickly
- B.Activate the Bluetooth function on your phone and sourcing the devices around
- C.Select the device of “**Wireless Selfie Remote**” from the list and paring will be finished automatically in few seconds ,then the LED will stop flash.

In order to save the power, if no action within 5 minutes, the devices will disconnect automatically,and after 3 minutes, it will power off.

Once first connection is successful, then no need to paring for future use. It will be connected automatically.

3. Take photos:

Just press the central button to take photos easily.The red Led will be flashed when you press the button.

Compatible devices


Compatible with Android 4.2.2 OS or newer and IOS 6.0 or newer 。

Apple	iPhone 6 plus/6/5S/5C/5/4S/4.iPad 4/3/2,iPad mini,iPad with Retina Display,iPod touch 4 th generation or newer;
Samsung	Samsung Galaxy S2/S3/S4/S5,Note 1/2/3+,Tab 2, Note 8,10.1,

(Remarks: For part of Andriod phones, due to their customerized operating system.This devices may can not be used directly, please download the App “camera360”.And adjust the function of volume adjust to Photograph in the menu of Camera setting)

Noted: Please Shut down after using the product , so that not affect the mobile phone keyboard use.

Battery replacement

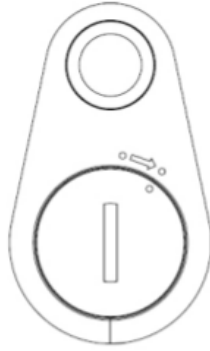

Battery is in the back of the tag. Use a coin as a key and twist it to right to open the battery cover, then replace the battery. The used CR2032 cell is easy to get in the market. After replacement put the cover back and close it to left also with the coin.

FCC Note:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.