User Manua



MOD MINI BLUETOOTH HEADSET FCC ID:X6HMOD




Bluetooth[®]

Operating Instructions

Power On:

When the headset is off, turn the switch to the "ON" position. The LED indicator will flash in blue. At the same time, you will hear a "hello" sound from the speaker of the headset.

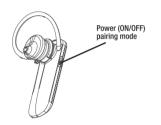

Power Off: When the headset is on, turn the switch to the "OFF" position. The LED indicator will flash in red. You will hear a "goodbye" sound from the speaker of the headset at the same time.

Pairing Mode:


When the headset is on, the headset will connect with the last paired handset. You will hear "your headset is connected" sound from the speaker of the headset. If the device fails to connect with last paired device, it will enter into pairing mode with the LED indicator flashing red and blue in alternating colors. You will hear the word "Pairing" from the speaker of the headset

Easy Pairing Mode:

When the headset is on and disconnected from any handset. Press Vol+ and Vol- at the same time until the LED flashes in red and blue alternating colors.

Answering Calls:

When a call is coming, press MFB to answer the incoming call.

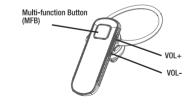

End Calls:

Press MFB button to terminate a phone call. You will hear a "call terminated" sound from the speaker of the headset at the same time

Reject Calls:

When a call is received, press and hold MFB for 2 seconds to reject the call.

Mute:

When talking on the phone, press and hold Vol+ or Vol- for 2 seconds to hold your microphone, your can hear from the caller the same time caller fail to hear from you. There will be a warning tone from the headset twice every 3 seconds.

Ouit Mute:

Press and Hold Vol+ or Vol- for 2 seconds to guit the Mute mode.

Last Number Redial:

Double click MEB to redial. At the same time you can hear a sound "last number redial" from the speaker of the headset

Voice Dial:

If your mobile phone supports this feature press the MFB for 2 seconds when connected with your handset to activate voice commands.Please refer to the manual of your mobile phone for support about voice command.

Voice Switching:

Double click the MFB, then you can switch voice between your mobile phone and headset.

Reconnect:

When the headset and mobile phone are disconnected, you can press MFB to reconnect.

Connect with two handsets:

- To connect with 2 Mobile phones: 1 First disconnect the bluetooth device from your phone if it is already connected. 2. Press V+ and V- concurrently to put the headset in pairing mode.
- 3 Turn on and search bluetooth device on your second phone until you find "MOD " and select to begain pairing. Please pair again with your first mobile phone device. 5 Now you should have two mobile phones connected with your headset.

Transfer Calls:

When you are talking on the phone and have another incoming call click the Vol+ and Vol- at the same time until you hear a been then you can answer the second call and put the first call on hold To switch back to the first call .click Vol+ and Vol- at

with a click on MFB.

supports the call waiting feature.

Specifications

- Bluetooth V4 0 Technology
- Profile: HSP/HEP/A2DP
- Device ID: E300
- Pin Code: 0000
- Speaker Frequency Response: 20Hz~20KHz
- Transmission Distance: 33 feet/10 meters
- Size: 48mm x 16mm x 6mm
- Weight: 6 grams
- Music Time: Up to 3 hours
- Talk Time: I In to 3 hours
- Standby Time Up to about 60 Hours
- Operating temperature: -20~60°C

LED Indicator Status

Charging	Red LED lights
Charging Complete	Blue LED lights
Power On (standby)	Blue LED flashes two times every seven seconds
Power On (Incoming calls)	Blue LED fast flashes
Power On (Talking)	Blue LED flashes three times every two seconds
Power On (Not Connected)	Blue LED flashes once every seven seconds
Battery Low	Red LED flashes once every five seconds and you can hear a sound "battery low" from the speaker of the headset every 30 seconds
Pairing Mode	LED flashes in red and blue alternatively

Warranty & Return Policy

Alpha Comm Enterprises, Inc. warrants this product as free of defects in material, design and workmanship for the period of one year from the original date of purchase. The warranty is limited to the original purchaser. If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was purchased or to an authorized warranty center

The liability of Alpha Comm Enterprises, Inc. and its appointed repair company is limited to the cost of repair and/or replacement of the product under warranty. Products sent for warranty service must be accompanied by a copy of the original purchase receipt, the original box, materials and accessories. All cost associated with the return of the product under warranty are the responsibility of the original purchaser, A \$6.95 Shipping and Handling Fee will apply in order for Alpha Comm Enterprises. Inc. to ship out a new/refurbished product to customer Alpha Comm Enterprises, Inc. will not assume any responsibility for any loss or damage occurred in shippina.

For more information, visit www.guikcell.com

Authorized Warranty Center Alpha Comm Enterprises, Inc. 1500 Lakes Parkway, Suite B Lawrenceville, Georgia 30043 Phone: (888) 951-0909

Manufactured exclusively under license by Alpha Comm Enterprises, Inc.



Copyright © 2012 Alpha Comm Enterprises, Inc.

All rights reserved. Made in China All brands and trademarks are the property of their respective owners.



(I DAN

Microphone

Charging Port

Note: This operation requires that your mobile phone

the same time until you hear a beep again Press and

hold MFB for 2 seconds to reject another incoming

call when you are talking on the phone already. You

can answer the second call by ending the first call

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference

that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.