



PRELIMINARY

WD TV[®] Live[™]

Streaming Media Player

數位無線媒體播放器

User Manual

Model: C3H



Table of Contents

1	Important User Information	1
	Important Safety Instructions	1
	WD Service and Support	2
	Recording Your WD Product Information	3
	Registering Your WD Product	3
	Accessories	3
2	Product Overview	4
3	Features and Functions	6
	Features	6
	Connections	7
	LED Indicator	8
	Remote Control	9
4	Getting Started	10
	Package Contents	10
	Installation Requirements	10
	Operating System Compatibility	10
	Installation Procedure	11
5	Network Setup	21
	Ethernet Network (Wired) Setup	21
	Wireless Network Setup	23
	Checking the Network Connection	26
6	Network Services	27
	Share a Folder on Your Computer	27
	Accessing Media Content	35
	Transferring Files	37
	Using the Web UI	41
7	Operating the Media Player	45
	Using the Remote Control	45
	Using a USB Keyboard	46

Using the Media Player Menu.	48
Media Library Compilation	51
Locating Your Contents on the Drive	53
8 Watching Video	58
Video Playback	58
Videos Menu Options.	61
Video Playback Controls	65
Video Playback Options.	66
DVD Navigation	70
9 Playing Music	72
Music Playback	72
Music Menu Options	74
Music Playback Controls	76
Music Playback Options.	77
Playing Music From Your iPod®	78
10 Viewing Photos	80
Photo Display.	80
Digital Camera Support	82
Photos Menu Options	83
Photo Display Options	85
Displaying Photo Thumbnails.	86
Displaying Photo Information	87
Photo Slideshow	87
11 Files	89
Files Display.	89
Files Options	90
12 Internet Services	91
Adding a Service to Favorites.	93
AccuWeather.com	94
BBC iPlayer (UK only).	95
BLOCKBUSTER On Demand®	96
CinemaNow	97
Deezer	98
Facebook.	103
Flickr	108

Flingo	115
Hulu Plus (US only).	116
Live365	117
Mediafly	124
MLB.TV	129
Netflix	133
Pandora (US only)	134
Picasa	140
Shoutcast Radio	147
Spotify	151
TuneIn	157
Yota Music.	161
YouTube	162

13 Games 163

Games Display.	163
------------------------	-----

14 RSS 164

Reading RSS Feeds.	164
Adding RSS Feeds.	164

15 Setup and Advanced Features. 165

Setup Navigation Buttons	166
Audio/Video Output	166
Appearance	168
Video Settings	171
Music Settings	174
Photo Settings	175
Network.	177
Operation.	178
System	180
About	185
Media Library	186

16 System Maintenance 188

System Firmware Upgrade.	188
Troubleshooting	190
Common Error Messages	193
FAQs	194

17	Appendix	195
	Multiformat Content Playback	195
	Supported Formats	196
	Regulatory Compliance	200
	Warranty Information	204
	GNU General Public License (“GPL”)	205

1

Important User Information

Important Safety Instructions

This device is designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated into this unit will protect you if you observe the following procedures for installation, use, and servicing.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Carefully read and follow the Quick Install Guide and User Manual.
- Do not operate this device outside the temperature range of 5°C–35°C (41°F–95°F).
- Do not drop or shake the device.
- Do not move the device when it is powered on.
- Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon them or against them.
- Do not overload wall outlets.

For additional safety information, refer to www.wdc.com.

WD Service and Support

Should you encounter any problem, please give us an opportunity to address it before returning this product. Most technical support questions can be answered through our knowledge base or e-mail support service at <http://support.wdc.com>. If the answer is not available or, if you prefer, please contact WD at the best telephone number shown below.

Your product includes 30 days of free telephone support during the warranty period. This 30-day period starts on the date of your first telephone contact with WD technical support. E-mail support is free for the entire warranty period and our extensive knowledge base is available 24/7. To help us keep you informed of new features and services, remember to register your product online at <http://register.wdc.com>.

Accessing Online Support

Visit our product support website at <http://support.wdc.com> and choose from these topics:

- **Downloads** - Download drivers, software, and updates for your WD product.
- **Registration** - Register your WD product to get the latest updates and special offers.
- **Warranty & RMA Services** - Get Warranty, Product Replacement (RMA), RMA Status, and Data Recovery Information.
- **Knowledge Base** - Search by keyword, phrase, or answer ID.
- **Installation** - Get online installation help for your WD product or software.

Contacting WD Technical Support

When contacting WD for support, have your WD product serial number, system hardware, and system software versions available.

North America		Asia Pacific	
English	800.ASK.4WDC (800.275.4932)	Australia	1 800 42 9861
Spanish	800.832.4778	China	800 820 6682/+65 62430496
		Hong Kong	+800 6008 6008
		India	1 800 11 9393 (MNTL)/1 800 200 5789 (Reliance) 011 26384700 (Pilot Line)
		Indonesia	+803 852 9439
Europe (toll free)*	00800 ASK4 WDEU (00800 27549338)	Japan	00 531 650442
		Korea	02 719-3240
Europe	+31 880062100	Malaysia	+800 6008 6008/1 800 88 1908/+65 62430496
Middle East	+31 880062100	Philippines	1 800 1441 0159
Africa	+31 880062100	Singapore	+800 6008 6008/+800 608 6008/+65 62430496
		Taiwan	+800 6008 6008/+65 62430496

* Toll free number available in the following countries: Austria, Belgium, Denmark, France, Germany, Ireland, Italy, Netherlands, Norway, Spain, Sweden, Switzerland, United Kingdom.

Recording Your WD Product Information

In the following table, write the serial and model numbers of your new WD product. You can find this information on the label on the bottom of the device. You should also note the date of purchase. This information may be required when requesting technical support.

Serial Number:
MAC Address:
Model Number:
Purchase Date:
System and Software Notes:

Registering Your WD Product

Your WD product includes 30 days of free technical support during the applicable warranty period for your product. The 30-day period commences on the date of your first telephone contact with WD technical support. Register your WD product online at <http://register.wdc.com>.

If your media player has an active network connection, you can register directly from the device using the supplied remote control (see “Using the Remote Control” on page 46) or a USB keyboard (see “Using a USB Keyboard” on page 47). Go to “Device Registration” on page 182 for instructions.

Accessories

For information on optional accessories for this product, visit:

US	www.shopwd.com or www.wdstore.com
Canada	www.shopwd.ca or www.wdstore.ca
Europe	www.shopwd.eu or www.wdstore.eu
All others	Contact WD Technical Support in your region. For a list of Technical Support contacts, visit http://support.wdc.com and see Knowledge Base Answer ID 1048.

2

Product Overview

Thank you for purchasing a WD TV Live Hub media player. This user manual provides step-by-step instructions for installing and using your new media player. For the latest WD product information and news, visit our website at www.westerndigital.com.

Watch popular movies and TV episodes instantly – Don't wait for the mailman to deliver your movies and don't settle for streaming to your small computer screen. Choose from over 10,000 titles from CinemaNow™ and BLOCKBUSTER On Demand® or access your Netflix® unlimited membership and watch TV episodes and movies on your big screen.*

* CinemaNow account (US only), Blockbuster online membership (US only), or Netflix unlimited membership required (US and Canada only).

Play all your personal media the easy way – Load up the high-capacity drive with all your media to create your own media jukebox. In a few clicks, you can play your home movies, share vacation slideshows, and play your music on the big screen and sound system in your living room.

Access popular Internet content from the comfort of your living room – Play YouTube videos, access Facebook, share your photos on Flickr or Picasa, play music on Pandora, and watch daily video podcasts from CNN, NBC, MTV, ESPN, and other online content.*

* Availability varies by country. Pandora available in US only. These streaming services may be changed, terminated or interrupted at any time.

Full-HD 1080p video playback; the perfect partner for your HDTV – This is the real thing; Full-HD 1080p playback. Sit back and enjoy the spectacular picture quality of brilliant high definition video and the crystal clear sound of digital audio. Use the included programmable remote control to make your entertainment choices using our crisp, animated navigation menus.

Play almost any type of media file – WD TV Live Hub supports a wide variety of the most popular file formats including HD camcorder video formats.

Shoot it on your mobile device. Share it on your HDTV – Download WD Photos™, a free photo and video app for your iPad®, iPhone®, iPod touch®, or Android™ smartphone. Take a photo or video clip with your mobile device and upload it directly to the built-in hard drive on your WD TV Live Hub media player. You can also access all the photos stored on your WD TV Live Hub media player and show them off with your smartphone or tablet.

Centralize your media collection – You can store all your media in one place on the high-capacity drive in this system. The WD TV Live Hub media player finds and categorizes all the media on the built-in drive and any connected USB drives and displays it in one easy-to-view menu system. It's a breeze to access and enjoy your media when it's all in one place.

Access media anywhere on your home network – The Ethernet port lets you connect this media player to your home network so you can access and stream video, view photos, and play music from any Mac, PC, and network drive in your house.

Transfer files easily – Copy, move or delete files stored on a USB drive, a network drive, your camcorder, or a camera to the Live Hub built-in drive using the on-screen menus.

It's a multi-room media server streaming to any TV in your house – You can stream any file on the WD TV Live Hub media player to a WD TV Live Plus or WD TV Live media player or any DLNA/UPnP compatible TV, Blu-ray Disc™ player, or game console. The system is powerful enough to handle multiple streams so you can stream a movie to your Blu-ray Disc™ player, while viewing photos on your TV upstairs.

Bring the arcade to your HDTV – WD TV Live Hub brings casual games to your big screen TV. Test your skills with classic games such as Rockswap Adventures, CosmoX, Sudoku, and Memory.

Advanced navigation options

- Thumbnail, list, and preview modes – Browse your content by file name or by thumbnails of photos, album covers, video preview, and movie cover art.
- Media Library – This unique feature lets you view all your media by media type in one menu regardless of its location in folders or drives. You can view your content by categories such as genre, album, artist and date.
- Search – Search by genre, title, artist, filename and partial filename.

Photo viewing

- View photos as a slideshow with a variety of transitions and background music
- Zoom and pan
- Search by filename, partial filename, most recently viewed and date

Movie viewing

- Fast forward, reverse, pause, zoom, and pan
- View subtitles
- Search by filename, partial filename, most recently viewed and date

Music playback

- Fast forward, reverse, pause, shuffle, repeat
- Search by filename, partial filename, most recently viewed and date.

File Management

- Copy files between USB drives and transfer files between a USB drive connected to the media player and your computer.

HDMI 1.4, composite video and component video output - The HDMI port lets you connect to the highest quality HDTV or home theater. Additional composite (RCA), and component outputs ensure compatibility with virtually all television sets.

S/PDIF digital output – The optical audio output sends digital signals to your AV receiver for the best surroundsound experience.

Ultra-compact design - Fits easily into your entertainment center.

3

Features and Functions

Features

Menus

Your media is organized, categorized and ready to play – The WD TV Live Air media player finds and categorizes all the media on the built-in drive and any connected USB drives and displays it in one easy-to-view menu system. If you have one of our My Book® Live™ network drives connected to your network, it will find the media on that, too.

Customize your media experience – Customizable screens, themes and favorites let you personalize the media experience for you and everyone and your home. The interface also remembers your last selection so you can easily continue the fun.

Choose from a variety of list viewing options – Select thumbnail view, list view and even see a little preview of your movies in your movie menu. You can add metatags to your media for better identification.

Play photo slideshows with the music you choose

Tag your favorites for instant playback

Supports DVD Navigation – View all the content included on your ripped DVDs, including complete menu navigation, chapter listings, special features, and subtitles.

Family-ready – Share your family photos, videos, music, and files on your home network and stream to any screen in the house.

Automatic play – Set the player to play a selected media file automatically when the unit is turned on. Perfect for living art on your HDTV or for digital signage.

On the computer...

Sync new media – The player automatically synchronizes with watched folders so new content from any PC, Mac, or USB storage will be added to the media player.

Play your media from your computer – This media player is Windows® 7 compatible, so you can use the “Play To” feature to easily stream your Windows 7 computer’s files to your TV through your media player.*

*For more information on Play To, go to:
<http://windows.microsoft.com/en-us/windows7/products/features/play-to>.

Audio/Video Interface

- HDMI 1.4 interface for digital audio and high-definition video.
- Component video interface (YPbPr, green/blue/red) for analog video connection.
- Composite interface (RCA, yellow/white/red) for analog AV connection.
- S/PDIF (optical) audio for high-fidelity digital audio.
- Auto source function enables the HD media player to detect and switch to a new interface connection. For example, the media player automatically switches to HD mode when it is connected through an HDMI cable.
- Video output resolution includes 480i, 576i, 480p, 576p, 720i, 720p, 1080i, 1080p.

- Stereo or multi-channel digital surround audio output (digital surround sound is only available when using the HDMI or S/PDIF interfaces).
- Wired or wireless Internet connection for access to online media content.

Plug-and-Play USB 2.0 Support*


- USB storage device with a USB connector
- Portable media players with USB connector
- Digital cameras/camcorders with USB connector

*For a list of tested, compatible USB devices, see Article #5688 in our knowledge base at <http://support.wdc.com>.

USB Storage File System Support

- NTFS
- FAT/FAT32
- HFS+

Connections

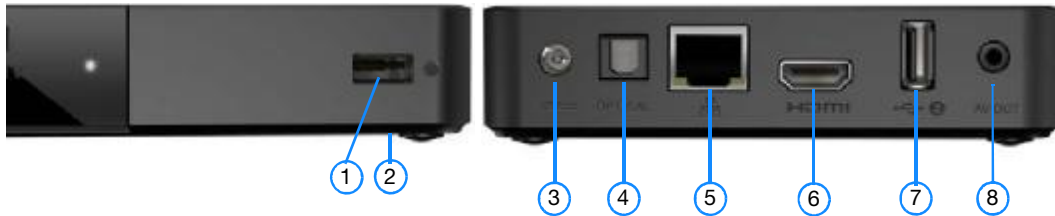


Item	Component	Description
1	USB port 1	Supports connection of compatible removable storage devices, portable media players, digital cameras with USB connectors, and USB wireless adapters.
2	Reset button (bottom of device)	Press for one second to reset to factory defaults (see "Device Reset" on page 183). Press and hold 10 seconds to toggle between NTSC and PAL. Use a fine-tipped stylus or the unfolded end of a paperclip to press the reset switch.
3	Power jack	Connects the power cable.
4	S/PDIF (optical) audio port	Connects to your AV receiver (S/PDIF cable sold separately).
5	Ethernet port	Supports LAN connection for wired Internet access.
6	HDMI port	Connects to your TV's HDMI port (HDMI cable sold separately).
7	USB port 2	The same function as USB port 1.
8	Composite jack	Connect to your TV's analog video and audio jacks.



Note: This device does not support USB hubs.

LED Indicator

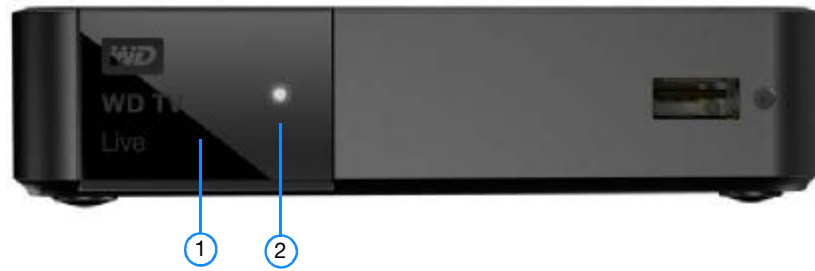

Item	Component	Description
1	Infrared receiver	<ul style="list-style-type: none"> Receives signals from the remote control. Point the tip of the remote control to the infrared receiver and ensure that the path between the two is unobstructed.
2	LED	<ul style="list-style-type: none"> On—The power cable is connected and the power is on. Off—The media player is in standby mode, turned off, or the power cable is disconnected. Steady flashing— A USB device has been discovered and the unit is being mounted in the system. If the Media Library is set to On in the Setup options (see “Media Library Compilation” on page 52), the LED flashes at the same steady constant rate. Three short flashes followed by three long flashes—A system diagnostic failure has occurred. See “Troubleshooting” on page 190.

Remote Control



CAUTION: Do not expose the batteries or the remote control with batteries installed to excessive heat (direct sunlight, fire, etc.).

1. Infrared transmitter
2. POWER
3. Subtitle
4. PREV (track), STOP, NEXT (track)
5. Back (last screen)
6. Navigation buttons, OK
7. Previous Page
8. MUTE
9. Alpha-numeric keys
10. SEARCH
11. HOME
12. Audio
13. REV, PAUSE/PLAY, FF
14. Options
15. Next Page
16. Setup
17. Shortcut/function keys
18. EJECT (safe removal of attached storage)



Note: For additional information, see "Using the Remote Control" on page 46.

4

Getting Started

Package Contents



WD TV Live streaming media player

Remote control and
Two AAA batteries

AC power adapter



Quick Install Guide

Installation Requirements

- Standard or HD TV with a composite (standard A/V), component (YPbPr), or HDMI input
- An available network connection for online content and services

Optional: TV, stereo, or AV receiver with an optical digital (S/PDIF) or stereo audio input jack (audio playback only)

Operating System Compatibility

The media player is compatible with the following operating systems:

Windows®

- Windows XP
- Windows Vista®
- Windows 7

Mac® OS X®

- Leopard®
- Snow Leopard™



.....
Note: Compatibility may vary depending on user's hardware configuration and operating system.



.....
Important: For highest performance and reliability, it is recommended that you install the latest updates and service pack (SP). For Windows, go to the **Start** menu and select **Windows Update**. For Mac, go to the **Apple** menu and select **Software Update**.

Installation Procedure

The media player installation procedure is outlined below:

1. Transfer content from your computer to the USB storage media. See “Step 1 - Loading Content onto your USB Drive” on page 12.
2. Connect the power cable. See “Step 2 - Connecting the Power Cable” on page 13.
3. Connect the media player to your TV or entertainment unit. See “Step 3 - Connecting the Media Player” on page 14. You can use HDMI (page 15), component (page 16), or composite (page 17) connections.
4. Insert the batteries into the remote control.
5. Connect the USB device containing your media content (“Step 4 - Connecting a USB Device (Optional)” on page 19) and/or establish a wired or wireless network connection (“Step 5 - Connecting to Your Network” on page 21).

Step 1 - Loading Content onto your USB Drive


Transfer your favorite content from your computer to your external USB drive, such as My Passport® or My Book® (external USB drives and stand not included).



Step 2 - Connecting the Power Cable

1. If applicable, connect the power clip to the power cable plug.

The AC power adapter will vary, depending on your location. Some locations do not require a power plug clip. Units sold in those locations will have a fixed power plug. Refer to the illustration below.

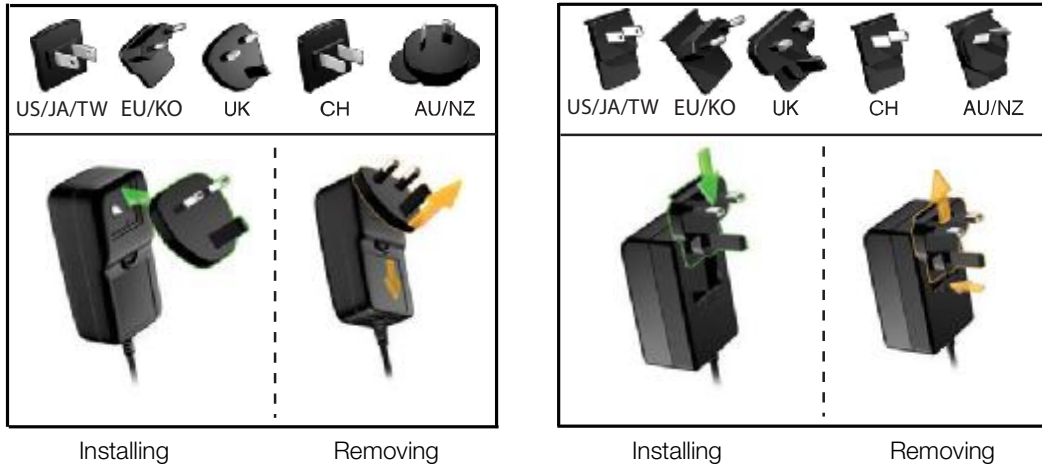

2. Connect the power cable to the media player's DC connector, and then plug the opposite end into an AC power outlet. The media player powers up automatically.



Wait a few seconds for your TV to detect the media player. If it is not detected, you may need to change the input source on your TV to HDMI or composite, depending on your connection. Check the user documentation of your TV for more information.

Once the media player is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.

For more information, see "Using the Media Player Menu" on page 49.

Step 3 - Connecting the Media Player

The following figures illustrate the cable connections supported by the media player. The standard connection uses the included composite-to-mini AV cables.



.....
Note: HDMI and S/PDIF (optical) cables are sold separately.



.....
Important: Configure the media player's Audio/Video settings depending on the type of connection you choose. See "Audio/Video Output" on page 166 for more information on these settings.

Choosing the Best Connection

The quality of the picture produced by your TV depends on the quality of your TV and its connection to the media player.

Connection	Quality	Connectors
HDMI	Best (up to 1080p)	Specialized, high-definition connector
Composite	Good (480i/576i)	<ul style="list-style-type: none"> • Yellow = video • Red = right audio • White = left audio

HDMI (High Definition)



Composite (Standard Definition)



HDMI Video and Audio (High Definition)

HDMI combines high-definition video, multi-channel audio, and inter-component control in a single digital cable. This interface provides video quality resolution of up to 1080p.

To connect your media player using an HDMI cable:

1. Plug an HDMI cable into the HDMI connector on the media player.
2. Plug the opposite end into the HDMI port on your TV or audio/video system (if available).



Wait a few seconds for your TV to detect the media player. If it is not detected, you may need to change the input source on your TV to HDMI. Check the user documentation of your TV for more information.

Once the media player is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.



.....
Note: HDMI cables are sold separately.

Composite AV Connection (Standard Definition)

To use a composite connection:

1. Plug the mini-connector into the composite port on the media player.
2. Plug the opposite ends into the composite input ports on your TV, yellow to yellow, red to red, and white to white.
3. Select the appropriate TV input source.



Wait a few seconds for your TV to detect the media player. If the media player is not detected, you may need to change the input source on your TV to component or composite, depending on your connection. Check the user documentation of your TV for more information.

Once the media player is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.

Home Theater (High Definition)

To connect a home theater system:

1. Plug an HDMI cable into the HDMI connector on the media player.
2. Plug the opposite end into the HDMI In port on your A/V receiver.
3. Plug an HDMI cable into the HDMI Out port on your A/V receiver.
4. Plug the opposite end into the HDMI port on your TV (if available).
5. Select the appropriate TV input source.



To connect a home theater system using S/PDIF:

1. Plug a S/PDIF cable into the S/PDIF connector on the media player.
2. Plug the opposite end into the S/PDIF In port on your A/V receiver.
3. Plug HDMI or composite connectors to the appropriate Out ports on the media player.
4. Plug the opposite end(s) into the appropriate port(s) on your TV.
5. Select the appropriate TV input source.
6. Set the appropriate audio output option on the media player. See “Audio/Video Output” on page 166.



HDMI and S/PDIF cables sold separately.

Step 4 - Connecting a USB Device (Optional)

The media player has two USB ports that support playback from WD USB external drives.*

* For a list of supported WD external drives, see article #5688 in our knowledge base at <http://support.wdc.com>.

To connect the USB device:

1. Connect the USB device to either of the media player's USB ports.



2. Wait for a few moments while the media player scans the USB device for media files. (Scanning is enabled by default. If you want to turn off automatic scanning, go to "Media Library Compilation" on page 52.)

To unlock a locked WD USB device:

A USB device must be unlocked for the media player to access its contents.

1. Navigate to the Home screen, and select the menu for the media content you wish to access. It can be Music, Videos, or Photo.
2. In the Unlock your WD Drive screen, press ◀/▶ to select **OK**, then press **OK**.
3. Use the navigation buttons ▲▼◀▶ to type in the USB drive access password in the on-screen keyboard. Select **Submit**, then press **OK**.

If a wrong password is entered, press ◀/▶ to select **OK**, press **OK**, then type in the correct password. If you enter the wrong password five consecutive times, the USB drive is placed in a hold state. Press **OK** to close the error message. Disconnect the USB drive. Power cycle and reconnect the USB drive and type in the correct access password.

4. Once the USB drive has been unlocked, the menu bar for the selected media type will appear. Press ▲/▼ to choose a filter option for displaying supported media contents, then press **OK**.

Supported content for the selected media type will be displayed.


5. Use the navigation buttons ▲▼◀▶ to select the content you wish to access, then press **OK** to start media playback.

Removing a USB Device

To prevent data loss, it is highly recommended that you first press the **EJECT** button on the remote control before removing a USB device.

To remove a USB device:

1. Press the **HOME** button .
2. Press the **EJECT** button .
3. Press **▲/▼** to select the USB device.
4. Press **OK**. With the  selected, press **OK** again.

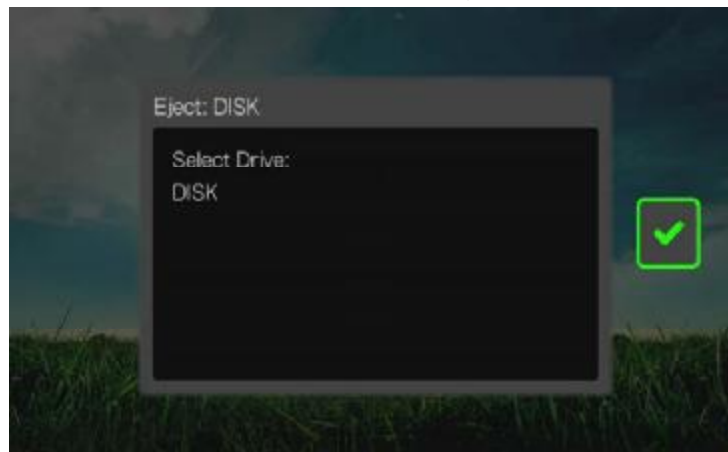

5. Disconnect the USB device from the media player.

Step 5 - Connecting to Your Network

The media player can be connected to your home network to access the Internet and network storage using a wired or wireless network connection. A network connection provides access to locally stored and online media content.

Wired Network Connection

To connect to a home network using an Ethernet cable:

1. Plug an Ethernet cable (sold separately) into the Ethernet connector on the media player.
2. Plug the opposite end of the Ethernet cable directly into a LAN port on a router or network switch.



For detailed instructions on wireless and wired network connections and configuration, go to the next page (“Network Setup” on page 22).



.....
Note: Streaming over wi-fi may be unstable due to various reasons such as a weak network connection, signal strength, variable speeds, or other environmental factors. You can create instant high-speed, wired network connections and gain fast, reliable access to the Internet without running wires all over your house using WD Livewire™ Powerline AV Network kit (sold separately). For more information, visit <http://products.wdc.com/WDLivewire>.

Accessing Media Content from the Network

See “Network Services” on page 28.

Accessing Online Media Content

See “Internet Services” on page 91.

5

Network Setup


The media player can be connected to the local area network using a wired or wireless network connection for access to streaming video and online and offline media content.

Ethernet Network (Wired) Setup

1. Plug an Ethernet cable into the Ethernet connector on the media player.
2. Plug the opposite end of the Ethernet cable directly into a LAN port on a router or network switch.
3. Navigate to the Home | Setup menu bar.
4. Press ▲/▼ to select **Network Settings**, then press **OK**.




5. Press ▲/▼ to select **Network Setup**, then press **OK**.

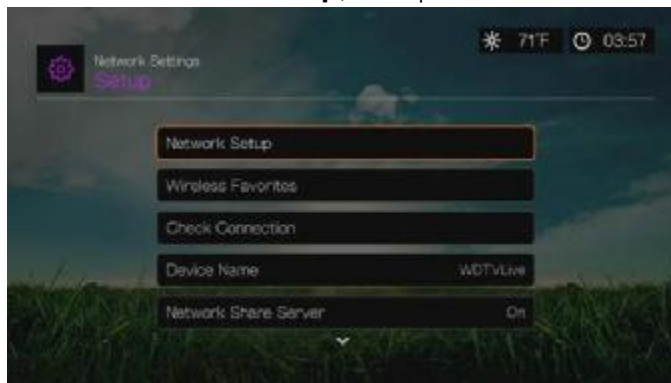


6. Select a setup configuration option, then press **OK**.
Select **Automatic** to have the device attempt to detect your network connection automatically, then go to step 11.


Select **Manual** to manually set your network connection, then proceed to step 7.

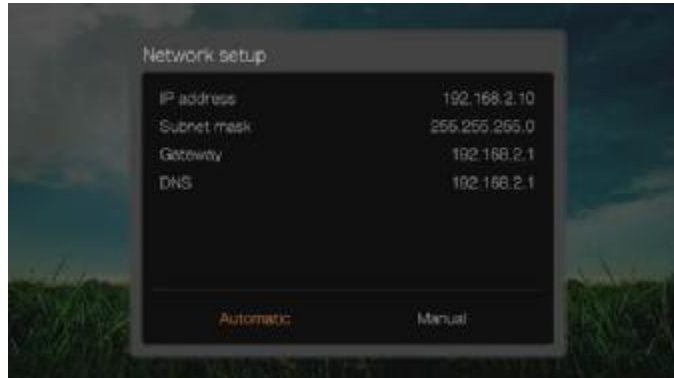

7. Once the network is detected, the following screen appears. Press ▲/▼ to select IP address, then press **OK**.

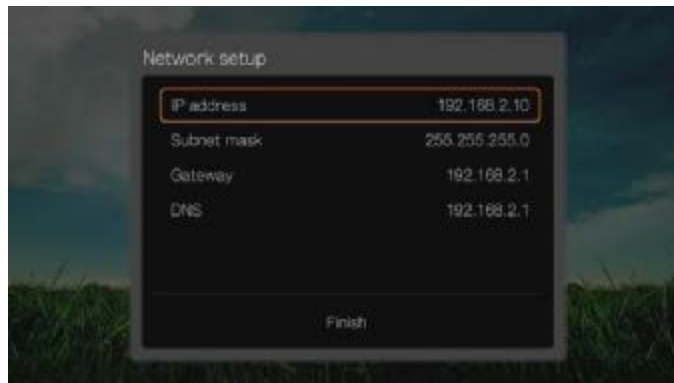


8. Press ◀▶ to key in your IP address using the on-screen keyboard. Select **Submit**, then press **OK**.

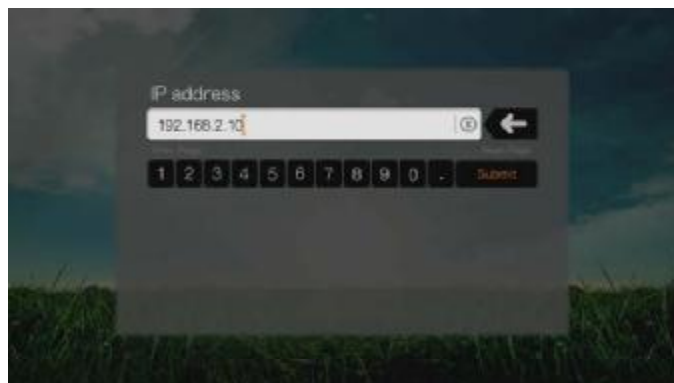

9. Repeat the step above to key in values for the subnet mask, gateway, and DNS settings.
10. After entering all the configuration settings, select **Finish**, then press **OK**.

11. Once the network is detected, the following screen appears. Press **OK** to display the Home screen.

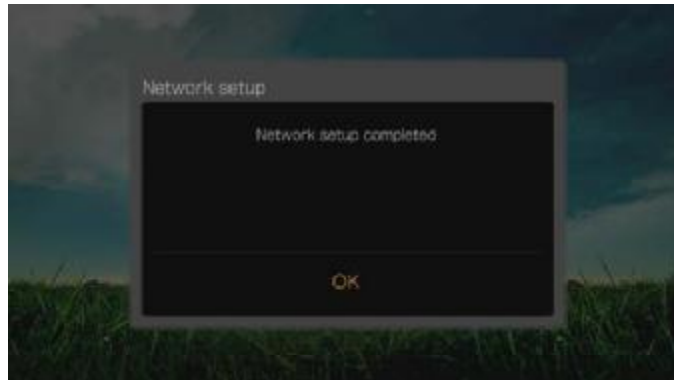


Wireless Network Setup



Note: The recommended setting on Wireless N routers is 802.11n-only with a channel width of 20/40 MHz. If you are using a wireless-N access point (AP) and it has been set to operate in 802.11n mode with a security setting of anything other than WPA2-PSK+AES or None, the media player operates at 802.11g rates. Disabling wireless security is not recommended.

1. Navigate to the Home | Setup menu bar.
2. Press ▲/▼ to select **Network Settings**, then press **OK**.
3. Press ▲/▼ to select **Network setup**, then press **OK**.
4. Use the ◀▶ navigation buttons to select **Wireless**, then press **OK**.

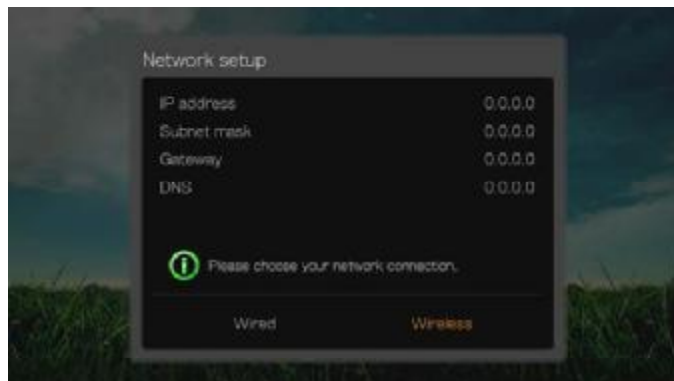

5. Press ▲/▼ to select a setup option, then press **OK**.



- **Auto search** – The media player automatically searches for available access points in your area.
- **Manually enter the wireless network name** – Use the on-screen keyboard to input the network name (SSID) manually.




.....
Important: Manual configuration is only recommended for advanced users.

- **Wi-Fi Protected Setup (WPS)** – Enter a PIN or push the WPS button on the router (if available).

Auto Search or Manually Enter Wireless Network Name

1. Press ▲/▼ to select the available wireless network you want to connect to, then press **OK** (for Auto Search, proceed to step 3).
2. Use the navigation buttons ▲▼◀▶ to type in the SSID for the access point you want to connect to, select **Submit**, then press **OK**.
3. Use the navigation buttons ▲▼◀▶ to key in the passcode for the access point, select **Submit**, then press **OK**.

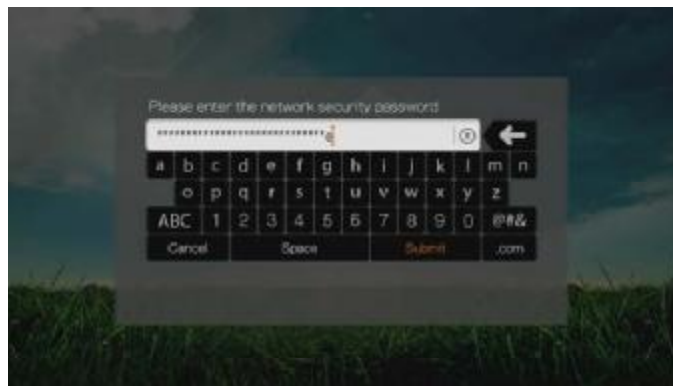

4. Use the navigation buttons ◀▶ to select **Automatic** (obtains IP address automatically from the router) or **Manual** (input static IP address manually), then press **OK**. If you selected **Manual**, follow steps 7-10 under “Ethernet Network (Wired) Setup” on page 22.
5. Once the network is successfully set up, press **OK** to display the Home screen.

Wi-Fi Protected Setup (WPS)

Press ▲/▼ to select the method you want to use, then press **OK**.



WPS Button

1. Press the WPS button on your wireless router.
2. Press **OK** on the remote.


PIN Code

1. Enter the WPS PIN code shown on-screen in your wireless router's web configuration page.



2. Press **OK** on the remote.

After performing one of the wireless setup functions above, press **OK**.

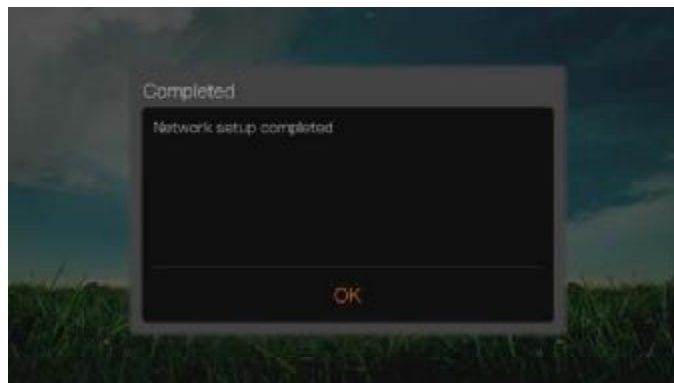

After establishing a network connection, you can:

- Use the Internet services integrated into your media player to access streaming media. See “Internet Services” on page 91 for more information on these services.
- Access your media files on the network. See “Network Services” on page 28.


Checking the Network Connection

If you experience network problems, check the network connection to determine the cause of the problem.

To check the network connection:

1. Press **Setup** or navigate to the Home | Setup menu bar.
2. Press ▲/▼ to select **Network Settings**, then press **OK**.
3. Press ▲/▼ to select **Check Connection**, then press **OK**.

The unit will automatically check the network connection. Once the check is completed, the results display. A green check mark on these items indicate that there is no problem with your network settings. If a problem is indicated, check your router settings and manual for a solution.

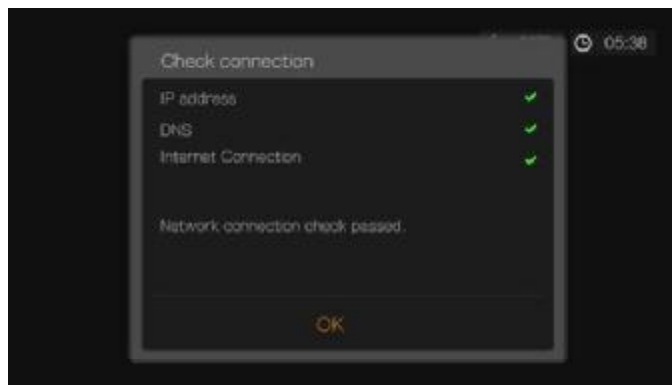

A red cross mark indicates a problem with the network settings. It can either be the IP address or the DNS server address. If the problem persists, check with your Internet service provider.

6

Network Services

This section describes how you can use the media player to access your digital media collection over the local network.

- **Share a folder on your computer** – view and play back digital media content stored on your computer by sharing one or more folders containing the media. See [“Share a Folder on Your Computer” on page 28](#).
- **Access network attached storage** – view and play back digital media content stored on your network attached storage device or media server. See [“Accessing Media Content” on page 36](#).
- **Access your online media** – view and play back your digital media content stored in your Facebook or Picasa online accounts. See [“Accessing Media Content” on page 36](#).
- **Attach USB storage** – attach a USB storage device to the media player and transfer media files back and forth to it using your computer. See [“Transferring Files” on page 38](#).

Share a Folder on Your Computer

You can view and play back digital media content stored on your computer by sharing one or more folders containing the media.

Make sure the media player and your computer are both attached to the network, then follow the instructions below for your operating system (Windows 7/Vista/XP or Mac).



.....
Important: Be sure to update your operating system to the latest update or service pack. Depending on your network's configuration you may need to disable or adjust your Firewall settings to view your shared folder on your network. Contact your Firewall manufacturer for assistance.

When finished following the instructions for your operating system, go to [“Accessing a Shared Folder” on page 37](#).


Windows 7

Change Settings to Allow Folder Sharing

The first thing you need to do to allow folders to be shared with the WD TV Live is to determine how your network is configured. Follow the instructions below to determine what kind of network you have.

1. From the Control Panel, click **Network and Internet**.
2. Click **Network and Sharing Center**.

- Look under View your active networks to determine if your network is Home, Work, Public, or Domain.

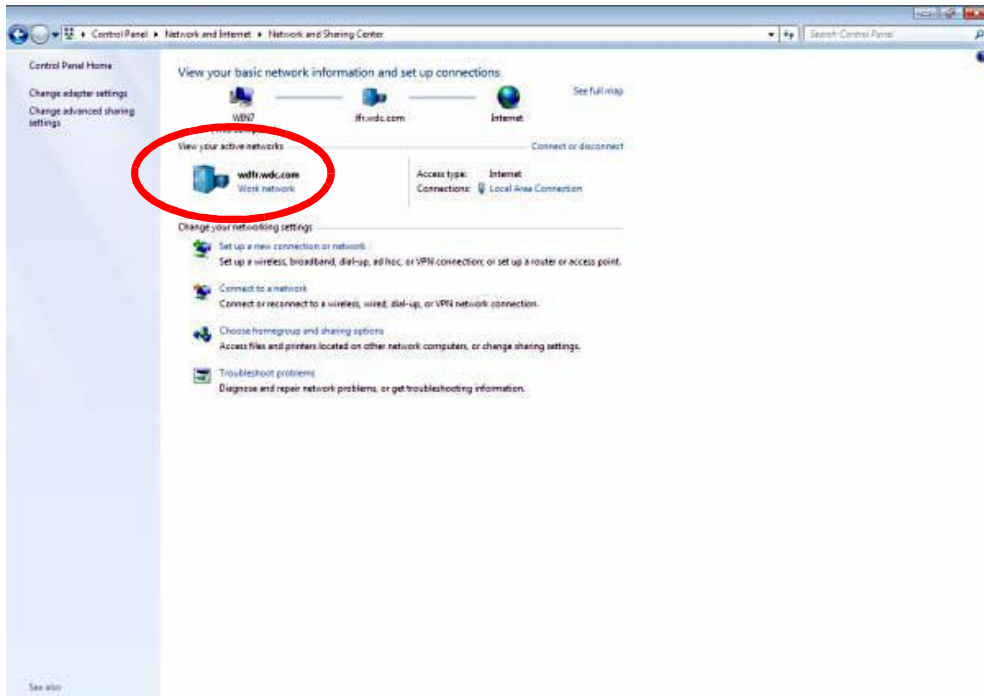

- If you have a Work network, proceed to step 6. If you have a Public network, click the **Public network** link.
- Click **Work network**.



- Click the **Choose homegroup and sharing options** link.
- Click the **Change advanced sharing settings...** link.
- Ensure that the following options are selected: **Turn on network discovery**, **Turn on file and printer sharing**, **Media streaming is off**, and **Allow Windows to manage homegroup connections (recommended)**.




Note: WD does not support streaming from a domain server, or a computer attached to a domain, to the WD TV Live. Please contact your domain administrator or Microsoft Support for assistance.


Share a Folder

Follow the instructions below to share a folder in Windows 7.


1. Navigate to the folder you want to share. Once found, right-click on the folder and select **Properties**.
2. Click the **Sharing** tab.
3. Click the **Advanced Sharing** button.

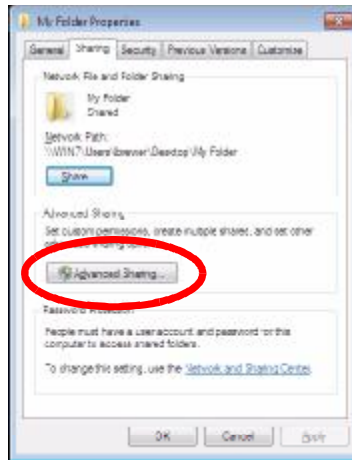

4. Click the **Share This Folder** box.
5. Enter the name you would like this folder to appear on the network as in the **Share name** box.
6. Click the **Permissions** box.

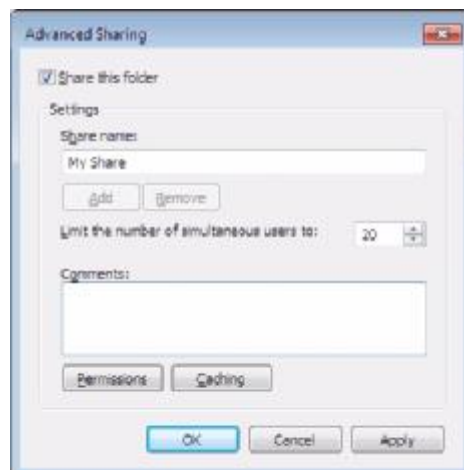

7. Select the users you would like to give access to and the permissions you would like to assign to that user, then click **OK**.

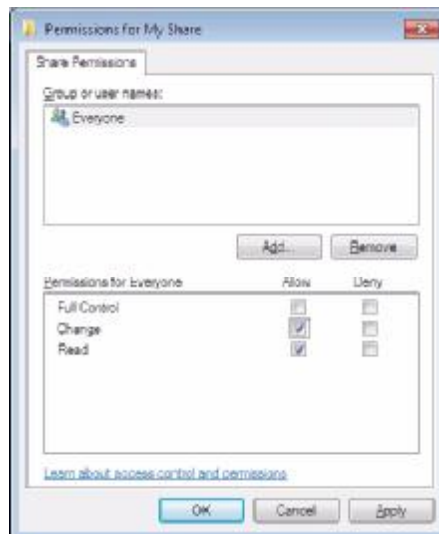


8. Click **OK** to close the Advanced Sharing window.
9. Finally, click on **OK** one more time to close the folder properties window and save your changes.

Windows Vista


Change Settings to Allow Folder Sharing

Follow the instructions below to configure your computer for folder sharing in Windows Vista.

1. Open the Network And Sharing Center from the Control Panel.

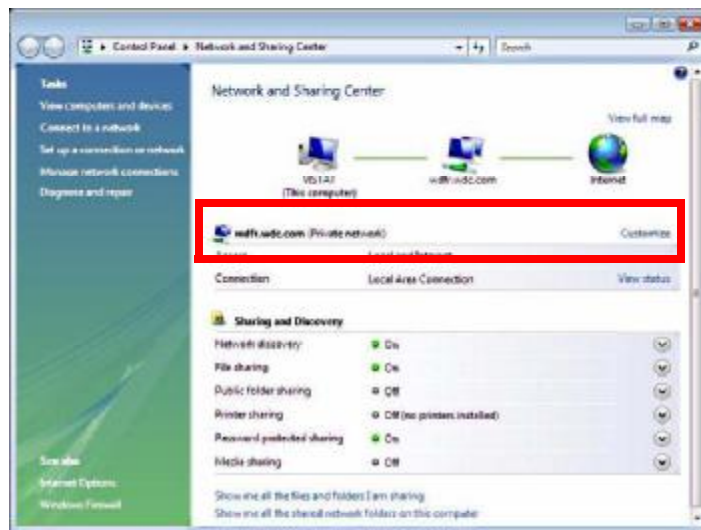

2. Next to the name of the network look to see if it is a Private or Public network.
3. If your network is Private skip to step 5 below. Otherwise, click the **Customize** link.
4. Click **Private**, then click **OK**.
5. If it is set to **Off** expand the **File Sharing** field and change it to **On**.
6. If you want to share the pre-designated Public folders in Windows, expand the **Public folder sharing** field under Sharing and Discovery.

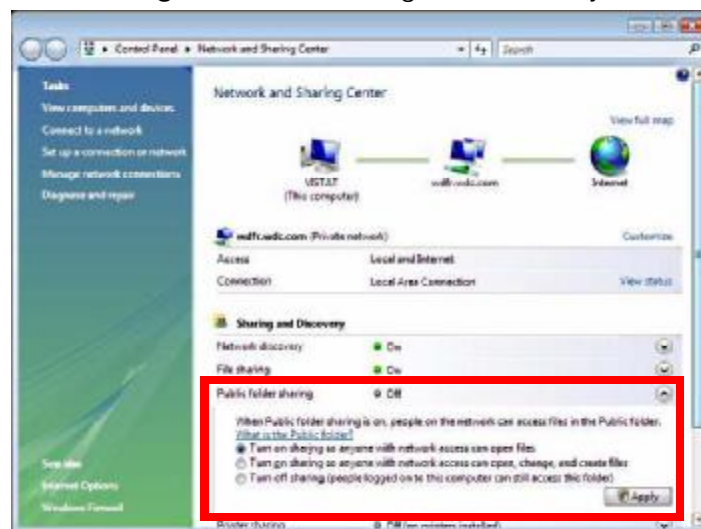

7. Select your choice of the two "Turn on sharing..." options.
8. Click **Apply**.

Share a Folder

Follow the instructions below to share a folder in Windows Vista.

1. Navigate to the folder you want to share. Once found, right-click on the folder and click **Share**.
2. If your system requires a login to access a shared folder, select a User account to assign to the share, then click **Share**. Otherwise, simply click the Share button.



3. Under Sharing and Discovery expand the **Public folder sharing** field.



4. Depending on your system speed you may or may not see a progress bar while the permissions on the folder are updated. Click **Done**.

Windows XP

Follow the instructions below to share a folder in Windows XP.

1. Right-click on the folder you want to share and select **Sharing and Security**.
2. Click **Share this folder**.
3. Choose a name you want the folder to appear as on your network and enter it in the **Share Name** field.



Note: You can also set a maximum number of users able to access your drive at one time. To do this, click "Allow this number of users:" and set the number in the field to the right.

4. Click **OK**.


Mac

Follow the instructions below to share a folder within Mac OS 10.5 or 10.6.


1. Open the Apple menu from the upper left corner of your screen and click **System Preferences**.
2. Click the **Sharing** button under the Internet & Wireless group.



3. Choose a name for your computer on the network and type it in the **Computer Name** field.
4. Click the box next to **File Sharing** to turn on the file sharing service. Then click on the + sign button below the **Shared Folders** box.

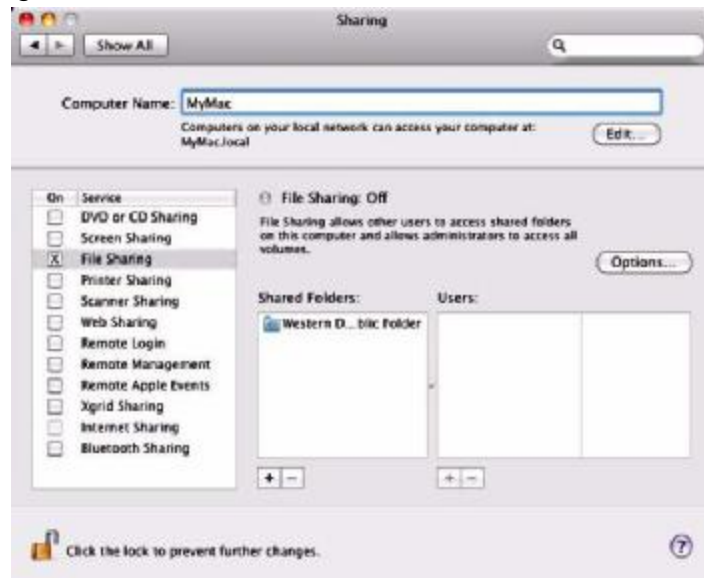

5. To share additional folders beyond the default Public folder, select the folder you would like to share and click the **Add** button.

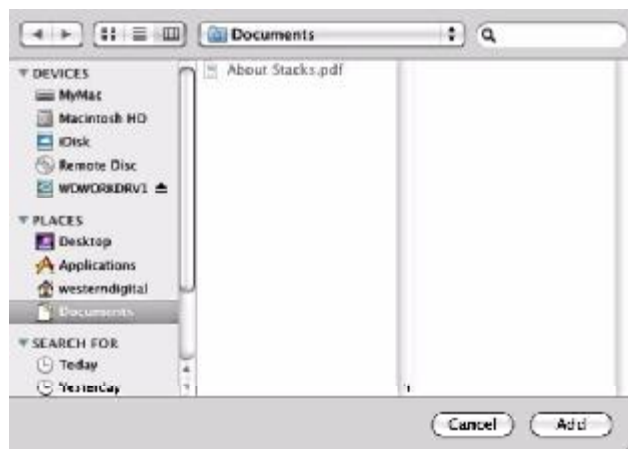








6. Click on the red **x** in the upper left corner to close the window.

Accessing Media Content


Once the media player has an active network connection, you can access media content from a NAS device or shared computer located on the same network as your media player.


To access media content from a network share, media server, or online account:

1. Navigate to the Home screen, and select the menu for media content you wish to access. It can be Music, Videos, or Photos. Press **OK**.
2. Press **OK** to select a new content source or press  or  /  to select Select Content Source , then press **OK**.
3. Press  /  to select the network resource where the media content you want to access is located, then press **OK**.

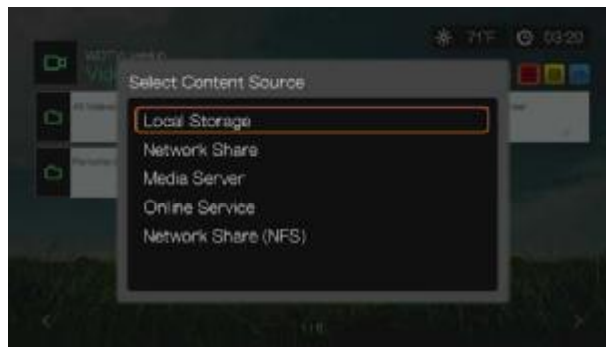

Logging in to a Network Resource or Online Account

When accessing a network resource, you need to enter in the user name and password for the device or account using the on-screen keyboard. In some cases, a default anonymous login displays if no password is set for the device. When this happens, accept the default login, select , then press **OK**.

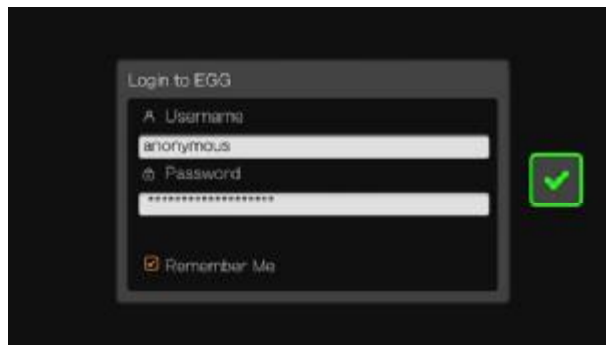

Select **Remember Me** and press **OK** to have the media player remember the user name and password for the resource.

Local Storage

Select Local Storage to access media content on a USB storage device connected to the media player. If the media player and your computer are attached to the network, you can transfer files back and forth between your computer and the USB storage device. See “Transferring Files” on page 38.

Network Share


This menu displays shared computers and network attached storage devices (such as WD’s My Book® Live™ personal cloud storage NAS drive) connected to your network via the Samba protocol.

Accessing a Shared Folder

To create a shared folder, follow the instructions under “Share a Folder on Your Computer” on page 28.

To access a shared folder under Network Share:

1. Select the name of your computer and press **OK** twice.

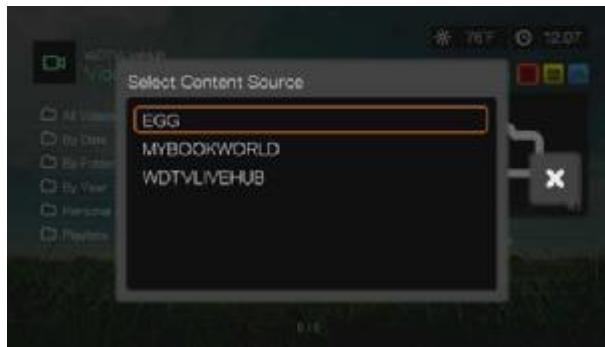

2. If necessary, enter your user name and password to access your computer, or accept the default login. For further information regarding password setup and administration, refer to your operating system documentation.
3. Press **▶** to select **OK**, then press **OK**. Supported content for the selected media type displays.
4. Select the content you wish to access, then press **OK** to start media playback.

Accessing Network Attached Storage


Follow the steps above under “Accessing a Shared Folder,” selecting the name of your NAS device and referencing your NAS device documentation for password setup and administration.

Media Server

This menu displays network attached media servers (such as the WD TV® Live Hub™ media center) connected to your network via the DLNA protocol. Follow the steps above under “Accessing a Shared Folder,” selecting the name of your media server and referencing your media server documentation for password setup and administration if necessary.

Online Service

This menu allows you to connect to media content stored in your Facebook and Picasa online accounts. Select **Facebook** or **Picasa** and enter your user name and password to access your media content.

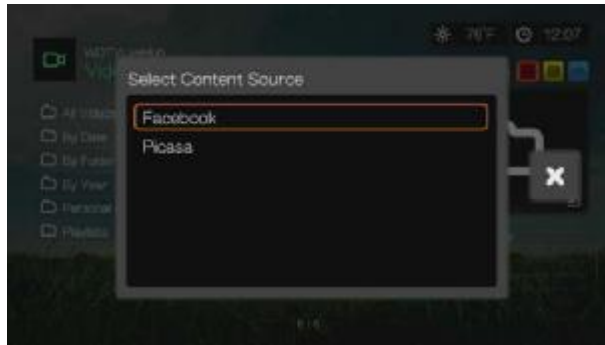

Network Share (NFS)

This menu displays shared computers and network attached storage devices connected to your network via the NFS protocol.

Follow the steps above under “Accessing a Shared Folder,” selecting the name of your NAS device or computer and referencing your NAS device or operating system documentation for password setup and administration if necessary.


Transferring Files

If the media player has an active network connection, any USB drive connected to it can serve as a network drive. This allows you to transfer files between your media player and your computer. This feature is applicable to a PC running the Windows® XP, Windows Vista®, or Windows 7 operating systems, as well to a Macintosh® computer running Mac® OS X® Leopard® or Snow Leopard®.

Enabling File Sharing on the Network Share (Samba Server)


1. Navigate to the Home | Setup menu bar.
2. Press ▲/▼ to select Network Settings, then press **OK**.

- Press ▲/▼ to select **Network Share Server** and make sure the option is set to **On**.

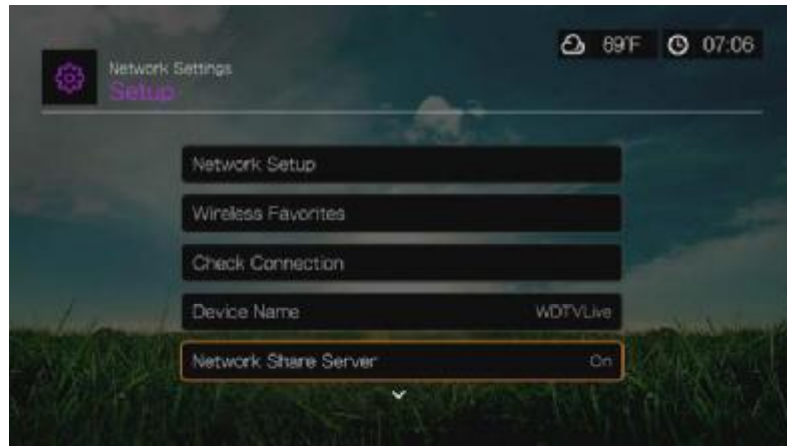

- Note the name indicated in the **Device name** field. This will help you identify your media player on the network.

Moving Files Between the Media Player and a Windows Computer

- Connect the USB hard drive you need for the file transfer to your media player.
- Ensure that your computer is on the same network as your media player and that the file sharing option is enabled. Refer to Windows Help for instructions on how to enable file sharing on your computer.
- Download the WD Discovery tool from <http://products.wdc.com/WDTVLive>.
- Double-click on the downloaded installer file and follow the on-screen prompts to install WD Discovery.
- Click  or **Start**, then click **Programs > WD Discovery > WD Discovery**.
- Click **WDTVLive** in the Network Drives Found list and **Browse Network Shares** in the Things To Do list.




- The USB drive connected to your media player displays.




- Click the USB drive you need for the file transfer. The USB drive contents display in a Windows Explorer window.
- Locate the file(s) you intend to transfer and do a Copy/Paste, Cut/Paste, or Drag/Drop operation.

Moving Files Between the Media Player and a Windows Vista / Windows 7 Computer


- Connect the USB hard drive you need for the file transfer to your media player.
- Ensure that your computer is on the same network as your media player and that the file sharing option is enabled. Refer to Windows Help for instructions on how to enable file sharing on your computer.
- Open a Windows Explorer window, then click **Network**. Your media player is listed on the network resources list.

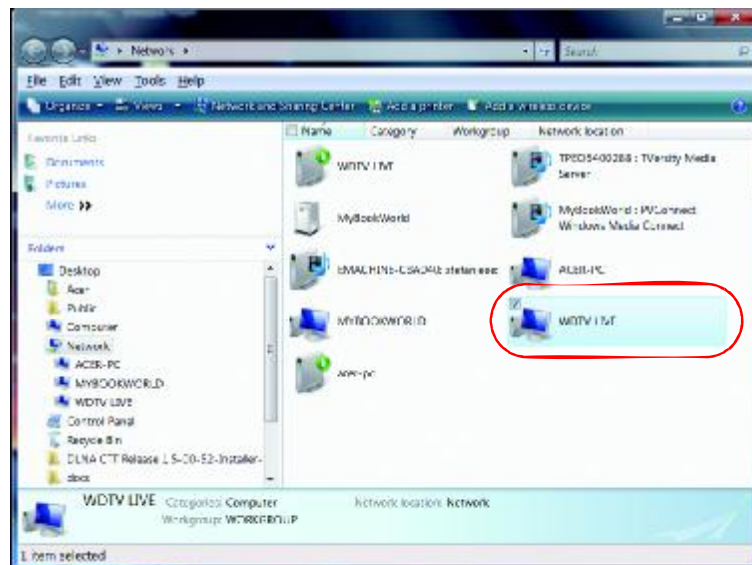

- Click the device corresponding to your media player.

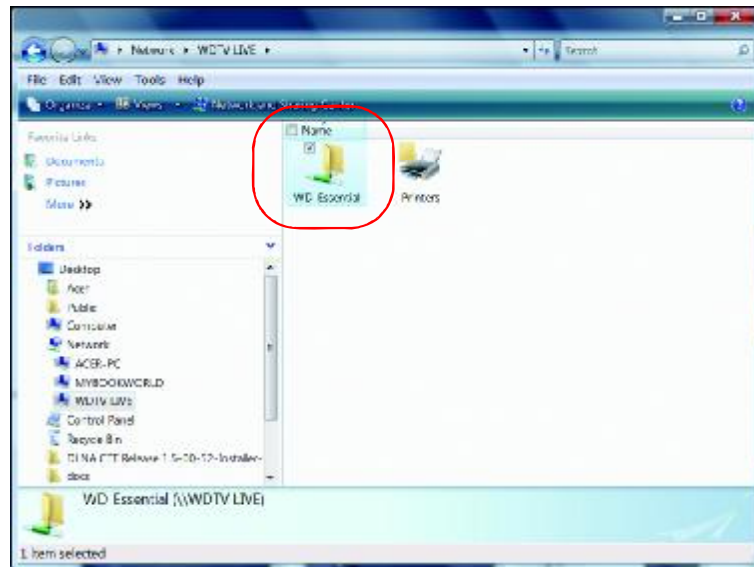

- Click the USB drive you need for the file transfer to display its contents.

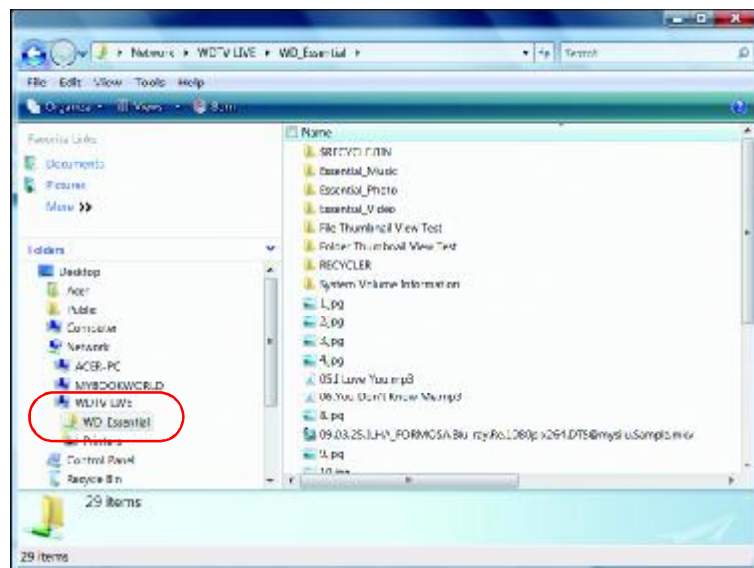


- Locate the file(s) you intend to transfer and do a Copy/Paste, Cut/Paste, or Drag/Drop operation.

Moving Files Between the Media Player and a Mac Computer

- Connect the USB hard drive you need for the file transfer to your media player.
- Ensure that your computer is on the same network as your media player and that the file sharing option is enabled. Refer to Apple Help for instructions on how to enable file sharing on your computer.
- Open a Finder window.
- On the Finder side bar, click **Shared**. Your media player is listed on the shared resources list.

- Click the device corresponding to your media player. The USB drive connected to your media player displays.

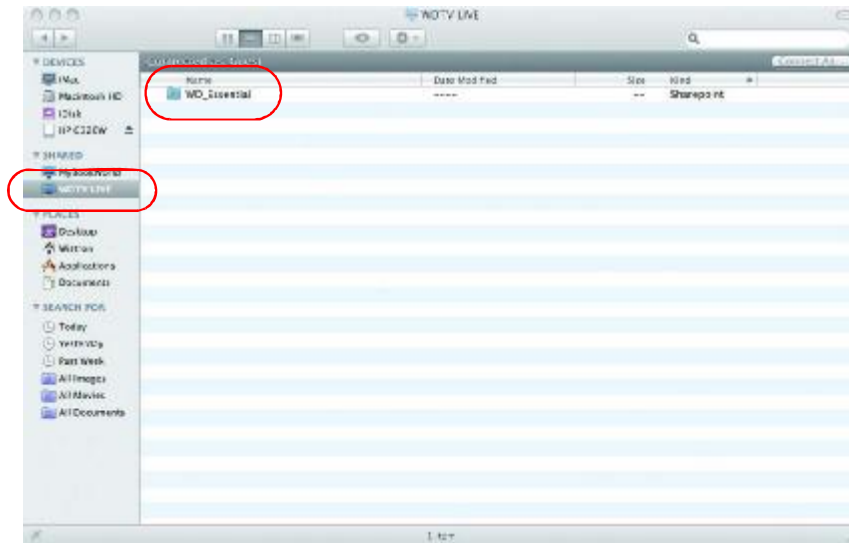

- Click the USB drive you need for the file transfer to display its contents.
- Locate the file(s) you intend to transfer and do a Copy/Paste, Cut/Paste, or Drag/Drop operation.

Using the Web UI

The media player provides a Web-based user interface (UI) that can be used to control certain functions. You must use a network-connected computer or smart phone to use the Web UI.



.....
Important: Your media player must be set up on the network (see “Network Setup” on page 22 for further information) to use the Web UI.

Launching the Web UI

- Open a Web browser and type in your media’s center’s IP address in the address field. Press **ENTER** on your computer keyboard.



.....
Note: To find your media player’s IP address, press **Setup** on the remote controller and navigate to **Network Settings**. Select **Network Setup** to see the media player’s IP address.

- The Web UI launch page displays. Enter the default password (“admin”) in the **Password** field.
- Select your preferred language from the **Language** list.

4. Click **I accept END USER LICENSE AGREEMENT**, then click **Login**. You can also click **Keep me signed in**.




5. The Web UI menu options display.




System

Click **System** in the Web UI home page to manage the system status of your media player and view general network information and important messages. You can change the password, set system preferences, and choose date and time settings using these options.

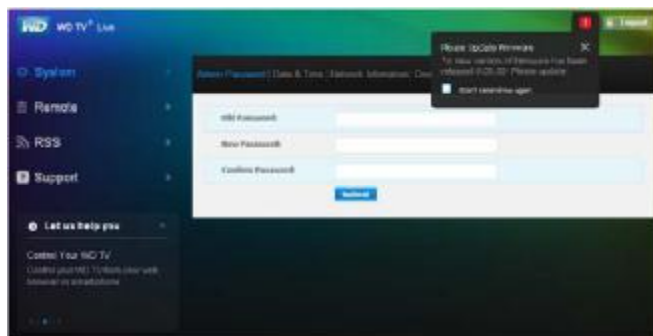

Remote

Click **Remote** in the Web UI home page to control the media player using your computer. Click the buttons on the virtual remote controller to control your media player (see “Using the Remote Control” on page 46 for further information).

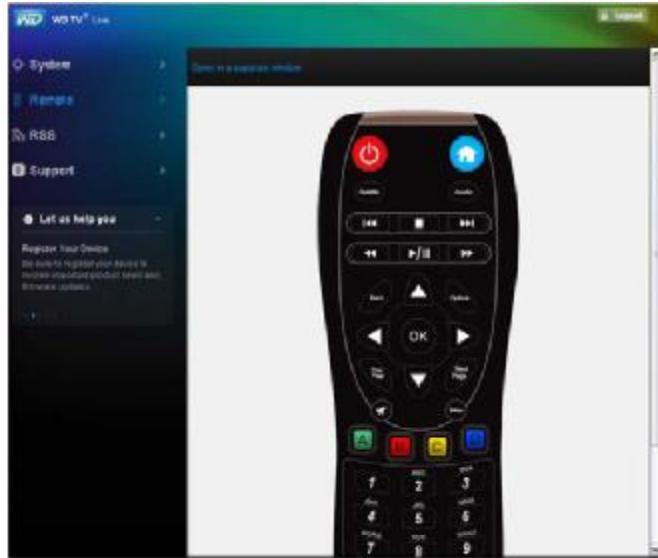


Click the **Open in separate window** link to open the virtual remote controller in a new browser screen. You can copy the URL from this browser screen and enter it in a browser on your smartphone. Then, you can use your smartphone as a virtual remote controller by touching the buttons on the screen.

Enter on-screen keyboard commands in the **Submit** field using your computer or smartphone keyboard, then click or press **Submit** when finished.




RSS

Click **RSS** to view your RSS subscriptions and category folders. Here, you can add a new subscription or a new folder to categorize your subscriptions.

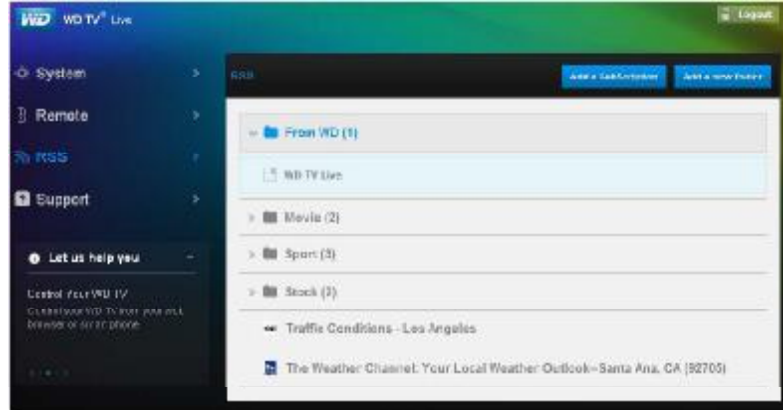

Support

Click **Support** to access Express Customer Support (includes diagnostic test) and Support Documentation including product documentation, FAQ's, and a WD TV user forum.

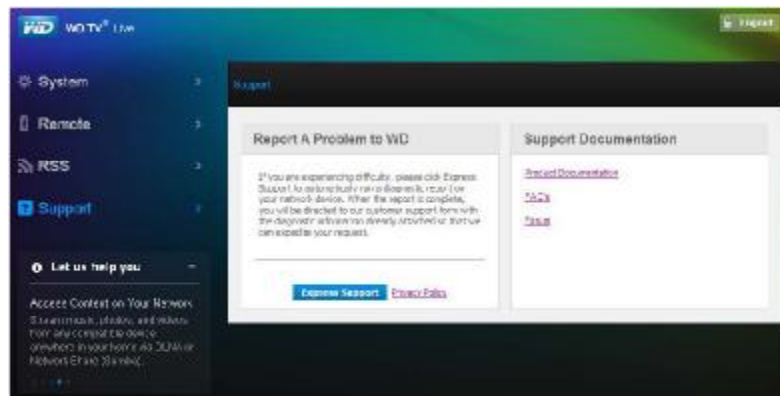

Logout

Click the **Logout** button in the main menu to log out of the Web UI.

7

Operating the Media Player






 


Using the Remote Control

The media player's ergonomic remote control lets you navigate the Home screen, browse for media files, enable playback options, and customize the system settings. The infrared sensor detects signals from the remote.



Important: Make sure there are no obstructions between the remote control and the infrared sensor on the media player.

 

 

Button	Function
HOME	Displays the main menu and the various options for playback of files and device setup.
POWER	Suspends the device into sleep mode and turns off video output. Press and hold the power button for five seconds to completely shut down the media player.
Navigation buttons	Navigate through Home options, menu screens, media libraries, on-screen keyboards, and toolbars.
OK	<ul style="list-style-type: none"> Displays the media directories and Settings screens. Turns information bar ON or OFF. Begins playback of the selected media file. Enables the currently selected setting in a Settings option screen.
STOP	Discontinues playback.
Back	Goes back to the previous screen.
REV (reverse)	Scans backward during audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
PREV	<ul style="list-style-type: none"> Press once to jump to the start of the audio/video file. Press twice to jump to the previous audio/video/image file. Press to page up. During Video REV mode, press to skip back 10 minutes.
SEARCH	Locates a media file in the current folder. This function is only available when the Media Library setting is enabled. Does not search subfolder.
Options	During playback, displays additional playback options. From an online media content screen, press to display more service options.
PAUSE/PLAY	Toggles between pause and playback.
FF (fast forward)	Scans forward through the audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
NEXT	<ul style="list-style-type: none"> Skips to the next audio, video, or image file. Press to page down. During Video FF mode, press to skip forward 10 minutes.

Button	Function
EJECT	Switches to safe mode so you can safely remove a USB device.
MUTE	Turns off the volume output
Subtitle	Switches a video's subtitles (if applicable)
Audio	Switches a video's audio stream (if applicable)
Setup	Brings up the Setup menu
Alpha-numeric keys	<ul style="list-style-type: none"> Pressing the any of these keys once inputs the corresponding number. Pressing keys 2-9 multiple times inputs the corresponding alpha characters. While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.
A, B, C, D	<p>User assignable shortcut/function keys. See "Remote Settings" on page 179. Default settings are as follows (only valid when inside the Videos, Music, or Photos menus):</p> <p>Pressing  activates the  sort and filter menu.</p> <p>Pressing  activates the  select content source menu.</p> <p>Pressing  activates the  change view menu.</p> <p>Pressing  activates the  dashboard menu.</p>

Using a USB Keyboard


As an alternative to using the remote control, you can plug a USB keyboard into either of the two USB ports on the media player.

Key or key sequence	Function
HOME	Displays the main menu and the various options for playback of files and device setup.
CTRL + P (Power)	Suspends the device into sleep mode and turns off video output.
UP, DOWN, LEFT, & RIGHT ARROWS	Navigate through Home options, menu screens, media libraries, on-screen keyboards, and toolbars.
ENTER	<ul style="list-style-type: none"> Displays the media directories and Settings screens. Turns information bar ON or OFF. Begins playback of the selected media file. Enables the currently selected setting in a Settings option screen.
S (Stop)	Discontinues playback.
ESC (Back)	Goes back to the previous screen.
- (Reverse)	Scans backward during audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.

Key or key sequence	Function
P (Previous)	<ul style="list-style-type: none"> Press once to jump to the start of the audio/video file. Press twice to jump to the previous audio/video/image file. Press to page up. During Video REV mode, press to skip back 10 minutes.
CTRL + F (Search)	Locates a media file in the current folder. This function is only available when the Media Library setting is enabled. Does not search subfolder.
CTRL + O (Options)	During playback, displays additional playback options. From an online media content screen, press to display more service options.
SPACE BAR (Play/Pause)	Toggles between pause and playback.
+ (FF)	Scans forward through the audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
N (Next)	<ul style="list-style-type: none"> Skips to the next audio, video, or image file. Press to page down. During Video FF mode, press to skip forward 10 minutes.
CTRL + E (Eject)	Switches to safe mode so you can safely remove a USB device.
M (Mute)	Turns off the volume output
V (Subtitle)	Switches a video's subtitles (if applicable)
B (Audio)	Switches a video's audio stream (if applicable)
DELETE	Clears the data entry field.
Z (Zoom)	Zooms in on the currently playing video file or photo.
R (Shuffle)	Enables the shuffle function for Videos and Music files.
L (Repeat)	Repeats the current video or music file.
BACKSPACE	Deletes the currently selected file.
CTRL + S (Setup)	Brings up the Setup menu
Alpha-numeric keys	<ul style="list-style-type: none"> Pressing the any of these keys once inputs the corresponding letter or number. While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.
CTRL + A CTRL + B CTRL + C CTRL + D	<p>User assignable shortcut/function keys. See "Remote Settings" on page 179. Default settings are as follows (only valid when inside the Videos, Music, or Photos menus):</p> <p>Pressing CTRL + A activates the  sort and filter menu.</p> <p>Pressing CTRL + B activates the  select content source menu.</p> <p>Pressing CTRL + C activates the  change view menu.</p> <p>Pressing CTRL + D activates the  dashboard menu.</p>

Using the Media Player Menu

The Home screen displays when turn on your media player or press **HOME** on the remote control. The menu options in this screen let you browse your media library and configure the media player's settings.

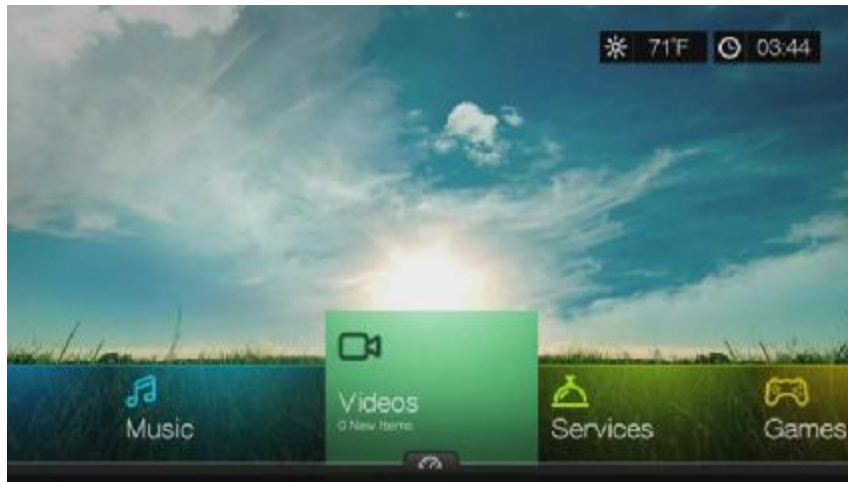

Home Screen Options

The main Home options are:

- Videos
- Music
- Photos
- Files
- Setup
- Services
- Games
- RSS
- New Firmware (automatically detects new firmware and only appears when new firmware is available)

The Music, Videos, and Photos options represent folders for the different media types. Media contents display either as file/file folders in the media player, network attached storage, or a USB drive directory or as a media library compilation list based on metadata information. For example, music files can be categorized based on their genre or the artist's name.

Setup lets you customize the way you use the media player and set preferences for media playback. For more information, see "Setup and Advanced Features" on page 165.

Setting Time and Weather

- To set the time in the media player screen display, see "Set Time Zone for Clock" on page 180.
- To set the temperature in the media player screen display, see "AccuWeather.com" on page 94.


Home Screen Navigation


Use the following keys to navigate through the menu screens.

Button	Function
◀▶ Left/Right arrows	Move from one option to the next
▼ Down arrow	View the dashboard
OK	Launches your selection

Media Player Dashboard

Press ▼ at the home screen or navigate to  then press **OK** in the in the Videos, Music, or Photos menus to launch the dashboard. Press ▼ or **Back** to exit the dashboard. Your Favorites are shown by default.

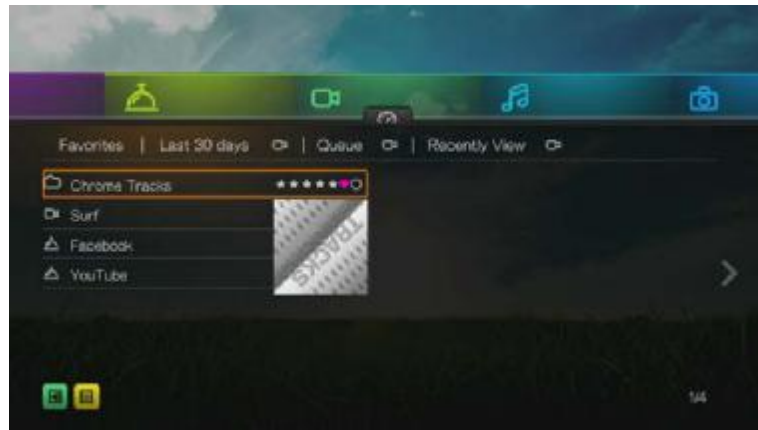

Navigate to  to filter the media files and internet service links shown on the main dashboard page by category and media type. For example, to find photos you have added in the last 30 days, select Last 30 days and press **OK**, Photo and press **OK**, then press **OK** again.



Navigate to  and press **OK** to toggle between list and thumbnail views.


Press ▲, Use the ◀/▶ navigation buttons, then press **OK** in the dashboard to display your media files by the following categories:

- **Favorites** (see “Favorite” on page 62)
- **Last 30 Days** (displays media files you have added in the last 30 days)
- **Queue** (Use the ◀/▶ navigation buttons then select the Videos, Music, or Photos icon, then press **OK** - see “Add to Queue” on page 62)
- **Recently Viewed** (displays media files you have viewed in the last xx days)

After selecting a category, filter the results by media type (Videos, Audio, or Photo). Then, use the navigation buttons to select a file then press **OK** to begin playback.

Dashboard Options


With a file selected in any of the dashboard categories, press **Options**.

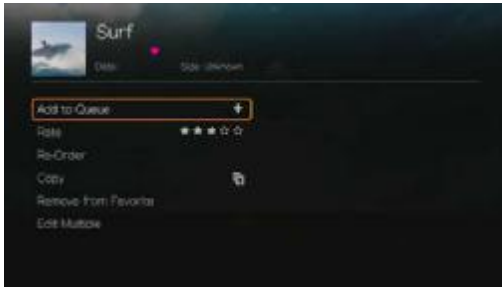

Dashboard Options - Favorites



Dashboard Options - Last 30 Days or
Recently Viewed

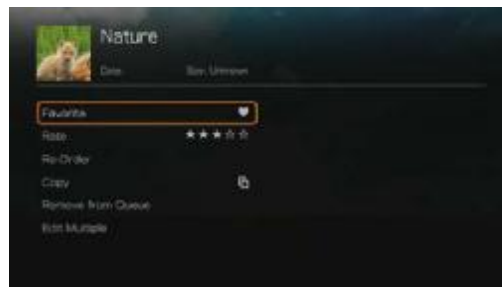

Dashboard Options - Queue

Use the ▲/▼ navigation buttons to select from the following options, then press **OK**.

- **Add to Queue** (when a file in Favorites, Last 30 Days, or Recently Viewed is selected - see “Add to Queue” on page 62).
- **Rate** (see “Rate” on page 62).
- **Re-Order** - use this option to move items up or down in viewing sequence in both Favorites and Queue categories. Using the navigation buttons, place the cursor where you want the selected file located.
- **Favorite** (when a file in Queue, Last 30 Days, or Recently Viewed is selected - see “Favorite” on page 62).
- **Copy** (see “Move & Copy” on page 63).
- **Remove from Favorite/Remove from Queue** - removes the selected file from the Favorites or Queue categories.
- **Delete** (see “Delete” on page 63).
- **Edit Multiple** (see “Select Multiple” on page 64).

Media Library Compilation

Media Library Compilation refers to the process of scanning and consolidating the media contents of the media player, network attached storage, or an attached USB device into one comprehensive database so that you can easily browse and locate media files based on certain metadata information (e.g., video files are categorized based on title or release date).


Media Library Compilation Exemptions

The following conditions will prevent the media library compilation process.

- The USB device has read-only protection.
- There is not enough storage space on the media player, network attached storage, or USB device.
- A drive is locked.

To turn off Media Library Compilation (default is On):

1. Navigate to Home | Setup | System.
2. Select **Media Library**, and then press **OK**.

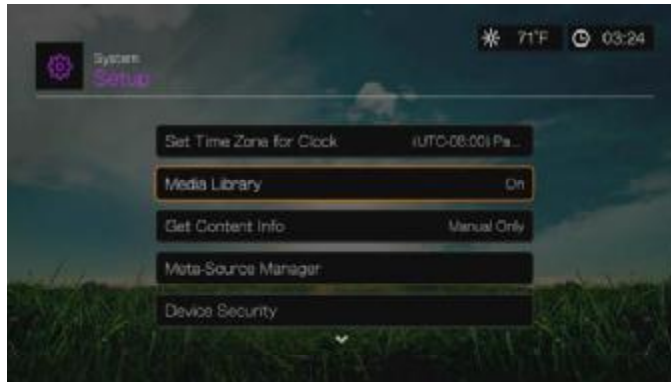

3. Select **OFF**, then press **OK**.



.....

Note: **Clear Media Library** clears then rebuilds the media library.

Supported Categories for Media Library Compilation

Once the media library compilation process is completed, all available media files are organized under their respective media type directory. By default, media contents are displayed as thumbnails (music album/movie poster art, image thumbnail). The content categories are listed in the following table.

Media Type	Category	Description
Music	All Tracks	Displays a list of all audio files arranged in alphabetical order.
	Artist	Content is categorized based on the artist name.
	Genre	Content is categorized based on genre.
	Album	Content is categorized based on album names.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in audio file folders.
	Recent	Displays a list of audio folders/files that have been accessed recently.
	Playlist	Displays a list of music playlists.



Media Type	Category	Description
Video	All Video	Displays a list of all video files arranged in alphabetical order.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in video file folders.
	Recent	Displays a list of video folders/files that have been played recently.
	Playlist	Displays a list of video playlists.
Photo	All Pictures	Displays a list of all image files arranged in alphabetical order.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in image file folders.
	Recent	Displays a list of image folders/files that have been accessed recently.

Locating Your Contents on the Drive

There are two ways of locating a particular media file depending on whether or not the media library compilation function is enabled.

Manual Search

You can manually search for a media file by navigating to the specific media section and browsing through the available file folders. This method is recommended if there are only a limited number of files to search through. Otherwise, it is better to enable the media library compilation and use the built-in Search function.

Button	Function
 Up/Down arrows	Select a media type (photos, video, or music) or settings Select one of the option icons in an Internet service's submenu bar
 Left/Right arrows	Move within a category
OK	Launches your selection

Use the navigation buttons to move around a particular folder; press **Back** to move between folders.

Thumbnail Support for Media Files

Your media player supports thumbnails in two ways - embedded or external (some file formats do not support embedded thumbnails).

Embedded thumbnails are images that are part of the media file itself. File formats that support embedded thumbnails:

Music - MP3 and WMA

Photo - JPEG

Video - MP4

To add an external thumbnail:

With an individual file or music album selected, press **Options**, then select **Get Content Info** (see “Get Content Info” on page 61). As an alternative, or if the database did not find any info:

1. Select a JPEG, GIF, or PNG image file that you want to display as a thumbnail of the music or video file.
2. Save the file in the same location as the file it will represent, according to the following guidelines:

Folder Thumbnail Guidelines

Music:

- Display folder.jpg (the image file must be named “folder.jpg” or thumbnail will not function)
- If no folder.jpg file is found, display the first embedded album art image found in the folder
- If no album art is available, display the first .JPG in the folder

Photo:

- Display thumbnail

Video:

- Display embedded cover art
- If no embedded cover art is available, display image file associated with the video file to be played (for example video.mkv will be associated with video.JPG)

File Thumbnail View Functions (Defaults)

Music:

- Display album art (.MP3 file with embedded .JPG)
- If no album art is available, display the image file with the same name as the audio file to be played. (for example, song.wav will be associated with song.jpg)

Photo:

- Display thumbnail


Video:

- Display .MP4 with embedded .JPG
- Display image file associated with the video file to be played (for example video.mkv will be associated with video.JPG)


Search Function

You must first enable the Media Library Compilation feature before using the Search function. Go to “Media Library Compilation” on page 52 for instructions.


To perform a media search:

1. Go to the main browser screen of the type of media you want to search for (**Videos**, **Music**, or **Photos**).
2. Press  on the remote control.


3. Select **Title**, **Director**, or **Actor** (Videos); **Title**, **File Name**, **Album** or **Artist** (Music); or **Title** (Photos). Press **OK**, then **▶** to select the **✔**. Press **OK**.

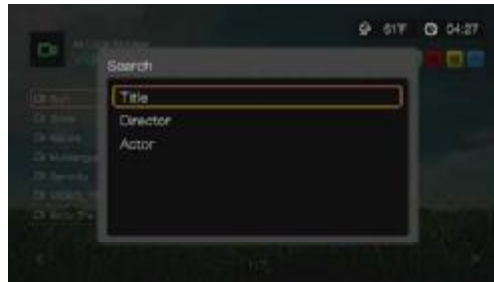

Search Options - Videos

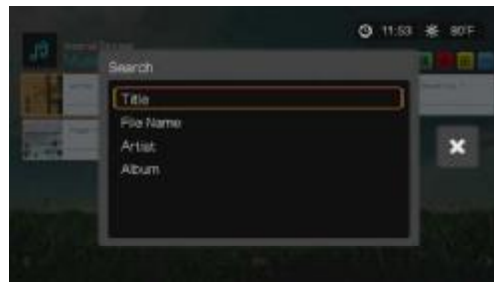


Search Options - Music

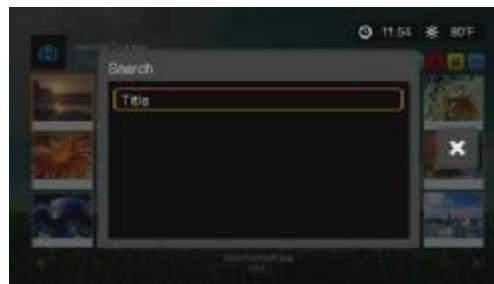


Search Options - Photos

4. Select **Contains** or **Starts with**, then press **OK** twice.

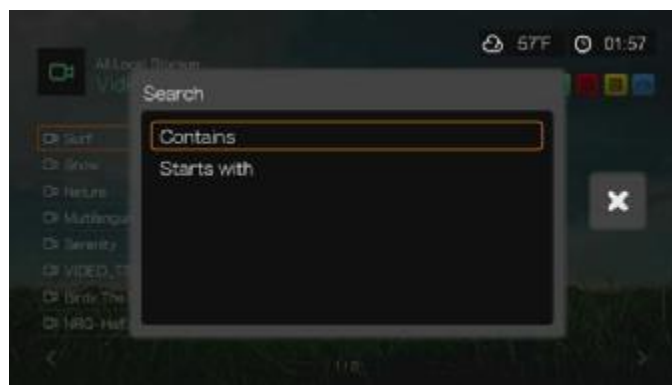

5. Using the on-screen keyboard:

- Use the navigation buttons to select a character, then press **OK** to input it in the search bar. Alternatives to this method are as follows:
 - Use the alpha-numeric keys on the remote control to enter search terms. For example, press the **2** button a number of times to enter a, b, or c; press the **3** button a number of times to enter d, e, or f, etc.
 - Plug a USB keyboard into the media player as an alternative to the methods above. See “Using a USB Keyboard” on page 47.
- Select **ABC** or **abc**, then press **OK** to input characters in a different case.
- Select **#+=**, then press **OK** to display the symbol keyboard for inputting special keyboard characters.
- Select **#+=**, then press **OK** to display the symbols for special characters such as *.com*, *www.*, *.net*, *.org*, etc.
- Press **Options** for multi-lingual/multi-character input (applicable to certain letters on the keyboard).
- If you want to erase the last character entered, navigate to **Del** then press **OK**.
- Navigate to **←** and press **OK** to move the cursor backward and **→** to move the cursor forward in the **Search** field (you can also press **⏪** to move the cursor backward and **Next Page** to move the cursor forward in the Search field).

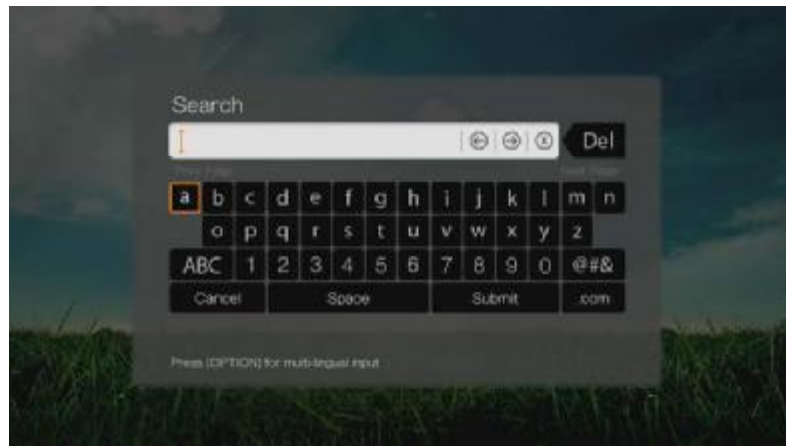
6. Once you define the search parameters, select **Submit** on the bottom of the on-screen keyboard, then press **OK**.

All files with filenames that begin with the characters entered in the search field will be included in the search results. For example, inputting 'glo' will result to a search results like this:

- Global party.mpeg
- Glow of the Field.jpg
- Gloss.mp3

7. If there are no media files matching the search parameters, press **OK** to display the on-screen keyboard again and redefine the search parameters.

If media files matching the search parameters you set are found, they will be listed as shown below (the result of entering 'bea' in Photos).

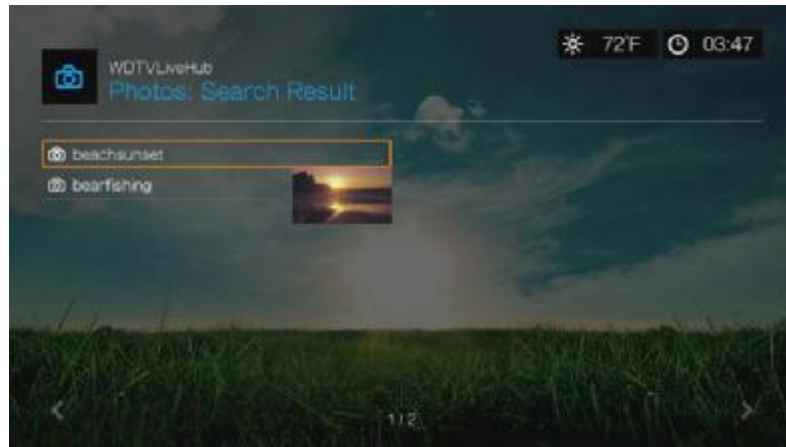

Use the navigation buttons to select the media file you are looking for, and then press **OK** or **|| ►** to initiate playback.

8

Watching Video

You can watch videos on your TV using the media player.

Supported Video Formats


The following video file formats are supported.

- AVI (Xvid, AVC, MPEG1/2/4)
- MPG/MPEG
- VOB/ISO
- MKV (h.264, x.264, AVC, MPEG1/2/4)
- TS/TP/M2T (MPEG1/2/4, AVC, VC-1)
- MP4/MOV (MPEG4, h.264)
- M2TS
- WMV9 (VC-1)

Video Playback

To play back video:

1. Navigate to the Home | Videos menu, then press **OK**.

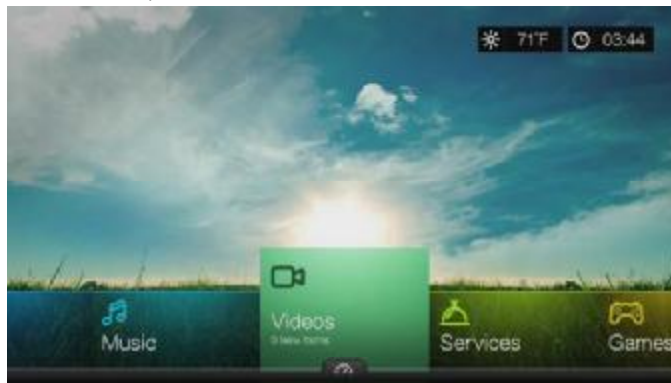

2. The screen displays available video files and video folders in the media player's local drive by default. The display will either be in preview view (default), grid view, list view, or gallery view, depending on your Browser Display setting (see "Video Settings" on page 171 for more information on Browser Display settings).

Preview mode displays file size, and file type and genre (if available) for the selected video.



If Media Library is enabled, you can choose to navigate using a filter option (**All Videos, By Date, By Folders, By Year, Personal rating, or Playlists**) by selecting the Video icon and then using the left and right arrow buttons on the remote control to scroll through the options listed. See “Supported Categories for Media Library Compilation” on page 53 for details.






3. Locate the video file you want to play.
 - To begin playback of a single video file, highlight the file, and then press **OK**.
 - To begin playback of a video playlist, highlight the playlist name, then press **PAUSE/PLAY**.
 - To begin playback of all video files in a folder, highlight a video in that folder, then press **PAUSE/PLAY**.
 - To find a video on a network share or media player, follow the instructions in “Accessing Media Content” on page 36.

If you try to open a video file that has been partially played before, you are prompted to choose whether to play the file from the beginning or resume playback from the last playback position. Select **Resume** to resume playback or **Restart** to start playback from the beginning.

Sort & Filter Videos


You can sort and filter the videos shown in the video menu based on your preferences using the sorting & filter option.

Filter

1. Press  or navigate to the sort and filter content icon , and press **OK**.
2. Press , then  /  to select Filter by All, Folders, Genre, Actor, Director, TV Show, Playlist, Untagged, New Items, and Favorites. Press **OK** to display videos by the criteria selected.




.....
Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

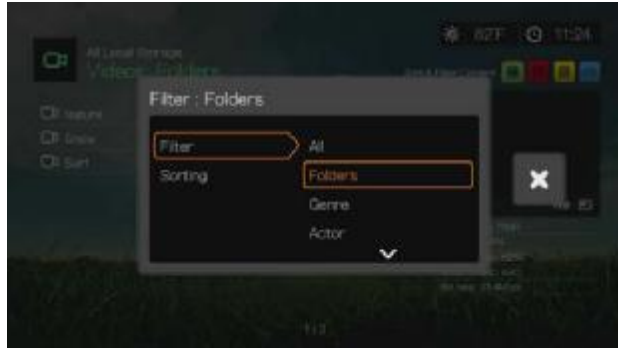


3. With the green check mark  selected, press **OK** again.

 Sorting


1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **▶**, then **▲/▼** to select Sorting by Date, Alphabetically, by Ratings, or by Recently Viewed. Press **OK** to display videos by the criteria selected in either ascending (arrow up) or descending (arrow down) order.



3. Press **▶**. With the green check mark  selected, press **OK** again.

Videos Menu Options


In the main Videos screen, press **Options**. The Videos menu options display. Press **Back** when finished to return to the main menu.

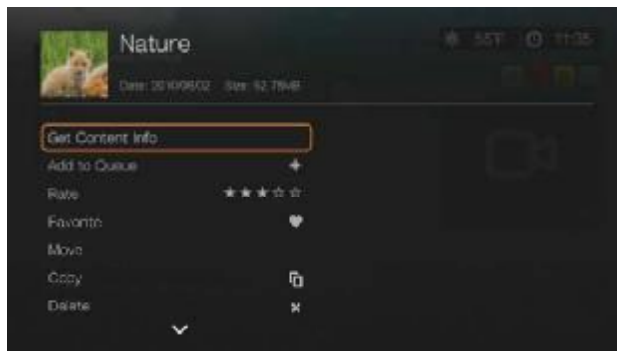

Get Content Info

Press **▲/▼** and select **Get Content Info** from the list of options prompts the media player to connect to an online media database to gather information about the file. For example, Get Info returns the MPAA rating, duration of the movie, genre, studio photos, and movie trailers based on the movie's title.

If a No Content Info Found message displays, navigate to the keyboard icon then press **OK**.

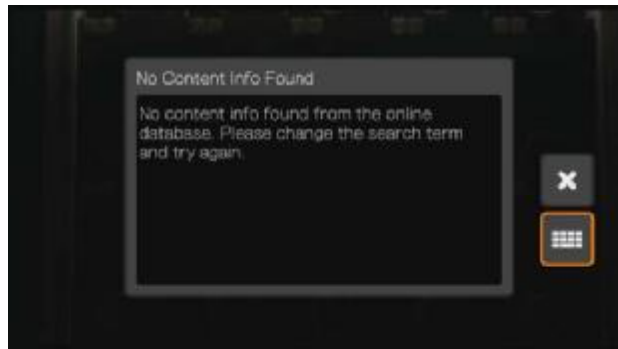

Enter the whole title or a portion of the title using the on-screen keyboard, select **Submit**, then press **OK** to associate info with the content. Select a title from the list, then press **OK**.

Rescan Info

Press **▲/▼** and select **Rescan Info** from the list of options after you have associated content info with a file. The rescan info option updates content info or allows you to correct content info that was associated with the file in error.

View Info

Press **▲/▼** and select **View Info** from the list of options after you have associated content info with a file. A synopsis/description of the title info displays.

Add to Queue

Adding videos to the queue provides quick access to these files via the dashboard (see “Media Player Dashboard” on page 50).

Rate

Rate your videos and other media files so you can sort and filter them by ratings and access them quickly in the dashboard.

1. Press **▲/▼** and select **Rate Video** from the list of options.
2. Press **◀/▶** to highlight the number of stars corresponding to your preferred rating. Five is the highest rating, and one is the lowest.
3. Press **OK** to confirm your rating.


Favorite


Favorite your videos other media files so you can sort and filter them by favorite and access them quickly in the dashboard.


1. Press **▲/▼** and select **Favorite** from the list of options.
2. Press **OK**.

Move & Copy

1. Press ▲/▼ and select **Move** or **Copy** from the list of options, then press **OK**.
2. Select a storage destination for the file you want to move or copy, then press **OK**.

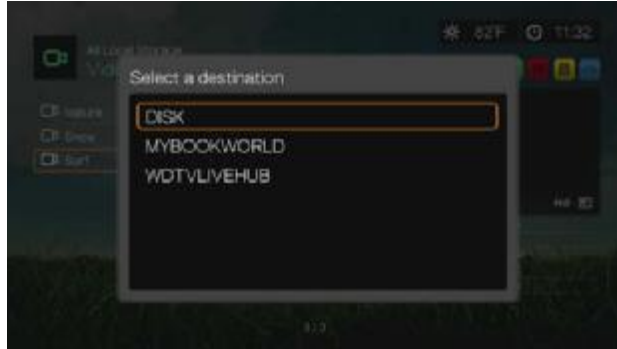

3. Use the navigation buttons to select the location where you want to move or copy the file. When you have selected the location, press **OK** to place the file there (if selecting a network or media server location, see “Accessing Media Content” on page 36).
4. Press ► to select the green check mark , then press **OK**.

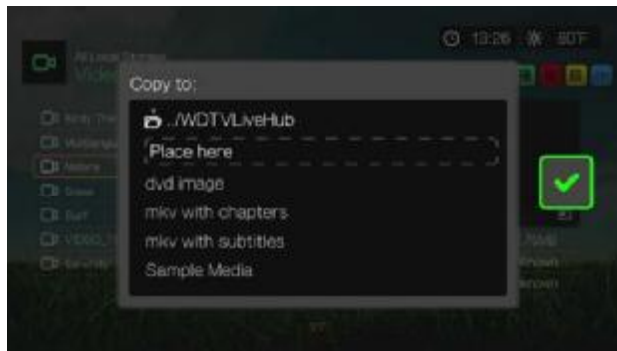


Delete


1. Press ▲/▼ and select **Delete** from the list of options.
2. Select **Yes**, then press **OK** to confirm deletion.

Upload to Facebook

You can upload a video to Facebook by selecting this option.

1. Press ▲/▼ and select **Upload to Facebook** from the list of options.
2. Select the account you want to post the file to then press **OK**, or select **Add Account** to add a Facebook account (see “Facebook” on page 103 for details).


3. The screen below displays. Press **OK** to select “Don’t ask me again!” if you do not want this screen to appear again, then press **▶** to select the green check mark . Press **OK**.

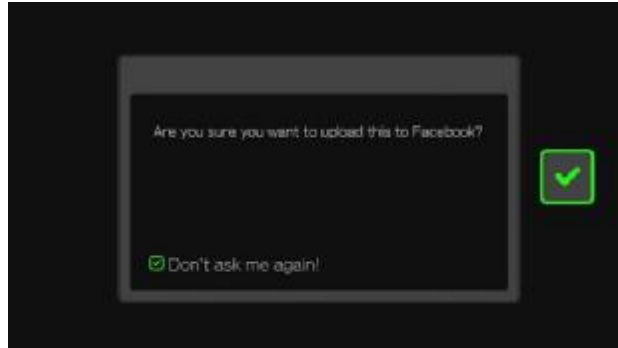


Select Multiple

Select multiple files then press **Options** to apply changes to more than file.

1. Press **▲/▼** and select **Select Multiple** from the list of options.
2. The edit multiple screen displays. Use the navigation buttons to **Select All**, **Select Page**, or **Clear All** files shown, or **Continue** to the next group of files, then press **OK**.

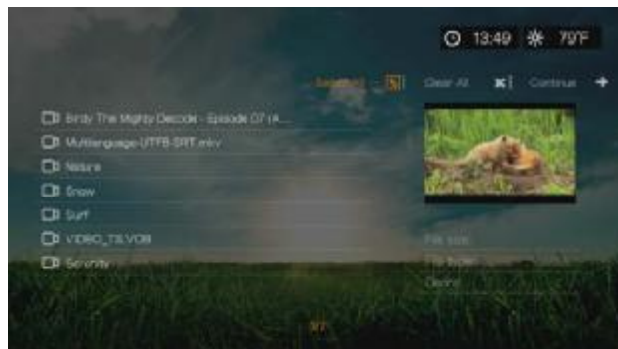



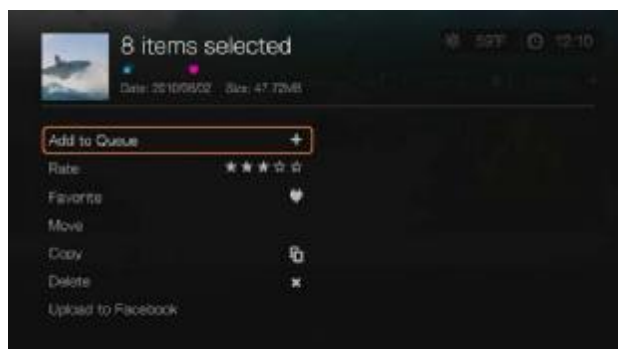

3. With multiple files selected, press **Options** to apply changes to more than one file.



Video Playback Controls

Use these buttons on the remote control to control video playback:

Button	Function
STOP	Discontinues video playback
PAUSE/PLAY	Pauses or resumes video playback
<ol style="list-style-type: none"> 1. Press FF (fast forward) or REV (reverse) to scan video (press repeatedly to select the scan speed) 2. Press PAUSE/PLAY to resume playback on the selected position 	Scans the video playback forward or backward The media player supports the following scan speeds: 2x, 4x, 8x, 16x
NEXT	<ul style="list-style-type: none"> • Plays the next video file in the video folder/playlist • Press during Fast Forward to skip forward 10 minutes. • Press NEXT to skip to the next chapter (if the video file supports chapters).
PREV	<ul style="list-style-type: none"> • Plays the previous video file in the video folder/playlist • Press during Fast Reverse to skip back 10 minutes. • Press PREV to skip to the previous chapter (if the video file supports chapters).
 Up arrow	<ul style="list-style-type: none"> • Move subtitles up on the screen.
 Down arrow	<ul style="list-style-type: none"> • Move subtitles down on the screen.
 Left arrow	<ul style="list-style-type: none"> • Reduce subtitle display speed.
 Right arrow	<ul style="list-style-type: none"> • Increase subtitle display speed.
Subtitle	•
Audio	•

Video Playback Options

- To display the video playback options while playing a video, press **Options**.
- To return to the video, press **Back**.



Get Content Info

See “Get Content Info” on page 61.

View Chapter

If you are viewing a multichapter video file, you can select which chapter to play.

To select the video chapter:

1. Press **Options**.
2. Highlight **View Chapter**, then press **OK**.



3. Press ▲/▼ to highlight your chapter selection, then press **OK** twice.

Subtitle


Use this option to view subtitles during video playback. Make sure the subtitle files are located in the same folder as the current video, and that it has the same filename as the video file.



.....

Note: Subtitle files (specific types that are supported) need to have the exact same file name as the media they are playing (the extensions will be different) and need to be located in the same folder as the video file.


To view subtitles:

1. During video playback, press **Subtitle** repeatedly until your desired subtitles display or “Subtitle Off” appears. Or, press **Options**, highlight **Subtitles**, then press **OK** and follow the steps below.
2. Select your preferred language or **Off** (to disable subtitles), then press **OK**.
3. With the green check mark  selected, press **OK** again.



Adjust Subtitles

After selecting subtitles, use this option to adjust subtitles during video playback.

1. During video playback, press **Options**.
2. Highlight **Adjust Subtitles**, then press .





Adjust Subtitles submenu options include:

- **Position & Size** - use navigation buttons to adjust position and speed, press OK repeatedly to adjust size).
- **Color (of subtitle text)** - select fill and border color from the Subtitle Color menu.
- **Encoding** - see “Additional Encoding Support” on page 182.

Play Mode

Use the play mode option to set video repeat options. Press **OK** repeatedly until the repeat icon you want is displayed. Options include:

- **Repeat All**  – All the video files in the current video folder are played in sequence and repeatedly until you press **STOP** or **Back**.
- **Repeat One**  – The current video file is played repeatedly until you press **STOP** or **Back**.

Audio Channel Selection

Use this option to select the audio language used in the video playback. This option is only available if the current video has more than one audio track. Make sure the audio tracks are located in the same folder as the current video.

To select the audio channel:

1. During video playback, press **Audio** (or press **Options**, highlight **Audio**, then press **OK**).
2. Repeat the step above until your desired language or track plays.

Favorite

See “Favorite” on page 62.

Rate

See “Rate” on page 62.

Add to Queue

See “Add to Queue” on page 62.

Selecting Video Zoom and Pan Options

Use this option to change the viewing scale of the video playback screen and to pan the video display.

1. During video playback, press **Options**.
2. Select **Zoom & Pan**, then press **OK**.
3. Press **OK** repeatedly to cycle through the available zoom options. Use the navigation buttons to pan the display.

Delete

See “Delete” on page 63.

Displaying the Video Playback Panel

Use this option to display the Video Playback Panel on the bottom of the screen. This panel shows the following information about the current video:




Video playback progress bar

Elapsed and total playback times

To view the Video Playback Panel:

1. During video playback, press **OK**. The video playback panel appears on the bottom of the screen, showing a progress bar along with the elapsed and total playback times.
2. Some videos allow you to advance to a specific time. Select **Skip to Desired Time**, then click **OK**. A keyboard displays:

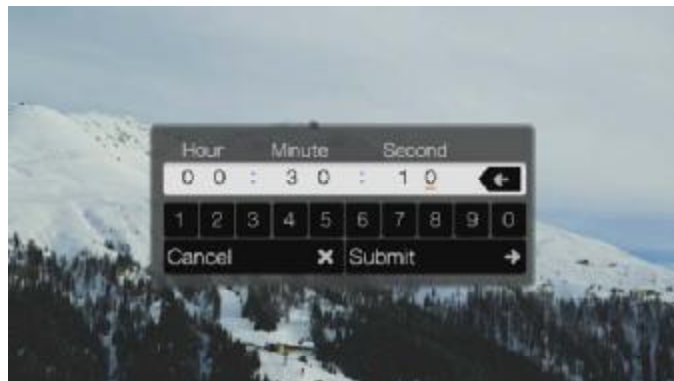

3. Use the navigation buttons to position the cursor under each number in the Hour, Minute, and Second fields, then select a number from the keyboard. Select Submit then press **OK** when finished to advance to the specific time. Press **OK** to hide the Video Playback Panel when finished.

DVD Navigation

In most cases, when the contents of an entire DVD have been successfully saved and stored in the media player's internal drive or on an attached USB hard drive or a networked hard drive connected to the media player, you will experience the same DVD menu navigation functionality using the buttons on the media player remote as you would using a DVD remote for a DVD player connected to a television.



.....
Important: For DVD navigation to work, the VOB files must be placed in a folder named VIDEO_TS.



.....
Note: Video files such as AVI, MP4, MKV, and MT2S are "single track" video files that do not provide DVD navigation features.

DVD Navigation Controls


Use these buttons on the remote control to control DVD navigation video playback:

Button	Function
STOP	Discontinues video playback
PAUSE/PLAY	Pauses or resumes video playback
<ol style="list-style-type: none"> 1. Press FF (fast forward) or REV (reverse) to scan video (press repeatedly to select the scan speed) 2. Press PAUSE/PLAY to resume playback on the selected position 	Scans the video playback forward or backward The media player supports the following scan speeds: 2x, 4x, 8x, 16x
NEXT	<ul style="list-style-type: none"> • Press during Fast Forward to skip forward 10 minutes. • Press NEXT to skip to the next chapter.
PREV	<ul style="list-style-type: none"> • Press during Fast Reverse to skip back 10 minutes. • Press PREV to skip to the previous chapter.
Up arrow	<ul style="list-style-type: none"> • At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. • Move subtitles up on the screen during video playback.
Down arrow	<ul style="list-style-type: none"> • At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. • Move subtitles down on the screen during video playback.

Button	Function
◀ Left arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. Reduce subtitle display speed during video playback.
▶ Right arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc. Increase subtitle display speed during video playback.

DVD Navigation Playback Options

- To display the video playback options, press **Options**.
- To hide the options, press **Back** or **Options** again.

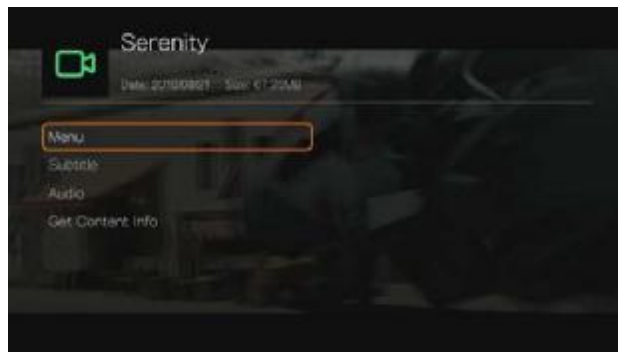

Main Menu Selection

To show the main menu in DVD navigation mode:

- Press **Options**.
- Highlight **Menu**, then press **OK**. The main menu displays.



.....
Note: Make sure the DVD menu option is set to **On**. See "DVD Menu" on page 172.

Selecting Subtitles

See "Subtitle" on page 66.

Audio Channel Selection

See "Audio Channel Selection" on page 68.

Get Content Info

See "Get Content Info" on page 61.

9

Playing Music

You can listen to audio files on your TV/audio system using the media player.

Supported Audio Formats


- MP3
- WAV/PCM/LPCM
- WMA
- AAC
- FLAC
- MKA
- AIF/AIFF
- OGG
- Dolby Digital Plus
- DTS

Music Playback

1. Navigate to the Home | Music menu, then press **OK**.



2. The screen displays available music files and folders in the media player's local drive by default. The display will either be in grid view (default) or list view, depending on your Browser Display setting (see "Music Settings" on page 174 for more information on Browser Display settings).

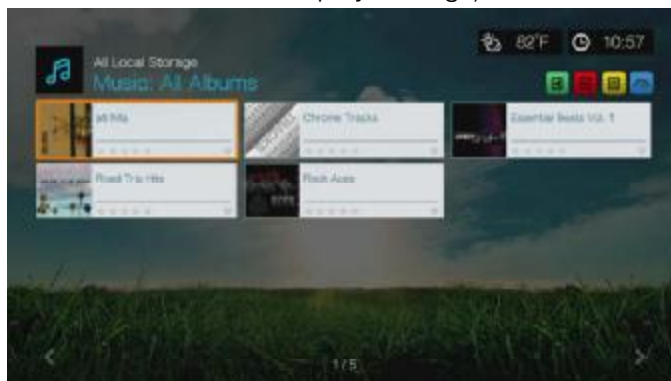

If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All, All Tracks,






Genre, Artist, Album, Playlists, Favorites) See “Supported Categories for Media Library Compilation” on page 53 for details.

3. Locate the audio file you want to play.
 - To begin playback of a single audio file, highlight the file, then press **OK**.
 - To begin playback of an album, highlight the album, then press **OK**. Press **OK** again to play the album.
 - To begin playback of a music playlist, highlight the playlist name, and then press **PAUSE/PLAY**.
 - To begin playback of all audio files in a folder, highlight an audio file in that folder, and then press **PAUSE/PLAY**.
 - To find audio files on a network share or media player, follow the instructions in “Accessing Media Content” on page 36.

Sort & Filter Music

You can sort and filter music based on your preferences using the sort & filter option.


Filter

1. Press  or navigate to the sort and filter content icon , and press **OK**.
2. Press , then  /  to select Filter by All Albums, All Tracks, Genre, Artist, Folders, Playlist, Untagged, New Items, and Favorites. Press **OK** to display music by the criteria selected.




.....


Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

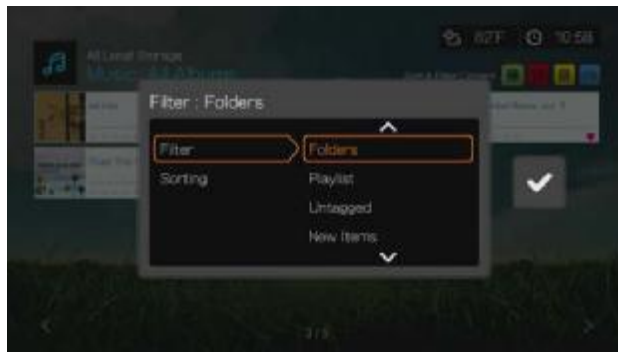


3. With the green check mark  selected, press **OK** again.

 Sorting


1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **▶**, then **▲**/**▼** to select Sorting by Date, Alphabetically, Ratings, or by Recently Viewed. Press **OK** to display music by the criteria selected in either ascending (arrow up) or descending (arrow down) order.

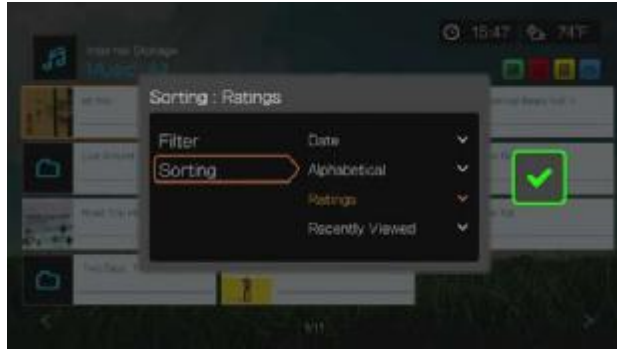

3. Press **▶**. With the green check mark  selected, press **OK** again.

Music Menu Options

In the main video screen, press **Options**. The Music menu options display. Press **Back** when complete to return to the main menu.

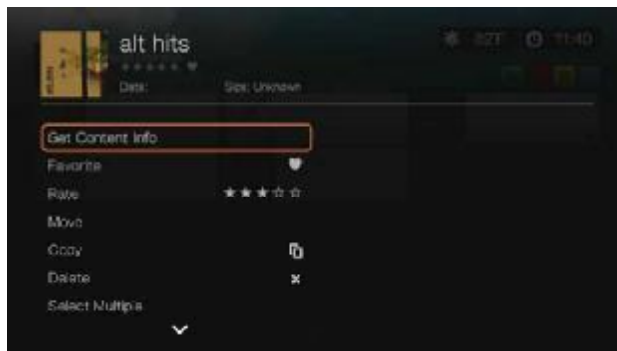

Get Content Info

The Music get content info function is the same as the Videos get content info function. See “Get Content Info” on page 61.

Rescan Info

The Music rescan info function is the same as the Videos rescan info function. See “Rescan Info” on page 62.

View Info

The Music view info function is the same as the Videos view info function. See “Video Playback Controls” on page 65.

Favorite

The Music favorite function is the same as the Videos favorite function. See “Favorite” on page 62.

Rate

The Music rate function is the same as the Videos rate function. See “Rate” on page 62.

Move & Copy

The Music move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 63.

Delete

The Music delete function is the same as the Videos delete function. See “Delete” on page 63.


Select Multiple

The Music edit multiple function is the same as the Videos edit multiple function. See “Select Multiple” on page 64.

Preset Music

The Preset Music function allows you to assign a numbered button on the remote to a song for quick playback.

1. Press ▲/▼ to select **Preset Music**. Press ►.

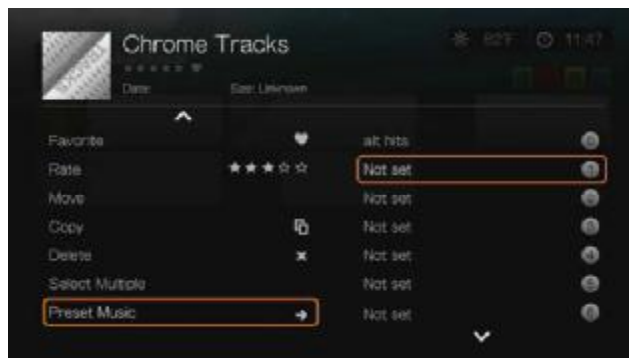

2. Press ▲/▼ to select a numbered remote button, then press **OK**.

Music Playback Controls

Use these buttons on the remote control to control music playback when in the music playback screen:


Button	Function
STOP	Stop audio playback
PAUSE/PLAY	Pause or resume audio playback
<ol style="list-style-type: none"> 1. Press FF (fast forward) or REV (reverse) to scan the audio file (press repeatedly to select the scan speed). 2. Press PLAY to resume playback on the selected position. 	Scan the audio playback forward or backward The media player supports the following scan speeds: 2x, 4x, 8x, 16x
Press PREV (previous track) once.	Start playback from the beginning
Press NEXT	Play the next audio track in the music folder/playlist
Press PREV (previous track) twice.	Play the previous audio track in the music folder/playlist
0-9	While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.



Note: If you leave the music playback screen, the only playback controls that work are the **STOP** button (to stop music playback) and **Options** (during photo playback - to jump to the previous or next track).

Music Playback Screen

The music playback screen displays the following information about the currently playing album and/or audio file:

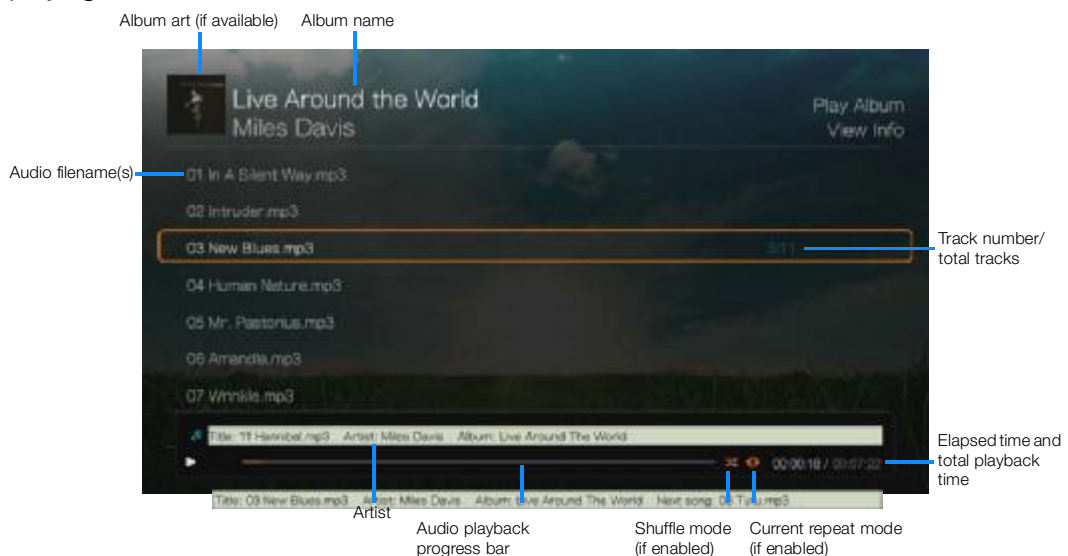

Music Playback Options

- To display the music playback options, press **Options**.
- To hide the options, press **Back** or **Options** again.



Get Content Info

The Music get content info function is the same as the Videos get content info function. See “Get Content Info” on page 61.

Rescan Info

The Music rescan info function is the same as the Videos rescan info function. See “Rescan Info” on page 62.

View Info

The Music view info function is the same as the Videos view info function. See “Video Playback Controls” on page 65.

Add to Queue

The Music add to queue function is the same as the Video add to queue function. See “Add to Queue” on page 62.

Favorite

The Music favorite function is the same as the Video favorite function. See “Favorite” on page 62.

Rate

The Music rate function is the same as the Video rate function. See “Rate” on page 62.




Play Mode

Use the music play mode to set repeat and shuffle options.

Repeat

To set the music repeat mode:

1. During music playback, press **Options**.



2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Repeat All**  – All the audio files in the current music folder/playlist is played in sequence and repeatedly until you press **STOP** or **Back**.
 - **Repeat One**  – The current audio track is played repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the audio files in the current music folder/playlist are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

The icon for the enabled repeat mode will appear below the playback progress bar.

Shuffle

Use this option to set the audio tracks in the current music folder/playlist to play in random order.

To enable music shuffle mode:

1. During music playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Shuffle**  – All the audio files in the current music folder/playlist are shuffled repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the audio files in the current music folder/playlist are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

Delete

The Music delete function is the same as the Videos delete function. See “Delete” on page 63.

Preset Music

See “Preset Music” on page 75.

Playing Music From Your iPod®

Apple® uses a proprietary naming scheme and because of this the media player is unable to display the original names for the folders and files as they are in your iPod. The media player instead reassigns new names for the folders and files, but only while in use with the media player. The original file information is preserved in your iPod. You can view the original file information when you play a file where the screen will display the metadata.



.....
Note: The media player does not support playback of protected premium content such as movies or music from the iTunes® Store, Cinema Now, Movielink®, Amazon Unbox™, and Vongo®.

To use your iPod with the media player, simply plug your iPod in to the USB port and navigate through the interface menu.



.....
Note: The media player only supports USB mass storage mode. iPod Touch is not a USB mass storage device and is therefore not supported.

10

Viewing Photos


You can view your digital photos both individually and in slideshow mode on your TV using the media player.

Supported Image File Formats

- **GIF** (Animated GIFs are not supported)
- **BMP** (non-compressed)
- **JPEG** (grayscale, RGB, YCbCy) (does not support CMYK or YCCK)
- **TIF/TIFF** (RGB) (does not support CMYK, YMC, YMCK, or KCMY)
- **PNG** (Non-alpha channel only)

Photo Display

1. Navigate to the Home | Photos menu, then press **OK**.

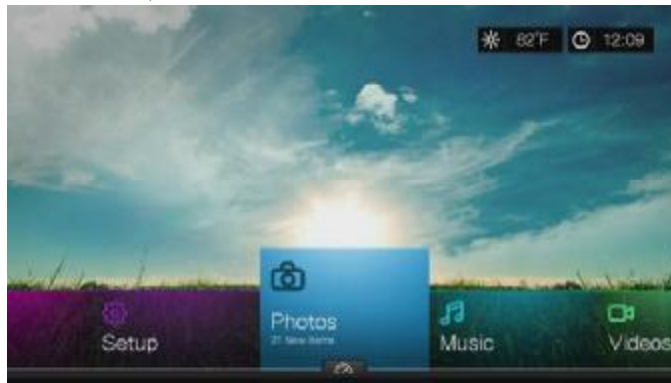

2. The screen displays available music files and folders in the media player's local drive by default. The display will either be in grid view (default) or list view, depending on your Browser Display setting (see "Photo Settings" on page 175 for more information on Browser Display settings).



3. If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All Pictures,

Date, Folders, Recent). See “Supported Categories for Media Library Compilation” on page 53 for details.


4. Locate the picture file you want to view.
 - To open a single picture file for viewing, select the file, and then press **OK**.
 - To view the next picture file in the photo folder, press **▶▶** (next).
 - To view the previous picture file in the photo folder, press **◀◀** (previous).
 - To find picture files on a network share or media player, follow the instructions in “Accessing Media Content” on page 36.

You can also view a slideshow using all picture files in a photo folder. See “Photo Slideshow” on page 87 for instructions.

Sort & Filter Photos

You can sort and filter photos based on your preferences using the sort & filter option.


Filter

1. Press  or navigate to the sort and filter content icon , and press **OK**.
2. Press **▶**, then **▲**/**▼** to select Filter by All, Date, Date (year), Date (month), Folders, New Items, and Favorites. Press **OK** to display music by the criteria selected.




.....


Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

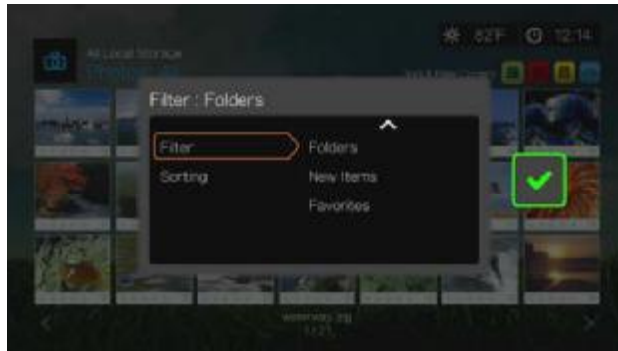


3. With the green check mark  selected, press **OK** again.

Sorting

1. Press **A** or navigate to the sort and filter content icon , and press **OK**.
2. Press **▶**, then **▲**/**▼** to select Sorting by Date, Alphabetically, Ratings, or by Recently Viewed. Press **OK** to display photos by the criteria selected in either ascending (arrow up) or descending (arrow down) order.

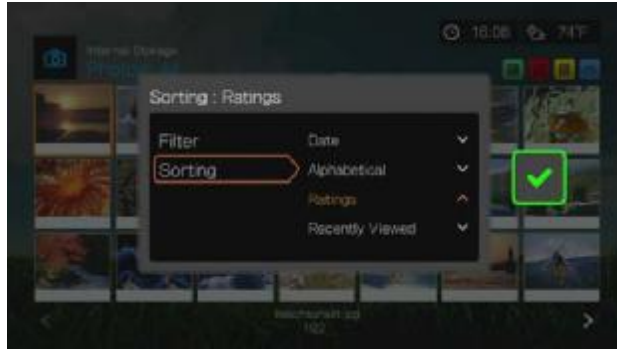

3. Press **▶**. With the green check mark  selected, press **OK** again.

Digital Camera Support

You can attach your digital camera to the media player via a USB port and view the supported image files stored in the camera's memory card.


To view images from a digital camera:

1. Attach your digital camera to the media player via the USB port.
2. Press **OK** to close the message (the media player sees the camera's memory card as a read-only device).
3. Navigate to the Home | Photos menu.
4. The digital camera is considered a USB device. Use the navigation buttons to select, then press **OK**.

The screen displays thumbnails of available picture files and photo folders. Only image files supported by the media player are displayed.

Photos Menu Options

In the main photo screen, press **Options**. The Photos menu options display. Press **Back** when complete to return to the main menu.

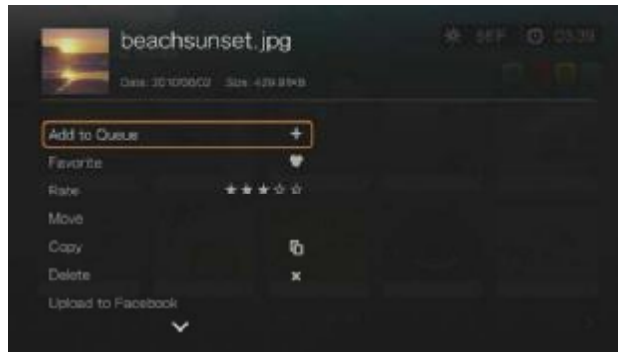

Add to Queue

The Photos add to queue function is the same as the Videos add to queue function. See “Add to Queue” on page 62.

Favorite

The Photos favorite function is the same as the Videos favorite function. See “Favorite” on page 62.

Rate

The Photos rate function is the same as the Videos rate function. See “Rate” on page 62.

Move & Copy

The Photos move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 63.

Delete

The Photos delete function is the same as the Videos delete function. See “Delete” on page 63.

Upload to Facebook


The Photos upload to Facebook function is the same as the Videos upload to Facebook function. See “Upload to Facebook” on page 63.

Upload to Picasa

You can upload a photo to Picasa by selecting this option.

1. Press **▲/▼** and select **Upload to Picasa** from the list of options.
2. If prompted to sign in, select **Yes**, then press **OK**, and enter your Picasa username and password using the on-screen keyboard.


3. The screen below displays. Press **OK**.

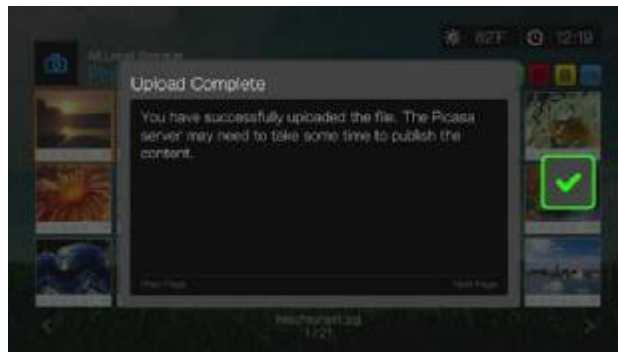

Set as Background

You can set any photo as the system background to replace the default grass field and sunny sky photo or other photo you have previously selected.

1. Find and select the photo you want to use for the background in the Photos menu, then press **OK**.
2. Press **Options**.
3. Select **Set as Background**, then press **►**.
4. Select one of the photo scaling options (**Keep as Original**, **Fit to Screen**, or **Distort to Screen**), then press **OK**.

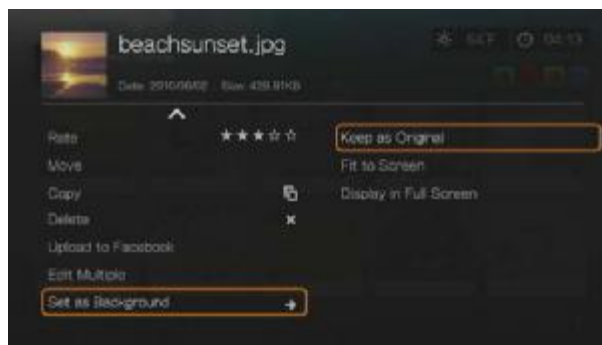


Select Multiple

The Photos edit multiple function is the same as the Videos edit multiple function. See “Select Multiple” on page 64.




Photo Display Options

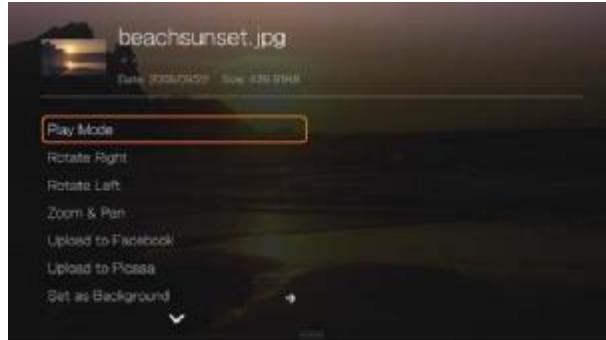- To display the photo options while viewing a photo, press **Options**.
- To return to the photo you were viewing, press **Back** or **Options** again.



Play Mode

Use the play mode option to set repeat and shuffle options.

1. During photo playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Repeat All**  – All the photo files in the current photo folder are played in sequence and repeatedly until you press **STOP** or **Back**.
 - **Shuffle**  – All the photo files in the current photo folder are shuffled repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the photo files in the current photo folder are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

Rotate Left & Right

1. During photo viewing, press **Options**.
2. Select **Rotate Left** or **Rotate Right**, then press **OK**.
3. Press **Options** and select **Rotate Left** or **Rotate Right** again as needed until the rotation you want is set for the photo.

Selecting Photo Zoom and Pan Options

See “Selecting Video Zoom and Pan Options” on page 68.

Upload to Facebook

See “Upload to Facebook” on page 63.

Upload to Picasa

See “Upload to Picasa” on page 83.

Set As Background

See “Set as Background” on page 84.

Rate

See “Rate” on page 62.

Favorite

See “Favorite” on page 62.

Add to Queue

See “Add to Queue” on page 62.

Delete

See “Delete” on page 63.

Displaying Photo Thumbnails

While viewing a photo or slideshow, press ▼ to display thumbnails of all your photos. Use the ◀ ▶ navigation buttons to select another photo to view, then press **OK**.



Displaying Photo Information

Use this option to display the Picture Information Panel on the bottom of the screen. This panel shows the following information about the current picture:

- Image filename
- Source
- Image file size and resolution
- Image's sequence number and the total number of image files in the current photo folder

To view the photo information panel:

- During photo viewing, press **OK**. Press **Back** to hide photo information.

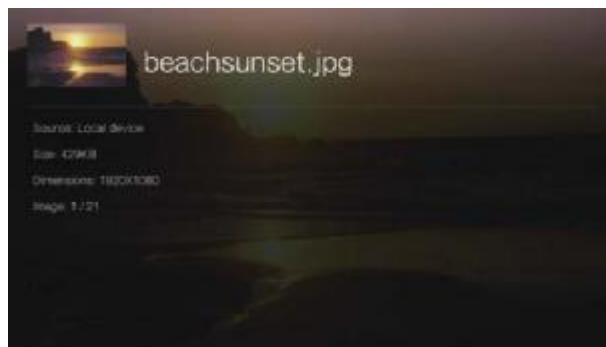


Photo Slideshow

The media player allows you to create a slideshow using the contents of a photo folder.

To start a slideshow:

1. Locate the photo folder containing the image files you want in the slideshow. (See “Photo Display” on page 80.)
2. Select the photo folder, then press **PAUSE/PLAY** to start the slideshow.

To listen to background music with a slideshow:

1. Navigate to the music folder containing the audio file/playlist you want to accompany the slideshow. (See “Music Playback” on page 72.)
2. Select the audio file/playlist, and then press **PLAY**.
 - If you selected a single audio file, you may want to enable it to play repeatedly so it doesn't stop before the slideshow is done.
 - If you selected a music playlist, you can choose to enable the repeat or shuffle mode.
3. Press **HOME**, and then start the slideshow (as described above).

Slideshow Playback Controls

Use these buttons on the remote control to control slideshow playback:

Button	Function
STOP	Discontinue the slideshow
PAUSE/PLAY	Pause or resume the slideshow
NEXT	Display the next picture file in the slideshow
PREV	Play the previous picture file in the slideshow

Repeating and/or Shuffling a Slideshow

Access Setup > Photo settings to repeat and/or shuffle a slideshow. See “Slideshow Sequence” on page 175.


11

Files


You can view and manage all of your media files in one place using the Files menu.

Files Display

1. Navigate to the Home | Files menu, then press **OK**.

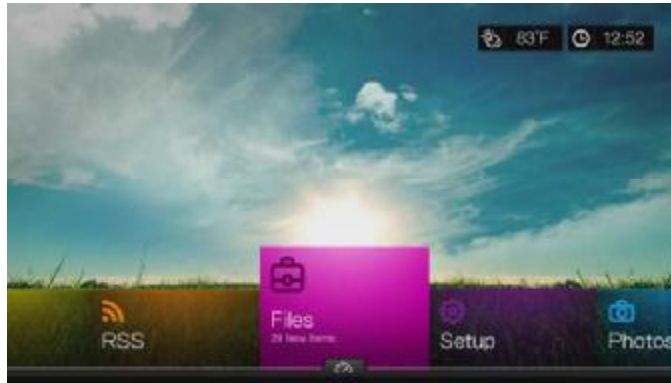


2. The screen displays all available media files and folders in the media player's local drive by default. The display is in list view.

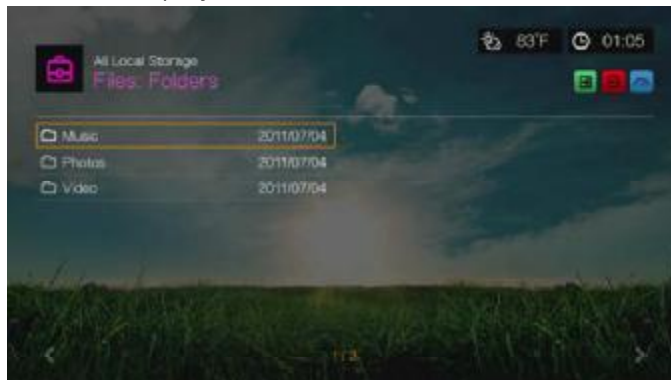

3. Locate a file you want to play.
 - To play a single file, select the file from the list or by navigating through the folder structure, then press **OK**.
 - Follow the instructions under “Watching Video” on page 59, “Playing Music” on page 72, or “Viewing Photos” on page 80.
 - To find files on a network share or media server, follow the instructions in “Accessing Media Content” on page 36.


Sorting Files

The Files sorting function  is the same as the Videos sorting function. See “Sorting” on page 61.

Files Options

To manage files (move, copy, delete, rename, and select), do the following:

With an individual file or folder selected, press **Options**.

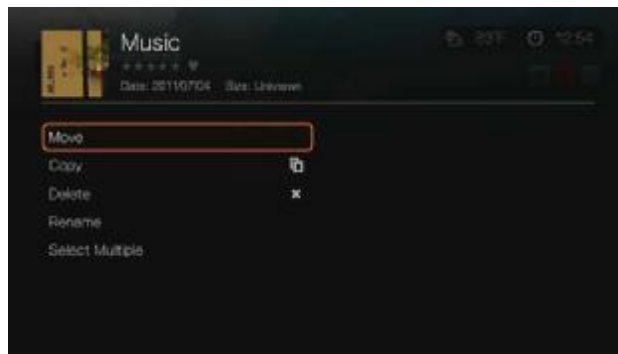

Move & Copy

The Files move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 63.

Delete

The Files delete function is the same as the Videos delete function. See “Delete” on page 63.

Rename

To rename a folder or file, select **Rename** then enter in the new name using the on-screen keyboard.

Select Multiple

The Files edit multiple function is the same as the Videos select multiple function. See “Select Multiple” on page 64.

Internet Services



.....

Important: A broadband Internet connection (e.g., DSL or cable) is required to use Internet services. Availability varies by country. These services may be changed, terminated, or interrupted at any time.

After connecting to a network, you can use the media player to access media content from the following Internet services:

- **AccuWeather.com**[®] – Get local and international forecasts, climate trends, and the latest news from the world’s weather authority.
- **BBC iPlayer** – Watch and listen to BBC programs from the past seven days live and on demand.*



.....

*BBC iPlayer TV shows available in the UK only.

- **BLOCKBUSTER On Demand**[®] – Watch digital movies on your TV instantly. Choose from thousands of titles to rent or buy, including new releases, cinema classics and TV shows, with no monthly fee.*



.....

*Blockbuster.com online account required. US only.

- **CinemaNow**[™] – With over 11,000 titles to choose from, CinemaNow gives you instant access to new release movies the same day they come out on DVD and brings you TV episodes for many popular shows the day after they air.*



.....

*CinemaNow.com account required. US only.

- **Deezer**[™] – A personalized on-demand music service to listen to seven million tracks anytime, anywhere and one of the most popular Internet and mobile music offerings in Europe.
- **Facebook** – Share your status, photos, videos, and your favorite links on Facebook. Find out the latest news from your social network or the world and so much more. Access it all on your big screen TV.
- **Flickr** – Connect to Flickr using the on-screen menus. View the photos on your Flickr account and enjoy them on your TV.
- **Flingo**[®] – Flingo offers consumers free Internet Television from leading studios, TV networks, and video websites.
- **Hulu Plus**[™] – Enjoy episodes from dozens of hit TV shows all season long from ABC, Fox, NBC, and more on your HDTV. The extensive library also includes classic TV series and blockbuster movies.*



.....

*Hulu Plus membership required. US only.

- **Live365**[®] – Listen to thousands of commercial-free Internet radio stations. Easily browse through popular genres or discover treasures in some of the less-traveled styles.
- **Mediafly**[®] – Stream daily video podcasts from CNN, NBC, MTV, ESPN, and other online content to your TV.

- **Netflix** – Enjoy popular movies, classics, and TV episodes instantly. Access your Netflix unlimited membership and instantly watch TV episodes and movies on your big screen.*



*Netflix unlimited membership required. US and Canada only.

- **Pandora** – Free, personalized Internet radio playing only the music you love. Enter your favorite songs or artists, and enjoy stations created just for you. Rate songs as they play, because Pandora caters to your tastes and adapts stations to your feedback on the spot.*



*Pandora available in US only.



- **Picasa** – Picasa is free photo editing software from Google® that makes your pictures look great. Sharing your best photos with friends and family is as easy as pressing a button!
- **Tuneln** – The world's largest Internet radio guide with access to over 30,000 free radio stations searchable by location, genre, or format.
- **YouTube** – Watch your favorite videos from the world's #1 video sharing website on your television.



The above services are fully integrated with their web-based counterparts when accessed via the media player. If you are a registered user of any of these services, everything you create, rate, or bookmark when using the media player shows up on your account the next time you sign in to that service from your computer or mobile computing device.

To access Internet Media:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to make a selection, then press **OK**.

Adding a Service to Favorites

You can add a Service to your Favorites so that it's quickly available via the dashboard when you are in the Home screen or other screens (when you press  or navigate to  in certain screens then press **OK**).


1. In the Services screen, press  /  to select a service you want to favorite, then press **Options**.
2. Press **OK** to list the service in the dashboard under Favorites.



AccuWeather.com

The Weather service provided by AccuWeather.com provides local forecasts for everywhere in the United States and over two million locations worldwide.

To access Weather:


1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select AccuWeather.com , then press **OK** to display the AccuWeather.com home screen.

Find Your Location

To display your local weather in the upper right of the media player's screen and see weather forecasts when accessing the AccuWeather.com menu, select your city or nearest city.

1. Press ◀/▶ to select **Change Location**. Press **OK**.



2. Use the navigation buttons ▲▼◀▶ to type a search using the on-screen keyboard. You can also press  on the remote control to toggle to the results list after entering several characters in the search field. Select **Submit**, then press **OK**.



.....

Note: The complete city name needs to be entered for locations outside of the U.S. For example, you must type "Sydney" to find Sydney, Australia; typing "Sydn" results in Sydney, FL as the location.

Change Temperature Display

To change the temperature display from Celsius to Fahrenheit or vice-versa, do the following:

In the AccuWeather.com home screen, press ◀/▶ to select **°F** or **°C**, then press **OK**.

BBC iPlayer (UK only)

Watch and listen to BBC programs from the past seven days live and on demand.



.....
*BBC iPlayer TV shows available in the UK only.

To access the BBC iPlayer:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select BBC iPlayer, then press **OK**. The BBC iPlayer begins loading.
3. The BBC iPlayer Home screen displays television show Highlights. Press ▼, then press ◀/▶ to choose another category (Most Popular and Last Played) from the BBC iPlayer interface, or press ▼ again to access Help or Settings. Press **OK**.
4. In the home screen, you can also press ▲, then press ◀/▶ to choose a media type (TV or Radio), or Search. Press **OK**.
5. Use the navigation buttons ▲▼◀▶ to select a TV show by Channel or Categories, or a Radio show by Stations or Categories. Press ||▶ or **OK** to begin playing the TV show or radio program.
6. Press the Home button 🏠 to exit the BBC iPlayer.

BLOCKBUSTER On Demand®


The BLOCKBUSTER On Demand service lets you order and instantly watch movies from BLOCKBUSTER® right on your TV!*

- Rent or buy the newest releases from your couch
- No monthly fees
- New releases available the same day as DVD/Blu-ray
- Choose from thousands of the movies you love



.....
Note: *BLOCKBUSTER On Demand free online account required. US only.

To Get Started:

1. Go to <http://www.blockbuster.com/wd> and select the Activate Now button. Log into your account. If you don't have an account, you can create one for free by filling in the requested information.
2. Follow the on-screen instructions to activate. At the end, you'll receive a PIN code.
3. On the media player, navigate to the Home | Services menu bar and press **OK**.
4. The list of Services display in alphabetical order. Press ◀/▶ to select BLOCKBUSTER On Demand , then press **OK**.
5. Select **Get Started** from the bottom menu within the Blockbuster service and enter the PIN code.

Now you're ready to watch movies instantly!

How do I download and watch a movie?

Once you rent or purchase a movie, it will appear in My Library. Select **Start Download** to begin. You'll be able to track download progress in the Download Manager on the Home screen.

You can begin watching the movie before the download completes by pressing **Play Now** when it becomes available. After the movie has downloaded, you can watch it from My Library. **Watch purchased movies whenever you want, as much as you want. Rentals must be watched within 24 hours once you start playback.**



.....
Note: To deactivate the media player from your Blockbuster On Demand account, log in to your BLOCKBUSTER account at <http://www.blockbuster.com>.

CinemaNow


With over 11,000 titles to choose from, CinemaNow gives you instant access to new release movies the same day they come out on DVD and brings you TV episodes for many popular shows the day after they air.* No subscription required and no need to drive to a kiosk or wait for movies in the mail!

- New release movies available the same day as Blu-ray/DVD
- Popular TV shows available the day after they air
- No monthly subscription, pay for only what you watch
- More choice – with more than 10,000 movies and TV shows
- Rent or purchase with Dolby Digital Plus 5.1 surround sound



.....
Note: *CinemaNow account required. US only.

To Get Started:

1. Go to <http://www.cinemanow.com/bbactivate>. Sign in or create a free CinemaNow account. No subscription required!
2. Follow the on-screen instructions to begin activation and receive your PIN code.
3. On the media player, navigate to the Home | Internet media menu bar and press **OK**.
4. The list of Services display in alphabetical order. Press ◀/▶ to select CinemaNow , then press **OK**.
5. Select **Settings** from the bottom menu within the CinemaNow service, then press **OK**. Press **OK** again to activate the device and enter the CinemaNow PIN code.

You now have instant access to new release movies & next day TV!

How Do I Download and Watch a Movie?

Once you rent or purchase a movie, it will appear in your My Videos tab. With progressive download, you can begin watching within minutes by selecting **Play Now** as soon as it becomes available.

Your selection will continue to download while you watch. Track your download progress in the Download Manager on the Home screen. **Watch purchased movies whenever you want, as much as you want. Rentals must be watched within 24 hours once you start playback.**

To learn more:

To learn more about CinemaNow, go to <http://www.cinemanow.com>.




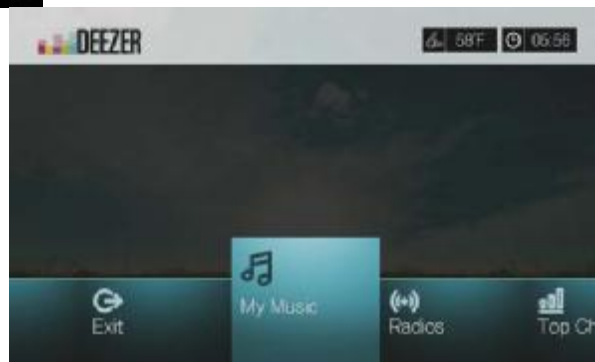
.....
Note: To deactivate the media player from your CinemaNow account, log in to your account at <http://www.cinemanow.com>.

Deezer

Deezer is a personalized on-demand music service to listen to seven million tracks anytime, anywhere and one of the most popular Internet and mobile music offerings in Europe.

To access Deezer:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Deezer , then press **OK**. The Deezer main screen displays.



3. Press ◀/▶ to choose an option, then press **OK**.

Options include:

- My Music
- Radios
- Top Charts
- Search
- Sign in
- Exit

Signing in to Your Deezer Account

Sign in to your Deezer account to access My Music (your playlists and favorites) and Top Charts.



Note: If you do not have a Deezer account and want to create one, go to <http://www.deezer.com>.

1. Navigate to the Home | Services menu bar.
2. Press ◀/▶ to select Deezer, then press **OK**.
3. In the Deezer main screen, press ◀/▶ to select **Sign In**, then press **OK**.
4. Select **Sign in**, then press **OK**.



5. Use the navigation buttons ▲▼◀▶ to type your registered Deezer email address using the on-screen keyboard. Select **Submit**, then press **OK**.
6. Use the navigation buttons ▲▼◀▶ to type your Deezer account password in the on-screen keyboard. Select **Submit**, then press **OK**.
7. Press ▲/▼ to select a save option.

Options include:

 - **No** – Your account details will not be saved. You need to repeat the initial sign-in process every time you access this service using the media player.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you access this service using the media player.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you access this service.
8. Press **OK** to complete the sign-in process. The My Music screen displays.

Radios

You can choose from a variety of radios by music genre and subgenre.

1. In the Deezer main screen, press ◀/▶ to select **Radios**, then press **OK**.
2. Press **OK** to select a radio.



3. Press ▲/▼ to select a radio by music genre, then press **OK**.
4. Press ▲/▼ to select a radio by music subgenre, then press **OK**.
5. With a radio you want to listen to selected, press **Options** to select **Become a Fan**. This adds the radio to **Favorite Radios** for quick access in the future.
6. Press **II ▶** or **OK** to begin listening to the radio station.

Deezer Player

The Deezer player is similar to the regular music playback screen. It displays the playback status bar, album, artist, and the elapsed and total playback times.

- Press **PLAY/PAUSE** to pause and resume playback.
- Press **FF/REV** to fast forward or rewind in 10 second increments.
- Press **NEXT/PREV** to select the next/previous song in the station or playlist.

My Music

After signing in to Deezer, select **My Music**, then press **OK** to display playlists and favorite radio stations.

Playlists

Adding a playlist to My Music:

1. In the Deezer main screen, press ◀/▶ to select **My Music**, then press **OK**.
2. Sign in to your Deezer account if not already logged in.

3. Select **Playlists**, then press **OK**.



4. Press **Options**, then select **Create Your Playlist**. Press **OK**.
5. Type in the name of your playlist using the on-screen keyboard, select **Submit**, then press **OK**.

Favorite Radios

Accessing a favorite radio station in My Music:

1. In the Deezer main screen, press ◀/▶ to select **My Music**, then press **OK**.
2. Sign in to your Deezer account if not already logged in.
3. Select **Favorite Radios**, then press **OK**.



.....

Note: If you have not added any stations, the screen displays "no favorite available."

4. Press the navigation buttons to select a station from the list, then press **||▶** or **OK** to begin listening to the radio station.

Add to Playlist

You can add songs to a playlist using the **Options** button on the remote.

1. With a song selected in a Radio or Top Charts screen, press **Options** to display **Add to Playlist**. Press **OK**.
2. Press ▲/▼ to select a playlist you have created in **My Music**, then press **OK** to add the song the selected playlist.

Delete a Playlist

You can delete a playlist using the **Options** button on the remote.

1. With a playlist selected in **My Music > Playlists** screen, press **Options**.
2. Press ▲/▼ to select **Delete**, then press **OK**.
3. Select **OK**, then press **OK**.

Delete a Radio Station


You can delete a radio station using the **Options** button on the remote.

1. With a radio station selected in **My Music > Favorite Radios** screen, press **Options**.

2. Press ◀/▶ to select **Delete from Favorite**, then press **OK**.
3. Select **OK**, then press **OK**.

Top Charts

These are songs deemed most popular by Deezer users by country.

1. In the Deezer main screen, press ◀/▶ to select **Top Charts**, then press **OK**.
2. With the filter button selected , press **OK**.
3. Press ▲/▼ to filter channel results (choose from **FR, BE, UK, US**), then press **OK** twice.
4. Press ▲/▼ to select a song from the display then press **⏸▶** or **OK** to start listening to the selected song.


Search

1. In the Deezer main screen, press ◀/▶ to select **Search**, then press **OK**.
2. Press ▲/▼ to filter results (**All, Title, Artist, or Album**), then press **OK**.



3. Use the navigation buttons ▲▼◀▶ to type a search using the on-screen keyboard. Select **Submit**, then press **OK**.



.....
Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.

4. Press ▲/▼ to select a song from the display, then press **⏸▶** or **OK** to start listening.

Deleting a Deezer Account

1. On the Deezer main screen, press ◀/▶ to select **Sign in**, then press **OK**.
2. Press ▲/▼ to select **Delete Account**, then press **OK**.
3. Press ▲/▼ to select the account you want to delete, then press **OK**.
4. Press ◀/▶ to select **OK** on the confirmation prompt, then press **OK**.

Exit Deezer

To return to the Services home screen, press ◀/▶ to select **Exit** in the Deezer home screen, then press **OK**.

Facebook

Share your status, photos, videos, and your favorite links on Facebook. Find out the latest news from your social network or the world and so much more. Access it all on your big screen TV.


You must have have a valid Facebook account to use this service. You can create a Facebook account at www.facebook.com.

Signing in to Facebook for the First Time

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Facebook **facebook**, then press **OK**.
3. Choose **Add Account**, then press **OK**.



4. Press **OK**, then use the navigation buttons ▲▼◀▶ to type in your Facebook user name using the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press **OK**, then use the navigation buttons ▲▼◀▶ to type in your Facebook password using the on-screen keyboard. Select **Submit**, then press **OK**.
6. Press ▼, then **OK** to **Remember Me** if you want your Facebook account stored in the media player for quick access.
7. Press ▶/▼, then **OK** with the green check mark selected.

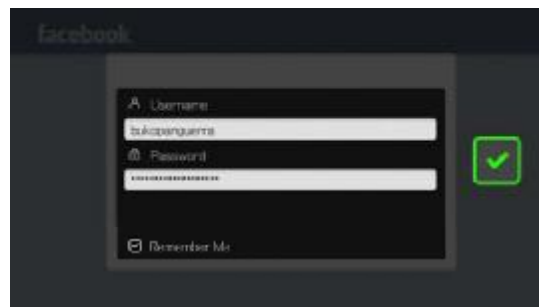

8. Press **OK** to complete the sign-in process. The Facebook home screen displays.



Notifications

Notifications let you know when people take actions on Facebook related to you, so you can quickly check out a photo you've been tagged in or read a new posting on your Wall.

In the Facebook main menu, press **▼** to select **Notifications**. Press **▲/▼** to select a notification then press **OK**.


Photos

You can view the photos or photo albums you and others users have posted to Facebook either individually or as a slideshow.

1. In the Facebook main menu, select **Photos** then press **OK**.
2. Navigate to a photo album, then press **OK**.
3. Navigate to a photo then press **OK**, or press **⏸ (PAUSE/PLAY)** to start a photo slideshow (see "Slideshow Playback Controls" on page 88).

Photos Options

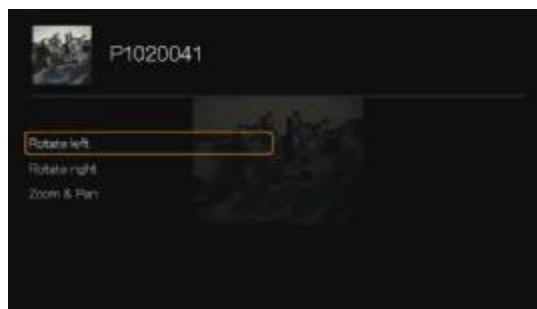

With an individual photo selected or a slideshow running, press **Options**.



- **Rotate Left & Right** - see "Rotate Left & Right" on page 85.
- **Zoom** - To change the display's viewing scale, press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.

Newsfeed

The Facebook news feed displays all of your friends' comments and allows you to "Like" or comment. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the news feed entry.

1. In the Facebook main menu, press ◀/▶ to select **Newsfeed**, then press **OK**.
2. Press ▲/▼ to view your friends' comments and posts.
3. With an entry selected, press ▶ once to select "Like," if you like the entry , then press **OK**. Press ▶ twice to comment on a news feed entry , press **OK**, then enter your comment using the on-screen keyboard.



.....
Note: Navigating to **What's on your mind?** and pressing **OK** allows you to add a comment to your wall in the newsfeed screen.



Friends

You can access your friends' pages to view their photos, videos, and Wall posts.

1. In the Facebook main menu, press ◀/▶ to select **Friends**, then press **OK**.
2. The page of the friend you have selected displays. The photos section of the page displays by default. You can view photos or navigate to Videos or Wall, then press **OK** to view your friend's videos and wall comments.

Wall

The Facebook Wall displays all of your entries and your friends comments and allows you to "Like" or comment. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the Wall entry.

1. In the Facebook main menu, press ◀/▶ to select **Wall**, then press **OK**.
2. Press ▲/▼ to view your friends' comments and posts.
3. With an entry selected, press ▶ once to select "Like," if you like the entry , then press **OK**. Press ▶ twice to comment on a news feed entry , press **OK**, then enter your comment using the on-screen keyboard.



.....
Note: Navigating to **What's on your mind?** and pressing **OK** allows you to add a comment to your wall.

Videos

You can view the videos you and others users have posted to Facebook.

1. In the Facebook main menu, select **Videos** then press **OK**.
2. Navigate to a video, then press **OK**.

Videos Player

With a video playing, press **OK** to bring up the videos player info panel. You can choose to **Like** or **Comment** on a video in the info panel, then press **OK**.



Videos Options

With a video playing, press **Options**.




- **Zoom** - To change the display's viewing scale, press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.
- **Browse description** - Select this option then press **OK** to view the description of the video.

Exit

In the Facebook main menu, select **Exit** then press **OK** to exit Facebook and return to the Services home screen.

Delete Facebook Account

You can delete a Facebook account in the login screen.

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Facebook, then press **OK**.
3. Select the Facebook account you wish to delete, then press ▶ to select the  and press **OK**.
4. Select **OK**, then press **OK**. All previously saved account data for the Facebook account is erased.

Flickr

Flickr is an online image and video management and sharing website. Flickr content is organized based on tags—a keyword or category label that describes content. Tags help users to search for contents that have something in common. Each content file can have as many as 75 tags associated with it.

To learn more about Flickr services, and the options and limitations related to them, go to <http://www.flickr.com/tour/>.

To access Flickr:

1. Navigate to the Home | Search menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Flickr **flickr**, then press **OK**. The Flickr home screen displays.

Options include:


- Interesting (last seven days)
- Recent Upload
- Search
- My Contacts
- Hot Tags
- My Tags
- Exit

Exploring Contents

You can explore photostreams (Flickr’s term for content selection) available in Flickr’s public domain.

To explore for random “interesting” media content from the past seven days:


Press ◀/▶ to select **Interesting** in the Flickr home screen, then press **OK**.

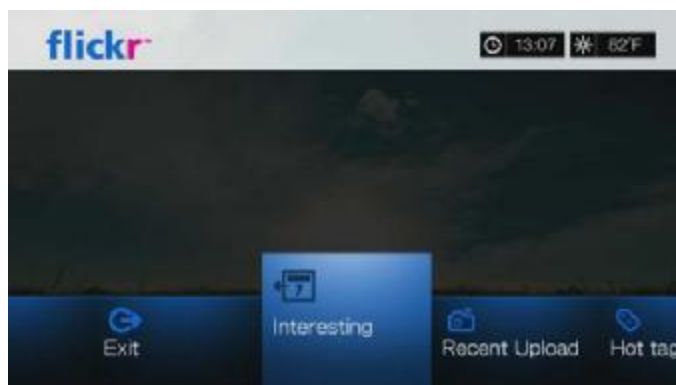

A photostream showing random contents rated as interesting in the past seven days by Flickr users displays. Go to page 113 for instructions on how to navigate a photostream.

To explore based on the upload date:


Press ◀/▶ to select **Recent Upload** in the Flickr home screen, then press **OK**.

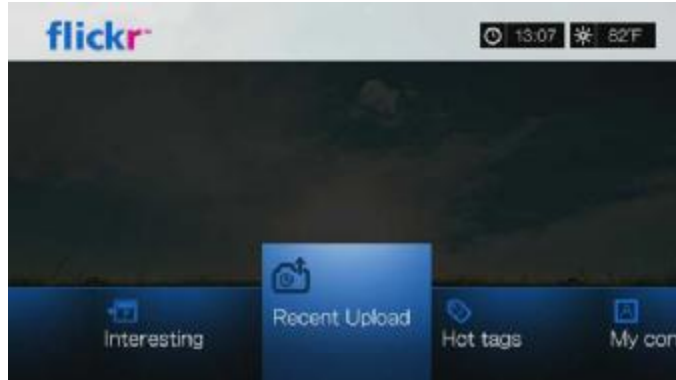

A photostream showing the most recently uploaded content displays. Go to “Flickr Photostream” on page 113 for instructions on how to navigate a photostream.

To explore based on popular tags:

1. Press ◀/▶ to select **Hot tags** in the Flickr home screen, then press **OK**.

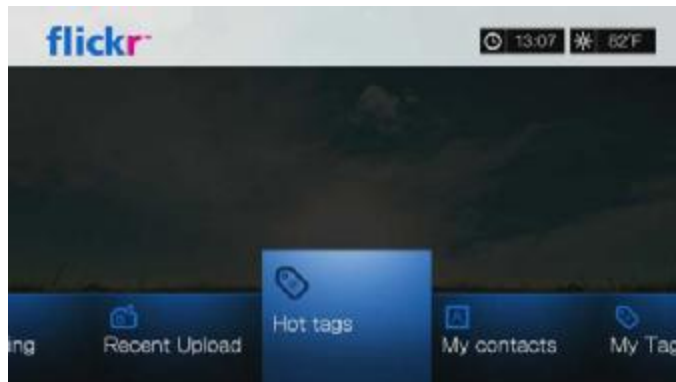

2. Press the navigation buttons to select a tag from the list, then press **OK**.


A photostream showing contents associated with the selected tag is displayed. Go to “Flickr Photostream” on page 113 for instructions on how to navigate a photostream.

Searching for Contents


To search for content based on a specific keyword:

Keywords are words or phrases associated with the type of content you’re looking for. Keyword searches are based on information indicated on a member’s profile page.

1. Press ◀/▶ to select **Search** in the Flickr home screen, then press **OK**.

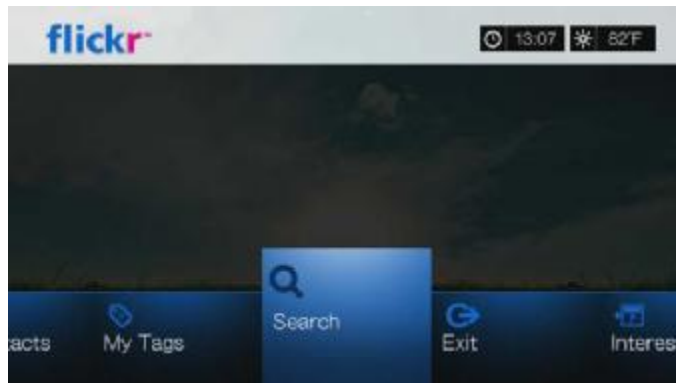

2. Press ▲/▼ to select **Keywords**, then press **OK**.

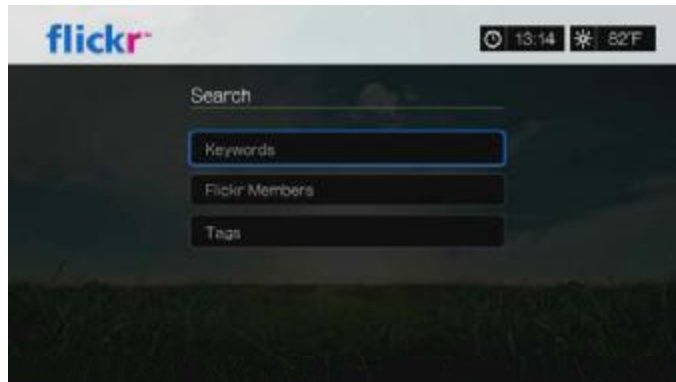

3. Use the navigation buttons ▲▼◀▶ to type a search word using the on-screen keyboard. Select **Submit**, then press **OK**.

A photostream showing contents associated with the specified keyword displays. Go to page 113 for instructions on how to navigate a photostream.

To search for content based on tags:

Perform this type of search to find content based on information indicated in a member's tags list.


1. Press ◀/▶ to select **Search** in the Flickr dashboard, then press **OK**.
2. Press ▲/▼ to select **Tags**, then press **OK**.
3. Use the navigation buttons ▲▼◀▶ to type a search word using the on-screen keyboard. Select **Submit**, then press **OK**.

A photostream showing contents associated with the specified word is displayed. Go to "Flickr Photostream" on page 113 for instructions on how to navigate a photostream.

Searching for a Flickr Member

To search for a Flickr member:

1. Press ▲/▼ to select **Search** in the **Explore** screen, then press **OK**.
2. Press ▲/▼ to select **Flickr member**, then press **OK**.

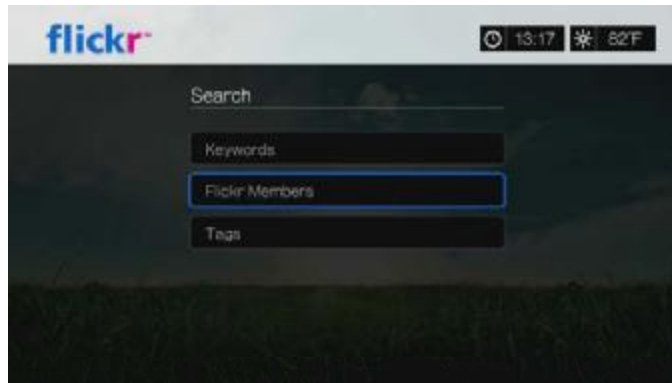

3. Use the navigation buttons ▲▼◀▶ to type a member's user name, email address, or interest using the on-screen keyboard. Select **Submit**, then press **OK**.

A browser screen listing Flickr member links matching your search criteria displays.


4. Press ▲/▼ to select a link, then press **OK** to view that member's profile page. If the selected member has public photostreams, you can explore them. Use the navigation buttons ▲▼◀▶ to select a content selection, then press **OK** to explore it. Go to the next section for instructions on how to navigate a photostream.

My Contacts

My Contacts shows a list of Flickr members you have searched for.


To view My Contents:

1. Press ◀/▶ to select **My Contents** in the Flickr home screen, then press **OK**.

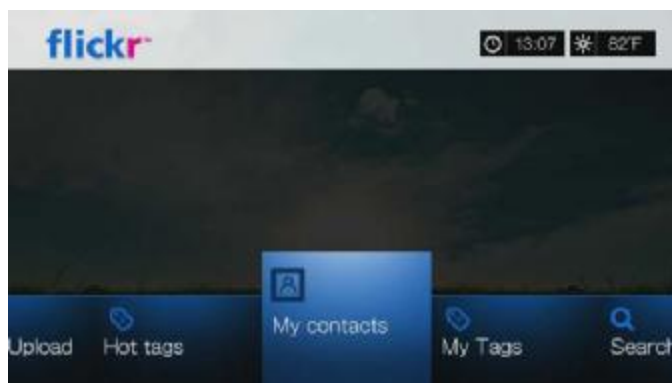

2. Press ▲/▼ to select a Flickr member you've searched for previously, then press **OK** to view their photos.

3. To remove a contact from the list, select the contact name and press **Options**. Select **Delete** or **Delete All Items**, then press **OK**.

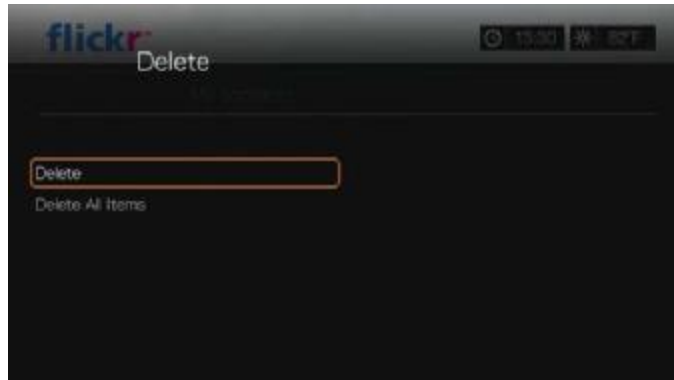


My Tags

My Tags shows a list of Flickr tags you have searched for.

To view My Tags:


1. Press ◀/▶ to select **My Tags** in the Flickr home screen, then press **OK**.

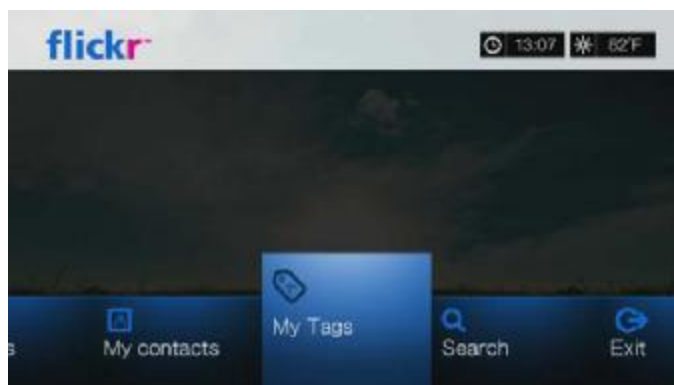


2. Press ▲/▼ to select a tag you've searched for previously, then press **OK** to view the photos associated with the tag.
3. To remove a tag from the list, select the tag and press **Options**. Select **Delete** or **Delete All Items**, then press **OK**.

Flickr Photostream

The Flickr photostream layout is the same as that of a Photos directory in thumbnail mode.

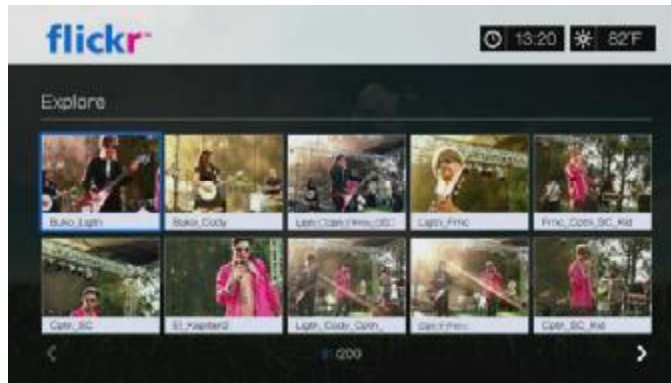

- You can use the navigation buttons ▲▼◀▶ to select content.
- To view content in fullscreen mode, select the file and press **OK**.
- To view a slideshow using all the current photostream's content, press **||▶** or **OK**. Contents display in the Flickr Player screen. Go to next section for information.
- To return to the photostream from fullscreen mode, press **Back**.
- To return to the photostream from Player mode, press **■**.
- To view all photos in full screen, go to Photo Settings and select Fit to screen (see "Photo Scaling" on page 176).
- While in the photostream layout, press Options to jump back to the Flickr home page or choose any of the Flickr home page menu options.

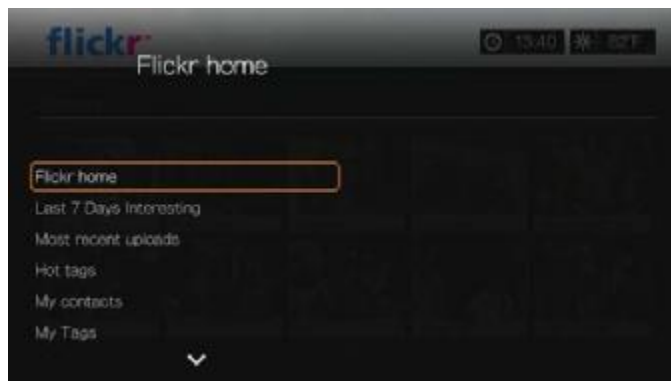


Flickr Player

The Flickr Player layout is the same as that of a photo slideshow.

- Press **▶▶▶** to view the next image in the photostream.
- Press **◀◀◀** to view the previous image in the photostream.
- To return to the photostream, press **■**.

Player Options

As with a regular photo slideshow, you can customize the way content is displayed in the Flickr Player. To do this, press **Options**.

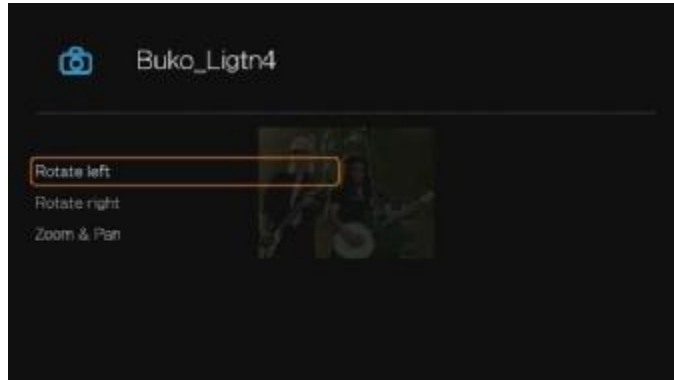

.....
Note: To view photos enlarged in fit to screen or full screen mode, access the Setup menu and follow the instructions under “Photo Scaling” on page 176.

- To rotate the image display, press ▲/▼ and select **Rotate left** or **Rotate right**, then press **OK** repeatedly until the preferred display angle is achieved. The display is rotated clockwise or counter-clockwise in 90° increments. Press **Options** or **Back** to revert to the default display angle.
- To change the display’s viewing scale, press ▲/▼ and select **Zoom & Pan**, then press **OK**. Press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- To pan the display, press ▲/▼ and select **Zoom & Pan**, then press **OK**. Press the navigation buttons ▲▼◀▶ repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.


Exit Flickr


To return to the Services home screen, press ◀/▶ to select **Exit** in the Flickr dashboard, then press **OK**.

Flingo

Flingo offers free Internet Television from leading studios, TV networks, and video websites. It also allows you to turn the Web into your remote control. You can simply "fling" your favorite videos to the Queue in the Flingo application on your media player. For more information go to www.flingo.tv.

To access Flingo:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Flingo , then press **OK**.
3. Press ▲, then press ◀/▶ to choose a category (Channels, Popular, Favorites, Queue, and Search) from the Flingo interface. Press **OK**.
4. Use the navigation buttons ▲▼◀▶ to select a channel, then a video within the channel. Press ||▶ or **OK** to begin playing the video.

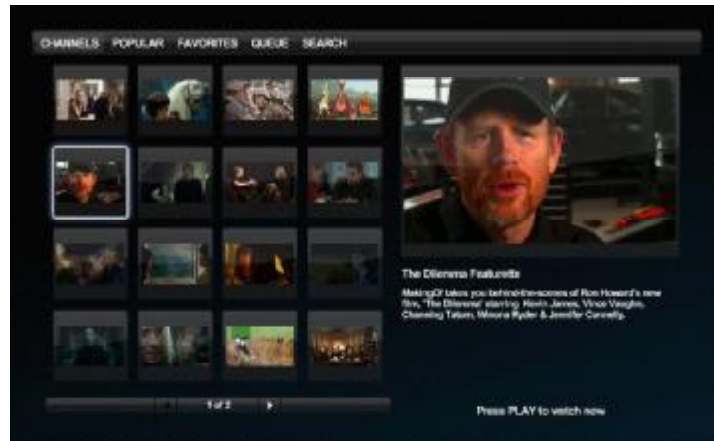

5. Press the Home button  to exit Flingo.

Hulu Plus (US only)

Enjoy episodes from dozens of hit TV shows all season long from ABC, Fox, NBC, and more on your HDTV. The extensive library also includes classic TV series and blockbuster movies. Visit www.hulu.com/plus for details.*



* Hulu Plus membership required. US only.

The following conditions must be satisfied before you can use the Hulu Plus service.

- You must have a Hulu Plus subscription. Go to www.hulu.com/plus to create your account.
- At present, Hulu Plus is only available for users located in the United States. You must have a US-based network connection.

To access Hulu Plus:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Hulu Plus, then press **OK**.
3. If you are a Hulu Plus subscriber, choose **Yes**, then press **OK**. Proceed to step 4. If you are not a Hulu Plus subscriber, choose No, then press OK. Write down the referral code, which you will enter when you go to www.hulu.com/plus to create your account.



Note: If you select **No**, you can still choose **View sample videos** and **Learn more about Hulu Plus**.

4. Write down the activation code and follow the onscreen instructions (go to www.hulu.com/activate and enter your user name, password, and activation code). Or, select **Log in to Hulu Plus** to log in to your Hulu Plus account using the onscreen keyboard (you will need to do this each time you log out and log back in to your Hulu Plus account).



5. The Hulu Plus Home screen displays. Press ▼, then press ◀/▶ to choose another category (Search, Browse Movies, Browse TV, Recently Added, Most Popular, Queue/Profile, Recommended, and Help) from the Hulu Plus interface. Press **OK**.
6. Press the Home button 🏠 to exit Hulu Plus.

Live365

Use Live365 to create your own online radio station or listen to other Live365 broadcasters' online stations. Music selections are compiled based on user ratings. Some small AM and FM stations also utilize Live365 to stream audio over the Internet.

To access Live365:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Live365 **LIVE 365**, then press **OK**.

Options include:


- Stations
- Last Played
- My Presets
- About
- Exit

Signing in to Live365 (Optional)

You can start listening to free Live365 stations as an unregistered user, but to enjoy more features like access to recommended stations, saving stations to favorites, securing track information, setting station preferences, and many others, you need to sign up for a Live365 account.

To sign in to Live365:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Live365, then press **OK**.
1. On the Live365 main screen, press ◀/▶ to select **My Presets**, then press **OK**.

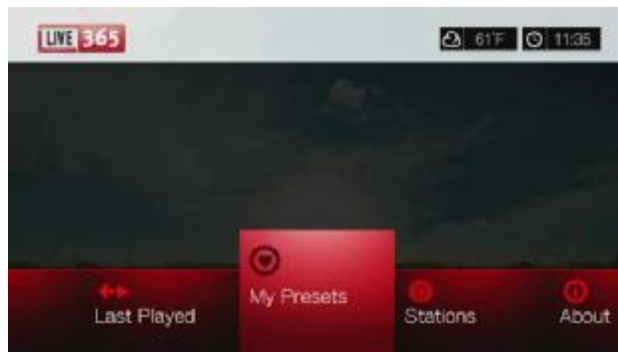

2. Press ▲/▼ to select **Sign In** or **Don't have an account?**, then press **OK**. If you don't have an account, follow the on-screen instructions to create your Live365 account online.



3. Use the navigation buttons ▲▼◀▶ to key in your Live365 user name on the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons ▲▼◀▶ to key in your Live365 account password on the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press ▲/▼ to select a save option.

Options include:

- **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you use the media player to access the Live365 service.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you use the media player to access the Live365 service.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you select Live365 from the Services menu bar.
6. Press **OK** to complete the sign-in process. Once you have successfully signed in, the Live365 Home screen appears.

From this screen you can browse for new stations, access previous stations you've listened to, and define profile preferences for your Live365 account.

To sign up for a Live365 account, go to <http://www.live365.com/wdtv>.


For more information on the features, options, and limitations of using Live365, go to <http://www.live365.com/index.live>.

Listening to a Live365 Station


- New Live365 users can browse for a radio station.
- You can access the last station you've listened to if you've already accessed Live365 from the media player.
- Registered Live365 users can access My Preset List and listen to favorite stations.
- Live365 VIP members can listen to premium radio stations.

To browse for a radio station:

1. On the Live365 main screen, press ◀/▶ to select **Stations**, then press **OK**.

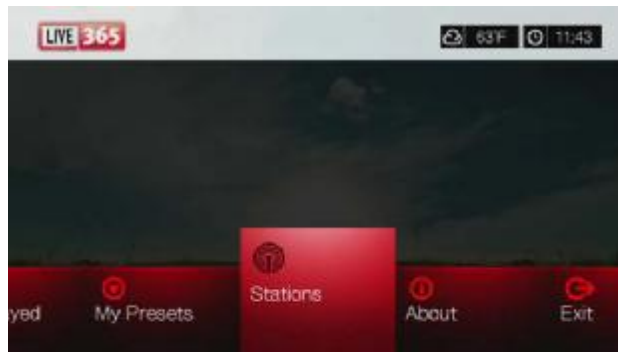

2. Press ▲/▼ to select a station category, then press **OK**.

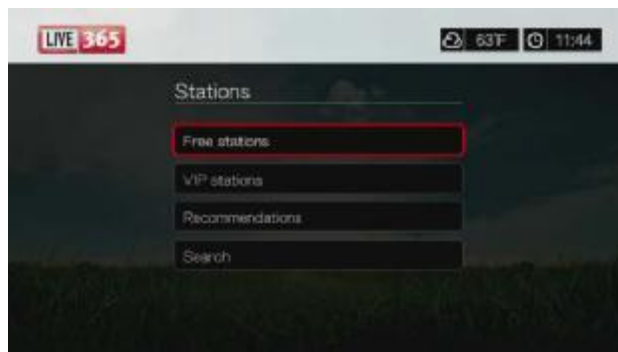




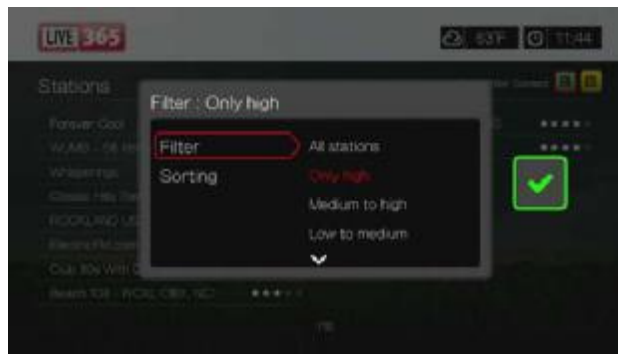
Selections include:

- **Free Stations** – Free Internet radio.
 - **VIP Stations** – Premium, uninterrupted Internet radio for registered and paying Live365 users. You must sign in to your Live365 account and be a valid VIP member before you can access this category. Go to page 121 for more information.
 - **Recommendations** - Free Internet radio recommended by your other Live365 users. You must be signed in to access these stations.
 - **Search** – Search for a Live365 station. Go to page 121 for more information.
3. Press the navigation buttons to select the station you want to listen to. Press **OK**.
 4. Press ▲ if you want to add the station to My Presets if you have a Live365 account. Press **OK**.
 5. Press ||▶ or **OK** to start listening to the selected radio station.

The Live365 Station screen:

The Live365 station screen provides view and sorting and audio quality filtering options.


1. Press ▲, select the view icon , and press **OK** to switch between Grid and List views.
2. Press ▲/▶ to select the sorting and filter icon , and press **OK**.
3. Press ▶, then ▲/▼ to select Filter by audio quality. Options include All Stations, Only high (audio quality), Medium to high (audio quality), Low to medium (audio quality), and Only low (audio quality). Press **OK**.
4. Press ▶, then **OK** to select the green check mark , then press **OK** again.



5. Select Sorting and repeat the steps above to sort stations either Alphabetically or By Popularity.

To access the last station listened to:

1. On the Live365 main screen, press ◀/▶ to select **Last played**.

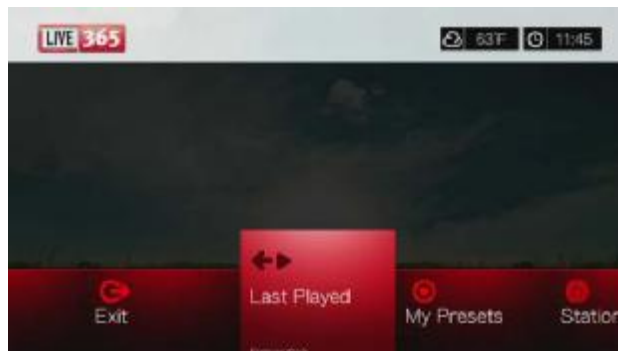

2. Press ||▶ or **OK** to start listening to the selected radio station.

To listen to a favorite station:

1. On the Live365 main screen, press ◀/▶ to select **My Presets**, then press **OK**. Press ◀/▶ to select a station from your preset list.
2. Press ||▶ or **OK** to start listening to the selected radio station.

To listen to a VIP station:

1. On the Live365 main screen, press ▲/▼ to select **Stations**, then press **OK**.
2. Press ▲/▼ to select **VIP Stations**, then press **OK**.
3. Press ▲/▼ to select a music genre, then press **OK**.



4. Press ▲/▼ to select a music sub-genre, then press **OK**.
5. Press ◀/▶ to select the station you want to listen to.
6. Press ||▶ or **OK** to start listening to the selected radio station.

Searching for a Live365 station

Perform a station search based on the following criteria:


- Artist name
- Track or CD title
- Station information
- Music genre
- Station location
- Audio quality.

You can limit your search based on whether a station has been rated by Live365 editors or if it is a professional, independent, or official station.

To search for a Live 365 station:

1. On the Live365 home screen, select **My Presets**, **Stations**, or **Last Played**, then press **Options**.

2. Press ▲/▼ to select **Search**, then press **OK**.

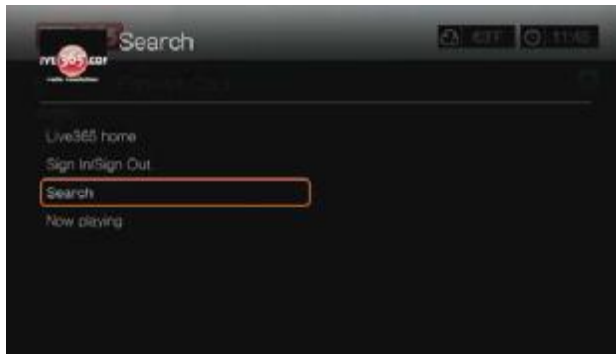

3. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.
4. Press ◀/▶ to select a station from the search result.
5. Press ||▶ or **OK** to start listening to the selected radio station.

Displaying the Currently Playing Station

1. On the Live365 home screen, select **My Presets**, **Stations**, or **Last Played**, then press **Options**.
2. Press ▲/▼ to select **Now Playing**, then press **OK**. The station currently playing displays.

Adding a Station to Your Preset List

If you like a particular station, you can add it to your preset list for easier access in the future.

To add a station to your preset list from the Now Playing screen list:

1. Go to the station list showing the station you want to add.
2. Press ◀/▶ to select the station you want to add.
3. Press ▶ several times to enable the + Add to My Preset function, then press **OK**.
4. A confirmation screen appears. Press **OK** to confirm the new preset station and return to the Now Playing screen.

Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

1. Sign in to your Live365 account. Go to “To sign in to Live365:” on page 117 for instructions.
2. From the Live365 home screen, press ◀/▶ to select **My Presets**, then press **OK**.
3. Press ◀/▶ to select the station you want to remove.
4. Press ▲ to enable the Remove Station function, then press **OK**.
5. A confirmation prompt appears. Press **OK** to go back the Now Playing screen.

Providing Song Feedback

Music selections in Live365 are compiled based on their user ratings. You can participate in the selection process by giving a song the “thumbs up” 👍 or “thumbs down” 👎 vote.

To provide song feedback:

1. While the song is playing, press ◀/▶ to select a feedback icon: 👍 for positive feedback, 👎 for negative feedback. Press **OK**.
2. A feedback confirmation screen appears. Press **OK** to go back the the Now Playing screen.

Getting Track Information

You can send the track information of the currently playing song to your email account for later reference.

To secure track information:

1. While the song is playing, press ◀/▶ to select ✉, then press **OK**.
2. A confirmation screen appears. Press **OK** to return to the Now Playing screen.
The track information will be sent to the email address you used to sign up for your Live365 account.

Signing out from Live365

Sign out of Live365 after a listening session to ensure that nobody can make changes to your Live365 settings and stations without your permission.

To sign out from Live365:

1. In a Stations or the Now Playing screen, press **Options**, then ▲/▼ to select **Sign In/Sign Out**, then press **OK**.
2. Press ◀/▶ to select **OK** on the confirmation prompt, then press **OK**.


Exit Live365

To return to the Services home screen, press ◀/▶ to select **Exit** in the Live365 home screen, then press **OK**.

Mediafly

Mediafly conveniently brings your favorite Internet content and podcasts to your media player from favorite sources like CNN, BBC, NBC, ESPN, WSJ, Fox, NPR, and more. Set up once with Mediafly and enjoy the same content on TVs, smartphones, computers, and beyond. Mediafly is available worldwide; features may vary based on country.

To access Mediafly:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Mediafly , then press **OK** to display the Mediafly home screen.

Options include:

- My Channels
- Popular Channels
- Browse content plug-ins
- Search
- Exit


Signing In To Your Mediafly Account



.....

Note: If you do not have a Mediafly account and want to create one, go to www.mediafly.com/wd.


1. Navigate to the Home | Services menu bar.
2. Press ◀/▶ to select Mediafly, then press **OK**.
3. On the Mediafly home screen, press ◀/▶ to select **My Channels**, then press **OK**.

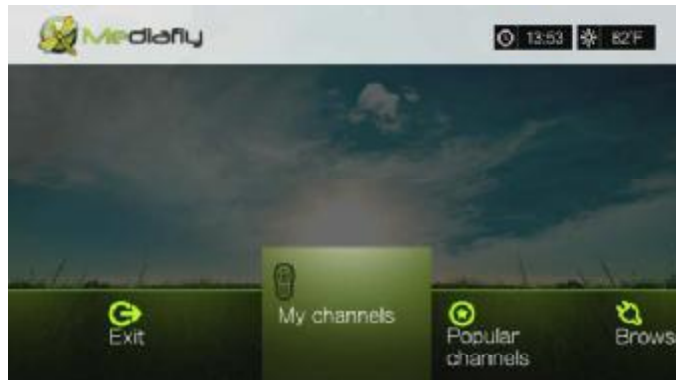

4. Select **Sign in**, then press **OK**.



5. You are provided with two options to sign in to your Mediafly account.

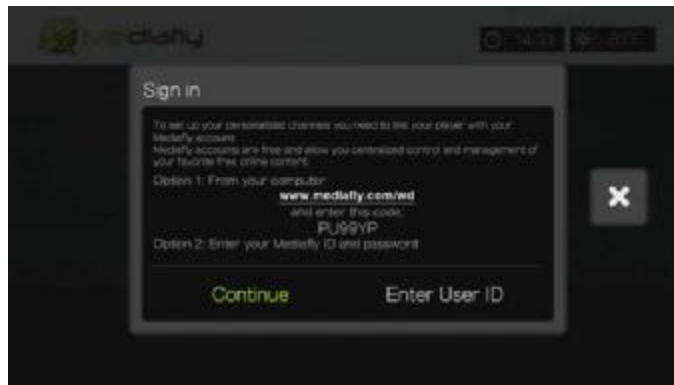

Option 1: On your computer, go to www.mediafly.com/wd and enter the code on your TV screen. Select **Continue**, then press **OK**.

Option 2: Select **Enter User ID**, then press **OK**. Go to steps 6-7.

6. Press **OK**, then use the navigation buttons **▲▼◀▶** to type your Mediafly user name in the on-screen keyboard. Select **Submit**, then press **OK**.
7. Select Password, press **OK**, then use the navigation buttons **▲▼◀▶** to type your Mediafly account password in the on-screen keyboard. Select **Submit**, then press **OK**.
8. Press **OK** again with the green check mark selected.

My Channels

1. When you have signed in to Mediafly using one of the methods described above, select **My Channels**, press **▼/▲** to select a podcast category, then press **OK** to display the podcasts you have added to your account in Mediafly.



.....
Note: If you have not added any podcasts, the screen displays "no content found."

2. Press **A** or navigate to **A** and press **OK**, then **▼/▲** to choose a filter (**Both, Audio, Video**), then press **OK** twice.
3. Press **▲/▼** to select a podcast from the display.
4. Press **||▶** or **OK** to start watching or listening to the selected podcast.

Mediafly Player

The Mediafly layout is similar to the regular video playback screen. It displays the playback status bar and the elapsed and total playback times.

- Press **PLAY/PAUSE** to pause and resume playback.
- Press **FF/REV** to fast forward or reverse in 10 second increments.
- Press **NEXT/PREV** to select the next/previous podcast in the channel.

Mediafly Player Options

Press **Options** during playback, then press ▼ / ▲ to select any of the following options:

- Show info
- View episodes
- Rate
- Favorite
- Add to my channel
- Remove from my channel

Show info

1. Press ▼ / ▲ to select **Show info** from the Options screen, then press **OK**.
2. Information about the podcast displays. Press **OK** to return to the Options screen or **Back** to resume watching or listening to the podcast.

View episodes

1. Press ▼ / ▲ to select **View episodes** from the Options screen, then press **OK**.
2. Episodes associated with the podcast display. Press ▼ / ▲ to select a podcast from the list, then press **OK**.

Rate

1. Press ▼ / ▲ to select **Rate** from the Options screen, then press **OK**.
2. Press ◀ / ▶ to select a rating (one to four stars), then press **OK**. Select **This episode** or **All episodes in this show**, then press **OK**.

Add to my channel

1. Press ▼ / ▲ to select **Add to my channels** from the Options screen, then press **OK**.
2. Select **This episode** or **All episodes in this show**, then press **OK**.

Remove from my channels


1. Press ▼ / ▲ to select **Remove from my channels** from the Options screen, then press **OK**.
2. Select **This episode** or **All episodes in this show**, then press **OK**.

Popular Channels

These are channels deemed most popular by Mediafly users.

To access Popular Channels:

1. On the Mediafly dashboard, press ◀/▶ to select **Popular Channels**, then press **OK**.

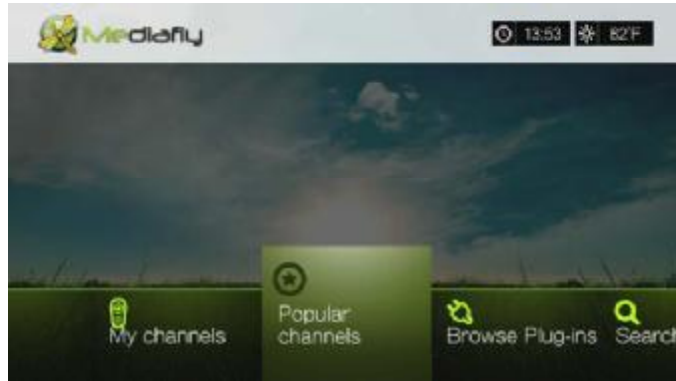


2. Press ▼/▲ to select a Popular channels category, then press **OK**.
3. Press **A** or navigate to **E** and press **OK**, then ▼/▲ to choose a filter (**Both**, **Audio**, **Video**), then press **OK** twice.
4. Press ▲/▼ to select a podcast from the display.
5. Press **II ▶** or **OK** to start watching or listening to the selected podcast.

Browse content plug-ins

To browse content plug-ins:


1. On the Mediafly dashboard, press ◀/▶ to select **Browse content plug-ins**, then press **OK**.

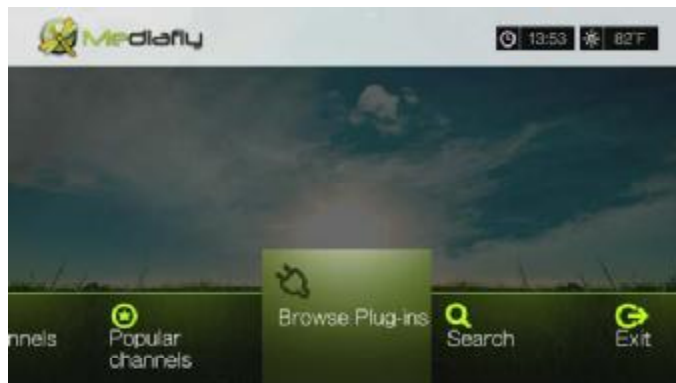

2. Press ▲/▼ to select one of the options in the Media Plug-ins screen, then press **OK**.

Search

1. On the Mediafly dashboard, press ▲/▼ to select **Search**, then press **OK**.

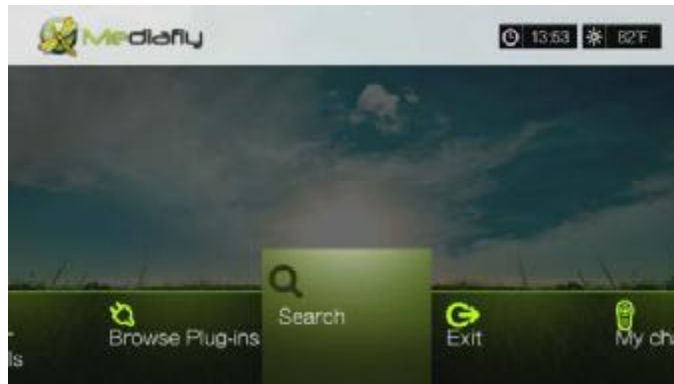

2. Press ▲/▼ to filter channel results (**Both, Audio, Video, Add Media Plug in via mCode**), then press **OK**.
3. Use the navigation buttons ▲▼◀▶ to type a podcast search using the on-screen keyboard. Press **OK**, then press **OK**.
4. Press ▲/▼ to select a podcast from the display, then press **||▶** or **OK** to start watching or listening to the selected podcast.

Deleting a Mediafly Account

1. On the Mediafly dashboard, press ▲/▼ to select **My Channels**, then press **OK**.
2. Press **Options**, then select **Manage User**. Press **OK**.



3. Press ▲/▼ to select **Delete account**, then press **OK**.
4. Press ▲/▼ to select the account you want to delete, then press **OK**.
5. Press ◀/▶ to select **OK** on the confirmation prompt, then press **OK**.

Exit Mediafly

To return to the Services home screen, press ◀/▶ to select **Exit** in the Mediafly home screen, then press **OK**.


MLB.TV


MLB.TV is a paid subscription service that allows users to view live and archived major league baseball games. An MLB.TV subscription is required to use this service. See http://mlb.mlb.com/mlb/help/faq_subscriptions.jsp for further details.




.....
Note: Subject to blackout restrictions. See MLBTV.COM for details.

To access MLB.TV:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select MLB.TV , then press **OK**.
3. Select **Link Now**, then press **OK**.
4. Go to www.mlb.tv/wdtk and enter the code shown on-screen.

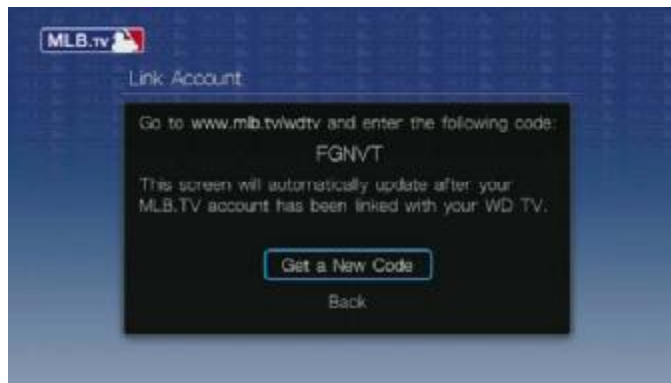

5. Press OK on the remote. The MLB.TV main screen displays.

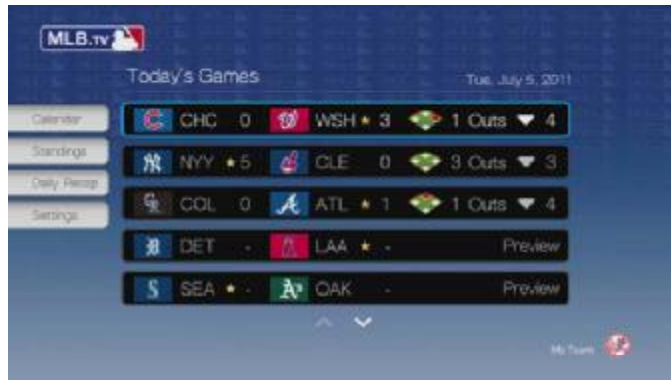


Today's Games

To view Today's Games:

1. Press ▲/▼ to select a game from the list in the main screen, then press **OK**.
2. Select a video feed (HOME or AWAY broadcast), then press **OK**.

3. Select a playback option (**Watch From Beginning**, **Resume Watching**, **Watch Live**), then press **OK**.

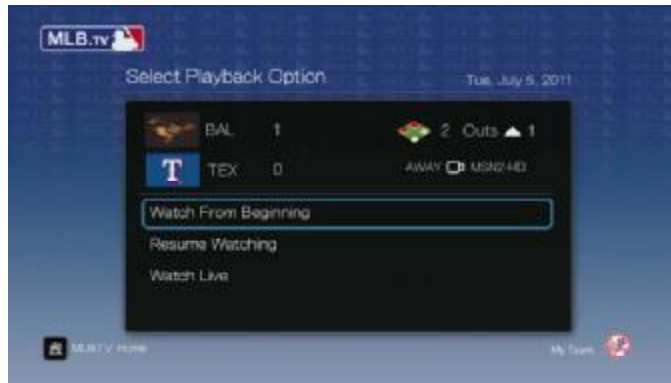


Game Playback

Press **OK** while watching a game to bring up the MLB.TV playback screen. Use the navigation buttons to **Jump to Inning**, **Jump 10 Secs**, play **Slow**, **Jump to Live**, or **Select Feed**. Select **Close** then press **OK** to close the playback screen.



Playback Options

Press **Options** during game playback to bring up the playback options screen. Besides the same options available in the playback screen, the options screen also includes **Zoom & Pan** (see “Selecting Video Zoom and Pan Options” on page 68) and **Sound Effect** (TV Channel, Radio Station, or Audience Background Noise),

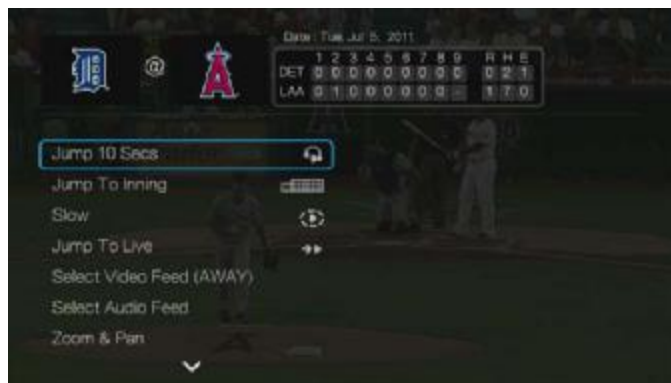

Calendar

In the MLB.TV main screen, navigate to **Calendar** then press **OK**. Your team's calendar displays. Select the current date or navigate to an earlier date and press **OK** to view current or archived games.



Standings

In the MLB.TV main screen, navigate to **Standings** then press **OK** to view AL and NL standings.


Daily Recap

In the MLB.TV main screen, navigate to **Daily Recap** then press **OK**. Use the navigation buttons to view recaps of recent games.



Settings

In the MLB.TV main screen, navigate to **Standings** then press **OK**. In this screen, you can perform such functions as setting your favorite team or teams, setting the default team for the calendar, unlink your account, or hide or reveal scores in the main screen.

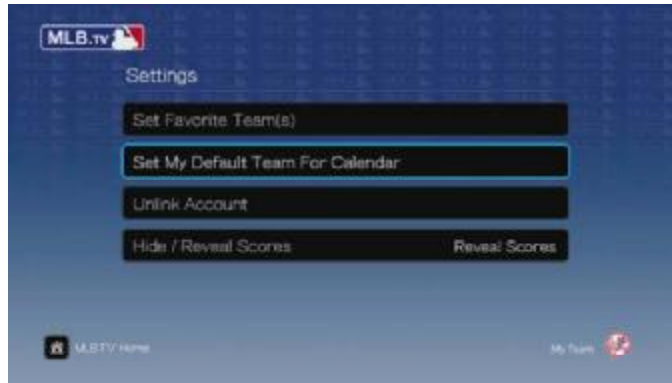

Netflix

Enjoy new releases, classics, and TV episodes instantly on your WD TV Live Hub media player. Don't wait for the mailman to deliver your movies and don't settle for streaming to your small computer screen. Access your Netflix unlimited membership and instantly watch TV episodes and movies on your big screen.*




.....
Note: *Netflix unlimited membership required. US and Canada only.

To access Netflix:



.....
Important: Be sure to update your firmware to the latest version before following the instructions below. See "System Firmware Upgrade" on page 188 for further details.

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Netflix , then press **OK**.

Existing Netflix Members

Follow the on-screen instructions to enter your user name (in most cases, your registered email address) and password to log in to your account using the remote control. Go to www.netflix.com/signinhelp if you encounter any problems.

New to Netflix

Go to www.netflix.com/wdtv to sign up and start a one month free trial.

Netflix Navigation

Once you have accessed your Netflix account, navigate using the remote control to choose from a variety of categories of movies and TV shows.



.....
Note: To deactivate Netflix on the media player, reset the device to factory defaults. See "Device Reset" on page 183. To deactivate the media player from your Netflix account, log in to your Netflix account. Navigate to "Your Account & Help." Under "Manage Netflix ready devices and computers" locate the WD TV device and select "Deactivate."

Pandora (US only)

Pandora is an automated music recommendation and Internet radio service. With Pandora, you can input a song title or artist name and the service responds by playing selections that are musically similar. You can provide feedback (approved/not approved) on individual songs, which Pandora takes into account for future selections.

Conditions for Using Pandora

The following conditions must be satisfied before you can use the Pandora service.

- You must have a Pandora account. Go to www.pandora.com/wd to create your account. Once you have registered, note your activation code. You will need this code to sign in to Pandora from your media player.
- At present, Pandora is only available for users located in the United States. You must have a US-based network connection.


To set the system language to English:

1. Navigate to Home | Setup menu bar.
2. Press ◀/▶ to select **Appearance**, then press **OK**.
3. Press ▲/▼ to select **Language**, then press **OK**.
4. Press ▲/▼ to select **English**, then press **OK**.



Signing in to Pandora for the First Time

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Pandora **PANDORA** , then press **OK**.
3. Press **OK** to bring up the Add Account screen.
4. If you already have a Pandora account, choose **I have a Pandora account**, then press **OK** to create your new Pandora account. Proceed to step 6.

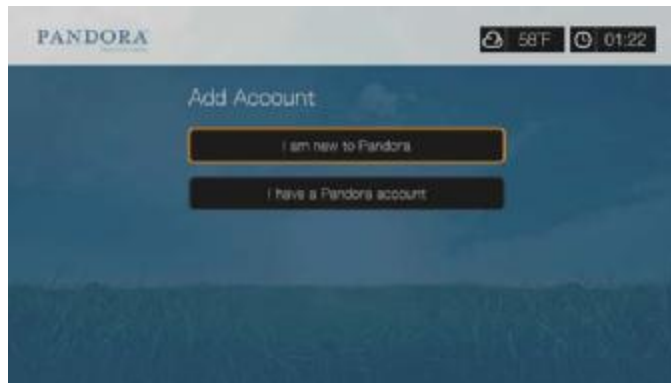

5. If you do not have a Pandora account, select **I am new to Pandora**, then press **OK**.
6. Write down the activation code and follow the onscreen instructions (go to www.pandora.com/wd to create your new account). When finished, choose **Continue**, then press **OK**.
7. Use the navigation buttons ▲▼◀▶ to type in your Pandora user name using the on-screen keyboard, then press **OK**.
8. Use the navigation buttons ▲▼◀▶ to type in your Pandora account password using the on-screen keyboard, then press **OK**.
9. Press ◀/▶ to select a save option.
Options include:
 - **No** – Your account details will not be saved. You need to repeat the initial sign-in process every time you access the Pandora service using the media player.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you access the Pandora service using the media player.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you access the Pandora service using the media player.
10. Press **OK** to complete the sign-in process.

Once you have successfully signed in to Pandora, the Stations screen appears.



From this screen you can create new stations, start listening to previously created stations and Quickmix playlist, and define profile preferences for your account.

For more information on the features, options, and limitations of using Pandora, go to <http://www.pandora.com>.

Pandora Stations

A Pandora station is a personalized stream of music, based on one or more artist names or song titles of your choice. Once you've signed in to Pandora from your media player, you can easily access your stations from the Music menu bar.

Pandora stations reminders

- You can have up to 100 stations at any one time, plus one QuickMix. Once you reach this maximum number of stations you have to delete a station before you can add another one.
- Pandora does not allow immediate or "on demand" playback of a specific song.
- A Pandora station cannot play more than four songs by an artist in a three-hour period.
- After eight hours of play, Pandora prompts you to see if you're still listening. Streaming stops until you respond.
- The music selection streamed into your Pandora station contains a mix of songs or artists that were compiled based on:
 - the initial station "seed" used in creating that station. Go to the next section for instructions on how to create a new Pandora station.
 - the track feedback (thumbs up / thumbs down) you provide. Go to page 138 for more information.
 - the number of skips assigned to a track. Go to page 138 for more information.
- You cannot reverse or immediately replay the songs played on your Pandora station.

To create a Pandora station:

1. Navigate to **Create Station** or press **Options** to select **Create station**. Press **OK**.
2. Use the navigation buttons ▲▼◀▶ to type the name of an artist or song title using the on-screen keyboard. Select **Submit**, then press **OK**.
3. Press ▲/▼ to select a listing from the search results, then press **OK**.
The listing you selected will serve as the station 'seed' for Pandora to compile and stream music similar to your station.

To listen to a Pandora station:

1. On the **Stations** screen, use the navigation buttons to select the name of the station you want to listen to.
2. Press **||▶** or **OK** to start listening to the selected Pandora station. Press **NEXT** **⏮** to go to the next song.

To tune in to another station:

1. While listening to a station, press **STOP** **■**. You are returned to the Stations screen.
2. Use the navigation buttons to select the name of the station you want to switch to.
3. Press **||▶** or **OK** to start listening to the selected station.

To rename a Pandora station:

1. Tune in to the station you want to rename.
2. Navigate to **Rename Station** or press **Options** then ▲/▼ to select **Rename this station**. Press **OK**.



3. Use the navigation buttons ▲▼◀▶ to key in a new station name using the on-screen keyboard. Select **Submit**, then press **OK**.

To delete a Pandora station:

1. Tune in to the station you want to delete.
2. Navigate to **Delete Station** or press **Options** then ▲/▼ to select **Remove this station**. Press **OK**.
3. Press ◀/▶ to select **OK** on the confirmation prompt, then press **OK**.

QuickMix

QuickMix is a feature that allows you to listen to more than one of your stations at once. QuickMix will play only one song based on particular musical characteristics at a time (unlike regular Pandora stations, which play four related songs in a row), so the mood changes more often.

Providing Song Feedback

You can influence the music selection that is streamed into your Pandora station by providing track feedback for the song currently playing. You can give a song a “thumbs up” or a “thumbs down” vote.

Thumbs up

If you like the currently playing song, give it a thumbs up vote. This positive feedback means:

- The very next set of songs for this station will be generated using the song you've given a “thumbs up” vote to as a musical starting point.
- Future sets of songs are likely to have similar musical traits. Multiple “thumbs up” votes on this station for other similar songs will have a cumulative effect.
- This song will play somewhat more often than other songs on this station's potential playlist, and will play about as often as other songs that have received a “thumbs up” on this station.

Thumbs down

If you don't want to hear a song on a particular station, give it a thumbs down vote. This negative feedback means:

- The song will stop playing, if there are any of the remaining “six skips per hour” available on that particular station (this limit is per station, on a rolling per-hour basis).
- The song will be permanently removed from that particular station's playlist.
- A new set of songs with a different musical emphasis will begin to play.
- If you've given at least two “thumbs down” vote to a specific artist on that particular station, songs from that artist will no longer be included in that station's playlist.

To provide song feedback:

- While a song is playing, press ◀/▶ to select 👍 or 👎, then press **OK**.
A prompt to confirm your vote appears.

Putting a Song to Sleep

When you want to stop listening to song, but not permanently remove it from a station's playlist, you put it to “sleep.” This prevents the song from playing on any of your stations for 30 days.


To put a song to sleep:

- While a song is playing, press ◀/▶ to select 🛑, then press **OK**.
A prompt to confirm the “sleep” action appears.

Bookmarking a Song or Artist

You have the option to bookmark a song or an artist for later reference. You can later refer to this bookmark if you want buy the track when you've sign in to Pandora from your computer or mobile computing device, or if you want to share your musical preferences with other Pandora users.

To bookmark a song or artist:


1. While a song is playing, press ◀/▶ to select , then press **OK**.
2. Press ▲/▼ to select whether to bookmark the song title or the song artist, then press **OK**.

The new bookmark is added to your listener profile page. Sign in to Pandora from your computer or mobile computing device to view this profile page.

Why a Song is in my Station's Playlist

You can see why Pandora included a particular song in your station's playlist. While a song is playing, select **Why this song?**, then press **OK**. The song analysis displays.

Deleting a Pandora Account


1. Select Pandora from the Services menu then press **OK**.
2. Press ▲/▼ to select the Pandora account you want to delete, then press ▶ to select the  and press **OK**.

Picasa

Picasa is an online image and video management and sharing service. Picasa content is organized based on albums and is searchable by a number of criteria.

To learn more about Picasa services, and the options and limitations related to them, go to <http://www.picasa.google.com>.

To access Picasa:

1. Navigate to the Home | Services menu bar and and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select , then press **OK** to display the Picasa home screen.

Options include:


- Account
- Search
- My Photos
- People I'm Following
- Featured
- Recent

Signing In To Your Picasa Account




.....
Note: If you do not have a Picasa account and want to create one, go to <http://www.picasa.google.com>.

1. Press ◀/▶ to select **Account** in the Picasa home screen, then press **OK**.

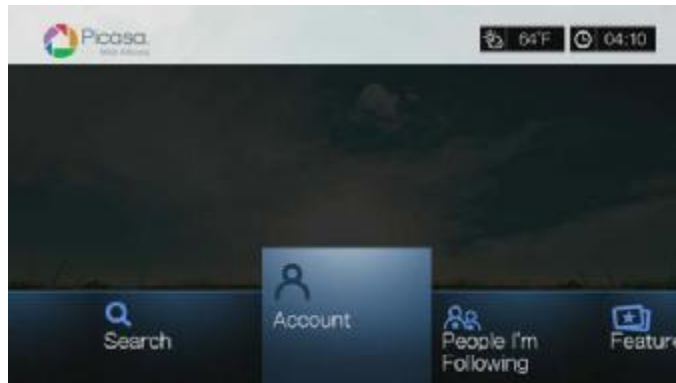


2. Select **Add Account**, then press **OK**.

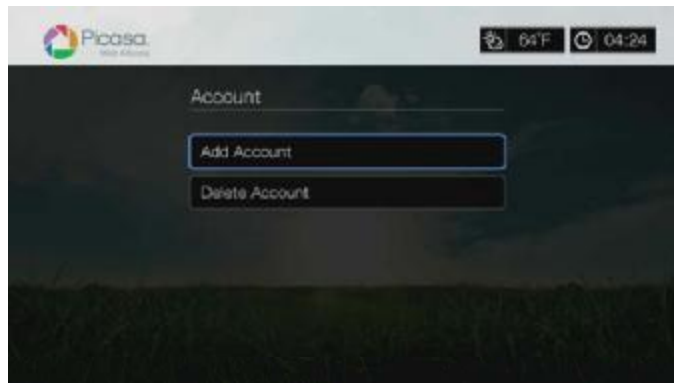

3. Use the navigation buttons ▲▼◀▶ to type your Picasa user name in the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons ▲▼◀▶ to type your Picasa account password in the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press ▲/▼ to select a save option. Press **OK** when finished.
- Options include:
- **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you access Picasa using the media player.
 - **Save username only** – Your username is saved, but you will be prompted to input your password every time you access Picasa using the media player.
 - **Yes** – Both your user name and password are saved. You can later sign in to your account from the Picasa Account screen.
6. The **My Photos** page appears. Go to the next section for more information on this page.


Account

By default, the **My Photos** page displays first when you sign in to your account. This page contains the photos and videos you have uploaded to Picasa.

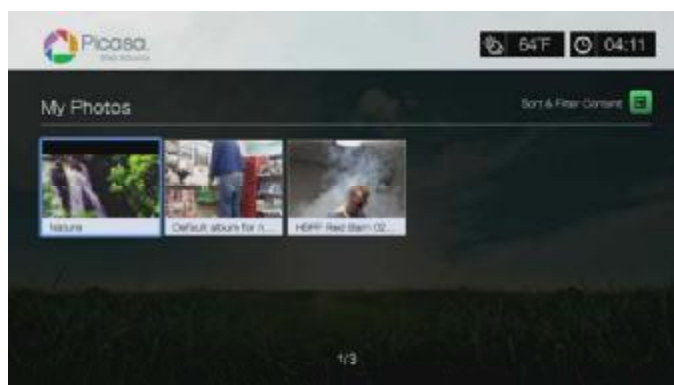

.....
 Note: If you have not uploaded any photos or videos, the screen displays "there is no media in the current folder."

You can sort and filter content on this page by showing all content (**All**) or your **Unlisted Gallery** or **Public Gallery**. Press **A** or navigate to **Filter**, and press **OK**, then press **▲/▼** and **OK** twice to switch that selection.

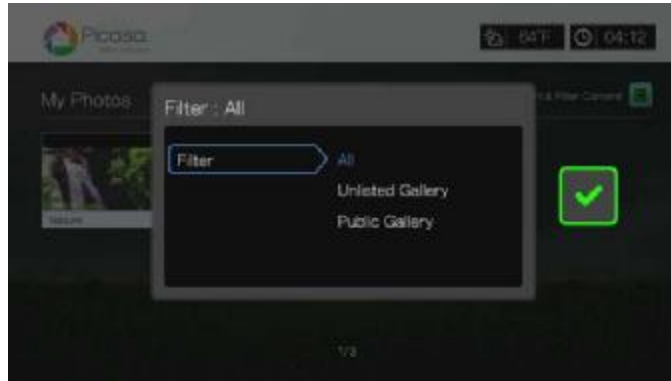

Searching for Content

You can search Picasa for photos and videos of particular interest to you. The search results are based on the following:

- Filenames
- Captions
- Tags
- Folder or album names
- Camera maker
- Date (i.e., 'November' or '2011')


The media player saves your searches so you can quickly recall them.



.....
Note: Content with visibility set to “private” by users do not appear in search results.


To search for content:

1. Press **◀/▶** to select **Search** in the Picasa home screen, then press **OK**.

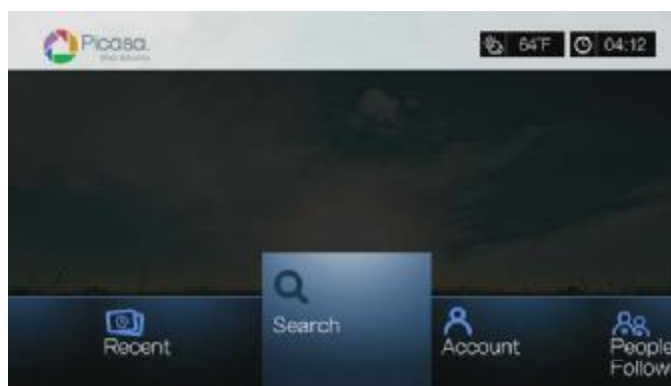


2. Use the navigation buttons **▲▼◀▶** to type a keyword related to the subject matter of the content you're looking for using the on-screen keyboard. Select **Submit**, then press **OK**.


The content search begins (this may take a few seconds). Content matching your search word appears in a Search result screen.

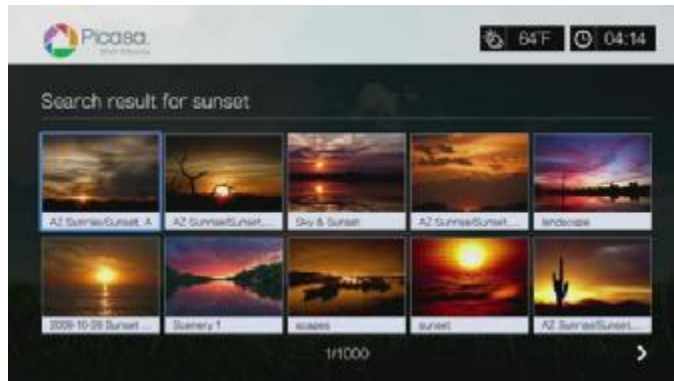

3. Use the navigation buttons to select a photo or video from the display.
4. Press **II ►** or **OK** to view the selected photo or start watching the selected video. Go to page 163 for more information on using the YouTube Player.

To use search history:

1. Press the **SEARCH**  button on the remote control. This toggles you to the Search History list.

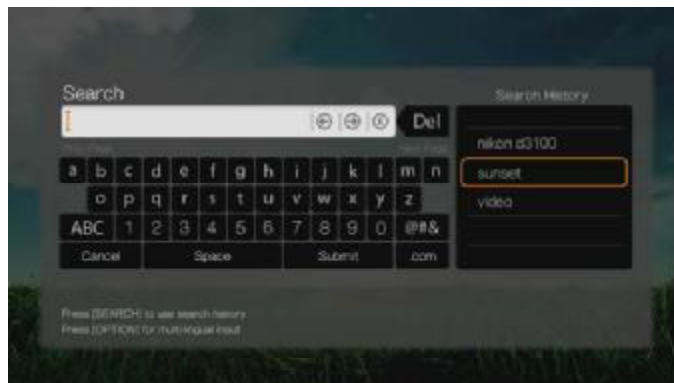


2. Press **▲/▼** to select a search from the display.
3. Press **OK** to perform the saved search.

My Photos

My Photos contains all images and videos in your Picasa Web Albums. To view images or videos, use the navigation buttons to select a web album, then press **OK**. Select an individual file and press **OK** to view, or press **II ►** to view a slideshow of all the photos in an album.

Photo Menu Options

With a photo thumbnail in a web album selected, press **Options**. The My Photos menu options display. Press **Back** when complete to return to the web album menu.

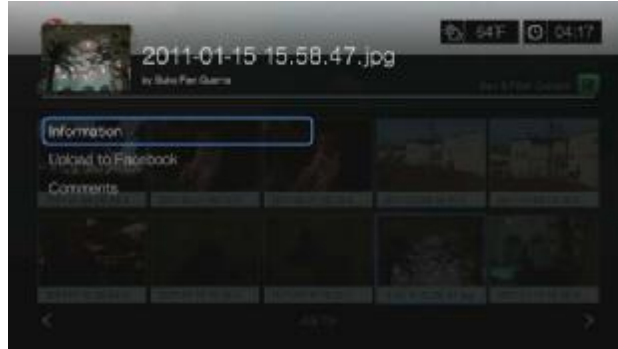

Information

Use this option to display the following information about the current picture:

- Date
- Camera make and model
- ISO, exposure, and aperture settings
- Focal length
- Flash info



Upload to Facebook


The Picasa upload to Facebook function is the same as the Videos upload to Facebook function. See “Upload to Facebook” on page 63.

Comments

Use this option to make or view comments on the selected photo. Use the navigation buttons to select **Hide Comments** or **Write a Comment...** using the onscreen keyboard, then press **OK**.

Photo Display Options

- To display the photo options while viewing a photo, press **Options**.
- To return to the photo you were viewing, press **Back** or **Options** again.

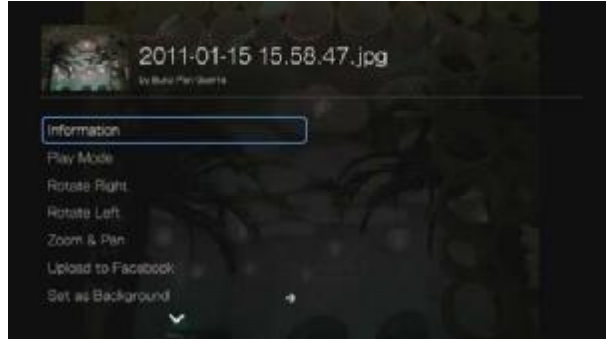

Information

See “Information” on page 144.

Play Mode

See “Play Mode” on page 85.

Rotate Left & Right

See “Rotate Left & Right” on page 85.

Selecting Photo Zoom and Pan Options

See “Selecting Video Zoom and Pan Options” on page 68.

Upload to Facebook

See “Upload to Facebook” on page 63.

Set As Background

See “Set as Background” on page 84.

Comments

See “Comments” on page 144.

Download Photo

Use this menu to download a photo to the media player’s internal drive or to another network attached device.

Displaying Photo Thumbnails

See “Displaying Photo Thumbnails” on page 86.

Photo Slideshow

See “Photo Slideshow” on page 87.

Video Player

The Picasa video layer layout is similar to the regular video playback screen. It displays the playback status bar and the elapsed and total playback times. Press **|| ▶** to pause and resume playback.

People I'm Following

People I'm Following contains thumbnails showing icons for the people you are following on Picasa. Select an icon to view each person's Public Gallery Albums. Use the navigation buttons to select individual photos or press **|| ▶** inside an album to begin a photo slideshow.

Featured

This screen contains select Picasa user photos. Use the navigation buttons to select individual photos or press **|| ▶** to begin a photo slideshow. When viewing a photo, press **Options** then select **More Photos From This Owner** to view all of the owner's Public Gallery Albums.

Recent

This screen contains recent Picasa user photos, and works the same as way as Featured above.


Deleting a Picasa Account

1. On the Picasa main screen, press **◀/▶** to select **Account**, then press **OK**.
2. Press **▲/▼** to select **Delete Account**, then press **OK**.
3. Press **▲/▼** to select the account you want to delete, then press **OK**.
4. Press **◀/▶** to select **OK** on the confirmation prompt, then press **OK**.

Shoutcast Radio

The world's largest Internet radio guide with access to over 30,000 free radio stations searchable by location, genre, or format.

To access Shoutcast:

1. Navigate to the Home | Services menu and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Shoutcast Radio , then press **OK**.


Options include:

- Search
- Radio Genres
- Favorites
- Top Radios
- About
- Exit

Listening to a Shoutcast Radio Station

To browse for a radio station:

1. On the Shoutcast Radio main screen, press ◀/▶ to select **Radio Genres**, then press **OK**.

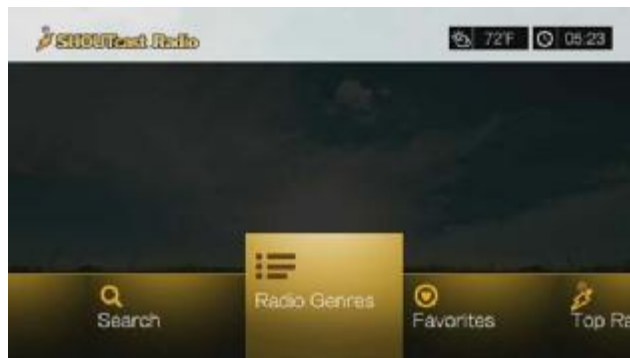

2. Press ▲/▼ to select from a variety of genres, then press **OK**.



3. Press ▲/▼ to select from a variety of subgenres (if necessary), then press **OK**.

4. Press ▲/▼ to select a radio station.




5. Press **Options**, then press ▲/▼ to select **Add to Favorite** if you want to add the station to Favorites. Press **OK**.
6. Press **II ►** or **OK** to start listening to the selected radio station. You can view information about the currently playing station and song such as title, artist, genre, number of listeners, etc. at the top of the screen.

Searching for a Shoutcast Radio Station


To search for a Shoutcast Radio station:

1. On the Shoutcast Radio main screen, press ◀/▶ to select **Search**, then press **OK**.
2. Filter your results by selecting **All**, **Artist**, or **Genre**, then press **OK**.

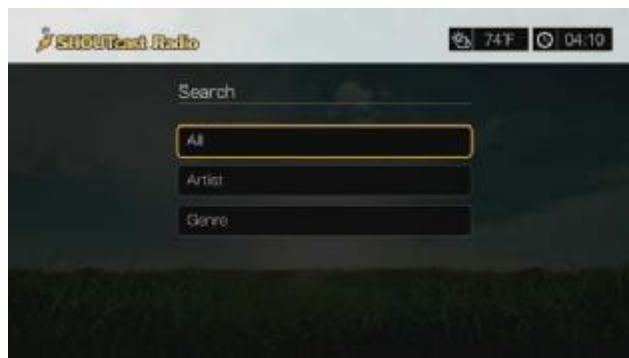

3. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.



Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.


4. Press ▲/▼ to select a station from the search result.
5. Press **II ►** or **OK** to start listening to the selected radio station.

Adding a Station to Your Favorites List

If you like a particular station, you can add it to Favorites for easier access in the future.

To add to a station, program, or podcast to your favorites:

1. Go to the station list showing the station you want to add.
2. Press ▲/▼ to select the station you want to add or begin playing a station.
3. Press **Options**, then press ▲/▼ to select **Add to Favorites** if you want to add the station to Favorites, then press **OK**.

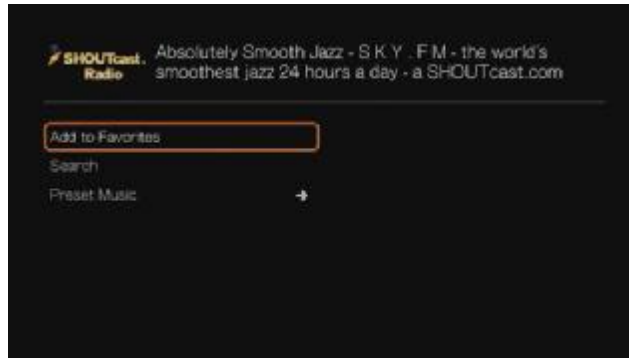

4. Press **OK** again to confirm.

Listening to a Station in Your Favorites List

To listen to a favorite station:


1. On the Shoutcast Radio main screen, press ◀/▶ to select **Favorites**, then press **OK**.
2. Press ▲/▼ to select a station from the list.
3. Press **II ▶** or **OK** to start listening to the selected radio station.

Assigning a Preset Button to a Station

You can assign a numbered button on the remote control to a Shoutcast Radio station for quick access.

To assign a preset button to a station:

1. Go to the station list showing the station you want to add.
2. Press ▲/▼ to select the station you want to add or begin playing a station.
3. Press **Options**, then press ▲/▼ to select **Preset Music**. Press ▶.

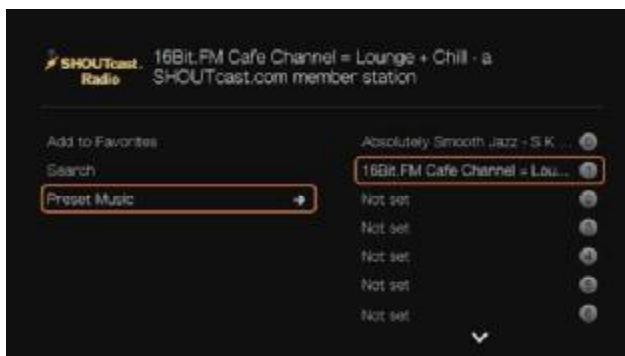


4. Press ▲/▼ to select a numbered remote button, then press **OK**.

Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

1. On the Shoutcast Radio main screen, press ◀/▶ to select **Favorites**, then press **OK**.
2. Press ▲/▼ to select the station you want to remove.
3. Press **Options**, then press ▲/▼ to select **Remove from Favorites**, then press **OK**.

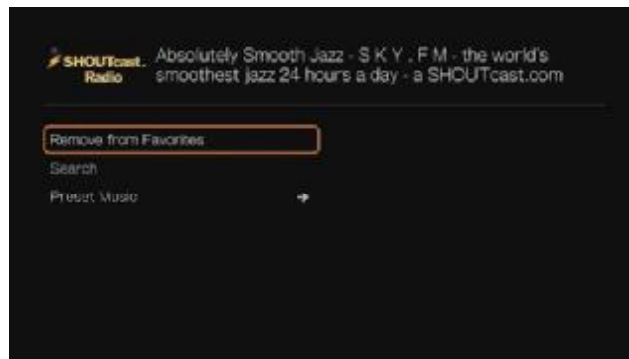

4. A confirmation prompt appears. Select **OK**, then press **OK**.

Top Radios

To choose from among the most popular Shoutcast Radio stations, press ◀/▶ to select **Top Radios** in the Shoutcast Radio main screen, then press **OK**.

About

For more information about the Shoutcast Radio service such as terms of service, press ◀/▶ to select **About** in the Shoutcast Radio main screen, then press **OK**.

Exit

To simply exit out of Shoutcast Radio, press ◀/▶ to select **Exit** in the Shoutcast Radio main screen, then press **OK**.


Spotify


Spotify provides millions of tracks that you can listen to, make playlists with, and share with friends. To use the service, create a Spotify account at www.spotify.com.



.....
Note: Spotify is not available in every country. Check to see if Spotify is authorized for your country at www.spotify.com.

To access Spotify:

1. Navigate to the Home | Services menu and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Spotify , then press **OK**.
3. The terms and conditions disclaimer displays. Select **Accept** then press **OK**.
4. Press **OK** to sign in to Spotify

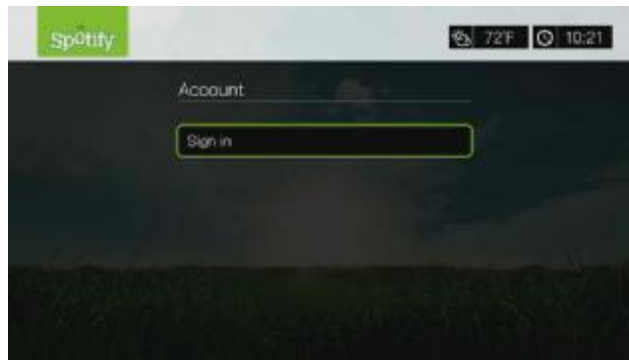



5. Use the navigation buttons ▲▼◀▶ to type in your Spotify user name using the on-screen keyboard, then press **OK**.
6. Use the navigation buttons ▲▼◀▶ to type in your Spotify account password using the on-screen keyboard, then press **OK**.
7. Press **OK** to complete the sign-in process.
8. The Spotify main screen displays. Options include:
 - What's New
 - Toplist
 - Radio
 - Playlist
 - Starred
 - Inbox
 - Play Queue
 - People
 - Search
 - Account

Searching for a Spotify Artist, Album, or Track

To search for a Spotify artist, album, or track:

1. On the Spotify main screen, press ◀/▶ to select **Search**, then press **OK**.
2. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.
3. Press ▲/▼ to select a track from the search result.
4. Press ⏸▶ or **OK** to start listening to the selected track.

Filtering Search Results

1. Press  or navigate to the sort and filter content icon , and press **OK**.
2. Press ▶, then ▲/▼ to select Filter by All, Tracks, Albums, and Artists. Press **OK** to display results by the criteria selected.



3. With the green check mark  selected, press **OK** again.

Browse Album Artist

You can view available albums from an artist whose track you've selected.

To browse an artist's albums:

1. With an artist's track selected, press **Options**.
2. Press ▲/▼ to select **Browse Artist Album**, then press **OK**.



3. A list of the artist's albums available on Spotify display.

Adding a Track to a Playlist


If you like a particular track, you can add it to a playlist for easier access in the future.

To add a track to a playlist:

1. Go to the track list showing the track you want to add.
2. Press ▲/▼ to select the track you want to add or begin playing a track.
3. Press **Options**, then press ▲/▼ to select **Add to Track to Playlist**, then press **OK**.



4. If you want to create a new playlist for the track, select **Create New Playlist**, then press **OK**.
5. On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a new playlist name, then press **OK**.
6. Press ▲/▼ to select a playlist name the list.

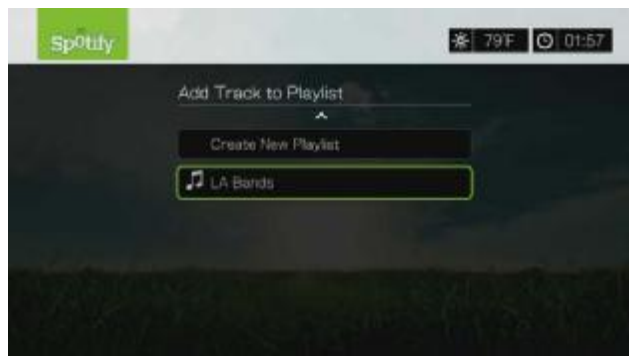

7. Press **OK**. You can delete the playlist by pressing **Options** with the playlist selected, then select **Delete**.

Collaborate on a Playlist

You can set a playlist you've created to **Collaborate** so that your friends can add tracks to it.

To set a playlist to Collaborate:

1. In the Spotify main screen, press ◀/▶ to select **Playlists**, then press **OK**.
2. With a playlist selected, press **Options**.

3. Select **Collaborate**, then press **OK**.



4. The playlist is now set to Collaborate, and the playlist appears with a dot next to it. You can reverse this setting by pressing **Options** with the playlist selected, then select **Uncollaborate**.

Adding a Track to the Play Queue

If you like a particular track, you can add it to the Play Queue and listen to it in sequence with other tracks you have added.

To add to a track to the Play Queue:

1. Go to the track list showing the track you want to add.
2. Press **▲/▼** to select the track you want to add or begin playing a track.
3. Press **Options**, then press **▲/▼** to select **Add to Track to Queue**, then press **OK**.
4. To listen to your Play Queue, press **◀/▶** in the Spotify main screen to select **Play Queue**, then press **OK**.
5. Press **II ▶** or **OK** to start listening to the Play Queue.

Share

You can share a track or playlist with the friends you have added to your Spotify account, or to Facebook.

1. With the track or playlist you want to share selected, press **Options**, then press **▲/▼** to select **Share**, then press **OK**.
2. Press **▲/▼** to select **Share to Friend** or **Share to Facebook**, then press **OK**.



3. Select a friend from your list then press **OK**, or log in to Facebook (if necessary).

Star

You can “star” a track for quick access in the future via the Starred menu on the Spotify home screen.

1. With the track you want to star selected, press **Options**, then press ▲/▼ to select **Star**, then press **OK**.
2. In the Spotify home screen, press ◀/▶ to select **Starred**, then press **OK**. Your starred tracks display.



People

On the Spotify main screen, press ◀/▶ to select **People**, then press **OK** to see a list of the friends you’ve added to your Spotify account. Select a friend then press **OK** to view and play their published playlists.

Inbox

On the Spotify main screen, press ◀/▶ to select **Inbox**, then press **OK** to see a list of songs your friends have sent to your Spotify account. Each friend’s name appears next to the song. If a message icon appears next to a friend’s name, select the song and press **Options**. Press ▲/▼ to select **View Message From Your Friend**, then press **OK**.



What’s New, Top Lists, and Radios

To listen to artist albums and radio stations:

1. On the Spotify main screen, press ◀/▶ to select **What’s New, Toplists, or Radios**, then press **OK**.

2. Press ▲/▼ to select a new or most listened to artist album, or artist radio station.
3. Press ||▶ or **OK** to start listening to the selected album or radio station. In the Radios screen, you can select **Create New Station** to add an artist radio station using the on-screen keyboard.

Delete Spotify Account


To delete a Spotify account:

1. On the Spotify main screen, press ◀/▶ to select **Account**, and press **OK**.
2. Select the Spotify account you wish to delete, then press ▶ to select the **x** and press **OK**.

TuneIn

The world's largest Internet radio guide with access to over 30,000 free radio stations searchable by location, genre, or format.

To access TuneIn:

1. Navigate to the Home | Services menu and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select TuneIn , then press **OK**.

Options include:


- Station
- Search
- Preset
- Sign in
- Exit

Signing in to TuneIn (Optional)


You can start listening to TuneIn stations as an unregistered user, but you need to sign up for a TuneIn account at <http://radiotime.com> to customize your radio experience by adding stations to your presets for faster access.

To sign in to TuneIn:

1. Press ◀/▶ to select **Sign in**, then press **OK**.

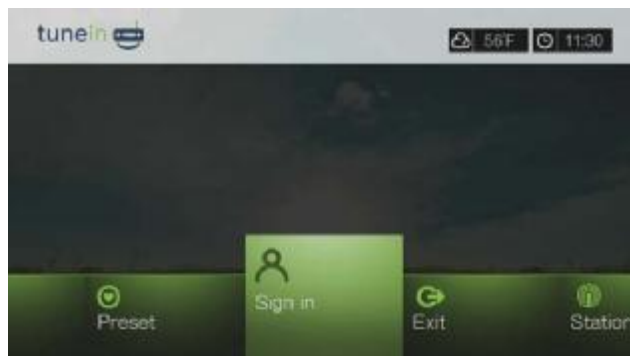

2. Select **Activate Device**, then press **OK**.

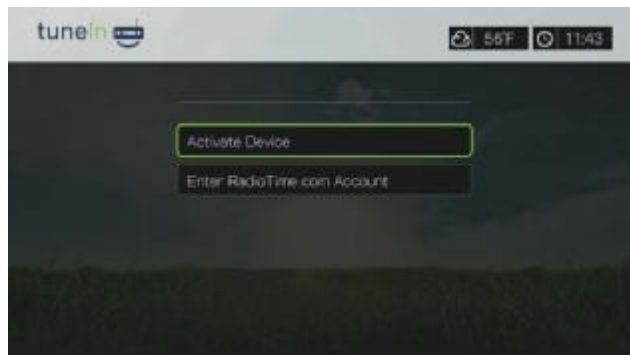

3. Write down the activation code and follow the onscreen instructions (go to <http://radiotime.com/mydevice> to associate the media player with your account). When finished, choose **Continue**, then press **OK**.
4. Select **Enter RadioTime.com account**, then press **OK**.
5. Use the navigation buttons **▲▼◀▶** to type in your TuneIn user name using the on-screen keyboard, then press **OK**.
6. Use the navigation buttons **▲▼◀▶** to type in your TuneIn account password using the on-screen keyboard, then press **OK**.
7. Press **OK** to complete the sign-in process.

Listening to a TuneIn Station, Program, or Podcast

- New TuneIn users can browse for a radio station, program, or podcast.
- Registered TuneIn users can access presets and listen to favorite stations.

To browse for a radio station, program, or podcast:

1. On the TuneIn main screen, press **◀/▶** to select **Station**, then press **OK**.



Options include:

- **Local Radio** – Listen to your local stations which display in numerical order.
 - **Music** – Categorizes your local music radio stations by genre.
 - **Talk** – Categorizes your local talk radio stations by type.
 - **Sports** – Categorizes local and national sports broadcasts and programs by type.
 - **By Location** – Find radio stations throughout the world from the lists of regions and countries.
 - **By Language** – Find radio stations throughout the world from the list of languages.
 - **Podcasts** – Find radio program podcasts categorized by music genre and type.
2. Press **▲/▼** to select the station, program, or podcast you want to listen to.
 3. Press **Options**, then press **▲/▼** to select **Add to Preset** if you want to add the station to Presets (TuneIn account required). Press **OK**.
 4. Press **||▶** or **OK** to start listening to the selected radio station.

Searching for a TuneIn Station


To search for a TuneIn station, program, or podcast:

1. On the TuneIn main screen, press **◀/▶** to select **Search**, then press **OK**.

- On the on-screen keyboard, use the navigation buttons ▲▼◀▶ to key in a search keyword, then press **OK**.



.....

Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.

- Press ▲/▼ to select a station from the search result.
- Press **II▶** or **OK** to start listening to the selected radio station.

Adding a Station to Your Preset List

If you like a particular station, you can add it to your preset list for easier access in the future.

To add to a station, program, or podcast to your presets:

- Go to the station list showing the station you want to add.
- Press ▲/▼ to select the station you want to add or begin playing a station.
- Press **Options**, then press ▲/▼ to select **Add to Preset** if you want to add the station to Preset (TuneIn account required), then press **OK**.



- Press **OK** again to confirm.

Listening to a Station in Your Preset List

To listen to a preset station, program, or podcast:

- On the TunelIn main screen, press ◀/▶ to select **Preset**, then press **OK**.
- Press ▲/▼ to select a station from your preset list.
- Press **II▶** or **OK** to start listening to the selected radio station.

Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

- On the TunelIn main screen, press ◀/▶ to select **Preset**, then press **OK**.
- Press ▲/▼ to select the station you want to remove.

3. Press **Options**, then press **▲/▼** to select **Remove Preset**, then press **OK**.



4. A confirmation prompt appears. Select **OK**, then press **OK**.

Getting Station Information

You can view information about the currently playing station and song.

1. While the station is playing or selected, press **Options**, then **▲/▼** to select **View info**. Press **OK**.
2. The information screen appears, displaying info such as genre, language, currently playing song, next song, and time. Press **OK** to return to the previous screen.

Reporting Problems

You can report a problem with the currently playing station or audio or contact the station/show using the reporting problems option.

1. While the station is playing or selected, press **Options**, then **▲/▼** to select **Report problem**. Press **OK**.
2. The reporting problems screen appears, displaying options for reporting problems such as audio, wrong information, errors, etc. After making your selection press **OK** to return to the previous screen.



Exit

To simply exit out of Tuneln and stay signed in, press **◀/▶** to select **Exit** in the Tuneln main screen, then press **OK**.


Yota Music

Yota Music provides access to more than 800,000 licensed music tracks in its online catalog. With Yota Music, you can listen to and customize personalized channels, save tracks to Favorites, and listen to theme-based collections put together by Yota Music editors. The charts show 100 songs most popular with the Yota Music audience.



Note: The Yota Music service user interface is primarily in the Russian language.


To access Yota Music:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select Yota Music , then press **OK** to display the Yota Music home screen.
3. Use the navigation buttons ▲▼◀▶ to browse, select, and search for songs and the playback buttons to stop and start songs.

YouTube

YouTube is a video hosting website where you can upload and share videos.

To access YouTube:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press ◀/▶ to select YouTube , then press **OK** to display the YouTube home screen.
3. A default video plays. Use the navigation buttons to search (using an on-screen keyboard) or browse for videos. Use the **PAUSE/PLAY**, **REW**, **FF**, **NEXT**, and **PREV** buttons for video playback.

13

Games

You can access game services and use the remote control to play them using the Games menu.

Games Display

1. Navigate to the Home | Games menu, then press **OK**.



2. The screen displays all available game services. The display is in grid view. Use the navigation buttons to select a game service, then press **OK**.
3. Use the navigation buttons to select a game, then press **OK**. Select **Rules**, **Info** or **Help**, then press **OK** for further information, or select **New Game** or **Start** to begin.
4. Use the navigation buttons on the remote to play the game. Select **Exit** when finished.

14

RSS


RSS (Really Simple Syndication) provides you with a list of current news items in a brief format so you can scan headlines and choose the items that interest you most without visiting websites.

Reading RSS Feeds

1. Navigate to the Home | RSS menu, then press **OK**.



2. The screen displays all available RSS feeds. The display is in grid view. Use the navigation buttons to select a headline of a RSS feed that you want to read, then press **OK**.

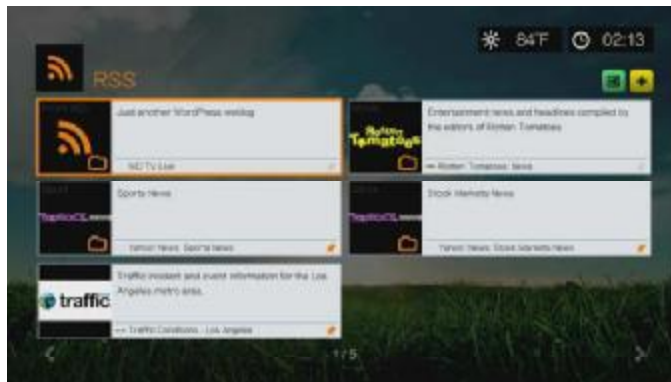

.....
Note: You can display your RSS feeds in a streaming ticker display on the home page. See “RSS Ticker” on page 170.

Adding RSS Feeds

To add an RSS feed to the media player:

1. In the RSS main screen, navigate to the **+** button then press **OK**.
2. Enter the URL of the RSS feed using the on-screen keyboard (see the website of the RSS feed provider for details), select Submit, then press **OK**.
3. Press **OK** again to add the RSS feed.


15

Setup and Advanced Features

The Setup menu lets you customize the way you use the media player and set preferences for media playback.

To select a Setup category:

1. Press **Setup**, or navigate to the Home | Setup menu and press **OK**.

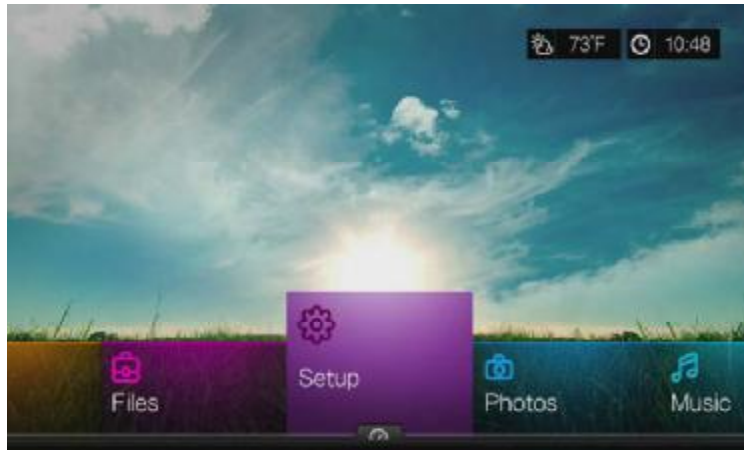

2. Use the ▲▼ Up/Down arrows to select a Setup category, then press **OK**.



There are 10 Setup categories, including:

- Audio/Video Output
- Appearance
- Video settings
- Music Settings
- Photo settings
- Network settings
- Operation
- System
- About

Setup Navigation Buttons

Use these buttons on the remote control to navigate within and between the Settings screens.

Button	Function
▲▼ Up/Down arrows	<ul style="list-style-type: none"> Select a menu Select a menu setting in an option screen
OK	Displays the option screen for the selected menu
<ol style="list-style-type: none"> Press OK. A confirmation prompt appears. Select OK, then press OK. If you fail to select OK within 15 seconds, the new setting will not be applied. If your entertainment unit cannot support the selected setting, no change is made and the original setting is retained. 	Applies the selected menu setting
Back	Displays the previous menu screen

Audio/Video Output

Use the menus in this category to configure playback for audio and video files.



Video Output

Use this menu to select a video signal. After you finish making your selections, select **OK** at the “Are you sure you want to change the video resolution?” prompt, then press **OK**.

Composite

When using the standard RCA A/V cable (yellow, red, and white connectors) to connect the media player, select **Composite** in the Video output screen.

You will be prompted to select the TV standard applicable to your device. This setting depends on your regional location.

Options include:

- **NTSC** – United States, Canada, Japan, Mexico, the Philippines, South Korea, and Taiwan.
- **PAL** – Europe, Greenland, parts of Africa and South America, the Mideast, China, India, Australia, and Indonesia

Select a regional TV standard then press **OK**.

HDMI

When using an HDMI cable (if your TV supports HDMI resolution), select **HDMI** in the Video output screen.

You will be prompted to select the applicable HDMI video resolution (set to Auto, or from 480p to 1080p). Select display resolution then press **OK**.



.....
Note: The further down the list the setting, the higher the resolution and clearer the picture.

After setting resolution, you are prompted to select color space (set to Auto, or RGB High, RGB Low, or YCbCr). Select color space then press **OK**.

Aspect Ratio

Use this menu to select the way videos are displayed. Options include:

- **Normal** (4:3)
- **Widescreen** (16:9)

The media player's default setting is **Widescreen**. Make sure your TV can support widescreen resolution, or this default setting can result in a distorted video display.

Audio Output

Use this menu to select the audio output mode.



Options include:


- **Stereo** (Analog, S/PDIF, HDMI) - This is the default setting that decodes all audio streams into 2-channel output via analog (RCA connectors), S/PDIF (optical connector), or HDMI. Recommended if you are using a 2- or 4-speaker entertainment unit.
- **Digital Pass Through via Optical Only** (S/PDIF) - Select this option if you are using HDMI for video and a S/PDIF (optical) connection to output multichannel surround sound to a receiver and do not want audio output from HDMI. After selecting **Digital Pass Through via Optical Only**, select one or more of the following options that describe your receiver. Select **Finish** when complete.
 - AAC capable receiver
 - Dolby Digital capable receiver
 - DTS capable receiver
 - WMA Pro capable receiver
- **Digital Pass Through via HDMI Only** (HDMI) - Select this option if you are only using an HDMI connection to output multichannel surround sound to a receiver. After selecting **Digital Pass Through via HDMI Only**, select **Auto** to have the media player detect receiver settings automatically. Or, select **Manual (Except DVD)**, then select one or more of the following options that describe your receiver. Select **Finish** when complete.
 - AAC capable receiver
 - Dolby Digital capable receiver
 - Dolby Digital Plus capable receiver
 - DTS capable receiver
 - Dolby TrueHD capable receiver
 - WMA Pro capable receiver

HDMI CEC

The CEC function allows HDMI devices to control each other when necessary, allowing the user to operate multiple devices with a single remote control for one of the devices. Not all operations of each HDMI device can be controlled with a single remote control. Use this menu to set HDMI CEC to **ON** (**OFF** is set by default).

Appearance

Use the menus in the Appearance screen to set user interface display options for the media player.

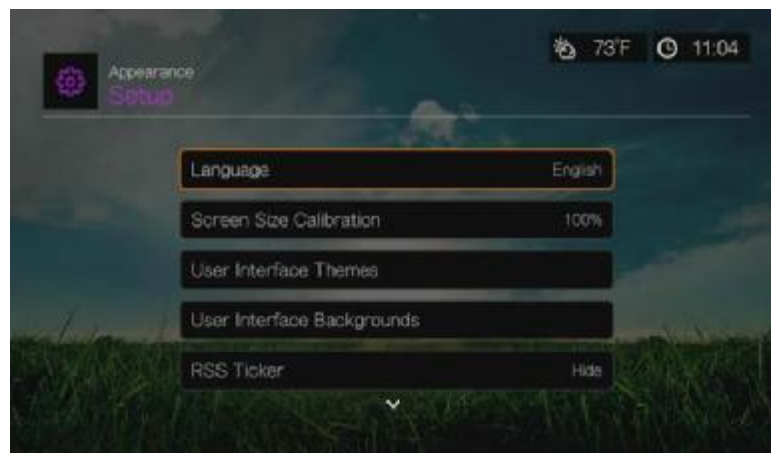

Language

Press ▲/▼ to select the display language, then press **OK**.

Video Calibration

Use this menu to correct any issues with overscan (the display is cropped in the TV screen). To correct any overscan problems, calibrate the display by reducing the display size by up to 30%. The calibration settings are in 5% increments.

User Interface Themes

The media player supports interchangeable user interfaces called themes. Themes alter the player's visual appearance, but not its functionality. There are several themes available in the User Interface Themes page and available for download at <http://www.wdtvlive.com/theme>.

User Interface Backgrounds

You can use this menu to set a different photo as the system background to replace the default grass field and sunny sky photo. You can choose from the **WD Creative Masters** backgrounds or **Your Backgrounds**.

WD Creative Masters

WD Creative Masters includes themed albums of photos from leading photographers that you can use for your media player user interface background.

Select a WD Creative Masters album, then navigate to a photo and press **OK**. Press **OK** again to preview the background. You can choose to **Set as Background** or **View Bio** of the photographer, then press **OK**.



Your Backgrounds

Your Backgrounds shows the default background as well as other photos you have set as the background (see “Set as Background” on page 84). Navigate to a background photo and press **OK**, then press **OK** again to **Set as Background**.



RSS Ticker

Set RSS Ticker to **Show** to stream your RSS feeds on the home page. Default setting is **Hide**.




Screensaver Delay

Use this menu to set the time of system inactivity before the screensaver display is enabled. The default setting is **5 minutes**.

Show New Items

Use this menu to select a date range for the media files added to your content source(s) to be marked as “new.” The number of new items displays when you select **Video**, **Music**, **Photo**, or **Files** on the home screen, or **New Items** in the dashboard.

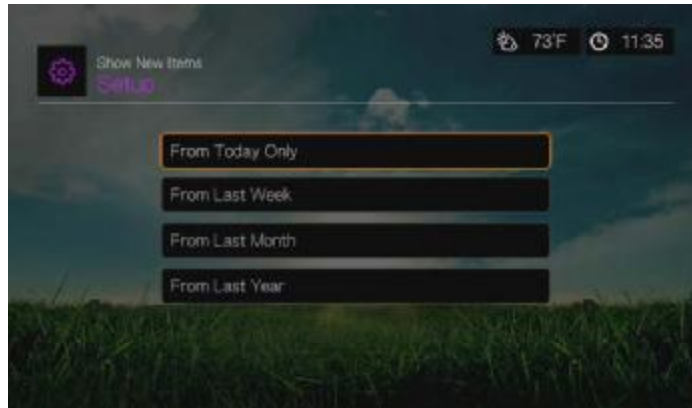


Screensaver Style

Use this menu to choose your screensaver display style. The **WD Logo** screensaver is the default style, but you can also choose a **Random Photo Slideshow** of photos stored in the media player’s internal drive or a **Folder Photo Slideshow** of photos from a single folder as your screensaver.

Video Settings

Use the menus in the Video Settings screen to configure the display and sequence option for video files.

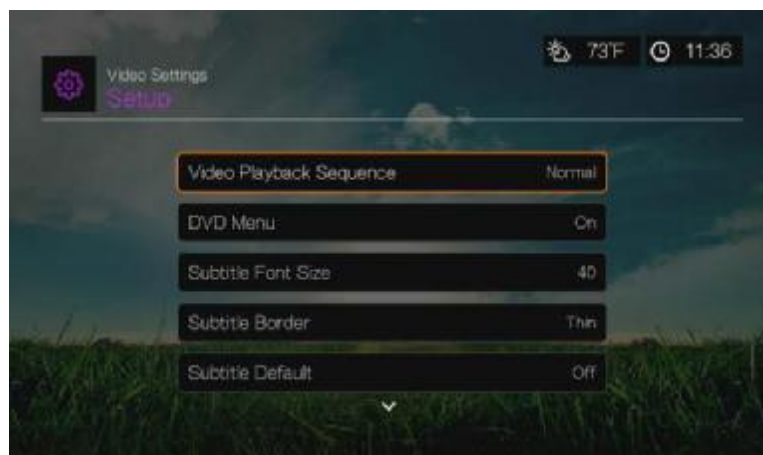

Video Playback Sequence

Use this menu to select the video playback mode. The default setting is **Normal**. Go to “Play Mode” on page 68 for a description of these video playback modes.

DVD Menu

Use this menu to disable the DVD menu display (set to **Off**) if your video file supports it. Default setting is **On**.

Subtitle Font Size

Use this menu to set the default font size (24 to 68 points, 40 points is default) for displaying video subtitles. Use the ▲▼ buttons to select a font size. “Subtitle font size” at the bottom of the screen reflects the font size option currently selected. Press **OK** to select a subtitle font size.

Subtitle Border

Use this menu to set the default appearance of the subtitle frame (**Thin** or **Thick**).

Subtitle Default

Use this menu to set the default appearance of the subtitles (**On** or **Off**).

Browser Display


Use this menu to select the default display mode for the video browser screen. The default setting is **Preview View**. Examples of grid, list, and preview views are shown below.




List View



Preview View

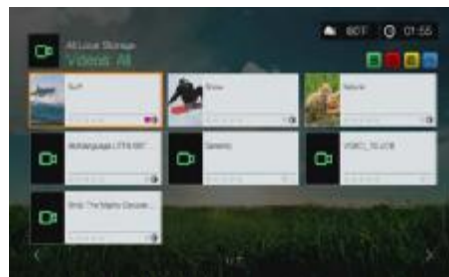

Large Grid View

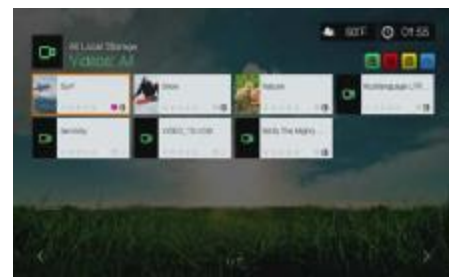

Small Grid View



Gallery View

Music Settings

Use the menus in the Music settings screen to configure the display and sequence option for audio files.



Music Playback Sequence

Use this menu to select the audio playback mode. The default setting is **Normal**. Go to “To set the music repeat mode:” on page 77 for a description of the audio playback modes.

Audio Track Display

Use this menu to select which file information to display in the audio browser screen. The default setting is **File name**.

Background Music Info Panel

When turned **On**, a music info menu bar appears at the top of the screen when music is playing in the background.



Resume Music Longer Than 15 Min

When turned **On**, will prompt you to resume or restart a music file that is 15 minutes or longer.

Browser Display

Use this menu to select the default display mode for the audio browser screen. The default setting is **Grid View**. Examples of both grid and list views are shown below.




Grid View



List View

Photo Settings

Use the menus on this category to configure the display size and slideshow settings when viewing your image files.

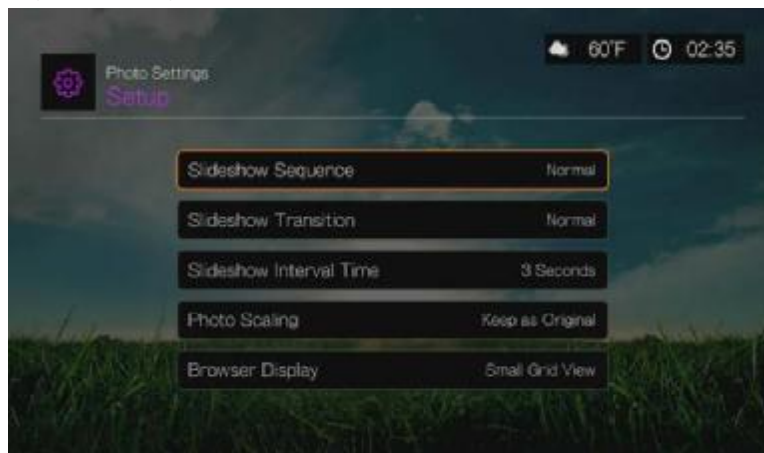

Slideshow Sequence

Use this menu to set the slideshow sequence mode. The default setting is **Normal**.

- **Normal** – The slideshow is played once. When the last image is displayed, the previous browser screen is displayed.
- **Shuffle** – The slideshow is played in random order until you press **Stop**.
- **Repeat All** – The slideshow is played repeatedly until you press **Stop** or **Back**.
- **Repeat All and Shuffle** – The slideshow is played continuously in random order.

Slideshow Transition

Use this menu to select the method used to display the next slide in a slideshow. The default setting is **Normal**.

Slideshow Interval Time

Use this menu to set the time interval between pictures in the slideshow. You can select from 3 seconds (default) to 5 minutes.


Photo Scaling

Use this menu to define how pictures are scaled when you view them. This also applies when pictures are viewed in a slideshow. Options include:

- **Keep as original** – Maintains the original resolution of the image (default).
- **Fit to screen** – Fills as much of the display area as possible while maintaining correct image proportions.
- **Display in full screen**– Fills the display area with the image (this can lead to image distortion).

Browser Display

Use this menu to select how media files are displayed in their respective folders. The default setting is **Small Grid View**. Examples of both grid and list views are shown below.

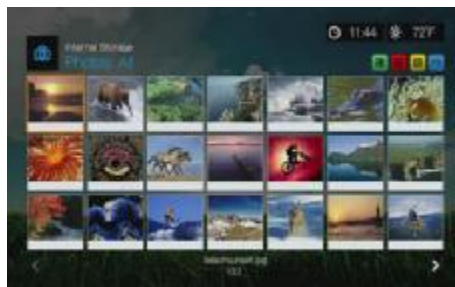

Small Grid View




Large Grid View



List View

Network

Use the menus in this category to configure and view the media player's network settings. Press ▲/▼ to make a selection from the list of options, then press **OK**.

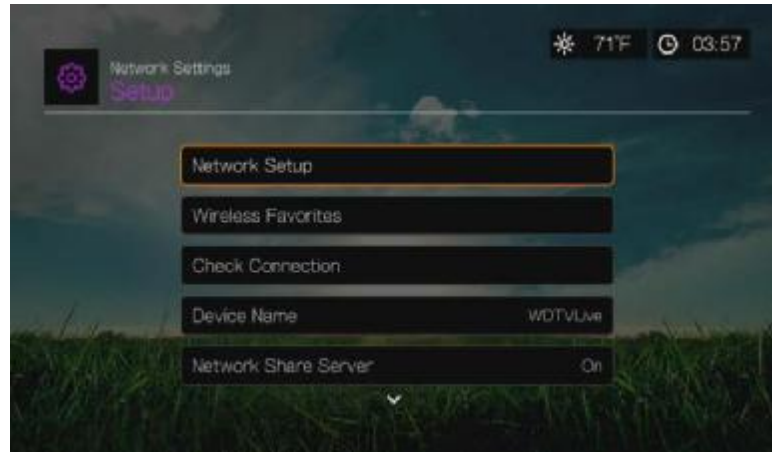

Network Setup

See “Network Services” on page 28 for information and instructions.

Wireless Favorites

This menu displays a record of your wireless network settings. After performing a wireless network setup, the media player keeps a record of the LAN access point. Use this menu to reconnect to the local network without having to rekey the password.

Check Connection

See “Checking the Network Connection” on page 27 for information and instructions.

Device Name

The name shown in the device name field helps you identify the media player on the network. Use this menu option to change the device name using the onscreen keyboard.

Network Share Server

Must be set to **On** to use network services. See “Network Services” on page 28 for information and instructions.

Workgroup

Allows you to join a specific workgroup on your network. Windows-based computers and devices in the same workgroup may allow each other access to their files, printers, or Internet connection. Members of different workgroups on the same local area network and TCP/IP network can only access resources in workgroups to which they are joined.

To create a new workgroup, select the existing Workgroup Name then press **OK**. Enter a new workgroup name.

Proxy

Proxy is used by corporations to view and filter online transactions. All requests in the corporate environment go through a proxy server to perform such actions as recording the IP address of a web site, checking the IP address that is being opened to make sure it's not on a blocked list, and checking outgoing attachments for spam or viruses.


If you plan to use the media server in a corporate environment, select **On**, then enter the Proxy address and port using the on-screen keyboard to access online services.

Clear Login Info for Network Share

Use this menu to clear login information (preset password) for the network share.

Operation

Use the menus in the Operation screen to set preferences for the media player.

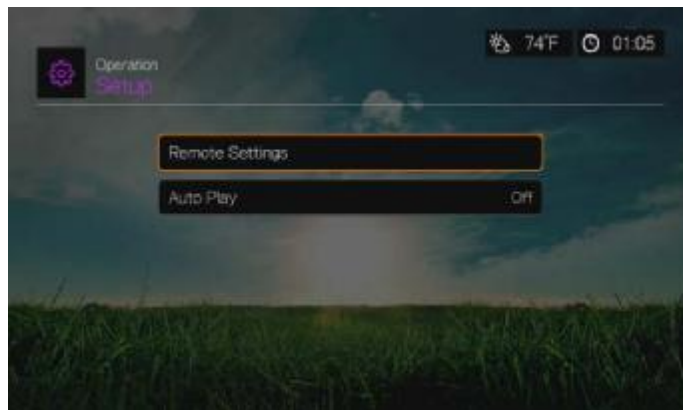


Remote Settings

Select a function for the **A**, **B**, **C**, and **D** function buttons on the remote controller. The remote settings menu displays the functions currently assigned to each button.



To change functions, press ▲/▼ to select a function button, then press **OK**. Press ▲/▼ to select functions such as display mode, filter menu, Music, Video, Services, Setup, etc., then press **OK**.

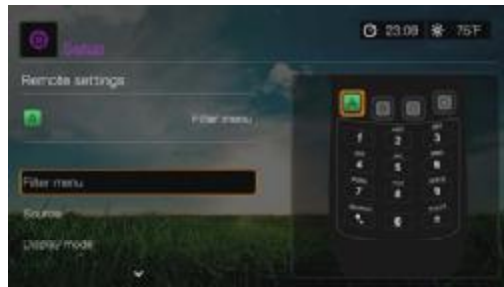

To reset the function buttons to default settings, select **Reset**, then press **OK**.

Delete Music Preset (Buttons 0-9)

To clear a music file or playlist preset from one of the **0-9** buttons, press ▲/▼ to select a numbered button. Press ▶ to select the **0-9**, then press **OK**.



Auto Play


Select the type of media (music or video) that plays automatically when a USB device is connected to USB port 1 on the front of the media player. The media files must be located in the USB device's root directory for Auto Play to function.



.....
Note: The auto play function will only work if the USB device is plugged into USB port 1 on the front of the media player.

System

Use the menus in this category to configure the media player's general functions. Press ▲/▼ to make a selection from the list of options, then press **OK**.

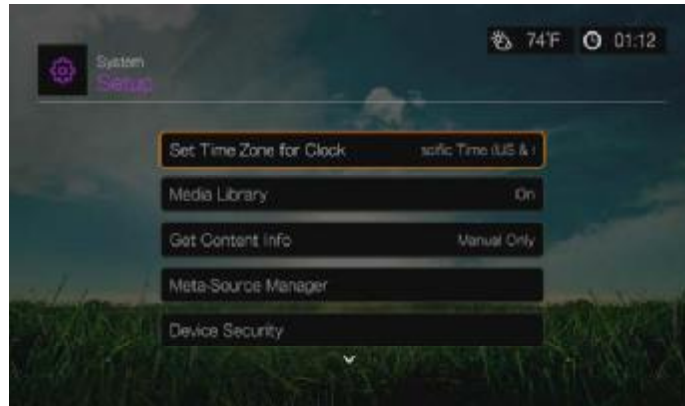

Set Time Zone for Clock

Use this menu to select your local time zone and turn Daylight Savings Time **Off** or **On** so that the media player displays the current time.

Media Library

Use this menu to enable or disable Media Library (turn **Off**, **On**, or **Clear Media Library**), which refers to the process of consolidating the media contents of an internal hard drive, USB drive, or network drives into one database so you can locate media files based on metadata information. See “Media Library” on page 186 for more information.

Get Content Info

Use this menu to set options for how you want to attach metadata (such as artwork and additional information) to your music and video files. **Manual Only** is the default setting, and you can also set this menu to **Auto**.

Meta-Source Manager


Use this menu to select a meta-source that provides metadata information and artwork for your media files. Select **Movie**, **Music**, or **TV Show** to display and select available meta-sources for the media type.



Select **Add New Meta-Source** and select the meta-source XML file from the network or attached USB storage. You can also create your own meta-source. Go to www.wdtvlive.com to download a sample meta-source, and for more information about meta-sources.

Device Security

Use this menu to set a security password to access and control folder locking and parental control features. Select **Device Security** and use the navigation buttons **▲▼◀▶** to type in your password (you will need to enter it twice before initial use) to enable the features. The following screen displays:

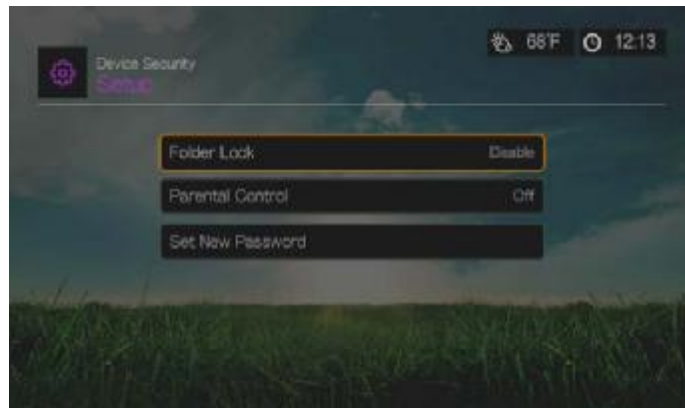

From here, enter the **Folder Lock** or **Parental Control** menus or **Set New Password**.

Folder Lock

Select **Set Default Lock Folder** to select a folder containing files you want to prevent access to. Once selected, the folder displays on the screen. Select **Lock** to prevent access to the folder, **Unlock** to provide access to the folder, or **Disable** to disable the feature.



Parental Control

Parental control allows you to password protect an Internet service so the user can access it only if the correct password is entered. There are two options:

1. **Show** – default option. The service is not password protected.
2. **Ask** – the password must be entered to access the service.



Additional Encoding Support


Press ▲/▼ to select an encoding support for a secondary language, then press **OK**. This prevents garbled characters in file names and subtitles defined in the selected language.

Device Registration

To register your WD product using the Setup menu:

1. Make sure your media player has an active network connection.
See “Network Services” on page 28 for instructions on how to set up a network connection.

2. Press **Setup** or navigate to the Home | Setup menu, then press **OK**.
3. Press **▲/▼** to select **System**, then press **OK**.
4. Press **▲/▼** to select **Device Registration**, then press **OK**.

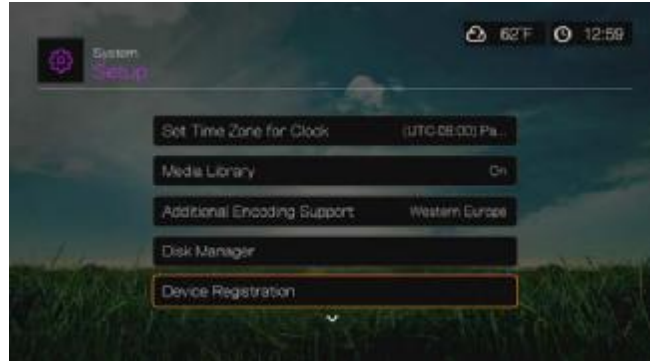


5. On the Register Product screen, press **▲/▼** to select **First Name**, then press **OK**.
6. Use the navigation buttons **▲▼◀▶** to type in your first name using the on-screen keyboard. Select **Submit**, then press **OK**.
7. Press **▲/▼** to select **Last Name**, then press **OK**.
8. Use the navigation buttons **▲▼◀▶** to type in your last name using the on-screen keyboard. Select **Submit**, then press **OK**.
9. Press **▲/▼** to select **Email**, then press **OK**.
10. Use the navigation buttons **▲▼◀▶** to type in your email address using the on-screen keyboard. Select **Submit**, then press **OK**.
11. On the Register Product screen, press **◀▶** to select **OK**, and then press **OK**.

WD LED Light Control

Use this menu to turn off the WD LED light (**Always Off**). If turned off, the WD LED will only appear during start up then disappear after the device has booted up. The default setting is **Normal**.

Device Reset

Use this menu to perform device reset options:

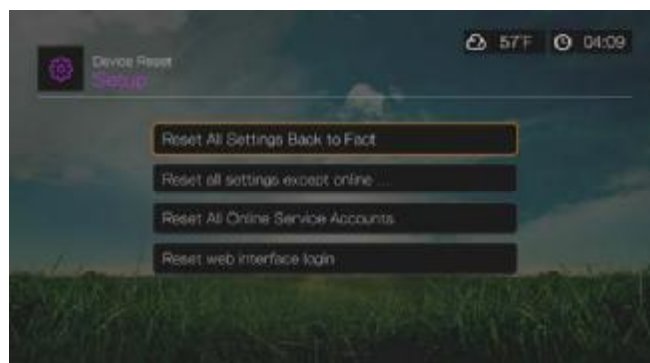

Reset All Settings Back to Factory Default – restores all media player system preferences and playback settings to their default factory values. This may correct problems caused by a failed firmware upgrade or faulty configuration settings.

Reset All Settings Except Online Service Accounts – restores all media player system preferences and playback settings to their default factory values with the exception of your internet Services personal account information.

Reset All Online Service Accounts – clears all account information and logins you have entered for Services, with the exception of BLOCKBUSTER On Demand (you must contact Blockbuster to have the media player removed from your account).

Reset Web Interface Login – clears the user-created Web UI password and resets it to the default password. See “Using the Web UI” on page 42 for details.



.....
Important: If you specified a static IP address (or any other non-standard configuration), the media player will no longer appear on the network after the reset. Also, be sure to reset the media player to factory defaults and reset all online service accounts before returning or otherwise transferring the device to purge your internet services personal account information, network shares passwords, and wireless network passwords.

To perform a device reset:

1. Press ▲/▼ to select **Device Reset**, then press **OK**.
2. Press ▲/▼ to select a device reset option, then press **OK**.
3. Select **OK** in the confirmation screen, then press **OK**.

Device Restart

Press **OK** to restart the media player.

Check Latest Firmware

This menu displays the current firmware version. Press **OK** to check for new firmware.

Auto Detect New Firmware

Use this menu to turn the automatic detection of new firmware **On** or **Off**. See “System Firmware Upgrade” on page 188 for further details.

About

Select this option to display the network info, firmware version currently installed, part number, and serial number of the device as well as online service info.



- Select **Network Info** then press **OK** to view info such as the device's MAC and IP addresses, mobile access type, etc.
- Select **Device Info** then press **OK** to view the firmware version currently installed, part number, and serial number of the device.
- Select **Online Service Info** to view online service account info such as your Netflix ESN.

Media Library

Media Library scans and consolidates the media contents of the internal hard drive, USB drive, and network drives into a database through which you can easily locate media files. This feature is set to on by default.

The following conditions will prevent the Media Library from processing your media.

- The USB device has read-only protection.
- There is not enough hard drive space on the USB device. Your media player needs some space to cache information, so that searches and scans are faster.

A note about metadata

Metadata is information about the data in a file that describes how, when, and by whom a particular set of data (video, music, photographic, or any other type of data) was collected, and how the data is formatted.

Not all files have metadata loaded. To add and edit metadata so that Media Library can aggregate the files properly, you can use one of several tools including:

- Adobe® Bridge (part of the Adobe Creative Suite)
- abcAVI Tag Editor (freeware)
- XnView 1.93.2 (freeware)
- iTunes
- Windows Media Player

Editing Metadata

Editing metadata with iTunes:

1. Open iTunes and click the song you want to edit.
2. Open the File menu, then click **Get Info**.

A window opens, showing all of the information you can edit for the song that you selected. You can edit the song's:

- Name
- Artist
- Year released
- Album name
- Composer
- Track number
- Genre

3. When you are done, click **OK**. To edit the next song listed in your iTunes library, click **Next**.

Editing metadata with Windows media player:

1. Open Windows media player.
2. Click the **Library** tab.
3. Right-click the title or other item to edit.
4. When the menu opens, click **Edit**.

Converting The Content Into A Usable Format

There are several fast, easy-to-use applications available online that can convert photos, videos, and music files into formats optimized for use on your media player. The software also allows simultaneous conversion of multiple files in batches regardless of their original formats.

Examining Your Files

MedialInfo (free software) can provide technical and tag information about your video or audio files.

MedialInfo provides the following kinds of information:

- General—title, author, director, album, track number, date, and duration
- Video—codec, aspect, fps, and bitrate
- Audio—codec, sample rate, channels, language, and bitrate
- Text—language of the subtitles
- Chapters—number and a list of chapters

MedialInfo supports the following formats:

- Video—MKV, OGM, AVI, DivX, WMV, QuickTime, Real, MPEG-1, MPEG-2, MPEG-4, DVD (VOB) (Codecs: DivX, XviD, MSMPEG4, ASP, H.264, AVC)
- Audio—OGG, MP3, WAV, RA, Dolby Digital Plus, AAC, M4A, AU, AIFF
- Subtitles—SRT, SSA, ASS, and SAMI

With MedialInfo, you can:

- Read many video and audio file formats
- Use several methods of viewing information, such as text, sheet, tree, and HTML
- Customise views
- Export information as text, such as CSV and HTML

To examine your files:

1. Use your browser and go to <http://mediainfo.sourceforge.net/en>.
2. Download the software and install it on your computer.
3. Follow the instructions as prompted.

16

System Maintenance

The system software of your media player can be upgraded to the latest release, which can improve support for media file playback and includes bug fixes and product enhancements. To ensure that you receive the latest update, we recommend registering your product at <http://register.wdc.com>.

This chapter describes how to upgrade the system firmware and perform simple troubleshooting. If you encounter an error message, refer to the “Common Error Messages” on page 193 for possible corrective action.

Solutions to more serious problems may require contacting your dealer or an authorized service center for assistance. For more information, refer to “WD Service and Support” on page 2.

System Firmware Upgrade

Firmware is an important set of instructions that tells your media player how to operate, what the interactive screens look like, and how to do what you tell it to do. Upgrading the firmware is important because WD is always developing newer, faster, and more efficient ways of doing things that your media player needs to know.




Important: Make sure the media player’s AC power adapter remains connected during the firmware update. A power disruption during the update process can corrupt the system firmware. Also, make sure that you do not unplug the USB storage device if doing a manual update.

Automatic

The New Firmware menu appears in the media player’s Home screen when updated firmware becomes available, providing the option to automatically upgrade the firmware.



Note: You must have Auto Detect New Firmware set to **On** to automatically upgrade firmware. See “Auto Detect New Firmware” on page 184.

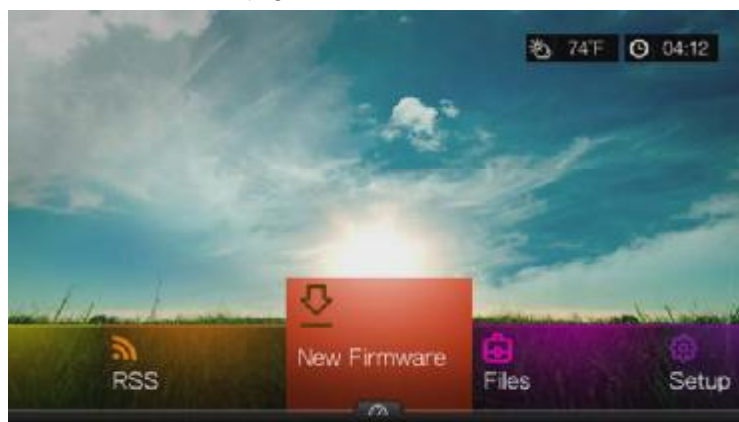


To update the firmware automatically:

1. Press **HOME**, then select New Firmware. Press **OK**.
2. Select **OK** on the firmware update prompt, and then press **OK**. This restarts the system.
3. After restarting, the system automatically enters firmware upgrade mode.



4. Once the update process finishes, the media player restarts. When the media player restarts, the new firmware loads automatically.

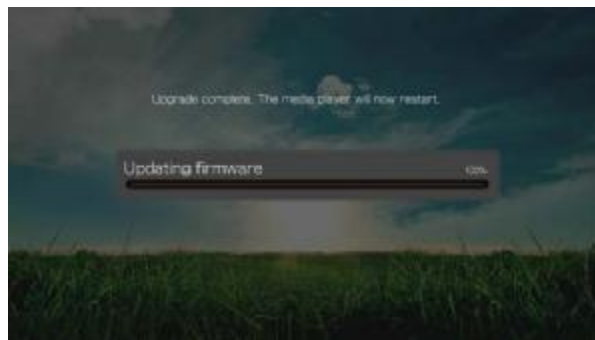

Manual

To update the firmware manually:

1. Go to <http://support.wdc.com> and download the latest firmware update file for the media player.
2. Click “Downloads,” then the product name (or photo). Download the WD TV Live Hub media player firmware zip file to your computer.
3. Using an unzip utility, extract the zip file contents to the root directory of a USB device connected to your computer.
4. Safely remove the USB device from the computer and attach it to the media player.
5. Connect the USB device to the media player's USB port. If the Sync and Transfer screen appears, select **Cancel**, then press **OK**.
6. Follow steps 1-4 under “To update the firmware automatically:” on page 189.
7. If the Sync and Transfer screen appears, select **Cancel** or **OK** if you want to access video, music, or photo files on the attached USB device.

Troubleshooting

Problem	Solution
DISPLAY	
The TV screen is blank and the media player power LED remains off.	<ul style="list-style-type: none"> • Make sure the TV is turned on. • Make sure that the power adapter and power outlet are okay. • Make sure that the interface cable is properly attached to the correct terminals on both the TV and the media player.
The TV screen is blank and the media player power LED is blinking.	A system diagnostic failure occurred. Turn off your media player, wait 10 minutes, then turn it on again. If the same thing happens, contact WD Technical Support for assistance (see "WD Service and Support" on page 2).
The TV screen is blank and the media player power LED is on.	<ul style="list-style-type: none"> • Make sure the TV is turned on. • Make sure that the interface cable is properly attached to the correct terminals on both the TV and the media player. • Press the reset switch for one second to reset to factory defaults (see "Device Reset" on page 183). Press and hold 10 seconds to toggle between NTSC and PAL. Use a fine-tipped stylus or the unfolded end of a paperclip to press the reset switch.
The TV screen is blinking and fuzzy.	<ul style="list-style-type: none"> • Make sure that the interface cable is properly attached to the correct terminal(s) on both the TV and the media player. • Make sure the media player power LED is on. • If you are using a CRT TV, navigate to the Home Settings System screen and: <ul style="list-style-type: none"> - Make sure that the Composite option is selected as the video output. - Make sure the TV system setting matches the system used in your region. • If you are using an LCD TV, navigate to the Home Settings System screen and: <ul style="list-style-type: none"> - Make sure that the HDMI option is selected as the video output. - Make sure that the video resolution option is set as Auto.
The video display is cut off or appears in a sidebar.	Navigate to the Home Settings Audio/Video screen and make sure that aspect ratio is set as Normal .
The slideshow pictures are distorted.	Navigate to the Home Settings Photo screen and select Keep as original or Fit to screen in the Photo Scaling field.

Problem	Solution
FILES	
File does not play.	<ul style="list-style-type: none"> • Verify compatibility. Refer to “Supported Formats” on page 196. • Use a media converter program to convert the file to a usable format.
AUDIO	
There is no sound.	<ul style="list-style-type: none"> • Make sure the volume on the entertainment unit is not muted. • Navigate to the Home Settings System screen and make sure the correct audio output setting is enabled. <ul style="list-style-type: none"> - If you are using the composite audio cable, the Stereo setting should be enabled. - If you are using an S/PDIF (optical) or HDMI connection, the Digital setting should be enabled. • If you are watching a video that supports multiple audio channels, make sure that the Audio Off option is disabled. Press Options <icon>, and then press OK repeatedly until the intended audio channel is displayed.
NETWORK	
The media player is not visible on the network.	<ul style="list-style-type: none"> • Make sure the Setup > Network Settings > Share WDTV on your network option is set to On.
USB DEVICE	
The Media Library process failed.	<p>Make sure that:</p> <ul style="list-style-type: none"> • the USB device has no read-only protection. • the USB device is not using the HFS+ Journaling file system. • there is enough storage space on the USB device.
The attached USB device is not visible on the Home screen.	<ul style="list-style-type: none"> • The media player only supports mass USB storage mode. Make sure that the USB device is configured as a "mass storage device." • Make sure the USB device's file system is supported (NTFS, FAT/FAT32, or HFS+).
REMOTE CONTROL	
The media player remote control does not work.	<ul style="list-style-type: none"> • Press only one button at a time. • Make sure the batteries are properly inserted. • The batteries may already be drained out. Replace batteries with new ones. • Make sure that the path between the remote control and the media player is not blocked.

Problem	Solution
FIRMWARE UPGRADE	
The firmware upgrade recovery splash screen is shown after you turned on the media player or the media player keeps rebooting to the splash screen.	The previous or current firmware upgrade process failed. <ul style="list-style-type: none">• Repeat the firmware upgrade process. Go to page 189 for instructions.• If you are still unable to update the system firmware, perform a system reset. Go to page 183 for instructions.

Common Error Messages

If this message appears	Perform this action
HOME	
Hard drive cannot aggregate.	There are different conditions under which this error message may appear. The message will specify the issue. For example, not enough space is used on the storage or a journaled file system.
No storage present.	Attach the USB device that contains your media files.
Media Library requires more storage space: [XXXMB]	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media player. 2. Connect the USB device to your computer and delete unnecessary files to meet the required storage space. 3. Attach the USB device to the media player again.
Please turn off journaling on the attached storage's file system for the media player to compile the media library.	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media player. 2. Connect the USB device to your Apple computer and disable the journaling function. Refer to the Apple Help for information. 3. Attach the USB device to the media player again.
Unable to compile media library on read-only storage.	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media player. 2. Connect the USB device to your computer and make sure the read-only protection is disabled. 3. Attach the USB device to the media player again.
Unable to compile media library. Please check your storage setting.	<p>There are two different conditions under which this error message may appear:</p> <ol style="list-style-type: none"> 1. Insufficient storage space on the drive(s). 2. Drive is configured as "read-only." <p>Free up drive storage space or adjust the drive settings to resolve this error.</p>
Unrecognized storage.	The USB device model is not supported. Use another USB device.
Question XX: WD USB HDD Trouble Shooting	This indicates a system diagnostic failure. Contact WD Technical Support for assistance.
CONTENT PLAYBACK	
This folder is empty.	There are no supported media files in the selected folder. Select another folder that contains media files of the correct format.

If this message appears	Perform this action
Unable to play the selected file. Please see the User Manual for a list of supported file formats.	<ol style="list-style-type: none"> 1. Eject and disconnect the USB device from the media player or map a drive to the media player while the file is located. 2. Connect the USB device to your computer or check the file on the media player's internal drive and make sure the file format is correct/supported (see "Supported Formats" on page 196). 3. Attach the USB device to the media player again if necessary.

FAQs

How do I find media files and create playlists?

Several media player applications are currently available, such as Winamp and iTunes, that let you play, arrange, and edit media files. These media players also let you create playlists and edit the metadata information for media files. You can search the Internet with your browser to locate where these applications are available for download.

How do I copy the files from my music CD to my computer?

Digital audio extraction, or *Ripping*, is the process of copying audio (or video) content to a hard drive, typically from removable media, such as CDs or DVDs, or from media streams.

To rip music from CDs to a computer:

1. Insert the CD into the optical drive of your computer.
2. Open the program that you use to rip the music to your computer, such as iTunes or Windows Media Player.
3. Press the **Import** button (using iTunes),
- OR -
Press the **Rip** button (using Windows media player).
4. Click the music you want to copy (Windows media player) and note where the music files are saved after they are copied. iTunes imports the entire CD into your iTunes music library.
5. Click the **Start Rip** button (Windows Media Player).
6. When ripping is complete, remove the CD. The music is now on your computer.



.....
Note: Some music may be covered by copyright laws which prevent its copying or distribution.

Can I use a universal remote control with the media player?

You can use most popular universal remote control devices such as the Logitech Harmony models.

17

Appendix

Multiformat Content Playback

Multiformat is a file type that groups other files of the same digital content but may be encoded in different digital formats. For example, a single video file may actually include a few components such as video, audio, and photo grouped together.

The media player is capable of playing several different types of multiformat files. For a detailed list of supported formats, refer to “Supported Formats” on page 196.

Audio codec	Audio container	Video codec	Video container	Photo	Subtitle*	Playlist
MP3	AIFF	MPEG 1	AVI	GIF	SRT	PLS
MP2	MKA	MPEG 2	VOB/ISO	BMP	SUB	WPL
WAV/PCM/ LPCM	OGG	MPEG 4 (ASP, AVC HD/H.264)	WMV9 DVR-MS	JPEG TIF/TIFF***	SMI SSA	M3U
Dolby Digital Plus**		VC-1 Xvid	MKV MOV	PNG	ASS	
FLAC			DAT (VCD/ SVCD)			
WMA/ WMA Pro			tp, ts, m2t/ m2ts			
AAC			FLV			
DTS****						
OGG Vorbis						

*To convert subtitle files encoded in a different format, open the file with Notepad and do a Save As with the following parameters: File Type—All Files and Encoding—UTF-8.

**2-channel only. 2+channel signal is sent via digital pass through to a receiver. Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

***Single layer only.

****Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark & the DTS logos and Symbol are trademarks of DTS, Inc.

Supported Formats

Filename extension	Codec	Format/container
VIDEO		
.AVI	Video: Xvid AVC MPEG1/2/4 WMV9 VC-1 Audio: MPEG Audio PCM Dolby Digital DTS	AVI
.MPG/.MPEG	Video: MPEG1/2 Audio: MPEG Audio Dolby Digital DTS PCM	mpeg ps
.MKV	Video: h.264 x.264 AVC MPEG1/2/4 WMV9 VC-1 Audio: MPEG Audio PCM Dolby Digital/Dolby Digital Plus DTS AAC	MKV
.TS/.TP/.M2T	Video: MPEG1/2/4 AVC VC-1 Audio: MPEG Audio Dolby Digital/Dolby Digital Plus DTS	TS

Filename extension	Codec	Format/container
.MP4/.MOV	Video: MPEG4 AVC Audio: AAC MPEG Audio Dolby Digital/Dolby Digital Plus	Quicktime
.ASF/.DVR-MS/.WMV	Video: MPEG2 WMV9 VC-1 Audio: WMA/WMA Pro Dolby Digital	ASF
.VOB/.ISO	Video: MPEG1/2 Audio: MPEG Audio Dolby Digital DTS PCM	VOB/ISO
.M2TS	Video: MPEG1/2/4 AVC VC-1 Audio: MPEG Audio Dolby Digital/Dolby Digital Plus DTS	M2TS
.WMV9	VC-1	WMV9
.FLV	H.264	FLV

An audio receiver is required for multi-channel surround sound digital output.

Video notes:

1. MPEG-2 MP@HL up to 1920x1080p24, 1920x1080i30, or 1280x720p60 resolution.
2. MPEG4.2 ASP@L5 Rectangular shape video decoding up to 1280x720p30 resolution, support for B Pictures, data partitioning and error resiliency. No support for global motion compensation (GMC).
3. WMV9/VC-1 MP@HL up to 1280x720p60 (<90% of the P-picture macroblocks have 4 motion vectors) or 1920x1080p24 resolution. Up to 1280x720p30 or 1920x1080i25 resolution if unconstrained 4MV bitstream.
4. VC-1 AP@L3 up to 1920x1080i30 (<60% of the B-picture macroblocks have 4 motion vectors), 1920x1080p24, or 1280x720p60 resolution. Up to 1920x1080i25, 1920x1080p24, or 1280x720p60 resolution if unconstrained 4MV bitstream.
5. MPEG-4.10 (H.264) BP@L3 up to 720x480p30 or 720x576p25 resolution, including FMO and ASO.
6. MPEG-4.10 (H.264) MP@L4.1 and HP@L4.1 up to 1920x1080p24, 1920x1080i30, or 1280x720p60 resolution (constrained to match BD and HD-DVD specifications), 180 Mbin/s maximum for CABAC streams.

File	Codec	Format/container
AUDIO		
MP1/2/3/a	MPEG audio	None
AAC	MPEG 2/4 AAC LC/HE	1. ADTS 2. ADIF
M4A/MP4A	MPEG 2/4 AAC LC/HE	Quicktime
FLAC	FLAC	FLAC
WAV	PCM (Microsoft®)	WAVE
LPCM/PCM	PCM	None
OGG	OGG VORBIS	OGG
WMA	WMA	ASF
AIF/AIFF	PCM	AIFF
MKA	1. MPEG audio 2. MPEG 2/4 AAC LC/HE 3. PCM (Microsoft)	MATROSKA
Dolby Digital/Dolby Digital Plus	Dolby Digital/Dolby Digital Plus	None
DTS	DTS	None

An audio receiver is required for multi-channel surround sound digital output.

Type	File name	Codec	Resolution	Other limitation
PHOTOS				
BMP	bmp	Uncompressed (most common)	2048x2048	Not available
TIFF	tif/tiff	Uncompressed 24-bit RGB (most common)	2048x2048	Multi-page not supported, only shows 1st page
		LZW (loss less)	2048x2048	Not available
PNG	png	DEFLATE (loss less)	2048x2048	Not available
GIF	gif	LZW (loss less)	2048x2048	For animation, only supports 1st page
JPEG	jpeg/jpg	JPEG (lossy) (most common)	4096x4096	CMYK not supported
		Progressive	1280x720	Not available

Type	File name	Codec	Resolution	Other limitation
PHOTOS				

Compressed RGB JPEG formats only and progressive JPEG up to 2048. Single layer TIFF files only. Uncompressed BMP only. Not available indicates that no other limitations are known at this time.

Thumbnail	Support	Limitation
MUSIC		
Filename extension	Only supports ID3 and EXIF format have thumbnail	
mp3	Yes	Thumbnail in the id3 tag ("APIC" or "PIC" tag)
wma	Yes	Thumbnail in the asf format ("WM/Picture" in the extended info)
m4a	Yes	Thumbnail in the quicktime format ("moov/udta/meta/ilst/covr")
mp4a	Yes	Thumbnail in the quicktime format ("moov/udta/meta/ilst/covr")
flac	Yes	Thumbnail in the flac format
asf	Yes	Thumbnail in the asf format ("WM/Picture" in the extended info)
wmv	Yes	Thumbnail in the asf format ("WM/Picture" in the extended info)
mp4	Yes	Thumbnail in the quicktime format ("moov/udta/meta/ilst/covr")
jpg	Yes	Thumbnail in the exif
jpe	Yes	Thumbnail in the exif
tiff	Yes	Thumbnail in the exif
tif	Yes	Thumbnail in the exif
jpeg	Yes	Thumbnail in the exif

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

NOTE IMPORTANTE:

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

以下警語適用台灣地區

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

This device is only for use with the compatible UL Listed AC adapter.

Cet appareil n'est destiné qu'à des adaptateurs compatibles marqués "UL Listed."

CE Compliance for Europe

Operation of this device is subjected to the following National regulations and may be prohibited to use if certain restriction should be applied.

Marking by the CE symbol indicates compliance of this system to the applicable Council Directives of the European Union, including the EMC Directives (2004/108/EC), (1999/5/EC), the Low Voltage Directive (2006/95/EC), and EuP Directive (2005/32/EC). A "Declaration of Conformity" in accordance with the applicable directives has been made and is on file at Western Digital Europe.

Die Kennzeichnung mit dem CE-Symbol zeigt an, dass dieses System die anwendbaren Richtlinien der Europäischen Union erfüllt, einschließlich der EMV-Richtlinien (2004/108/EG), (1999/5/EG), der Niederspannungsrichtlinie (2006/95/EG) und der Richtlinie (2005/32/EG) des Europäischen Parlaments. Eine „Konformitätserklärung“ gemäß den anwendbaren Richtlinien wurde abgegeben und kann bei Western Digital Europe eingesehen werden.

Le symbole CE sur l'appareil indique la conformité de cet appareil avec les directives applicables du Conseil de l'Union Européenne, dont les directives EMC (2004/108/EC), (1999/5/EC), la directive sur les limites de tension (2006/95/EC) et la directive EuP (2005/32/EC), si applicable. Une « déclaration de conformité » conforme aux directives applicables a été effectuée et est consultable chez Western Digital Europe.

Il marchio CE indica la conformità del sistema alle direttive applicabili del Consiglio dell'Unione europea, tra cui le Direttive EMC (2004/108/CE), (1999/5/CE), la Direttiva Bassa Tensione (2006/95/CE), e la Direttiva EuP (2005/32/CE). Una "Dichiarazione di conformità" redatta in base alle direttive vigenti è disponibile presso Western Digital Europe.

La marca con el símbolo CE indica el cumplimiento de este sistema de las Directivas del Consejo de la Unión Europea correspondientes, incluidas las directivas EMC (2004/108/EC) y (1999/5/EC), la Directiva de bajo voltaje (2006/95/CE) y la Directiva EuP (2005/32/EC). Se ha realizado una "Declaración de conformidad" de acuerdo con las directivas aplicables y se encuentra archivada en Western Digital Europe.

CE-märkningen innebär att detta system uppfyller Europeiska Unionens tillämpliga rådsdirektiv, inklusive EMC-direktivet (2004/108/EC), (1999/5/EC), lågspänningsdirektivet (2006/95/EC) och EuP-direktivet (2005/32/EC). En "Konformitetsdeklaration" i enlighet med gällande direktiv har gjorts och finns arkiverad hos Western Digital Europe.

Merking med CE-symbolet indikerer at dette systemet samsvarer med gjeldende direktiver (council directives) for EU, inkludert EMC-direktiv (2004/108/EF), (1999/5/EF), Lavspenningsdirektiv (2006/95/EF) og EuP-direktiv (2005/32/EF). En "Samsvarserklæring" i henhold til gjeldende direktiver har blitt opprettet og er i Western Digital Europas arkiver.

CE-merkintä osoittaa tämän järjestelmän yhdenmukaisuuden sovellettavissa olevien Euroopan yhteisön neuvoston direktiivien kanssa, mukaan lukien EMC-direktiivi (2004/108/EC), (1999/5/EC), alijännitedirektiivi (2006/95/EC) sekä EuP-direktiivi

(2005/32/EC). "Noudattamisjulistus" on jätetty asiaankuuluvien direktiivien mukaisesti, ja se on tallessa Western Digital Europessa.

Mærkning med CE-symbolet angiver at systemet overholder Europaparlamentets og Rådets direktiver, herunder EMC-direktiverne (elektromagnetisk kompatibilitet) (2004/108/EC), (1999/5/EC) og lavspændingsdirektivet (2006/95/EC) og EuP-direktivet 2005/32/EC. En "Declaration of Conformity" (overensstemmelsesattestering) i henhold til gældende direktiver er afgivet og opbevares hos Western Digital Europe.

Маркировка символом CE свидетельствует о соответствии настоящей системы положениям применимых директив Совета Европейского Союза, в том числе директив об электромагнитной совместимости (2004/108/EC, 1999/5/EC), директивы о низковольтном оборудовании (2006/95/EC) и директивы об устройствах, использующих электроэнергию (2005/32/EC). Заявление о соответствии положениям применимых директив, сделанное компанией Western Digital, находится в архиве её европейского подразделения.

Η σήμανση με το σύμβολο CE υποδεικνύει ότι το σύστημα αυτό συμμορφώνεται με τις ισχύουσες οδηγίες του Συμβουλίου της Ευρωπαϊκής Ένωσης, συμπεριλαμβανομένων των οδηγιών περί ηλεκτρομαγνητικής συμβατότητας (2004/108/ΕΚ), (1999/5/ΕΚ), της οδηγίας περί χαμηλής τάσης (2006/95/ΕΚ) και της οδηγίας του Ευρωπαϊκού Κοινοβουλίου (2005/32/ΕΚ). Έχει πραγματοποιηθεί μία «Δήλωση συμμόρφωσης», σύμφωνα με τις ισχύουσες οδηγίες και τηρείται στα αρχεία της Western Digital Ευρώπης.

زمرلہ اعضاء زيي ممتلا ري شي CE سل جملہ تاهي جوت عم ماظنل اذہ قفاوت یل
قفاوتل تاهي جوت كلذ ي ف امب، ي بوروال دا حتال اب قصا خلو او قي ب طت لل قلاب اول
يس ي طان غ مورمكلل (2004/108/EC)، و (1999/5/EC)، ده جل ا هي جوت و
ضف خنملا ي برمكلل (2006/95/EC)، و (2005/32/EC) .EuP Directive
عضو متو "تقبا طملا نال ع" ي ف دو جوم و مو لو ع فملا ا يراس تاهي جوت لل ا قبط
يل ع فلم Western Digital Europe .

KC Notice (Republic of Korea only)

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음

기종별	사용자 안내문
B 급기기 (가정용방송통신기자재)	이기기는 가정용(B 급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Russia FAC (DoC)

Подтверждение соответствия Мининформсвязи России:

Декларация соответствия № Д-ТП-xxxx от dd.мм.yyyy года, действительна до dd.мм.yyyy года, зарегистрирована в Федеральном агентстве связи dd.мм.yyyy года

ANATEL (Brazil)

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não causar interferência a sistema operando em caráter primário.

Environmental Compliance (China)

部件名称 Part Name	有毒有害物质或元素 Toxic or Hazardous Substances or Elements					
	铅 Pb	汞 Hg	镉 Cd	六价铬 Cr (VI)	多溴联苯 PBBs	多溴二苯醚 PBDEs
机壳/机箱 Chassis/Housing	X	○	○	○	○	○
电路板组合 / 板卡 PCBA	X	○	○	○	○	○
存储设备 (硬盘驱动器, 光盘驱动器, 软盘驱动器, 记忆模块...) Storage Device (HDD, ODD, FDD, DIMM, ...)	X	○	○	○	○	○
电源变压器 / 电源供应器 Adapter / Power Supply	X	○	○	○	○	○
风扇 Fan	X	○	○	○	○	○
机械-电机零件 Mechanical-Electrical parts	X	○	○	○	○	○
电池 Battery	X	○	○	○	○	○
遥控器 Remote controller	X	○	○	○	○	○

O: 代表此种部件的所有均质材料中所含的该种有毒有害物质均低于中华人民共和国信息产业部所颁布的《电子信息产品中有毒有害物质的限量要求》(SJ/T 11363-2006) 规定的限量。
X: 代表此种部件所用的均质材料中, 至少有一类材料其所含的有毒有害物质高于中华人民共和国信息产业部所颁布的《电子信息产品中有毒有害物质的限量要求》(SJ/T 11363-2006) 规定的限量

除非产品上另有标记, 所有内附产品及其部件的“环保使用期限”均由此显示的符号表示。此环保使用期限只适用于产品手册中所规定的使用条件。
(在此表中, 企业可能需要根据实际情况对标记“X”的项目进行进一步的技术性解释。)



Warranty Information

Obtaining Service

WD values your business and always attempts to provide you the very best of service. If this Product requires maintenance, either contact the dealer from whom you originally purchased the Product or visit our product support Web site at <http://support.wdc.com> for information on how to obtain service or a Return Material Authorization (RMA). If it is determined that the Product may be defective, you will be given an RMA number and instructions for Product return. An unauthorized return (i.e., one for which an RMA number has not been issued) will be returned to you at your expense. Authorized returns must be shipped in an approved shipping container, prepaid and insured, to the address provided on your return paperwork. Your original box and packaging materials should be kept for storing or shipping your WD product. To conclusively establish the period of warranty, check the warranty expiration (serial number required) via <http://support.wdc.com>. WD shall have no liability for lost data regardless of the cause, recovery of lost data, or data contained in any Product placed in its possession.

Limited Warranty

WD warrants that the Product, in the course of its normal use, will for the term defined below, be free from defects in material and workmanship and will conform to WD's specification therefor. The term of your limited warranty depends on the country in which your Product was purchased. The term of your limited warranty is for 1 year in the North, South and Central America region, 2 years in the Europe, the Middle East and Africa region, and 3 years in the Asia Pacific region, unless otherwise required by law. The term of your limited warranty period shall commence on the purchase date appearing on your purchase receipt. WD shall have no liability for any Product returned if WD determines that the Product was stolen from WD or that the asserted defect a) is not present, b) cannot reasonably be rectified because of damage occurring before WD receives the Product, or c) is

attributable to misuse, improper installation, alteration (including removing or obliterating labels and opening or removing external enclosures, unless the product is on the list of limited user-serviceable products and the specific alteration is within the scope of the applicable instructions, as found at <http://support.wdc.com>), accident or mishandling while in the possession of someone other than WD. Subject to the limitations specified above, your sole and exclusive warranty shall be, during the period of warranty specified above and at WD's option, the repair or replacement of the Product. The foregoing warranty of WD shall extend to repaired or replaced Products for the balance of the applicable period of the original warranty or ninety (90) days from the date of shipment of a repaired or replaced Product, whichever is longer.

The foregoing limited warranty is WD's sole warranty and is applicable only to products sold as new. The remedies provided herein are in lieu of a) any and all other remedies and warranties, whether expressed, implied or statutory, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose, and b) any and all obligations and liabilities of WD for damages including, but not limited to accidental, consequential, or special damages, or any financial loss, lost profits or expenses, or lost data arising out of or in connection with the purchase, use, or performance of the Product, even if WD has been advised of the possibility of such damages. In the United States, some states do not allow exclusion or limitations of incidental or consequential damages, so the limitations above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

GNU General Public License ("GPL")

Firmware incorporated into this product may include third party copyrighted software licensed under the GPL or Lesser General Public License ("LGPL") (collectively, "GPL Software") and not Western Digital's End User License Agreement. In accordance with the GPL, if applicable: 1) the source code for the GPL Software may be downloaded at no charge from <http://support.wdc.com/download/gpl> or obtained on CD for a nominal charge from <http://support.wdc.com/download/gpl> or by calling Customer Support within three years of the date of purchase; 2) you may re-use, re-distribute, and modify the GPL Software; 3) with respect solely to the GPL Software, no warranty is provided, to the extent permitted by applicable law; and 4) a copy of the GPL is included herewith, may be obtained at <http://www.gnu.org>, and may also be found at <http://support.wdc.com/download/gpl>.

Modification of or tampering with the Software, including but not limited to any Open Source Software, is solely at your own risk. Western Digital is not responsible for any such modification or tampering. Western Digital will not support any product in which you have or have attempted to modify the Software supplied by Western Digital.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Rovi™

Do not connect the unit through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the television.

Microsoft

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you

download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Content owners use Microsoft PlayReady content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Adobe®

This product features Adobe® Flash® technology. For further information, visit <http://www.adobe.com/software/flash/about/>.

The wall mount system located at the bottom of the unit is not designed for general usage by the end user.

WD respects the rights of copyright owners to control the uses of their intellectual property.

Information furnished by WD is believed to be accurate and reliable; however, no responsibility is assumed by WD for its use nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of WD. WD reserves the right to change specifications at any time without notice.

Western Digital, WD, the WD logo, WD TV, My Book, and My Passport are registered trademarks of Western Digital Technologies, Inc. in the U.S. and other countries; and WD TV Live Air and WD Livewire are trademarks of Western Digital Technologies, Inc. Other marks may be mentioned herein that belong to other companies.

© 2011 Western Digital Technologies, Inc. All rights reserved.

Western Digital
3355 Michelson Drive, Suite 100
Irvine, California 92612 U.S.A.

4779-705062-A00-P2 Jun 2011

Index

A

- Accessories 3
- AccuWeather.com 94
 - find your location 94
- advanced features 165
- aspect ratio
 - normal 167
 - troubleshooting 190
 - widescreen 167
- audio channel 68
- audio output 167
- audio/video
 - autosource function 6
 - supported interfaces 6
- Audio/Video menus
 - aspect ratio 167
 - audio output 167
 - video output 166
- Audio/Video setup
 - HDMI CEC 168
- auto play function 179
- autosource function 6

B

- background 169
- BBC iPlayer 95
- Blockbuster 96

C

- chapter selection 66
- CinemaNow 97
- clear media library 52
- compatibility 10
 - operating systems 10
- composite AV
 - connection 16
 - connectors 7
- connectors 7

D

- dashboard 49
 - options 51
- Deezer 98
 - add to playlist 101
 - deleting an account 102
 - exit 102
 - favorite radios 101
 - my music 100

- player 100
- playlists 100
- radios 100
- search 102
- signing in 99
 - top charts 102
- digital camera support 82
- display troubleshooting 190
- DVD menu 172

E

- Eject function
 - button 46, 47
 - procedure 19
- encoding support 182
- environmental compliance (China) 204
- error messages 193

F

- Facebook
 - delete account 107
 - exit 106
 - friends 105
 - newsfeed 105
 - notifications 104
 - photos 104
 - photos options 104
 - signing in 103
 - videos 105
 - videos options 106
 - videos player 106
 - wall 105
- features 6
 - AV interfaces 6
 - menus 6
 - supported file formats 195
 - supported file systems 7
 - USB support 7
- file formats
 - image 80
 - playlist 195
 - subtitle 195
 - troubleshooting 194
- file system
 - supported 7
 - troubleshooting 193
- Files
 - options 90

- sorting 90
- view 89
- firmware
 - auto detect new 184
 - check latest 184
- firmware upgrade
 - procedure 188
 - troubleshooting 192
- Flickr 108
 - exit 114
 - exploring for contents 108
 - my contacts 111
 - my tags 112
 - photostream 113
 - player 113
 - searching for a member 111
 - searching for contents 109
- Flingo 115
- folder lock 182
- folder sharing 27
 - Mac 33
 - Windows 7 27
 - Windows Vista 31
 - Windows XP 33
- folder view
 - music 73
 - photos 81
 - videos 60
- G**
- Games 163
- GNU general public license 205
- GPL software 205
- H**
- HD media player
 - error messages 193
- HDMI
 - connection 15
 - connectors 7
- HDMI CEC 168
- Home
 - button 45, 46
 - error messages 193
 - Music 72
 - overview 48
 - Photos 80
 - screen navigation 49
 - Setup 165
 - Videos 58
- Home Theater

- connection 17
- Hulu Plus 116

I

- I/O connectors
 - composite AV 7
 - HDMI 7
 - Toslink 7
 - USB ports 7
- information panel
 - music 76
 - photo 87
 - videos 69
- installation
 - composite AV connection 16
 - HDMI connection 15, 17
 - power connection 13, 16
 - procedures 11
 - requirements 10
 - USB connection 18

K

- keyboard 56

L

- language setup 169
- LED indicators 8
 - power 8
- LED light control 183
- Live365 117
 - adding a station to your preset list 122
 - exit 123
 - getting track information 123
 - listening 119
 - providing song feedback 123
 - removing a station from your preset list 122
 - searching 121
 - sign in 117
 - signing out 123
- local storage 36
- locating media content
 - manual search 53
 - Search function 54

M

- maintenance
 - system 188
- media library
 - clear 52
 - exemptions 186

- media library compilation
 - categories 52
 - enable 52
 - error messages 193
 - exemptions 52
 - overview 51, 186
- media server 36, 37
- Mediafly 124
 - browse content plug-ins 127
 - deleting an account 128
 - exit 128
 - my channels 125
 - player 126
 - player options 126
 - popular channels 126
 - search 128
 - signing in 124
- menus overview 6
- metadata 181
- meta-source manager 181
- MLB.TV 129
- Music
 - audio track display 174
 - auto play 179
 - background music info panel 174
 - browser display 175
 - folder view 73
 - media library compilation categories 52
 - menu options 74
 - playback controls 76
 - playback options 77
 - playback procedures 72
 - playback screen 76
 - playback sequence setting 174
 - settings 174
 - shuffle mode 78
 - sort & filter 73
 - supported formats 195
 - use in slideshow 87
- N**
- navigation buttons 45, 46
- Netflix 133
 - existing membership 133
 - navigation 133
 - new membership 133
- network services
 - folder sharing 27
 - transferring files 37
 - Web UI 41
- Network settings
 - check connection 177
 - clear login info for network share 178
 - device name 177
 - network setup 177
 - network share server 177
 - proxy 178
 - wireless favorites 177
 - workgroup 177
- Network setup
 - Ethernet 21
 - wireless 23
- network share 36
 - enable file sharing 37
- network share (NFS) 37
- NTSC 167
- O**
- on-screen keyboard 56
- operating precautions 1
- operating system requirements 10
- Operation
 - auto play 179
- P**
- package contents 10
- PAL 167
- Pandora 134
 - bookmarking a song or artist 139
 - providing song feedback 138
 - QuickMix 138
 - signing in 135
 - stations 136
 - why a song is in my station's playlist 139
- parental control 182
- Photo settings
 - photo scaling 176
 - slideshow interval time 176
 - slideshow sequence 175
 - slideshow transition 175
- Photos
 - browser display 176
 - large grid view 176
 - list mode 175
 - list view 176
 - small grid view 176
 - thumbnail mode 175
 - digital camera support 82
 - display options 85
 - folder view 81
 - information panel 87

- media library compilation categories 53
- menu options 83
- pan options 85
- rotate 85
- set as background 84
- sort & filter 81
- supported formats 195
- view 80
- zoom options 85
- Picasa 140
 - deleting an account 146
 - display options 145
 - featured 146
 - menu options 144
 - My Photos 143
 - people I'm following 146
 - recent 146
 - searching for content 142
 - video player 146
- Play To 6
- playlist
 - supported formats 195
 - videos, playback 59, 73
- podcasts 124
- power
 - AC connector 7
 - cable connection 13
 - global AC adapter configurations 13
 - LED indicator 8
 - power button 45, 46
 - turn on 13, 16
- product
 - accessories 3
 - obtaining service 204
 - overview 4
 - recording information 3
 - registration 3
 - regulatory compliance 200
 - safety information 1
 - warranty 204
- R**
- register your media center 182
- regulatory compliance 200
 - environmental compliance (China) 204
- remote control 9
- remote controller 9
 - buttons and functions 45
 - delete music preset 179
 - layout 9
 - settings 179
- troubleshooting 191
- virtual 43
- Web UI 43
- repeat mode
 - music 77
- reset switch 7
- reset to factory defaults 183
- restart device 184
- RoHS 204
- RSS
 - adding feeds 164
 - reading feeds 164
 - Web UI 44
- RSS ticker 170
- S**
- screensaver
 - delay 170
 - style 171
- Search function
 - button 45, 47
 - procedure 54
- security 181
 - folder lock 182
 - parental control 182
- select content source
 - local storage 36
 - login 35
 - media server 36, 37
 - network share 36
 - network share (NFS) 37
- Services
 - add to Favorites 93
- settings
 - apply new values 166
 - Audio/Video menu 166
 - network 177
 - System menu 177
- Setup 165
 - About 185
 - additional encoding support 182
 - appearance 168
 - audio/video output 166
 - auto detect new firmware 184
 - background 169
 - check latest firmware 184
 - device registration 182
 - device restart 184
 - device security 181
 - DVD menu 172
 - get content info 180

- language 169
 - LED light control 183
 - media library 180
 - meta-source manager 181
 - music settings 174
 - navigation buttons 166
 - photo settings 175
 - remote controller settings 179
 - reset to factory defaults 183
 - RSS ticker 170
 - screensaver delay 170
 - screensaver style 171
 - select time zone 180
 - setup menu bar 165
 - setup screen navigation 166
 - theme 169
 - video calibration 169
 - video settings 171
 - setup 165
 - shared folder 36
 - Shoutcast Radio 147
 - about 150
 - adding a station to your favorites list 148
 - assigning a preset button to a station 149
 - listening 147
 - listening to a station in your favorites list 149
 - removing a station from your preset list 150
 - searching 148
 - top radios 150
 - slideshow
 - interval time 176
 - music background 87
 - playback controls 88
 - sequence setting 175
 - shuffle and repeat 175
 - transition 175
 - troubleshooting 190
 - view 87
 - Software, GPL 205
 - Spotify 151
 - adding a track to a playlist 152
 - adding a track to the play queue 154
 - browse album artist 152
 - collaborate on a playlist 153
 - delete account 156
 - inbox 155
 - people 155
 - radios 155
 - searching 152
 - share 154
 - top lists 155
 - what's new 155
 - subtitle
 - adjust 67
 - border setting 172
 - default setting 172
 - enable 66
 - font size setting 172
 - supported formats 195
 - system compatibility 10
 - system reset
 - service accounts 183
 - system 183
- T**
- temperature display 94
 - theme 169
 - thumbnail support for media files 53
 - time
 - setting 180
 - Toslink
 - connectors 7
 - Transferring files 37
 - between the media player and a Mac computer 40
 - between the media player and a Windows Vista/Windows 7 computer 39
 - between the media player and a Windows XP computer 38
 - troubleshooting 190
 - audio 191
 - content playback 193
 - display 190
 - error messages 193
 - firmware upgrade 192
 - media library compilation 193
 - remote control 191
 - USB device 191
 - Tuneln 157
 - adding a station to your preset list 159
 - getting station information 160
 - listening 158
 - listening to a station in your preset list 159
 - removing a station from your preset list 159
 - reporting problems 160

searching 158
sign in 157

U

USB device
connection 18
disconnection 18
Eject button 46, 47
error messages 193
media library 186
media library compilation 51
removal 19
supported devices 7
troubleshooting 191
USB ports 7

V

Video
menu options 61
video output
composite 166
Video settings
browser display 173
subtitle border 172
subtitle default 172
subtitle font size 172
video sequence 172
Videos
aspect ratio 167
audio channel 68
auto play 179
browser display
gallery view 173
large grid view 173
list view 173
preview view 173
small grid view 173
DVD navigation 70
folder view 60
information panel 69
media library compilation categories 53
pan options 68
playback controls 65
playback options 66
playback procedures 58
settings 171
sort & filter 59
subtitles 66
supported formats 195
video calibration 169
video output setting 166

view chapter 66
zoom options 68

videos
supported resolutions 6

W

wall mount 8
warranty information 204
weather 94
change temperature display 94
Web UI 41
launching 41
logout 44
RSS 44
support 44
system 42
widescreen setup 167
Windows 7
Play To 6
wireless network setup 23

Y

Yota Music 161
YouTube 162
my account 141
search history 143
signing in 140

Z

zoom options
photos 85
videos 68