



**Altec Lansing FPO NAME M402/M402SR
Digital Speaker System and Alarm Clock for iPod
User Guide**

Welcome

Thank you for purchasing the Altec Lansing FPO NAME digital speaker system. Designed specifically to work with your iPod, this system provides high-quality audio and radio performance that brings out the best in your music. This Altec Lansing speaker system is designed to work with:

- iPod touch
- iPod with video
- iPod nano (3rd generation)
- iPod nano (1st generation)
- iPod classic
- iPod with color display
- iPod nano (2nd generation)
- iPod mini

Please carefully read this User Guide for instructions on setting up and using your FPO NAME speaker system. Prior to installing or operating the Altec Lansing FPO NAME speaker system, refer to the end of this guide for important product safety information.

Getting Assistance

Altec Lansing Technical Support is ready to assist you. You can find answers to frequently asked questions, ask a question using email, receive service over the Internet or speak directly with a representative. Call 1-866-570-5702 or visit www.alteclansing.com.

Registering Your Product

Visit www.alteclansing.com to register your product online, so we can provide you with the best possible service and technical support.

FCC Compliance

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Safety Information



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water – This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The apparatus must not be placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings. Ventilation should not be impeded by covering the openings with items such as newspapers, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. No naked flame sources, such as lighted candles, should be placed on the apparatus.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized

plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.

11. Protect the power cord from being walked on or pinched – particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Do not install in an area that impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
13. Power source – Use only power supplies of the type specified in the operating instructions or as marked on the appliance. If a separate power supply is included with this apparatus, do not substitute with any other power supply – use only manufacturer-provided power supplies.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. For service, refer to qualified service personnel, return to the dealer, or call the Altec Lansing service line for assistance.
16. For products that incorporate batteries, please refer to local regulations for proper battery disposal.
17. Only use attachments/accessories specified by the manufacturer.
18. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

 


Contents


Safety Information	1
Package Contents.....	3
Getting Started.....	4
Placing and Removing iPod Inserts	5
Speaker Features and Indicators	6
Speaker Controls.....	7
Enhanced Remote Features.....	9
Wireless Snooze Remote Features (M402SR model only).....	11
Listening to Your iPod	12
Charging your iPod.....	12
Listening to the FM Radio	13
Listening to a Non-docking iPod or Other Portable Audio Device.....	14
Mood Light	15
Setting the Clock Display	16
Setting the Alarm.....	18
Setting the Sleep Timer	20
Maintaining Your Speaker System	20
Troubleshooting.....	21
Warranty	24
Customer Service.....	24

Package Contents


Altec Lansing FPO NAME speaker system

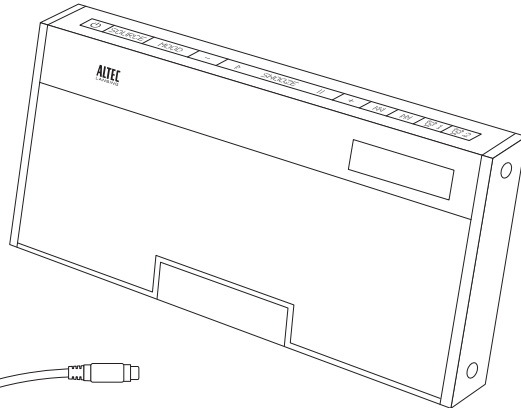

 
User Guide and Quick Connect Instructions

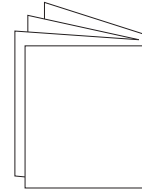


Enhanced remote

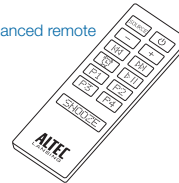 


iPod insert set

 


FM radio antenna

 

 
Wireless snooze remote (M402SR model only)

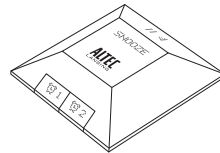

 Snooze remote receiver (M402SR model only)

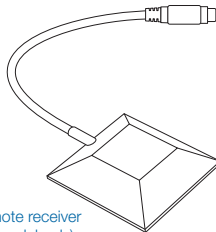

Power supply

 

Getting Started

How to Install the Backup Battery

This Altec Lansing FPO NAME speaker system uses a backup battery system to provide continuous clock settings in the event of a power failure. With the backup battery (not included) installed, if a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit and the alarm will not function, but the current time will be temporarily maintained. Otherwise, you must reset the time and alarm settings.

1 Make sure the AC adapter is connected.

Your settings may be lost during battery installation if the AC adapter isn't connected.


2 Open the battery compartment cover.

The compartment cover is located on the bottom of the system.

3 Insert one 9-volt battery (not included).

Be sure to check that the polarity (+ and – ends of the batteries) matches the illustration inside the battery compartment. Altec Lansing recommends the use of alkaline batteries for longer life.

4 Close the battery compartment cover.

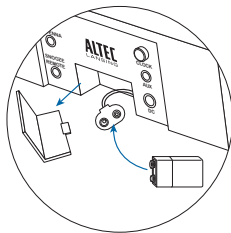


How to Install the AC Adapter

1 Connect the AC adapter cable plug into the speaker system's jack.

The jack is located on the back of the system.

2 Plug the AC adapter into the wall outlet.

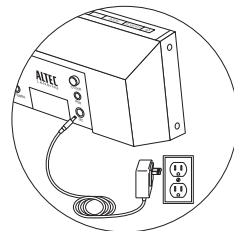

How to Install the Enhanced Remote Battery

The enhanced remote battery (included) is not installed at the factory. To install the battery, follow the steps below:


1 Pull out the battery holder.

The battery door is located on the lower end of the remote. Simply pull the tab to open the battery holder.

2 Position the battery (included) so it sits in the battery holder correctly.

Make sure the polarity (the + and – sides of the battery) is correct.

3 Replace the battery door.

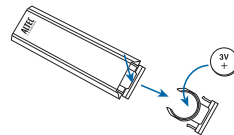

NOTE Please discard used batteries properly.

Placing and Removing iPod Inserts

Your Altec Lansing FPO NAME speaker system includes removable inserts for today's popular iPod models. These inserts ensure that your iPod properly fits in the speaker system's dock. As new iPod models are introduced, new inserts will be made available to customers. You may also use the inserts supplied with your iPod or available for purchase at www.apple.com.


How to Place an Insert

1 Select the correct insert for your iPod.

Using the correct insert ensures a proper fit for your iPod.

2 Gently press the iPod insert into the dock.

Now you can carefully place your iPod into the dock.

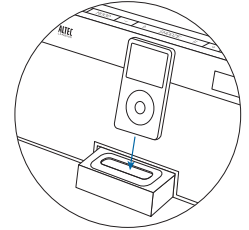


NOTE Your iPod cannot be in a case or a "skin."

How to Remove an Insert







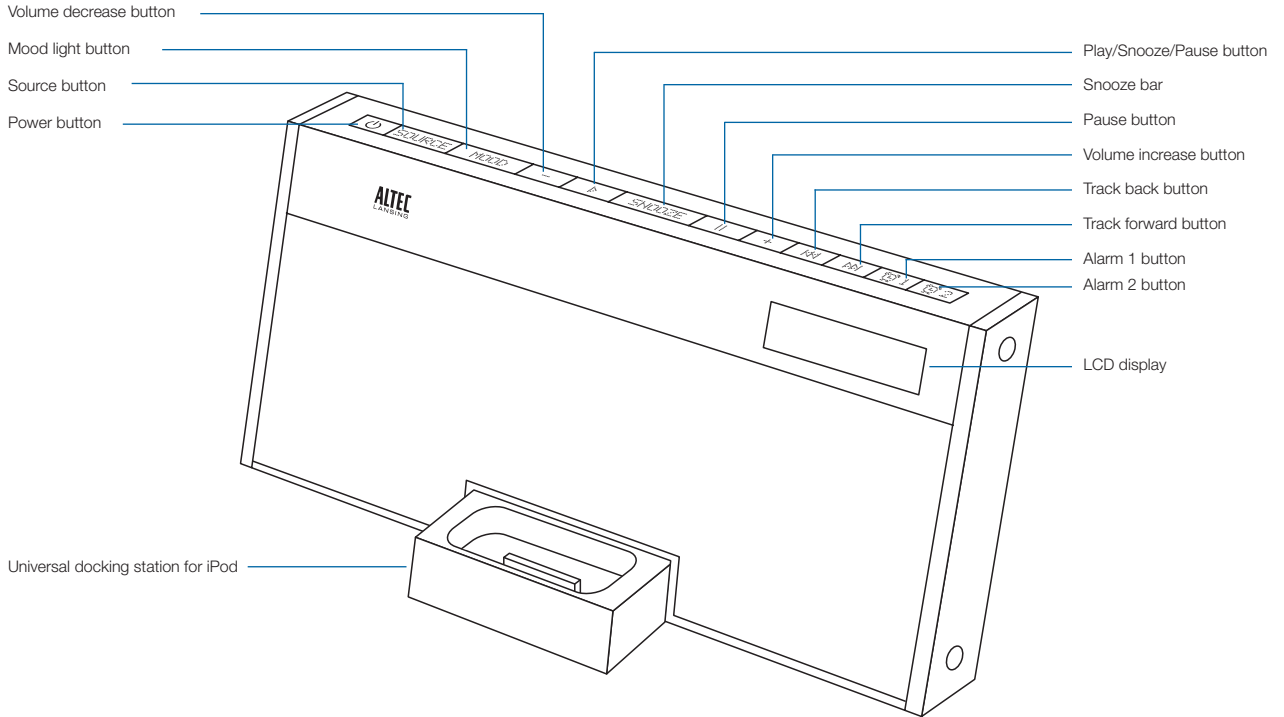



1 Remove your iPod.

2 Grip the insert and pull gently upward.

Speaker Features and Indicators



Speaker Controls

Turn on your speaker system	Ensure the AC adapter is connected to the system and plugged into the wall. See the <i>Getting Started</i> section for more information. Press the  button.
Turn off your speaker system	Press the  button. Whenever you are finished using your speaker system, please remember to turn it and your iPod or other MP3 player off to conserve electricity.
Change audio source	Press the SOURCE button to cycle through and select the audio source: iPod, FM radio or AUX IN.
Play a track from your iPod	In iPod mode, press the  button. See the <i>Listening to Your iPod</i> section for more information.
Pause your iPod	In iPod mode, Press the  button.
Turn up the volume	Press the VOLUME INCREASE button.
Turn down the volume	Press the VOLUME DECREASE button.
Skip to the beginning of the current song on your iPod	In iPod mode, press the  button.
Rewind the currently playing track on your iPod	In iPod mode, push and hold the  button.
Skip to the beginning of the next song on your iPod	In iPod mode, press the  button.
Fast-forward the currently playing track on your iPod	In iPod mode, push and hold the  button.
Tune radio stations	In FM radio mode, use the  and  buttons. See the <i>Listening to the Radio</i> section for additional information.

Speaker Controls

Scan radio stations

In FM radio mode, press and hold the **FM** or **FM** button. See the *Listening to the Radio* section for additional information.

Listen to a non-docking iPod or MP3 player

See the *Listening to a Non-docking iPod or Other Portable Audio Device* section for specific information on using devices attached to your speaker system's AUX IN connector.

Turn on the mood light

Press the MOOD button. See the *Mood Light* section for more information.

Set the clock

See the *Setting the Clock Display* section for detailed instructions on setting the clock.

Set the alarm

See the *Setting the Alarm* section for instructions on setting the alarms.

Turn off the alarm











Press the ALARM 1 or ALARM 2 button when the alarm is sounding.



Snooze for 5 to 60 minutes (user-definable)


Press the SNOOZE button when the alarm is sounding. See the *Setting the Alarm* section to learn how to set the snooze duration.

IR Enhanced Remote Features

The enhanced remote lets you operate many functions of your Altec Lansing FPO NAME speaker system:

Turn on your speaker system	Press the  button.
Turn off your speaker system	Press the  button.
Change audio source	Press the SOURCE button to cycle through and select the audio source: iPod, FM radio or AUX IN.
Play a track from your iPod	In iPod mode, press the  button. See the <i>Listening to Your iPod</i> section for more information.
Pause your iPod	In iPod mode, Press the  button.
Turn up the volume	Press the VOLUME + button.
Turn down the volume	Press the VOLUME – button.
Skip to the beginning of the current song on your iPod	In iPod mode, press the  button.
Rewind the currently playing track on your iPod	In iPod mode, push and hold the  button.
Skip to the beginning of the next song on your iPod	In iPod mode, press the  button.
Fast-forward the currently playing track on your iPod	In iPod mode, push and hold the  button.
Tune radio stations	In FM radio mode, use the  and  buttons. See the <i>Listening to the Radio</i> section for additional information.

Seek radio stations	In FM radio mode, press and hold the TRACK BACK  or TRACK FORWARD  button. See the <i>Listening to the Radio</i> section for additional information.
Store a radio station	In FM radio mode, tune to the station you'd like to store, and then press and hold one of the PRESET buttons (P1, P2, P3 or P4). See the <i>Listening to the Radio</i> section for more information.
Select a preset radio station	In FM radio mode, press the PRESET button (P1, P2, P3 or P4) that corresponds to the station you'd like to hear. See the <i>Listening to the Radio</i> section for more information.
Set the alarm	See the <i>Setting the Alarm</i> section for instructions on setting the alarms.
Turn off the alarm	Press the ALARM 1 or ALARM 2 button when the alarm is sounding.
Snooze for 5 to 60 minutes (user-definable)	Press the SNOOZE button when the alarm is sounding. See the <i>Setting the Alarm</i> section to learn how to set the snooze duration.

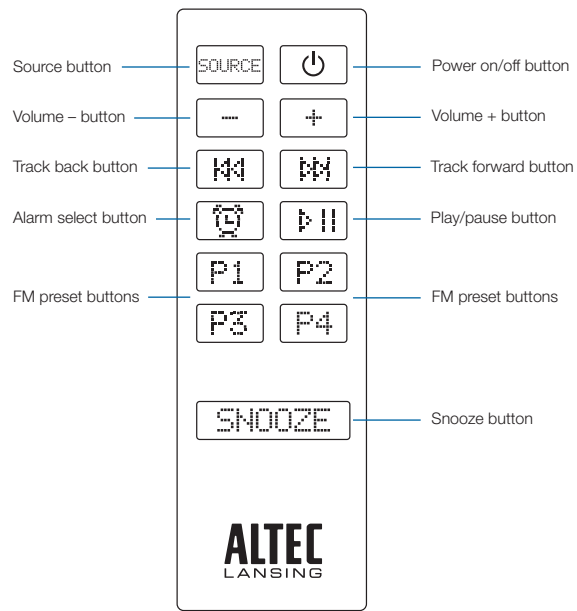 

NOTE For best results, aim the IR remote control toward the FPO NAME speaker system.

Wireless Snooze Remote Features (M402SR model only)

The wireless snooze remote lets you operate select functions of your Altec Lansing FPO NAME speaker system from across the room. There's no need to aim it at the speaker system.

Snooze	Press the ⏸ button to activate the snooze timer.
Play a track from your iPod	In iPod mode, press the ⏸ button. See the <i>Listening to Your iPod</i> section for more information.
Pause your iPod	In iPod mode, press the ⏸ button.
Turn off the alarm	Press the ALARM 1 or ALARM 2 button when the alarm is sounding.

NOTE See the *Using the Wireless Snooze Remote* section for installation and pairing instructions.


Using the Wireless Snooze Remote (M402SR model only)

The M402SR model comes with a wireless snooze remote that allows you to snooze and turn off your alarm (and play/pause your iPod) from across the room – up to 30 feet (10 meters) away. In order for the wireless snooze remote to control the speaker system, the snooze remote receiver must be connected to the back of the speaker system and paired with the wireless snooze remote.

How to Install the Wireless Snooze Remote Battery

The wireless snooze remote battery (included) is not installed at the factory. To install the wireless snooze remote battery, follow the steps below:


- 1 Open the battery compartment.**
Use a coin or screwdriver to turn the battery compartment door counter-clockwise.
- 2 Position the battery (included) so it sits in the battery holder correctly.**
Make sure the polarity (the + and – sides of the battery) is correct.
- 3 Replace the battery door.**

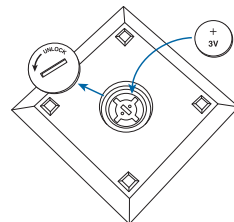

NOTE Please discard used batteries properly.

How to Connect and Pair the Wireless Snooze Remote

- 1 Connect the snooze remote receiver to the SNOOZE REMOTE jack.**
The jack is located on the back of the system (M402SR model only).
- 2 Press the PAIRING button on the snooze remote receiver until the LED light stays lit.**
- 3 Press any button on the wireless snooze remote twice.**

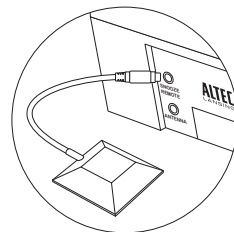

The LED light on the snooze remote receiver will turn off once the pairing process is complete.

NOTE Any time a button on the wireless snooze remote is pressed, the LED light on the snooze remote receiver will flash.

Listening to Your iPod

1 Dock your iPod in the Altec Lansing FPO NAME speaker system.

2 Select iPod mode.

Press the SOURCE button on your M402 or enhanced remote until the iPod icon appears on the LCD.





3 Press the  button on your iPod, speaker system, enhanced remote, or wireless snooze remote (M402SR model only).

Music from your iPod will start playing. The speaker system and its remote are capable of controlling basic functions of 3rd-generation iPods and the iPod touch.

4 Adjust the volume.


Use the VOLUME INCREASE and VOLUME DECREASE buttons on the Altec Lansing speaker system to adjust the system volume. Or, use the VOLUME + and VOLUME – buttons on the enhanced remote.

5 Find your desired song.


Press the  or  button on your speaker system or enhanced remote to go to the next or previous track. Press and hold the  or  button on your speaker system or enhanced remote while track is playing for high-speed forward or reverse music search of the current track.

How to Access Additional Features on Your iPod Using the Enhanced Remote


Shuffle your entire song library

Press the P1 button once on the enhanced remote. The  icon will be displayed.


Shuffle albums

Press the P1 button twice on the enhanced remote. The  icon will be displayed.

Repeat the current song

Press the P2 button once on the enhanced remote. The  icon will be displayed.

Repeat the current playlist

Press the P2 button twice on the enhanced remote. The  icon will be displayed. Press the P2 button again to cancel the repeat setting.

Access the previous playlist

Press the P3 button on the enhanced remote.

Access the next playlist

Press the P4 button on the enhanced remote.

Charging your iPod

Whenever your iPod is docked and your Altec Lansing FPO NAME speaker system is plugged into an AC outlet, your iPod is charging (until fully charged) – even if the speaker system is switched off.