

## Listening to the FM Radio

### 1 Select FM radio mode.

Press the **SOURCE** button on your speaker system or enhanced remote until the FM icon **FM** appears on the LCD.

### 2 Tune to the station you want to listen to.

Use the **FM** and **FM** buttons on your speaker system or enhanced remote to tune in the desired station. Press and hold these same buttons to find the next clear FM station.

### 3 Adjust the volume.

Use the **VOLUME INCREASE** and **VOLUME DECREASE** buttons on the Altec Lansing speaker system to adjust the system volume. Or, use the **VOLUME +** and **VOLUME -** buttons on the enhanced remote.

**NOTE** Extend the FM antenna wire fully for best FM reception. Also, do not strip, alter or attach to other antennas.

### How to Store Preset Stations

 
Your Altec Lansing speaker system's enhanced remote enables you to program up to 4 FM station presets:

#### 1 Tune to the station you wish to store.

While in FM radio mode, use the **FM** and **FM** buttons on your speaker system or enhanced remote to tune to the desired station.

#### 2 Store the station.

Press and hold the P1, P2, P3 or P4 button on the enhanced remote for a few seconds. You can store one FM station in each preset.

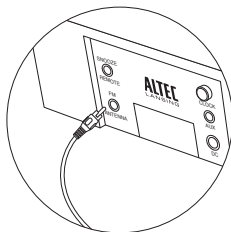

### 3 To store other stations, repeat the above steps.

### How to Recall Preset Stations

#### 1 Make sure you are in FM mode.

If you're not in FM mode, press the **SOURCE** button on your speaker system or enhanced remote until the FM icon **FM** appears on the LCD.

#### 2 Press a PRESET button (P1, P2, P3 or P4) on the remote control.

The radio will tune to your preset station.

#### 3 Adjust the volume.

Use the **VOLUME INCREASE** and **VOLUME DECREASE** buttons on the Altec Lansing speaker system to adjust the system volume. Or, use the **VOLUME +** and **VOLUME -** buttons on the enhanced remote.

## Listening to a Non-docking iPod or Other Portable Audio Device

If you have a non-iPod MP3 player or other non-docking portable audio device, you can enjoy it through your Altec Lansing FPO NAME speaker system as well. Just connect it via the AUX IN jack. Here's how:

**1** Locate a 3.5 mm stereo cable (not included).

**2** Plug one end of the stereo cable into your device.

Your device should have either a headphone or LINE OUT jack for you to plug into.

**3** Plug the other end of the stereo cable into your speaker system's **AUX IN** jack.

The AUX IN jack is located on the back of the unit.

**4** Select **AUX IN** mode.

Press the **SOURCE** button on your speaker system or the enhanced remote until the **AUX IN** icon appears on the speaker system's LCD.

 
**5** Turn on your device and start it playing.

**6** Adjust the volume.

Use the **VOLUME INCREASE** and **VOLUME DECREASE** buttons on the speaker system to adjust the volume. Or, use the **VOLUME +** and **VOLUME -** buttons on the enhanced remote.


**NOTE** You may need to adjust the device volume also. Your device's volume should be set to approximately  $\frac{3}{4}$  volume.

**7** When you are finished listening to your portable audio device, please remember to turn both it and your speaker system off to conserve electricity.

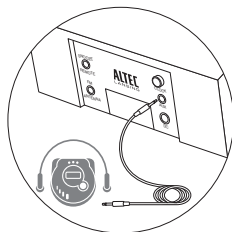

# Mood Light

 Your Altec Lansing FPO speaker system is also equipped with a mood light to help you relax and enjoy the music.

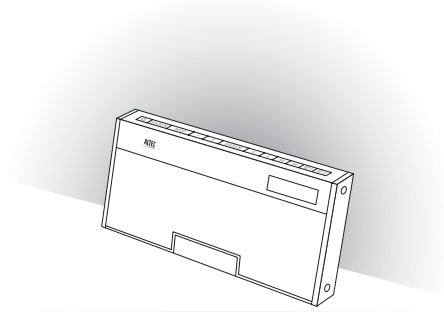

## How to Turn On the Mood Light

Press the **MOOD** button on your Altec Lansing speaker system.

## How to Adjust the Mood Light

You can enter the Mood Light Setup menu at any time to change colors, adjust modes and set the brightness level.

### 1 Press and hold the **MOOD** button for 3 seconds.

This puts you in the Mood Light Setup menu.



### 2 Choose the color of the ambient light you'd like.

Use the **M** and **M** buttons on your speaker system or the enhanced remote to cycle through all the colors the mood light can emit. When the desired color is projected, press the **MOOD** button again to enter the Mood Light Auto/Manual Select menu.



### 3 Select brightness level. (Optional)

If in manual mode, press the **M** or **M** button on your speaker system or the enhanced remote to cycle through the available brightness settings. When the desired brightness setting is achieved, press the **MOOD** button to exit the Mood Light Setup menu.



**⚠ WARNING** The mood light isn't a reading light and doesn't provide enough light to read by. Please don't risk damage to your eyesight by trying to read using the mood light.

# Setting the Clock Display

## How to Set the Clock Time and Date

### 1 Press and hold the **CLOCK** button for 3 seconds.

The **CLOCK** button is located on the back of your Altec Lansing speaker system. This puts you in the Time/Date Set mode.



### 2 Select either **12-Hour** or **24-Hour** Clock mode.

Press the **M** or **M** button on your speaker system or the enhanced remote to select either 12-Hour or 24-Hour Clock mode. Then press the **CLOCK** button to save this setting and enter the Hour Set mode.



### 3 Set the hour.

Use the **M** and **M** buttons on your speaker system or the enhanced remote to adjust the hour. Then press the **CLOCK** button to save this setting and enter the Minute Set mode.



### 4 Set the minute.

Use the **M** and **M** buttons on your speaker system or the enhanced remote to adjust the minute. Then press the **CLOCK** button to save this setting and enter the AM/PM Set mode, if 12-Hour Clock mode was previously selected. If 24-Hour Clock mode was selected, pressing the **CLOCK** button will save the minute setting and place the unit into Day Set mode.



### 5 Set AM/PM.

Press the **M** or **M** button on your speaker system or the enhanced remote to select AM or PM. Press the **CLOCK** button to save this setting and enter the Day Set mode.



### 6 Set the day.

Press the **M** or **M** button on your speaker system or the enhanced remote to select the day of the week. Then press the **CLOCK** button to save this setting and enter the Month Set mode.



## Setting the Clock Display

### 7 Set the month.

Use the **M** and **M** buttons on your speaker system or the enhanced remote to select the month. Press the CLOCK button to save this setting and enter the Date Set mode.



### 8 Set the date.

Use the **M** and **M** buttons on your speaker system or the enhanced remote to select the date. Press the CLOCK button to save this setting and enter the Year Set mode.



### 9 Set the year.

Use the **M** and **M** buttons on your speaker system or the enhanced remote to select the year. Then press the CLOCK button to save this setting and enter the Display Option mode.



### 10 Set your display options.

Press the **M** or **M** button on your speaker system or the enhanced remote to select one of the following four display options:



**NOTE** The clock is always displayed. The size of the clock is dependent on the display option.

---

**Song Information/Date** If song information is available on your iPod or from your radio station, it is displayed. If no song information is available, only the date is displayed.

---

**Song Information** Only the song information is displayed, if available.

---

**Date** Only the date is displayed.

---

**Clock** Only the clock is displayed.

---

## Setting the Alarm




Your Altec Lansing speaker system has two separate alarms.

### How to Set Alarm 1

#### 1 Press and hold the ALARM 1 1 button for 3 seconds.

This puts you in the Alarm Set mode for alarm 1.




#### 2 Turn Alarm 1 on/off

Use the  and  buttons on your speaker system or the enhanced remote to select alarm ON. Then press the ALARM 1  1 button to save this setting and enter the Alarm Hour Set mode.






**NOTE** If you select alarm OFF, you will exit the menu.

#### 3 Adjust the hour.

Use the  and  buttons on your speaker system or the enhanced remote to adjust the hour setting. Then press the ALARM 1  1 button to save this setting and enter the AM/PM selection mode.






#### 4 Adjust the minute.

Use the  and  buttons on your speaker system or the enhanced remote to adjust the minute setting. Then press the ALARM 1  1 button to save this setting and enter the Alarm Source Set mode.





#### 5 Select AM or PM.


Use the  and  buttons on your speaker system or the enhanced remote to select AM or PM. Then press the ALARM 1  1 button to save this setting and enter the Alarm Day Select mode.

**NOTE** This option is only available if the 12-hour mode was selected when setting up the clock.

#### 6 Select alarm day setting.

Use the  and  buttons on your speaker system or the enhanced remote to select the alarm day:

- Choose EVERYDAY to have the alarm go off every day.
- Choose WEEKDAYS to have the alarm go off Monday through Friday.
- Choose WEEKENDS to have the alarm go off on Saturday and Sunday.
- Choose ONE TIME to have the alarm go off only once at the next selected time.

Then press the ALARM 1  1 button to save this setting and enter the Alarm Source Set mode.

## Setting the Alarm



### 7 Set the alarm source.

Press the **M** or **M4** button on your speaker system or the enhanced remote to select the alarm source (iPod, FM radio or buzzer). Then press the ALARM 1 **1** button to save this setting and enter the Snooze Duration Set mode.



**NOTE** If you wish to wake up to a specific song on your iPod, dock your iPod on the speaker system, select the song on your iPod, and then select iPod as your alarm source. The speaker system should remember which song was selected from now on, unless the playlist on your iPod is modified. If the playlist on your iPod is modified, either the last song on queue or the first song on your song list will play.

**NOTE** Your Altec Lansing speaker system features a backup battery. If a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit and the alarm will not function. The correct time, however, will be temporarily maintained (provided you have installed a 9-volt backup battery as described in the *Getting Started* section).

**NOTE** If the iPod or FM radio are playing when the alarm goes off, the alarm will automatically default to the buzzer, even if the iPod or FM radio have been selected as the alarm source.

### 8 Set snooze duration.

Press the **M** or **M4** button on your speaker system or the enhanced remote to select the snooze duration. The default snooze duration is 9 minutes and can be adjusted from 5 minutes to 60 minutes in increments of 1 minute. Then press the ALARM 1 **1** button to save this setting and enter the Alarm Volume Set mode.



### 9 Set the alarm volume.

Press the **M** or **M4** button on your speaker system or the enhanced remote to select the alarm volume (low, medium or high). The default alarm volume is medium. Then press the ALARM 1 **1** button to save this setting and exit the Alarm Set mode.



**NOTE** When exiting the Alarm Set mode, the Alarm is automatically turned on. To turn off the alarm, press the corresponding ALARM **1** / **2** button.

### How to Set Alarm 2

Repeat the above steps, substituting "Alarm 2" for "Alarm 1."

### How to Use the Snooze Feature

Press the SNOOZE button once to silence the alarm for a period of 5 to 60 minutes (user-definable).



## Setting the Sleep Timer

Your Altec Lansing speaker system is equipped with a sleep timer that automatically turns off the unit 5 to 90 minutes after it has been set.

### How to Set the Sleep Timer

**1 Turn on the speaker system.**

**2 Press and hold the POWER button for 3 seconds.**

This puts you in the Sleep Timer mode.

**3 Choose when you want the speaker system to turn off.**

Press the **PH** or **M4** button on your speaker system or the enhanced remote to select how long the unit should play before going on standby (in 5-minute increments).

**4 Press the POWER button again.**

This takes you out of the Sleep Timer mode.



## Maintaining Your Speaker System

Place your speaker system on a level surface away from sources of direct sunlight or excessive heat.

Protect your furniture with a cloth or other protective material when placing your speaker system on a natural wood or lacquered finish.

Clean your speaker system with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzene, thinner or similar materials, can damage the surface of the unit.



Symptom	Possible Problem	Solution
Speaker system doesn't respond (no power)	AC adapter isn't plugged into a wall outlet or the connector isn't plugged into the power supply jack on the back of the speaker system	Plug the AC adapter into a wall outlet and plug the connector into the power supply jack on the back of the speaker system.
	Wall outlet is not functioning	Plug another device into the same outlet to confirm the outlet is working.
iPod doesn't dock properly	Using the wrong iPod insert or no insert	Make sure the dock insert is the proper fit for your iPod.
	iPod didn't install properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseat it in the dock.
iPod doesn't respond to the speaker system	iPod is not installed properly	Remove your iPod from the dock and check for obstructions on the connectors in the dock and on your iPod. Then reseat it in the dock.
	Your iPod software is too old	Upgrade software on your iPod. For details visit <a href="http://www.apple.com/ipod/download">www.apple.com/ipod/download</a> .
	iPod is locked up	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	Using 1st- or 2nd-generation iPod, iPod shuffle or other devices	Your speaker system cannot control those iPods or other devices.

## Troubleshooting

Symptom	Possible Problem	Solution
iPod didn't charge	iPod is not installed properly	Remove your iPod from the dock and check for obstructions on the connectors in the dock and on your iPod. Then reset it in the dock.
	iPod is locked up	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	AC adapter isn't plugged into a wall outlet, or the connector is not plugged into the power supply jack on the back of the speaker system	Plug the AC adapter into a wall outlet and plug the connector into the supply jack on the speaker system.
Sound is distorted	Volume level is set too high	Decrease the volume.
	Sound source is distorted	If the iPod original sound source (MP3) is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
Enhanced remote doesn't work	Battery is weak	Replace current battery with a new battery.
	Enhanced remote is not pointed toward the speaker system	Point the enhanced remote toward the Altec Lansing speaker system and move within 10 feet of the unit.
No sound from the AUX IN device, such as an MP3 player or CD player connected to the AUX IN jack	Volume on the device is set too low	Increase the volume on the device to approximately $\frac{3}{4}$ full volume.
	Source selector is not set to Aux Out	Set source selector to Aux Out.

Symptom	Possible Problem	Solution
Wireless snooze remote doesn't work.	Battery is weak	Replace current battery with a new battery.
	Snooze remote receiver is not properly plugged into speaker system	See <i>How to Connect and Pair the Wireless Snooze Remote</i> section.
	Wireless snooze remote is not paired	See <i>How to Connect and Pair the Wireless Snooze Remote</i> section.

# Warranty

## ALTEC LANSING TECHNOLOGIES, INC. ONE-YEAR LIMITED WARRANTY (TWO-YEAR LIMITED WARRANTY IN THE EUROPEAN UNION AND ASIA)

### What Does the Warranty Cover?

Altec Lansing warrants that its products shall be free from defects in materials or workmanship, with the exceptions stated below.

### What Is the Period of Coverage?

For units purchased in the European Union or Asia, this warranty runs for two years from the date of purchase. For units not purchased in Europe or Asia, this warranty runs for one year from the date of purchase. The term of any warranties implied by law shall expire when your limited warranty expires. Some states and/or Member States in the European Union do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

### What Does the Warranty Not Cover?

This warranty does not cover any defect, malfunction or failure that occurs as a result of: improper installation; misuse or failure to follow the product directions; abuse; or use with improper, unintended or faulty equipment. (For information on proper installation, operation and use consult the manual supplied with the product. If you require a replacement manual, you may download a manual from [www.alteclansing.com](http://www.alteclansing.com).) Also, consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### What Will Altec Lansing Do to Correct the Problem?

Altec Lansing will, at its option, repair or replace any product that proves to be defective in material or workmanship. If your product is no longer being manufactured, or is out of stock, at its option, Altec Lansing may replace your product with a similar or better Altec Lansing product.

### How to Get Warranty Service

To get a covered product repaired or replaced, you must contact Altec Lansing during the warranty period by email ([csupport@alteclansing.com](mailto:csupport@alteclansing.com)). You must include in your email, your name, address, email address, telephone number, date of purchase and a complete description of the problem you are experiencing. In the United States, you may alternatively contact Altec Lansing by telephone at 1-800-ALTEC88. Please be prepared to provide the same information. If the problem appears to be related to a defect in material or workmanship, Altec Lansing will provide you a return authorization and instructions for return shipment. Return shipments shall be at the customer's expense, and the return

must be accompanied by the original proof of purchase. You should insure the shipment as appropriate because you are responsible for the product until it arrives at Altec Lansing.

### How Will State Law Affect Your Rights?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Please note that in the European Union, you as a consumer might have other legal rights under national legislation of European Union Member States governing the sale of Altec Lansing's goods. Those rights are not affected by this guarantee.

The above limited warranties and remedies are sole warranties and remedies available to purchaser, if, and to the extent, valid and enforceable under the applicable law.

## CUSTOMER SERVICE

The answers to most setup and performance questions can be found in the Troubleshooting section of this guide. You can also consult the FAQs in the customer support section of our Web site at [www.alteclansing.com](http://www.alteclansing.com). If you live in North America and still can't find the information you need, please call our customer service team for assistance before returning the speakers to your retailer under their return policy.

Tel: 800-258-3288

Email: [csupport@alteclansing.com](mailto:csupport@alteclansing.com)

If you live outside of North America, please visit our Web site at [www.alteclansing.com](http://www.alteclansing.com) and select your region to locate your country's distributor.

For the most up-to-date information, be sure to check our Web site at [www.alteclansing.com](http://www.alteclansing.com).

## INTERNATIONAL DISTRIBUTION

International customers: For information regarding the distribution of Altec Lansing products in your country, please visit [www.alteclansing.com](http://www.alteclansing.com) and click on your region.

## DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office or your household waste disposal service.



[www.alteclansing.com](http://www.alteclansing.com)

**HEADQUARTERS** 535 Rte. 6 & 209, Milford, PA 18337-0277 • 800-ALTEC-88. 570-296-4434. • Fax 570-296-6887

**EUROPE** 13 Rue Beaumont, L-1219 Luxembourg, Luxembourg

**ASIA/PACIFIC** 23/F, Office Tower, Shun Hing Square Diwang Commercial Centre, 5002 Shen Nan Dong Road, Shenzhen, China 518008

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Patents pending.

©2008 Plantronics, Inc. All rights reserved.

ALTEC, ALTEC LANSING, the Altec Lansing logo, Hear What's Next, and FPO NAME are trademarks or registered trademarks of Altec Lansing, a division of Plantronics, Inc. Plantronics, the logo design, and Sound Innovation are trademarks or registered trademarks of Plantronics, Inc.

iPod is a trademark of Apple, Inc., registered in the U.S. and other countries.

All other trademarks appearing herein are the property of their respective owners.

Designed by Altec Lansing in the USA. Made in China.