







7" Digital Photo Frame Instructional Manual

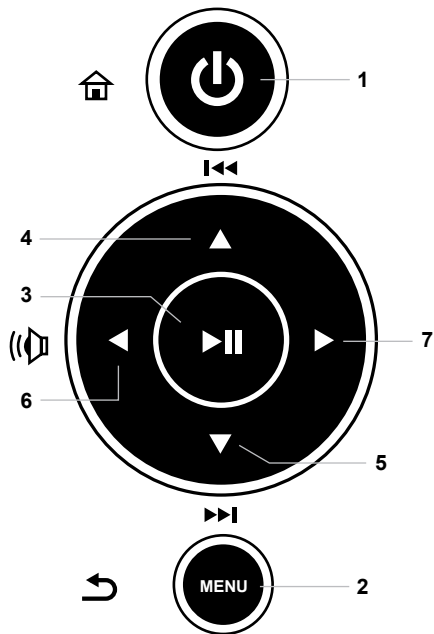


Table of Contents

Frame Control Close-up	04
Package Contents	05
Getting Started	05
Operations	
Main Menu	06
Photo Function	
Setup a Photo Slideshow	07
Browse Mode.....	08
Photo Set-up	08
eBook Function	
Reading eBooks	09
Calendar Function	
Calendar Set-up	10
Viewing the Calendar	11
Technical Support	12
Radio and TV Interference Statement	13
Warranty	14

Frame Control Close-Up

- 1 -  Power On / Off (Hold until power turns on or off)
- 2 - Menu
 - (a) Press to return to previous screen
 - (b) Press & hold to return to Main Menu
- 3 -  Play / Pause
 - (a) Press to select option on Main Menu
 - (b) Press to pause slideshow
- 4 -  Up Arrow
 - (a) Press to navigate UP when selecting options
 - (b) Press to select Previous file (Photo mode)
 - (c) Press & hold to Fast Forward
 - (d) Scroll to the previous page (eBook mode)
- 5 -  Down Arrow
 - (a) Press to navigate DOWN when selecting options
 - (b) Press to select Next file (Photo mode)
 - (c) Press & hold to Scan Backward
 - (d) Scroll to the next page (eBook mode)
- 6 -  Left Arrow
 - (a) Press to navigate LEFT when selecting options
 - (b) Press & hold to lower volume
- 7 -  Right Arrow
 - (a) Press to navigate RIGHT when selection options
 - (b) Press & hold to increase volume



Package Contents

Your order has been carefully packaged and inspected. The following should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.

- Digital Photo Frame
- USB 2.0 Cable
- Power Adapter
- Instructional Manual
- Warranty / Registration Card

Getting Started

- Remove the protective film covering the LCD.
- Remove the plastic insulator from the battery on the remote control.

Main Menu

- Turn on the digital frame by pressing and holding the power button until the Aluratek startup screen is displayed.
- The On-screen Display (OSD) will show the Main Menu. Each icon represents the various functions available on the device: Explorer, Photo, eBook, Calendar and Setup.
- Browse the different functions using the ◀ or ▶ arrow buttons and select a function by pressing the ▶ || button.

Photo Function

Setup a Photo Slideshow

- Navigate to the Photo function using the ◀ or ▶ arrow buttons and press the Play Pause button.
- Select the source of the photos you wish to present in the slideshow by selecting SD or USB storage options and pressing the ▶ || button.
- To begin your slideshow press the ▶ || button in the thumbnail view.
- During slideshow, press and hold the ▶ || button. This will provide you with the various options to customize your slideshow. Browse the options using the ▲ or ▼ arrow buttons. You may browse the features of each option using the ◀ or ▶ arrow buttons.

Photo Function

Browse Mode

- Browse mode is a feature that allows you to view a single photo and adjust how it is displayed on the screen.
- While a slideshow is playing, press the ► || button to enter Browse mode. This will freeze the photo currently displayed and allow you to adjust it.
- To exit Browse mode, press the Menu button.

Photo Setup

- In either Browse or Slideshow mode, you can enter the Photo Setup menu by pressing and holding the ► || button.
- To exit, press the Menu button.

Reading eBooks

- Navigate to the eBook function using the ◀ or ▶ arrow buttons and press the Play Pause button.
- Select the source of the ebooks you wish to read by selecting SD or USB storage options and pressing the ▶ || button.
- Select the eBook that you wish to view and press the ▶ || button.
- To scroll to the next page, press the ▼ arrow button. To scroll to the previous page, press the ▲ arrow button.
- To exit, press the Menu button

Calendar Function

Calendar Setup

- To configure custom settings for the Calendar, select the Setup function in the Main Menu. Then navigate to Calendar & Timer Setup using the ▲ or ▼ arrow buttons and press the ► button. The screen will display options available for how the Calendar is viewed.
- Navigate the Setup options using the ▲ or ▼ arrow buttons and browse each option's features with the ◀ or ▶ arrow buttons. The Calendar Setup options will allow you to customize how the Calendar and Clock is displayed, set the date and time, and configure the Alarm Clock.
- To exit, press the Menu button

Calendar Function

Viewing the Calendar

- To view the Calendar, select Calendar function in the Main Menu and press the ► || button. The screen will display the Calendar and Digital Clock.
- To view the next Calendar month, press ▲ arrow button. To view the previous Calendar month, press the ▼ arrow button.
- To exit, press the Menu button

Technical Support

If you need further assistance, please contact Aluratek support department prior to returning this device.

E-mail: **support@aluratek.com**

Web: **www.aluratek.com/support**

Local (Irvine, CA): **949-419-6504**

Toll free: **1-866-580-1978**

Radio and TV Interference Statement

WARNING!!! This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

Warranty

Aluratek warrants this product against defect in material or workmanship for **120 Days** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or “warranty void” sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.



