

LINSAY
Art in digital technology



EX-5L

USER MANUAL

www.LINSAYdigital.com

Dear Customer

Thank you for purchasing the newest LINSAY Smart watch phone that integrates a perfect full touch screen mobile phone into its fashionable design. With the LINSAY EX-5L, you can make phone calls, play music and health steps, etc. Before operating this type of smart watch, please read the instructions and suggestions carefully to ensure the best possible performance.

FCC Class B:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTICE:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. Shielded interface cables and AC power

cord, if any, must be used in order to comply with the

Emission limits.

3. The manufacture is not responsible for any radio or TV interference caused by unauthorized modification to the equipment. It is the responsibilities of the user to correct such interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Accessories Introduction

- Smart Watch
- User Guide
- Data cable
- AC Charger Adaptor USB
- Earphone Optional (BUNDLE)
- 8GB LINSAY SD Card Optional (BUNDLE)

Safety Warning

- The information in this document won't be modified or extended in accordance with any notice.
- Take good care of all related accessories.
- The illustrations in this manual are for reference only, please prevail in kind.
- Be careful not to let your phone directly exposed under prolonged exposure to strong sunlight which will lead it to conduct wrong command due to battery overheating.
- Do not attempt to repair it yourself, for the modification to the product will affect the security of the product, and be careful of danger.
- Avoid using the watch in the following environment: places with excessive temperature fluctuations, places with the temperature higher than 60° C or lower than 0° C, places with high pressure, dust, electrostatic interference or high humidity.
- Avoid touching with corrosive cleaning agents and chemicals, please use a soft, dry cloth to clean the watch.
- This product can only be operated with specified batteries or power adapter, while different models may result in danger and lead this product with all relevant licenses invalid. Use only the original accessories recommended by

the manufacturer.

- It is prohibited to use Bluetooth Watch at the gas stations, restricted chemical plants or near the oil depots, for the use of Bluetooth Watch in the above environment may raise the risk of explosion.

Warning: When you are travelling on the airplane, please take care to place the Bluetooth Watch in the baggage, and try not to place it in the handbag while going through the checkpoint, and the LINSAY is not responsible for the damage caused by such radiation.

Instructions on batteries & handling batteries

- Batteries are not allowed to be thrown into the trashcan. As a consumer, you are legally required to handle and collect the used batteries properly.
- Note that the battery positive and negative direction, if opposite, it may cause damage to the device.
- It is prohibited to try to open the batteries or throw batteries into fire.
- The liquid flowing from the batteries is very dangerous, and one cannot touch it unless wearing suitable gloves.
- Never place the battery in the hands of children.
- Remove the battery from the device if you do not use it for a long time.

Product Details

 
- | | |
|-----------------|------------|
| 1、 Power switch | 2、 Camera |
| 3、 Display | 4、 Speaker |
| 5、 USB port | 6、 MIC |



Initial preparation for the first time using the LINSAY watch

Be careful to disassemble your watch and accessories, after disassembling, place the watch screen face down, and open the back cover of the watch, then open the card slot based on the direction indicated, 8GB SD card in the slot. When secure the card in place, please correct the golden contact point of the battery,

and gently place the battery into it, and then close the back cover and gently press it down to its place.

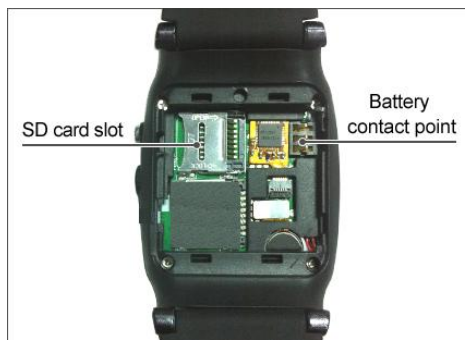

Charging

The battery should be fully charged before initial use of the LINSAY Smart Watch EX-5L1

Applications

Pre – Installed Applications: Call- Messaging, Phonebook-Call History-Image Viewer-FM Radio-Audio Player- Camera-Video Player-Sound Recorder- Settings- Bluetooth-Notice- Anti-Lost- Pedometer- Personal-Alarm-Find Phone- Remote Capture-Sleep Monitor-Themes- Stopwatch- File Manager.

Basic Operation

Your LINSAY watch is a touch-screen device that works with your smart phone on which you can perform routine settings and select functions. Once you turn on LONG PRESS 2 seconds to go Main Menu. To go back from applications long press 2 seconds.

- Each function (main menu) will be shown and displayed on multiple screens after the phone is switched on, and other functions can be viewed by sliding the screen left or right.



- In the course of operating the LINSAY watch, you can return to the previous interface by sliding screen right, and return to main menu by long press of the screen.

- You can press the power switch to switch to clock mode in any interface; you can switch to clock mode in the interface of main menu by long

press of the screen. You can switch from clock mode to main menu by long press of the screen.



Warning: Touch the screen with your fingers or a special pen when using the touch screen, and avoid use sharp objects, for sharp objects may damage the sensitive touch screen.

Power on

Long press power switch for 3 seconds until the screen displays.

Power off

In the main menu, long press the power switch for 3 seconds until the screen disappears.

Date & Time Settings

During the initial use, you should set up the time and date. The city where the watch is located, as well as the time and data and other items can be set.

Lock and Unlock

In any screen, press the power button to enter the clock mode, press again to lock screen. In lock screen state, press the power button to enter the clock mode, long press the screen again to unlock.

Bluetooth Connection

In the main menu, click Bluetooth to enter, select “Power on” to turn on Bluetooth; select “my device” and select your Smartphone Bluetooth from the Bluetooth devices to be connected. You can also use Smartphone to connect to Bluetooth watch: Turn on your Smartphone Bluetooth, is set to “visible to all nearby Bluetooth devices” (If your Smartphone does not have this option is not set), select your watch from the list of search and connect to it.

Android Devices

To Use Functions: Messages – Notices-Remote Capture-Find Phone; install an application for BT notifications. Steps:

1.- When you click on icon Message Notices-Remote Capture-Find Phone will appear an image :

 


2.-You have 2 options:


- Go to www.LINSAYdigital.com click on Support and click on FAQ Smart Watch click on the link and download and install a BT Notifications.
- In your Smart Phone Download and Install an Application for QR code reader. Once Installed open the application and take a picture of QR Code below. This will show on your Smart Watch if you click twice the icon Message- Notice-Remote Capture or Find Phone.





You will see this below, click on the right Corner

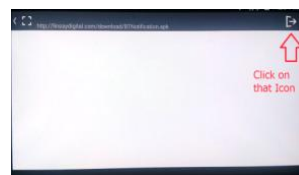

Later you will see to install click

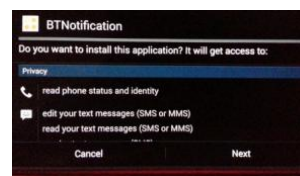 

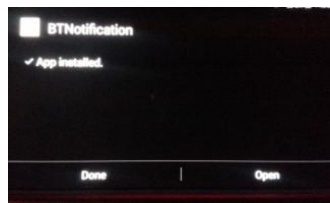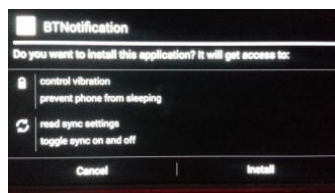  
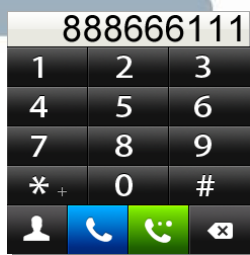 


Basic Functions

You can dial the number on this device, or dial the number with Bluetooth connected with your regular Smartphone. The phone numbers can be saved in SD card or watch.



Dial: Click in the main menu to enter the dialing interface, and enter the number by clicking the numbers on dialing interface, if you enter the wrong number, please click  to delete previous input, and click the dial button at the bottom of the screen after completing entering the number to make a phone call (you can choose to dial by Bluetooth).



Answering and rejecting calls: When there is an incoming call, you can click the Answer button in green at the bottom of the screen to answer the call, while you can click the red button to reject the call if you are inconvenient.

Message: The function provides short message service, thus you can receive or send out text messages. When the icon of SMS status appears on the screen, it indicates that you have received a new message.

Phone calls: Basic operations of the Smart watch are same with those of common touch-screen mobile phone.

Bluetooth calls: When the watch is connected with the Smartphone. You can make a dial by Bluetooth. At this moment, you can turn on your Bluetooth, and select the Bluetooth from the Bluetooth devices to be connected.

Clock display: In the interface of main menu, press down the power switch quickly or long press the screen to switch to clock mode. When the phone is in clock mode, please gently touch the screen, then Left and Right arrows appear, and different clock interfaces can be set by clicking Left or Right arrow.

Camera: You can take picture and video with the camera and Image Viewer to player

Camcorder: Use the watch to take photos and record video. User Video Player to see the video recorded.

Image viewer: Use the Smart watch to browse photos, when browse photos, long press the screen return to previous menu.

Video player: Play your recorded video files.

Audio player: Play music in SD card; the music on your Smartphone can be played after connecting with your LINSAY Smartphone.

Sound recorder: Record sound clarity that you want.

FM radio: You can listen to the radio after plugging in the earphone (Optional Available in Bundle)

Alarm: You can set multiple alarms; let your work and life easier.

Stopwatch: Convenient timing, you can choose lap timing or split timing.

Pedometer: It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number of steps, distance, speed, time, etc., to control exercise.

Personal settings: Set your gender, height, weight, birthday, the system will according to your personal information to monitor your health.

Remote remind: When there is incoming messages and other applications on the connected phone, the LINSAY watch will remind

you to read them.

Anti lost: After opening the anti-lost, if the LINSAY watch is connected to your smartphone from more than 10 meters range, it will automatically disconnect and alarm.

Find phone: Click to enter, your phone will alarm and bright screen, let you easy to find.

Remote capture: Use the watch to control your phone camera.

Note: Remote remind, Anti lost, Find phone, Remote capture, these functions need to install "Bluetooth notice" applications on your smartphone. (Scan the QR code in the watch can download the application.)

Parameters

- ✓ Bluetooth: V3.0, compatible with V2.1/V2.0 /V1.2/V1.1
- ✓ Display Type : XHD High Definition
- ✓ Resolution : 240*240 pixels
- ✓ Screen Size : 1.54"
- ✓ Touch Panel : Capacitive Touch
- ✓ Camera : 2.0 Mega Pixel
- ✓ Standby Time : 60~100 hours
- ✓ Storage : 8 GB Micro Sd Card (optional included in Bundle)
- ✓ Micro Sd Card slot up to 32GB
- ✓ Micro USB port Transfer Data/Charge
- ✓ Headset Port Slot
- ✓ High Fidelity Speaker : Built in
- ✓ Microphone : Built in
- ✓ Talk Time : 1.5~6 hours
- ✓ Language : English- Spanish- French
- ✓ Dimension : 56*42*13.5 mm
- ✓ Color : Silver, Gold, Gun Color

Basic Feature : Bluetooth Dialer & Bluetooth Headset, Music player, Video player, FM radio, Camera, Sound recorder, Alarm clock, Watch, Stopwatch, Pedometer, Remote remind, Anti lost, Find phone, Remote capture and Sleep monitor.

SAFETY PRECAUTIONS

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.


- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please



handle with care and operate in a static-free environment.

- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please

charge the battery at least once per month to maintain battery life.

- Charge the battery if: a) The battery level icon displays
-  (An empty battery) b) the device powers off automatically when restarted. c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible

procedures for battery disposal.

- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety Symbol Explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
- Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the

sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- CE in which countries where the product may be used freely: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland. In France, except the channel 10 through 13, law prohibits the use of other channels.

Cautions

- The LINSAY EX-5L respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or ear buds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the supplied LINSAY earphones. In

order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations. Other types of headphones may produce higher volume levels. At full power, the prolonged listening of the walk man can damage the ear of the user

- Maximum output voltage $\leq 150\text{mv}$
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.
- To establish a safe volume level:
 - a. Start your volume control at a low setting.
 - b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

This manual may not reflect your actual device's operation. All information is subject to change

without prior notification. Please follow your actual device's operational procedures

Warranty Policy

One-Year Limited Warranty on Parts and Labor

LINSAY provides a "ONE-YEAR LIMITED WARRANTY" against manufacturing defects in materials and workmanship to the original purchaser of a new LINSAY purchased from an authorized LINSAY U.S., which begins on the date of purchase by the customer. Customer is responsible for maintaining proof of date of purchase and must make the registration of the product into of 30 days of the purchase on <http://www.linsaydigital.com/registration.php> to validate the warranty

LINSAY's Responsibility

LINSAY purchased new from an authorized LINSAY U.S. reseller and that are used in the fifty (50) United States or Puerto Rico are warranted to be free from manufacturing defects in materials and workmanship for one (1) year from the date of the original retail purchase. LINSAY' limited warranty covers only those defects which arise as a result of normal use of the product, and do not apply to any improper or inadequate maintenance or modification; software, interfacing, media, parts, or supplies not provided or supported by LINSAY; or operation outside the product's specifications.

If LINSAY receives, during the applicable warranty period, notice of a defect in any hardware product, which is covered by LINSAY' warranty, LINSAY shall either repair or replace the defective product at LINSAY' option.

If LINSAY is unable to repair or replace, as applicable, a defective product which is covered by LINSAY' warranty, LINSAY shall within a reasonable time after being notified of the defect,

refund the purchase price for the product.

LINSAY shall have no obligation to repair, replace or refund until the customer returns the defective product to LINSAY.

Units sent to LINSAY for repair will be repaired or replaced with new or like-new product (s) of the same model with the same functionality as the original unit. Original unit (s) will be returned only at LINSAY's discretion. Please back up all content and files on the device. LINSAY is not responsible for any content on the original unit.

LINSAY's limited warranty is only valid in the country of purchase.

LINSAY will not validate purchases made via trade or barter. This pertains to trade or barter between individuals on sites such as E-Bay where trade or barter transactions are facilitated.

LINSAY does not warrant damage incurred to the LCD on any unit sold. Any manufacturer's defect is at the sole discretion and discernment of LINSAY repair technicians as the unit will need to be in possession of the return authorization number RAN technicians for a full and accurate evaluation to be made.

How to Obtain Warranty Service

To obtain warranty service, contact LINSAY Technical Support via email at TechnicalSupport@linsaydigital.com Phone:

305-979-5067 Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service. LINSAY Technical Support is available from 10:00AM to 5:00PM EAST Time, Monday through Friday, Please note that holiday hours may vary. For up to date information, please visit www.LINSAYdigital.com.

LINSAY reserves the right to assess all warranty claims and to determine if defects or damages are covered by this limited warranty. In case of a

claim that is not covered by this warranty, you will be contacted to determine whether LINSAY should repair the damage for a fee or whether the product should be returned to you as received by the service technician or service center.

Parts and service labor that are LINSAY's responsibility under this limited warranty will be provided without charge. All other service is at the customer's expense. LINSAY reserves the right to charge the customer for any service call for anything not covered by this limited warranty. Before you ask for warranty service, please review your User Manual. You may avoid a service call and a service charge. Please refer to the reverse side of this page for additional information regarding how to obtain warranty service.

PLEASE DO NOT RETURN YOUR unit TO LINSAY WITHOUT PRIOR AUTHORIZATION.

Not Covered

This limited warranty does not cover the following: cosmetic defects; damage, malfunctions or failures resulting from shipping or transit, improper or faulty installation, abuse, operation contrary to furnished instructions, operation on incorrect power supplies, products not supplied by LINSAY, modification, alteration, improper servicing or tampering; damage from fire, water, lightning, power surges, abnormal environmental conditions or other acts of nature; normal wear and tear; unsatisfactory visual or audio performance not caused by a manufacturing defect; or displays with a missing or unreadable serial number.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND

FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. LINSAY'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER, INCLUDING LINSAY'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

LINSAY SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This is the only warranty applicable; no one is authorized to extend or modify it or to grant any other warranty on LINSAY's behalf.

Owner's Responsibility

To ensure warranty service, keep the dated bill or sales receipt as evidence of the purchase date and location. This limited warranty applies only to original purchaser and is non-transferable. Warranty service conditions are subject to change. For the latest Warranty Terms and Conditions and additional information regarding LINSAY's Limited Product Warranty, please see complete details online at:

www.LINSAYdigital.com

Facebook: LINSAY