

INSTRUCTION MANUAL

Toy-R/C Monster V-Blk Wheel
Model N.O.: 1641331

⚠ IMPORTANT: Please read through this instruction manual before use.

Please read these instructions carefully before using this product and keep in a safe place for future reference.

We advise using this product under adult supervision.

Do not use this toy on the road or in crowded areas and keep away from animals and young children.

Do not attempt to modify this product in any way or lift it from the ground whilst it is in motion.

Keep moving parts away from hair, clothes and hands.

Handle with care at all times and only when the motor is off.

Always switch on the transmitter before the vehicle.

CHARACTERISTICS

5 Functions: Forwards, Backwards, Turn Right & Left and Stop.

BATTERY INSTALLATION

HANDSET



1. Unscrew the battery cover on the underside of the handset controller with a

screwdriver.

2. Insert a 9V “6F22”size battery with the polarities show inside the battery compartment.
3. Replace the battery cover and screw shut .

VEHICLE



1. Unscrew the roof with a screwdriver to expose the battery compartment.
2. Unscrew the battery door and insert 4-AA batteries with polarities shown inside the battery compartment.
3. Replace the battery cover and screw shut.
4. Replace the roof and screw shut.
5. Turn switch on to start your car .
6. The LED headlights will light up while the vehicle was switched on the power.

Play Cautions

1. When the car is running ,do not try to touch the 4 wheels by hand to avoid damages.
2. Do not play in a place with another R/C car being controlled with the same frequency.
3. Do not bend the antenna or point it at other people or articles to avoid hurts.

4. Do not play by the roads or in any other dangerous places to avoid accidents.
5. Do not play in a place with puddle, mud or sand.

TRANSMITTER FUNCTION

1. To make the vehicle move forwards or backwards push on or pull back the trigger respectively;
2. To make the car turn left or right turn the steering wheel to the front or back respectively;
3. To stop the vehicle release both the trigger and steering wheel.
4. For best performance ensure that the antenna is pointing towards the vehicle at all times.

CLEANING

1. Do not submerge this item in water, use a damp cloth and dry before use.
2. Do not leave this item in direct sunlight for a long period.

NOTICE

1. Non-rechargeable batteries are not to be recharged.
2. Different types of batteries or new and used batteries are not to be mixed.
3. Batteries are to be inserted with correct polarity.
4. Remove exhausted batteries from the toy and remove batteries when not in use for an extended period of time.
5. The manufacturer is not responsible for the possible interferences from radio or TV owing to non-permitted modifications of this appliance.

This toy is not suitable for children under the age of 6 years as it contains small parts that could be swallowed. We recommend using this product under the supervision of an adult. Remove all packaging before giving to the child.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.