

Optical Remote Unit
ION™-M19P/19P/19P
single source / 3 - sector



(M-Cabinet)

Manual
MF0145AAA

© Copyright 2012 CommScope, Inc.

All rights reserved.

All information contained in this manual has been revised thoroughly. Yet CommScope accepts no liability for any omissions or faults.

CommScope reserves the right to change all hardware and software characteristics without notice.

Names of products mentioned herein are used for identification purposes only and may be trademarks and / or registered trademarks of their respective companies.

No parts of this publication may be reproduced, stored in a retrieval system, transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise, without prior written permission of the publisher.

Andrew Wireless Systems GmbH, 26-September-2012

TABLE OF CONTENTS

1.1.	USED ABBREVIATIONS	6
1.2.	HEALTH AND SAFETY WARNINGS	7
1.3.	ABOUT COMMSCOPE SOLUTIONS	10
1.4.	INTERNATIONAL CONTACT ADDRESSES FOR CUSTOMER SUPPORT	11
2.	INTRODUCTION	14
2.1.	PURPOSE	14
2.2.	THE ION – M 19P/19P/19P SINGLE SOURCE / 3-SECTOR	14
2.2.1.	Fan-Protection Kit	15
2.2.2.	Accessories	15
3.	3. COMMISSIONING	16
3.1.	MECHANICAL INSTALLATION	16
3.1.1.	General	16
3.1.2.	Wall-Mounting Procedure	18
3.1.3.	Pole-Mounting Procedure	19
3.1.4.	Mounting of Fan Protection	21
3.2.	ELECTRICAL INSTALLATION	22
3.2.1.	General	22
3.2.2.	Connections	23
3.2.3.	Grounding	24
3.2.4.	Connection of the Antenna Cables	25
3.2.5.	Power Connection	26
3.3.	OPTICAL-FIBRE-CABLE CONNECTION - RULES	27
3.3.1.	Protective Plug	28
3.3.2.	Protective-Tube Kit	30
3.4.	COMMISSIONING	32
4.	ALARMS	35
4.1.	BITE AND ALARMS	35
4.2.	HANDLING OF ALARMS	35
4.3.	ALARM STATUS	35
4.4.	STATUS LED ALARMS	35
4.5.	EXTERNAL ALARM INPUTS AND OUTPUTS	37
4.6.	TROUBLESHOOTING	38

5. MAINTENANCE	39
5.1. GENERAL	39
5.2. REPLACING THE FAN UNIT	40
5.3. CLEANING THE HEAT SINK	42
6. APPENDIX	43
6.1. ILLUSTRATIONS	43
6.2. ELECTRICAL SPECIFICATIONS	44
6.3. ENVIRONMENTAL AND SAFETY SPECIFICATIONS	44
6.4. MECHANICAL SPECIFICATIONS	44
6.5. SPARE PARTS	45
7. INDEX	46

FIGURES AND TABLES

figure 3-1 Wall mounting..... 18

figure 3-2 Pole-mounting kit..... 19

figure 3-3 Pole mounting 20

figure 3-4 Mounting procedure for fan protection..... 21

figure 3-5 Connector flange of ION-M19P/19P/19P..... 23

figure 3-6 RS232 connector..... 24

figure 3-7 Grounding bolt with loosened hex nut 24

figure 3-8 Grounding bolt, schematic view..... 24

figure 3-9 AC mains plug 26

figure 3-10 DC mains plug..... 26

figure 3-11 Protective-plug assembly 28

figure 3-12 Tube-kit installation..... 31

figure 4-1 Alarm triggering 36

figure 4-2 Flange connector, 5 poles 37

figure 4-3 Flange connector, 7 poles 37

figure 4-4 Alarm inputs and outputs, standard..... 38

figure 6-1 Installation drawing..... 43

table 2-1 List of international contact addresses..... 13

table 3-1 Specified torques..... 17

table 3-2 RS232 connector, pin assignment 24

table 4-1 Status LED alarms..... 36

General

1.1. USED ABBREVIATIONS

3GPP	3 rd Generation Partnership Project
AC/DC	Alternating current / Direct Current
AIMOS	Andrew Integrated Management and Operating System
ALC	Automatic Level Control
BITE	Built-In Test Equipment
BTS	Base Transceiver Station
CE	"Conformité Européenne" ("European Conformity")
CD	Compact Disk
CPD	Channel Power Detection
DL	Downlink
DoC	Declaration of Conformity
EDGE	Enhanced Data Rates for GSM Evolution
EN	European Norm
EP	Extension Port
ESD	Electrostatic Discharge
ETS	European Telecommunication Standard
EU	Extension Unit
GSM	Global System for Mobile Communication
GND	Ground
GUI	Graphical User Interface
ICP3	Intercept Point 3 rd order
ID No	Identification Number
ION	Intelligent Optical Network
IP	Ingress Protection
ISO	International Organization for Standardization
LED	Light Emitting Diode
LMT	Local Maintenance Terminal
LTE	Long Term Evolution
MIMO	Multiple Input Multiple Output
MS	Mobile Station
MU	Main Unit
NF	Noise Figure
OTRx	Optical Transceiver = SRMU (Subrack Master Unit)
PDU	Power Distribution Unit
PG	Packing Gland
PIM	Passive Intermodulation
P_{in}	Input power
P_{out}	Output power
R&TTE	Radio & Telecommunications Terminal Equipment
Rev	Revision
RF	Radio Frequency
RU	Remote Unit
RX	Receiver
SNMP	Simple Network Management Protocol
TS	Technical Specification
TX	Transmitter
UL	Uplink
UMTS	Universal Mobile Telecommunication System
UPS	Uninterruptible Power Supply
VSWR	Voltage Standing Wave Ratio
WCDMA	Wideband Code Division Multiple Access
WDM	Wavelength Division Multiplex

1.2. HEALTH AND SAFETY WARNINGS



1. Only suitably qualified personnel are allowed to work on this unit and only after becoming familiar with all safety notices, installation, operation and maintenance procedures contained in this manual.
2. Read and obey all the warning labels attached to the unit. Make sure that the warning labels are kept in a legible condition and replace any missing or damaged labels.
3. Obey all general and regional installation and safety regulations relating to work on high voltage installations, as well as regulations covering correct use of tools and personal protective equipment.
4. Keep operating instructions within easy reach and make them available to all users.
5. It is the responsibility of the network provider to implement prevention measures to avoid health hazards which may be associated to radiation from the antenna(s) connected to the unit.\



6. Laser radiation! Do not stare into the beam; do not view it directly or with optical instruments.
7. For installations which have to comply with FCC RF exposure requirements, the antenna selection and installation must be completed in a way to ensure compliance with those FCC requirements. Depending on the RF frequency, rated output power, antenna gain, and the loss between the repeater and antenna, the minimum distance D to be maintained between the antenna location and human beings is calculated according to this formula:

$$D_{[cm]} = \sqrt{\frac{P_{[mW]}}{4 * \pi * PD_{[mW/cm^2]}}}$$

where

- P (mW) is the radiated power at the antenna, i.e. the max. rated repeater output power in addition to the antenna gain minus the loss between the repeater and the antenna.
- PD (mW/cm²) is the allowed Power Density limit acc. to 47 CFR 1.1310 (B) for general population / uncontrolled exposures which is
 - F (MHz) / 1500 for frequencies from 300MHz to 1500MHz
 - 1 for frequencies from 1500MHz to 100.000MHz

RF exposure compliance may need to be addressed at the time of licensing, as required by the responsible FCC Bureau(s), including antenna co-location requirements of 1.1307(b)(3).

8. Note for a Class A digital device or peripheral:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

9. For installations which have to comply with Europe an EN50385 exposure compliance requirements, the following Power Density limits/guidelines (mW/cm²) according to ICNIRP are valid:

- 0.2 for frequencies from 10 MHz to 400 MHz
- $F \text{ (MHz)} / 2000$ for frequencies from 400 MHz to 2 GHz
- 1 for frequencies from 2 GHz to 300 GHz

10. Make sure, access is restricted to qualified personnel.

11. Only licence holders for the respective frequency range are allowed to operate this unit.

12. Corresponding local particularities and regulations must be observed. For national deviations please refer to the respective documents included in the manual CD delivered.

13. Use this equipment only for the purpose specified by the manufacturer. Do not carry out any modifications or fit any spare parts which are not sold or recommended by the manufacturer. This could cause fires, electric shock or other injuries.

14. Due to power dissipation, the repeater may reach a very high temperature. Do not operate this equipment on or close to flammable materials.

15. Before opening the unit, disconnect mains.

16. ESD precautions must be observed! Before commencing maintenance work, use the available grounding system to connect ESD protection measures.





17. This unit complies with European standard EN60950.

18. Make sure the repeater settings are according to the intended use (see also product information of manufacturer) and regulatory requirements are met.

19. Although the repeater is internally protected against overvoltage, it is strongly recommended to earth the antenna cables close to the repeater's antenna connectors for protection against atmospheric discharge.

Equipment Symbols Used

Please observe the meanings of the following symbols used in our equipment:

Symbol	Compliance	Meaning
	---	Alert sign to R&TTE
	Symbol	Indicates conformity with the R&TTE directive 1999/5/EC certified by the notified body no. 0700.

1.3. ABOUT COMMSCOPE SOLUTIONS

CommScope is the foremost supplier of one-stop, end-to-end radio frequency (RF) solutions. Part of the *CommScope* portfolio are complete solutions for wireless infrastructure from top-of-the-tower base station antennas to cable systems and cabinets, RF site solutions, signal distribution, and network optimization.

CommScope has global engineering and manufacturing facilities. In addition, it maintains field engineering offices throughout the world.

Andrew Wireless Systems GmbH based in Buchdorf/ Germany, which is part of *CommScope*, is a leading manufacturer of coverage equipment for mobile radio networks, specializing in high performance, RF and optical repeaters. Our optical distributed networks and RF repeater systems provide coverage and capacity solution for wireless networks in both indoor installations and outdoor environments, e.g. tunnels, subways, in-trains, airport buildings, stadiums, skyscrapers, shopping malls, hotels and conference rooms.

Andrew Wireless Systems GmbH operates a quality management system in compliance with the requirements of ISO 9001 and TL 9000. All equipment is manufactured using highly reliable material. To maintain highest quality of the products, comprehensive quality monitoring is conducted at all fabrication stages. Finished products leave the factory only after a thorough final acceptance test, accompanied by a test certificate guaranteeing optimal operation.

This product meets the requirements of the R&TTE directive and the Declaration of Conformity (DoC) itself. A current version of the CE DoC is included in this manual CD delivered *. Any updated version of the DoC is available upon request from the local sales offices or directly from *CommScope* via the local Customer Support at one of the addresses listed in the following chapter.

According to the DoC, our "CE"-marked equipment can be used in all member states of the European Union.

☞ Note: Exceptions of and national deviations from this intended use may be possible. To observe corresponding local particularities and regulations, please refer to the respective documents (also in national language) which are included in the manual CD delivered.

* In case the Declaration of Conformity (DoC) for the product was not included in the manual CD delivered, it is available upon request from the local sales offices or directly from *CommScope* at one of the addresses listed in the following chapter.

To make the most of this product, we recommend you carefully read the instructions in this manual and commission the system only according to these instructions.

For technical assistance and support, please also contact the local office or *CommScope* directly at one of the addresses listed in the following chapter.

1.4. INTERNATIONAL CONTACT ADDRESSES FOR CUSTOMER SUPPORT

Americas:

Canada	
CommScope Canada	
Mail	505 Consumers Road, Suite 803 Toronto M2J 4V8 Canada
Phone	+1-905-878-3457 (Office) +1-416-721-5058 (Cell)
Fax	+1-905-878-3297
E-mail	Peter.Masih@commScope.com, wisupport.us@commScope.com

United States	
Andrew LLC, A CommScope Company	
Mail	620 North Greenfield Parkway Garner, NC 27529 U.S.A.
Phone	+1-888-297-6433
Fax	+1-919-329-8950
E-mail	wisupport.us@commScope.com

Caribbean & South American Region (CALA)	
CommScope Cabos do Brasil Ltda.	
<i>CALA Tech Support for Distributed Coverage & Capacity Solutions (DCCS) products:</i>	
Mail	Rua Guaporanga, 49 Praça Seca – Rio de Janeiro – RJ ZIP: 21320-180 Brazil
Phone	+1-815-546-7154 (Cell) +55-15-9104-7722 (Office)
Fax	+ 55-15-2102-4001
E-mail	wisupport@commScope.com

Caribbean (CALA) & Central American Region	
CommScope Mexico S.A. de C.V.	
<i>CALA Tech Support for Distributed Coverage & Capacity Solutions (DCCS) products:</i>	
Mail	Av. Insurgentes Sur 688, Piso 6 Col. Del Valle, CP: 03100 Mexico City Mexico
Phone	+52-1-55-5419-5260 (Cell) +52-55-1346-1900 (Office)
Fax	+52-55-1346-1901
E-mail	wisupport@commScope.com

APAC Countries:

China, India and Rest of Asia	
Andrew International Corporation	
Mail	Room 915, 9/F Chevalier Commercial Centre 8 Wang Hoi Rd Kowloon Bay Hong Kong
Phone	+852-3106-6100
Fax	+852-2751-7800
E-mail	wisupport.China@commScope.com

Australia & New Zealand	
Andrew Corporation (Australia) Pty Ltd.	
Mail	Unit 1 153 Barry Road Campbellfield VIC 3061 Australia
Phone	+613-9300-7969
Fax	+613-9357-9110
E-mail	wisupport.Australia@commScope.com

Europe:

United Kingdom	
Andrew Wireless Systems UK Ltd	
Mail	Unit 15, Ilex Building Mulberry Business Park Fishponds Road Wokingham Berkshire RG41 2GY England
Phone	+44-1189-366-792
Fax	+44-1189-366-773
E-mail	wisupport.uk@commScope.com

Scandinavia	
Andrew Norway (AMNW)	
Mail	P.O. Box 3066 Osloveien 10 Hoenefoss 3501 Norway
Phone	+ 47 32-12-3530
Fax	+ 47 32-12-3531
E-mail	wisupport@commScope.com

Germany	
Andrew Wireless Systems GmbH	
Mail	Industriering 10 86675 Buchdorf Germany
Phone	+49-9099-69-0
Fax	+49-9099-69-930
E-mail	wisupport@commScope.com

France	
CommScope France	
Mail	Immeuble Le Lavoisier 4, Place des Vosges 92052 Courbevoie France
Phone	+33-1 82 97 04 00
Fax	+33-1 47 89 45 25
E-mail	wisupport@commScope.com

Austria	
Andrew Wireless Systems (Austria) GmbH	
Mail	Weglgasse 10 2320 Wien-Schwechat Austria
Phone	+43-1706-39-99-10
Fax	+43-1706-39-99-9
E-mail	wisupport.austria@commScope.com

Switzerland	
Andrew Wireless Systems AG	
Mail	Tiergartenweg 1 CH-4710 Balsthal Switzerland
Phone	+41-62-386-1260
Fax	+41-62-386-1261
E-mail	wisupport.ch@commScope.com

Italy	
CommScope Italy S.r.l., Faenza, Italy	
Mail	Via Mengolina, 20 48018 Faenza (RA) Italy
Phone	+39-0546-697111
Fax	+39-0546-682768
E-mail	wisupport.italia@commScope.com

Iberia Region - Spain & Portugal	
Andrew España S.A. A CommScope Company	
Mail	Avda. de Europa, 4 - 2ª pta. Parque Empresarial de la Moraleja Alcobendas, Madrid 28108 Spain
Phone	+34-91-745-20 40
Fax	+34-91-661-87 02
E-mail	wisupport.iberia@commScope.com

Czech Republic	
CommScope Solutions Czech Republic C-Com, spol. s r.o	
Mail	U Moruší 888 53006 Pardubice Czech Republic
Phone	+49 871 9659171 (Office) +49 171 4001166 (Mobile)
Fax	+49 871 9659172
E-mail	wisupport@commScope.com

Africa & Middle East:

Middle East & North Africa	
CommScope Solutions International Inc. (Branch)	
Mail	PO Box 48 78 22 Unit 3206, Floor 32, Jumeirah Business Center 5, Jumeirah Lakes Towers, Dubai United Arab Emirates
Phone	+971 4 390 09 80
Fax	+971 4 390 86 23
E-mail	wisupport@commScope.com

South Africa	
Andrew Wireless Solutions Africa (PTY) LTD	
Mail	11 Commerce Crescent West Eastgate, Sandton PO Box 786117 Sandton 2146 South Africa
Phone	+ 27 11-719-6000
Fax	+ 27 11-444-5393
E-mail	wisupport@commScope.com

table 2-1 List of international contact addresses

2. INTRODUCTION

2.1. PURPOSE

Cellular telephone systems transmit signals in two directions between base transceiver station (BTS) and mobile stations (MS) within the signal coverage area.

If weak signal transmissions occur within the coverage area because of indoor applications, topological conditions or distance from the transmitter, extension of the transmission range can be achieved by means of an optical distribution system.

Such a system contains an optical Master Unit and several Remote Units. The number of the Remote Units depends on the hardware and software configuration. The Remote Units are connected to the Master Unit with optical links. The optical loss must be less than 10 dB inclusive optical couplers or splitters.

The Master Unit is the connection to the base transceiver stations. The configuration of a Master Unit depends on the number of the Remote Units and the frequency range.

WDM (Wave Division Multiplex) filters are integrated in the optical modules. For the UL, a wavelength within 1546 nm – 1550 nm is used. For the DL, a wavelength of 1310 ± 10 nm is used. The maximum output power for the UL and DL is 5.7 mW.

2.2. THE ION – M 19P/19P/19P SINGLE SOURCE / 3-SECTOR

The ION-M19P/19P/19P is a three-sector remote unit (RU). It is used in conjunction with a master unit in the ION optical distribution system. This system transports 3 sectors simultaneously 3 x 1900 MHz, providing a cost-effective solution for distributing capacity from one or more base stations. Beside 3 – sector mode the system can be switched to single source operation. In this operation mode no frequency conversion is used, but one input signal (single source) is split to 3 output signals. Purpose of this mode is to support the possibility of quasi omni directional radiation. Together with a phase detection box the system is able to detect phase differences between the RF feeder cables to the antennas and to adjust phases such, that the phase differences are compensated, i.e. phase differences are 0° after phase adjust. This process is running automatically, when initiated by a “button to push”

The ION-M19P/19P/19P transports signals on the RF layer in a very inexpensive manner. This means that multiple operators and multiple technologies are moved simultaneously from a cluster of base stations to a remote location over the same fiber.

The ION-M (Intelligent Optical Network) optical distribution system is a cost-effective coverage solution for dense urban areas, airports, campus, high-rise buildings and other locations where physical structures increase path loss or provide limited space for installation. It has been specifically designed to reduce zoning problems and to

provide homogeneous coverage. The compact, mechanical design is specifically architected to mount inside of or on poles and along side structures in such a way that it has a minimal visual impact.

It has been specifically tested and optimized for CDMA2000, EV-DO, WCDMA and LTE. Furthermore it is provisioned for future improvements to the modulation and frequency bands.

The ION-M19P/19P/19P can be easily set-up and supervised via a graphical user interface (GUI). Remote units can be commissioned through the use of built-in test equipment.

An auto-leveling function compensates for the optical link loss making installation easy and quick. The entire system may be monitored remotely via an Andrew OMC. This is a comprehensive management platform with SNMP protocol and X.733 standard implemented. Should a sophisticated interface not be required, the master unit can be directly connected to the alarm interface of a base station via relay alarming.

- 3 sector multi-operator support
- Reduced visual impact form factor
- Efficient, high power amplifier
- Single fibre for multiple sectors
- Comprehensive operations and management system for configuration and alarming
- OMC with SNMP according to X.733 standard
- Easy installation and commissioning

2.2.1. Fan-Protection Kit

In order to protect the fan unit (e.g. against rain), a protective cover to be mounted over the air inlet is delivered with the unit. For indoor applications, mounting of the fan-protection kit is not mandatory.

For more details see chapter *3.1.4 Mounting of Fan Protection*.

2.2.2. Accessories

For the accessories available for the remote unit, e.g. overcoat housing, connecting box or iso-trafo kit, a separate manual is available.

3. 3. COMMISSIONING

3.1. MECHANICAL INSTALLATION

3.1.1. General


Read the health and safety warnings in chapter 1.2.

1. Do not install the unit in a way or at a place where the specifications outlined in the Environmental and Safety Specifications leaflet of the supplier are not met.
2. It is recommended only to use the mounting hardware delivered by the supplier. If different mounting hardware is used, the specifications for stationary use of the Remote Unit must not be exceeded.

 **Note:** Exceeding the specified load limits may cause the loss of warranty!



3. The unit is considerably heavy. Make sure that a suitable mounting surface is used. Ensure there is adequate manpower to handle the weight of the system.
4. Due to power dissipation, the remote unit may reach a very high temperature. Ensure sufficient airflow for ventilation as specified in the individual mounting procedures.
5. When connecting and mounting the cables (RF, optical, mains, ...) ensure no water can penetrate into the unit through these cables.
6. Also observe all additional rules or restrictions regarding mounting that depend on the type of Remote Unit. For details refer to chapter 7.2.2 Mechanical Specification. Install the unit vertically with the fan unit at the top. A maximum tilt angle of 25° from a vertical position must be kept, as in the following illustrations:

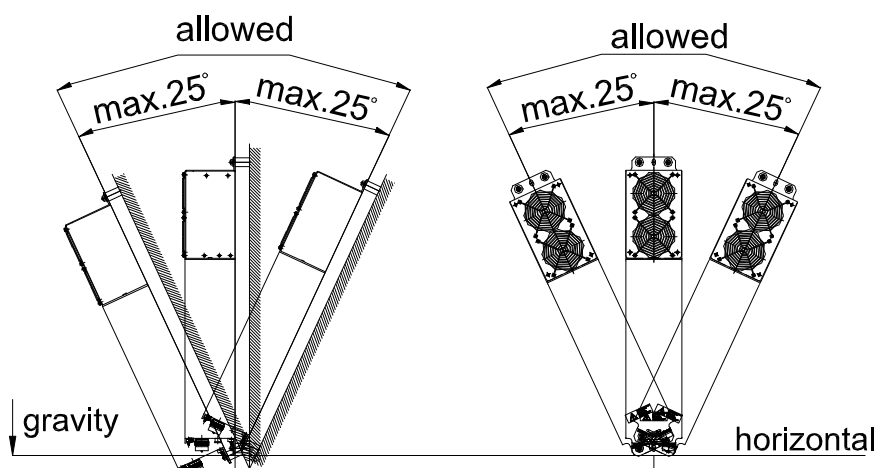

G1038M4

7. A spacing of 40 mm (1.58 inch) around the unit is required.

8. To ensure sufficient airflow when mounting the unit in enclosed spaces, two lid openings (one for the air inlet and the other for the air outlet) have to be provided. Do not block these air inlets and outlets when mounting the Remote Unit. The size of each opening must equal at least 12 x 12 cm (144 cm²). Make sure, too, there is no thermal short circuit between the air inlet and air outlet.

If any different or additional mounting material is used, ensure that the mounting remains as safe as the mounting designed by the manufacturer. Ensure that the static and dynamic strengths are adequate for the environmental conditions of the site. The mounting itself must not vibrate, swing or move in any way that might cause damage to the Remote Unit.

Specified torques have to be observed for certain mounting procedures according to the following table:

Type	Tallow-drop screws	Hex nuts	Spacing bolts		PG (plastic)	PG (aluminium)
<i>Thread</i>	M 4	M 8	M 4	M 8	PG 13.5	PG 29
<i>Specified torques</i>	3.3 Nm	27 Nm	2.3 Nm	27 Nm	3.75 Nm	10 Nm

table 3-1 Specified torques

 **Note:** To avoid damage when mounting the unit, always make sure that the M8 washers (DIN9021 or DIN125 depending on the mounting kit) are placed behind and in front of the mounting drillings of the unit.

The mounting procedures for a stand-alone Remote Unit without optional accessories are described and illustrated in the following sections. For further information regarding special mounting procedures including mounting of accessory equipment, please see separate manual.

3.1.2. Wall-Mounting Procedure

- Check the suitability of the wall-mounting kit and the wall.
- Mark the position of the drilling holes (for measurements refer to *figure 3-1 Wall mounting*). Drill four holes at the marked positions and insert dowels*.
- Use a cap nut or lock nut to screw the four dowel screws into the dowels and put the distance tubes over the screws.
- Hang the mounting brackets of the remote unit into the screws, and fasten them immediately using the washers and nuts.
- Ensure that there is free access to the electrical connections as well as to the cabinet. The approved bending radius of the connected cables must not be exceeded.


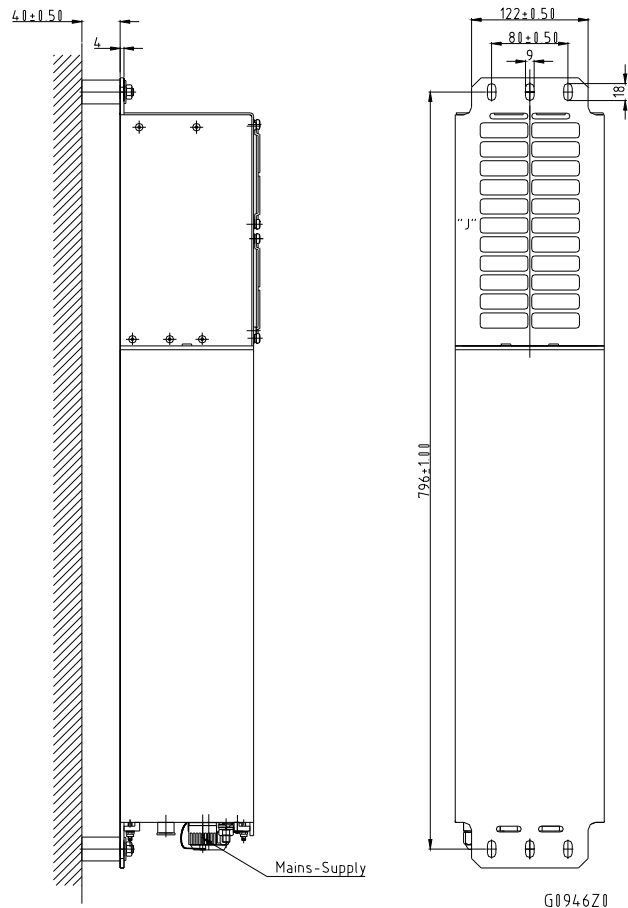


figure 3-1 Wall mounting

* The dowels are not part of the delivery since the suitable type depends on the on-site conditions (material of wall). Therefore, use dowels that are appropriate for the mounting surface.

3.1.3. Pole-Mounting Procedure

Standard mounting hardware cannot be used to mount the remote unit to a pole, a column or other similar structures. Additional hardware must be used for this type of installation. Such a pole-mounting kit could include two threaded rods M8, two U-beams and mounting material like bolts and nuts.

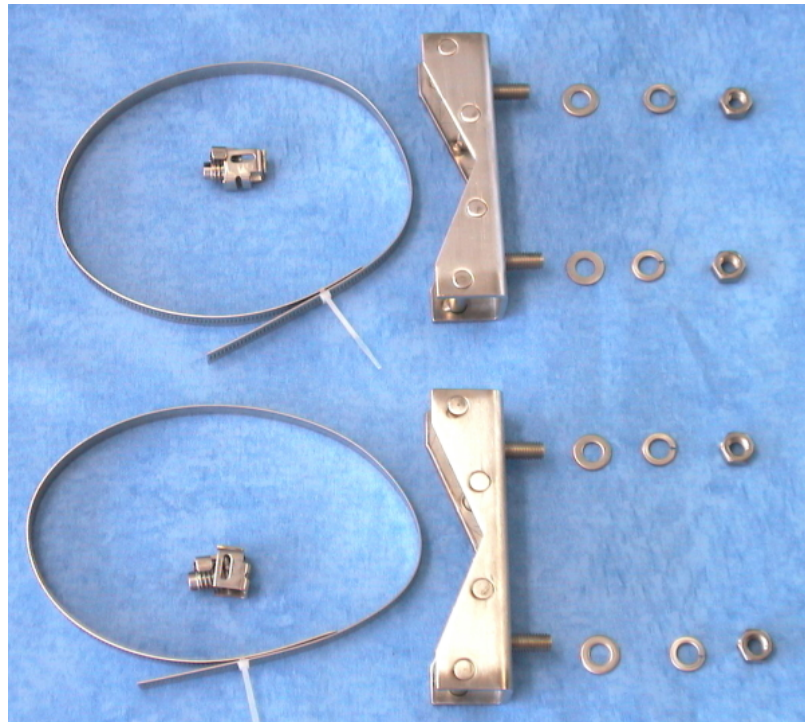

B0113AUA


figure 3-2 Pole-mounting kit

- Use the screw bands to fasten the two U-beams to the pole as illustrated in *figure 3-3 Pole mounting*

Note: When fastening the U-beams make sure that they are installed congruently and not at an angle to each other. To determine the distance between the beams refer to *3.1.2 Wall-Mounting Procedure* for measurements.

- Hang the mounting brackets of the remote unit into the threaded bolts of the U-beam, and fasten them immediately using the washers and nuts.

Ensure that there is free access to the electrical connections as well as to the cabinet. The approved bending radius of the connected cables must not be exceeded.

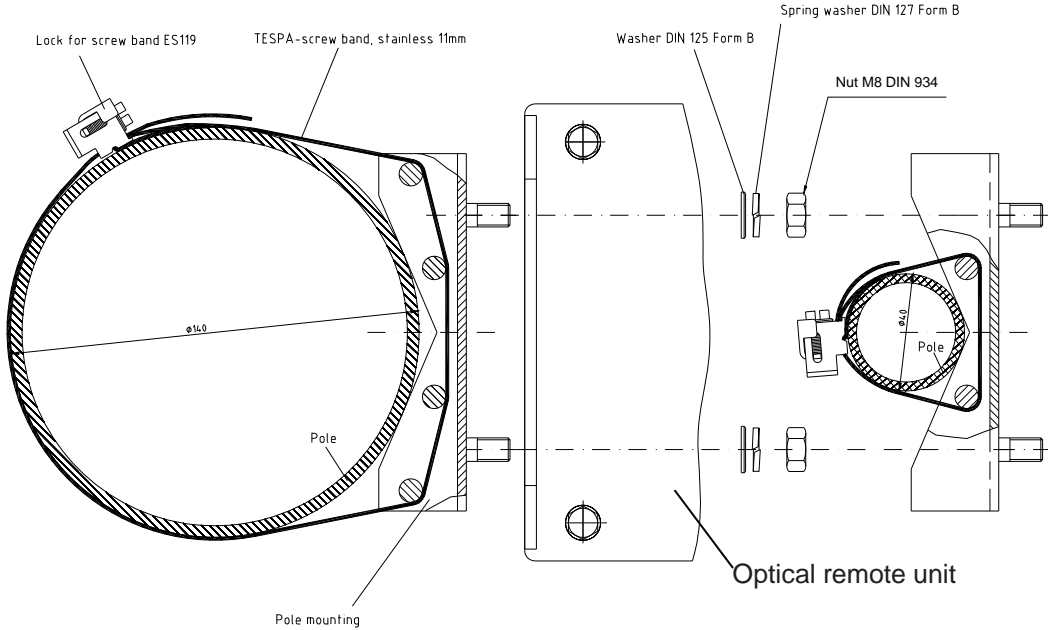

G0764M6

figure 3-3 Pole mounting

3.1.4. Mounting of Fan Protection

Since the fan protection is required for the outdoor usage of a stand-alone remote unit, the mounting of this optional equipment is also described in this manual.

- To install the protective cover of the fan protection kit, first unscrew the four screws with the respective lock washers from the cover of the air inlet of the remote unit, and instead, screw in the four spacing bolts M4.0x30 with the four lock washers M4.0 DIN125 that are part of the fan protection kit.
- Place the protective cover into the right position by fitting its four bore holes over the spacing bolts and fasten it using the original lock washers and screws of the remote unit. (These lock washers and screws are also part of the fan protection kit and can be used as spare parts in case of loss.)

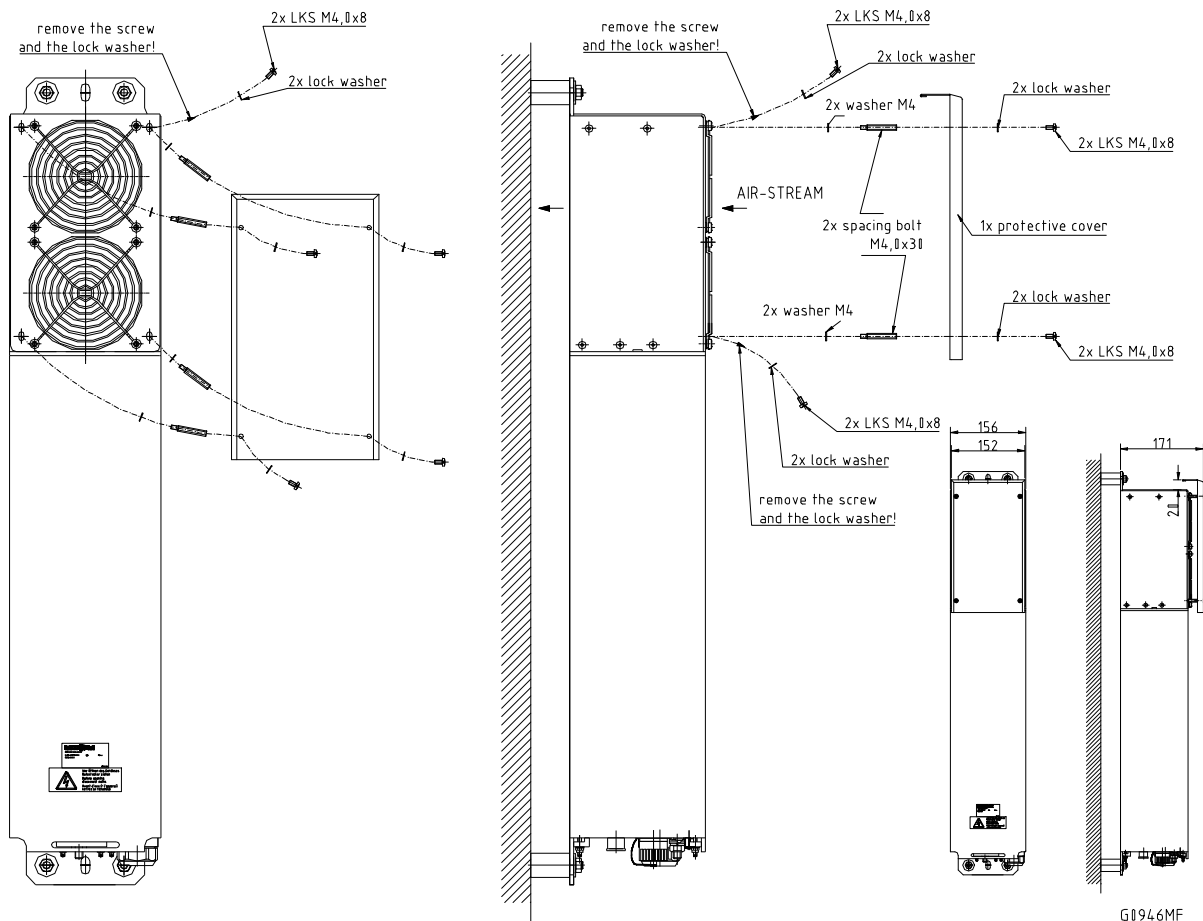


figure 3-4 Mounting procedure for fan protection

3.2. ELECTRICAL INSTALLATION

3.2.1. General

Read the health and safety warnings in chapter 1.2.



1. This unit contains dangerous voltages. Loss of life, severe personal injury or property damage can be the result if the instructions contained in this manual are not followed.
2. It is compulsory to ground the unit before connecting power supply. A grounding bolt is provided on the cabinet to connect the ground-bonding cable.
3. Although the remote unit is internally protected against overvoltage, it is strongly recommended to earth the antenna cables close to the antenna connectors of the remote unit for protection against atmospheric discharge. In areas with strong lightning it is strongly recommended to insert additional lightning protection.
4. If the mains connector of the remote unit is not easily accessible, a disconnect device in the mains circuit must be provided within easy reach.
5. Before connecting or disconnecting the mains connector at the remote unit, ensure that mains supply is disconnected.
6. Make sure that an appropriate circuit breaker and an overcurrent limiting device are connected between mains and remote unit.
7. A connection of mains supply to a power socket requires the power socket to be nearby the remote unit.
8. Incorrectly wired connections can destroy electrical and electronic components.
9. To avoid corrosion at the connectors caused by electrochemical processes, the material of the cable connectors must not cause a higher potential difference than 0.6 V (see electrochemical contact series).
10. It is sufficient to tighten the N-antenna connector hand-screwed. Any use of a tool (e.g. pair of pliers) might cause damage to the connector and thus lead to malfunctioning of the remote unit.
11. For unstabilized electric networks which frequently generate spikes, it is advised to use a voltage limiting device.
12. The unit complies with the surge requirement according to EN 61000-4-5 (fine protection); however, it is recommended to install an additional medium (via local supply connection) and/or coarse protection (external surge protection) depending on the individual application in order to avoid damage caused by overcurrent.
13. Observe the labels on the front panels before connecting or disconnecting any cables.

3.2.2. Connections

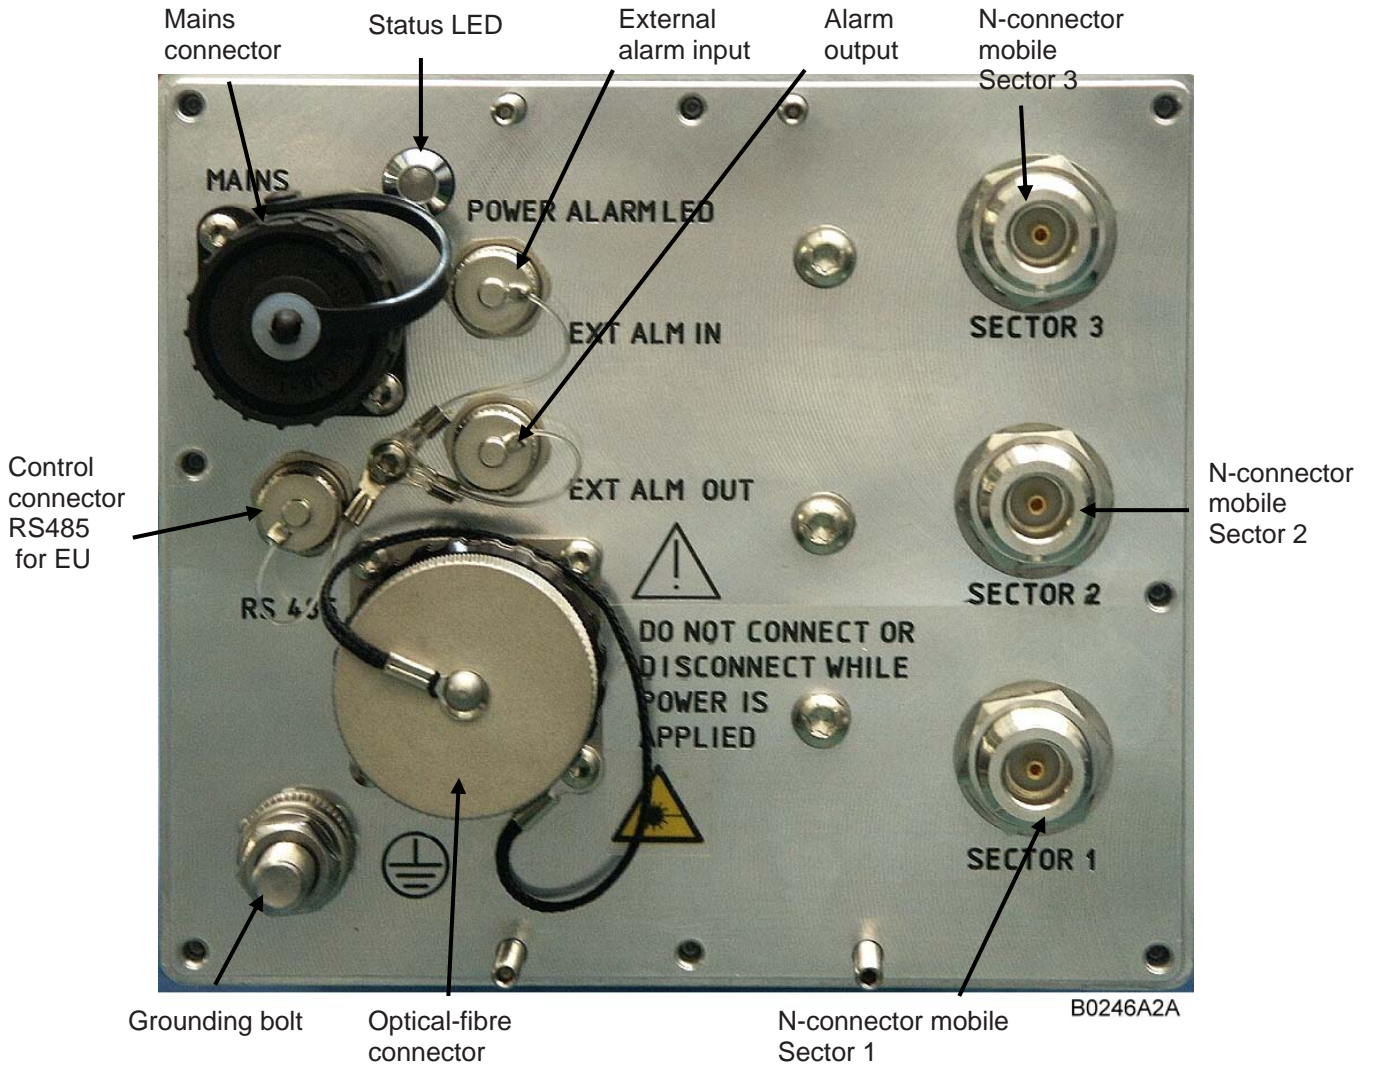


figure 3-5 Connector flange of ION-M19P/19P/19P

Control Connector RS232 - Local Interface

This 8-pin male connector (type: Binder Series 712) is primarily to support local control of the remote unit via RS232 ASCII interface.

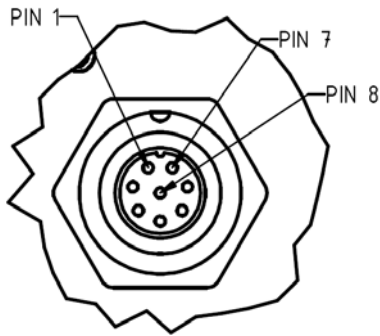


figure 3-6 RS232 connector

PIN	Assignment
1	Not connected (n.c.)
2	RS232 Rx
3	RS232 Tx
4	n.c.
5	GND (RS232)
6	n.c.
7	n.c.
8	n.c.

table 3-2 RS232 connector, pin assignment

3.2.3. Grounding

Grounding must be carried out. Connect an earth-bonding cable to the grounding connection provided at the outside of the remote unit (see chapter 3.2.2 *Connections*). Do not use the grounding connection to connect external devices.



figure 3-7 Grounding bolt with loosened hex nut

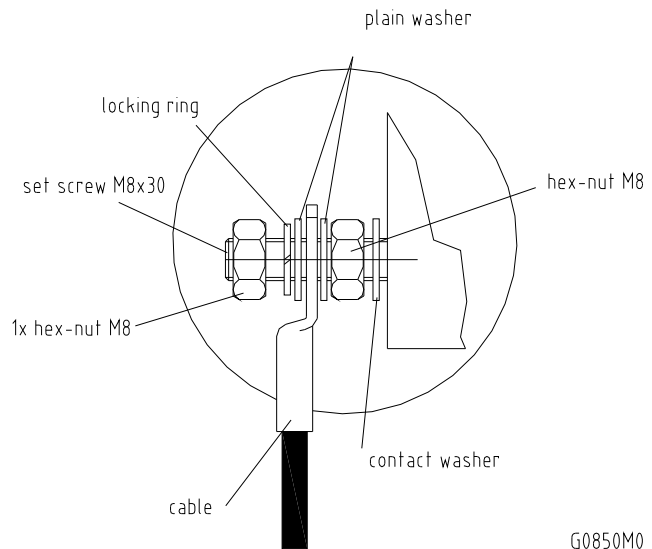


figure 3-8 Grounding bolt, schematic view

After loosening the hex nut, connect the earth-bonding cable between the two washers as illustrated in the figures above. Then, fasten all parts again with the hex nut.

3.2.4. Connection of the Antenna Cables

The remote unit has N-type antenna connectors. For its location please refer to chapter 3.2.2 *Connections*. For mounting the cable connectors, it is recommended to refer to the corresponding documentation of the connector manufacturer. The bending radius of the antenna cables must remain within the given specifications.

For the selection of cable and antenna it should be considered that, on the one hand, a cable with higher loss is less expensive but, on the other hand, it impairs performance.




It is sufficient to tighten the N-type antenna connectors hand-tight. The use of a tool (like pliers) may cause damage to the connector and, therefore, lead to a malfunctioning of the remote unit.

3.2.5. Power Connection

Before connecting electrical power to the units, the system must be grounded as described in the previous chapter.


Mains power must be connected at the mains connector of the unit (see chapter 3.2.2 *Connections*).

The power supply plug is part of the delivery. The correct wiring of the power supply plug is as follows:

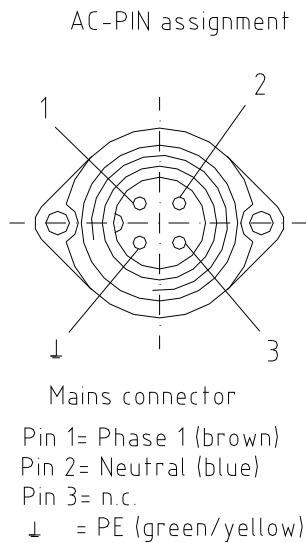

G1038Z0

figure 3-9 AC mains plug

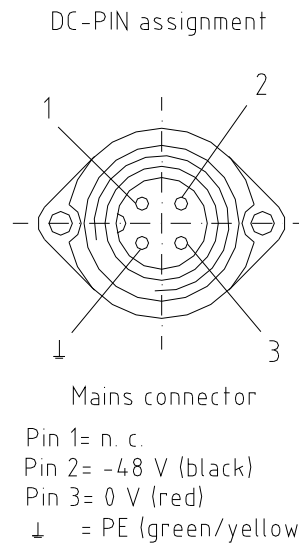

G1038Z0

figure 3-10 DC mains plug



For the AC power supply connection, a minimum cross section of 1.5 mm² is required and for the DC power supply connection, a minimum cross section of 2.5 mm² is required. Each wire must observe the applicable national regulations regarding loop impedance, voltage drop, and methods of installation. Make sure to connect the correct voltage to the unit.

Note: Do not connect or disconnect the power cord at the mains connector while power is on. Turn off mains * power before connecting the power cord at the remote unit, then, engage mains again.


* Mains power must be interruptible with an external mains breaker. For the mains breaker, observe the following recommendation:

120 Volt / 20 Amp max. or 240 Volt / 16 Amp, single-phase, 50 / 60 Hz AC service is needed, i.e. the external AC breaker should be 20 Amps max. for 120-Volt service or 16 Amps for 240-Volt service.

For the DC power supply, observe the local regulations of the DC service provider.

3.3. OPTICAL-FIBRE-CABLE CONNECTION - RULES

Optical signals are transmitted by use of optical fibres. When connecting these fibres observe the following instructions.

 **Note:** Care should be taken when connecting and disconnecting fibre-optic cables. Scratches and dust significantly affect system performance and may permanently damage the connector. Always use protective caps on fibre-optic connectors not in use.

In general, optical fibres do not need special protective measures. However, protection against environmental influences e.g. rodents and humidity must be considered.

The optical fibre is a single mode fibre. Type is E9/125 µm with the following minimum requirements:

Attenuation: <0.36 dB / km @ 1310 nm / <0.26 dB / km @ 1550 nm
Dispersion: <3.5 ps / nm km @ 1310 nm / <18.0 ps / nm km @ 1550 nm

The specified bending radius of the optical fibres must not be exceeded. The pigtails for the connection between master unit and remote unit must have a sufficient length. A protection for the feeding into units must be given. The system attenuation of the optical fibres, including the connectors, must not exceed 10 dB.

System attenuation and attenuation of optical components must be determined. This can be achieved by measuring attenuation and reflection with an appropriate measuring instrument. For pigtails, a total value of < 0.4 dB (measured to a reference plug) can be assumed due to the dead zone of the reflectometer. These measurements must be made with a sufficient length of optical fibre, at the input and output of the device which has to be measured.

Fibre-cable connectors have to be of the same type (E2000APC8°) as the connectors used for the unit. The fibre-optic cables are connected to the optical transceiver.



Angled connectors are not compatible with straight optical connectors; non-compatibility of connectors will result in permanent damage to both connectors.


Before connecting the fibre cables, follow the procedure below to ensure optimized performance. It is important for these procedures to be carried out with care:

- Remove fibre-optic protective caps.
- Do not bend the fibre-optic cable in a tight radius (< 4 cm) as this may cause cable damage and interrupt transmission.
- Using high-grade alcohol and lint-free cotton cleaning swabs, clean the end of the fibre-optic cable that will be inserted in the optical connectors on the donor interface box.
- Blow out the laser receptacle with clean and dry compressed air to remove any particulate matter.
- Connect the fibre-optic cables by inserting the cable end into the laser receptacle and aligning the key (on the cable end) with the keyed slot.
- Do not use any index-matching gels or fluids of any kind in these connectors. Gels are intended for laboratory use and attract dirt in the field.

3.3.1. Protective Plug

Connection:

A protective plug is provided for the connection of the fibre-optic cables.

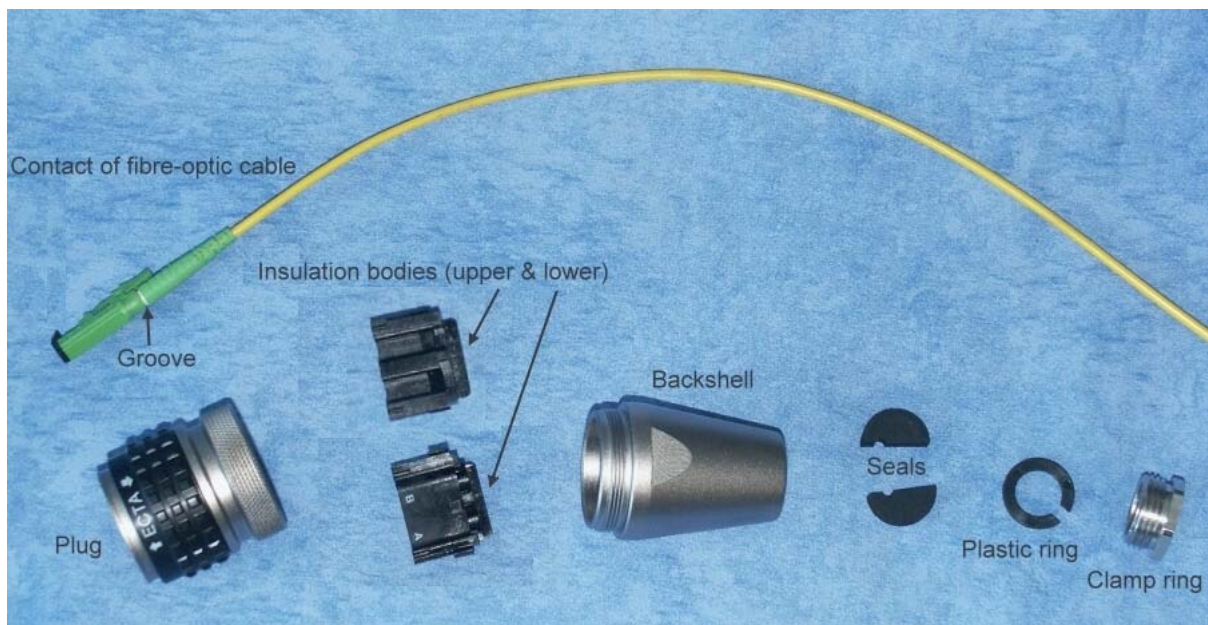

B0122AMA

figure 3-11 Protective-plug assembly

👉 **Note:** Only high-quality connectors must be used for this type of plug. Qualified brands are Diamond or Huber & Suhner.


For plug assembly, observe the following instruction:

1. Pass one or two contacts through the backshell and the clamp ring.




B0122A1A


2. Place the contact(s) on the lower insulation body by pushing the groove of the contact into the cavity. If there is only one contact, cavity A **must** be used. *
3. Then, mount the upper insulation body on the lower insulation body. **

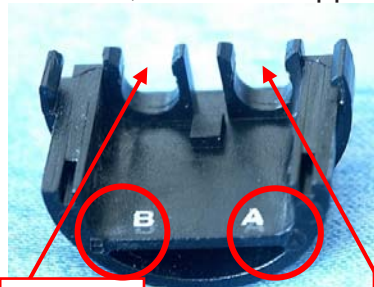

Cavity B

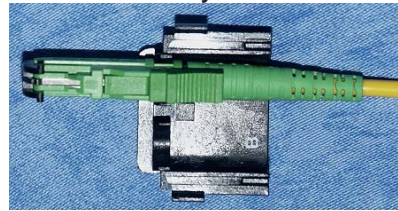


B0122ALA

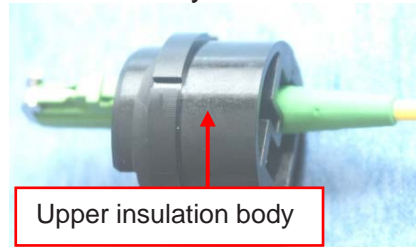


Upper insulation body

B0122A4A

4. Bring the insulator into the plug. The narrow groove of the insulator must be fitted into the stamp of the plug.

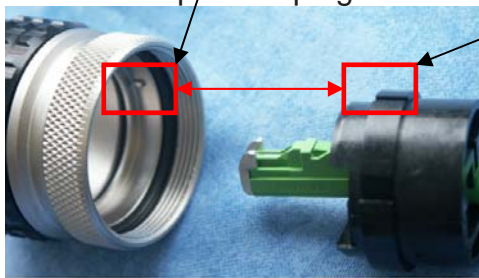


B0122AEA

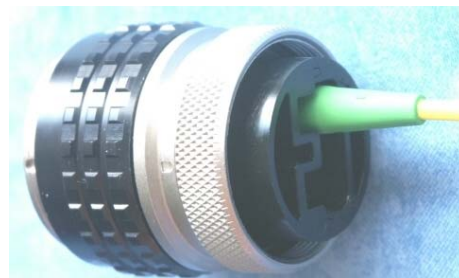

B0122A6A


- * To release the contact for disassembling, push the inner snap to the side and pull the contact out.
- ** To release upper and lower insulation bodies for disassembling, use a small screwdriver and carefully open the snap-connections at the left and the right side of the insulator without damaging them.

5. Fasten the insulator by screwing the backshell tight onto it. Use a spanner with opening 32 to screw the backshell tight (no gap).

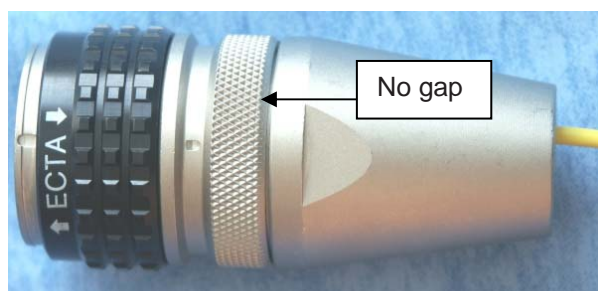


B0122A7A

6. Place the appropriate seal parts (with one groove for one contact or two grooves for two contacts) over the cable(s) and push them into the backshell.

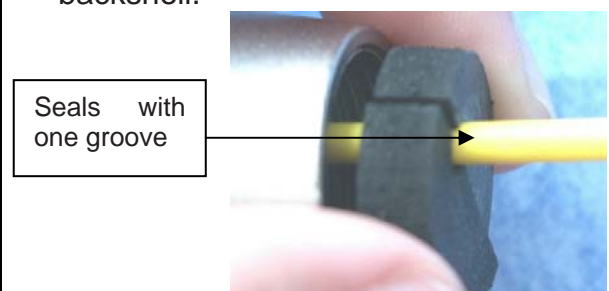


B0122A8A


7. Bring the plastic ring over the cable(s), push it into the backshell and compress the seals and plastic ring by screwing the clamp ring tight (no gap) using a spanner with opening 20. ***

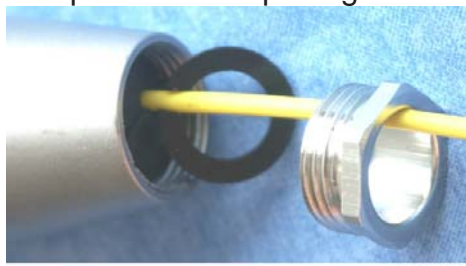

B0122A9A

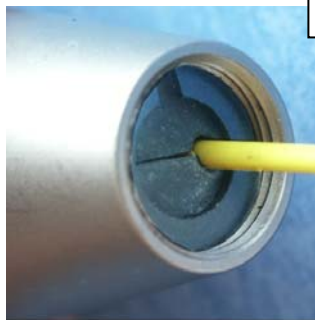


B0122AAA

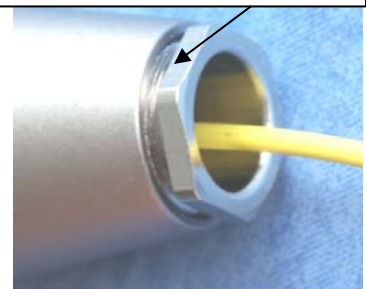

B0122ABA

8. Connect the plug to the optical-fibre connector of the remote unit, again by fitting a stamp on the plug into the groove of the connector.

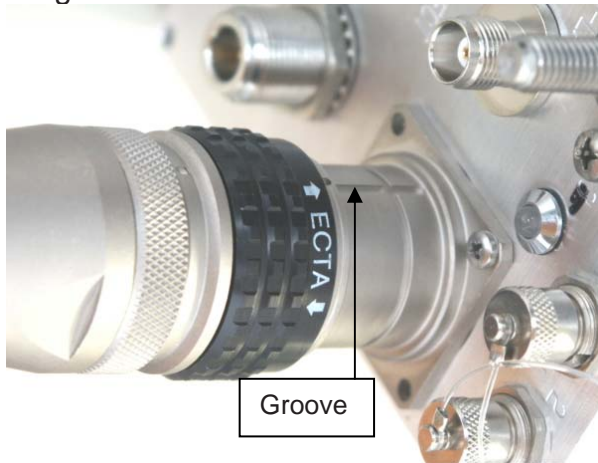

B0122ACA

9. To lock the connector, push the black locking ring forward.****



B0122ADA

*** For disassembling, release the clamping ring and remove the seals and the plastic ring first.

**** Locking mechanism: The system of locking the plug is based on a “push-pull” mechanism. The locking ring has to be pushed forward to lock the connector and pulled back to free the connection.

3.3.2. Protective-Tube Kit

As additional protection for the optical fibres, this connector type can be supplemented by a special tube kit. To fasten the tube correctly, first unscrew the clamp ring (if already installed) of the original plug kit.

Then, proceed according to the following instruction:

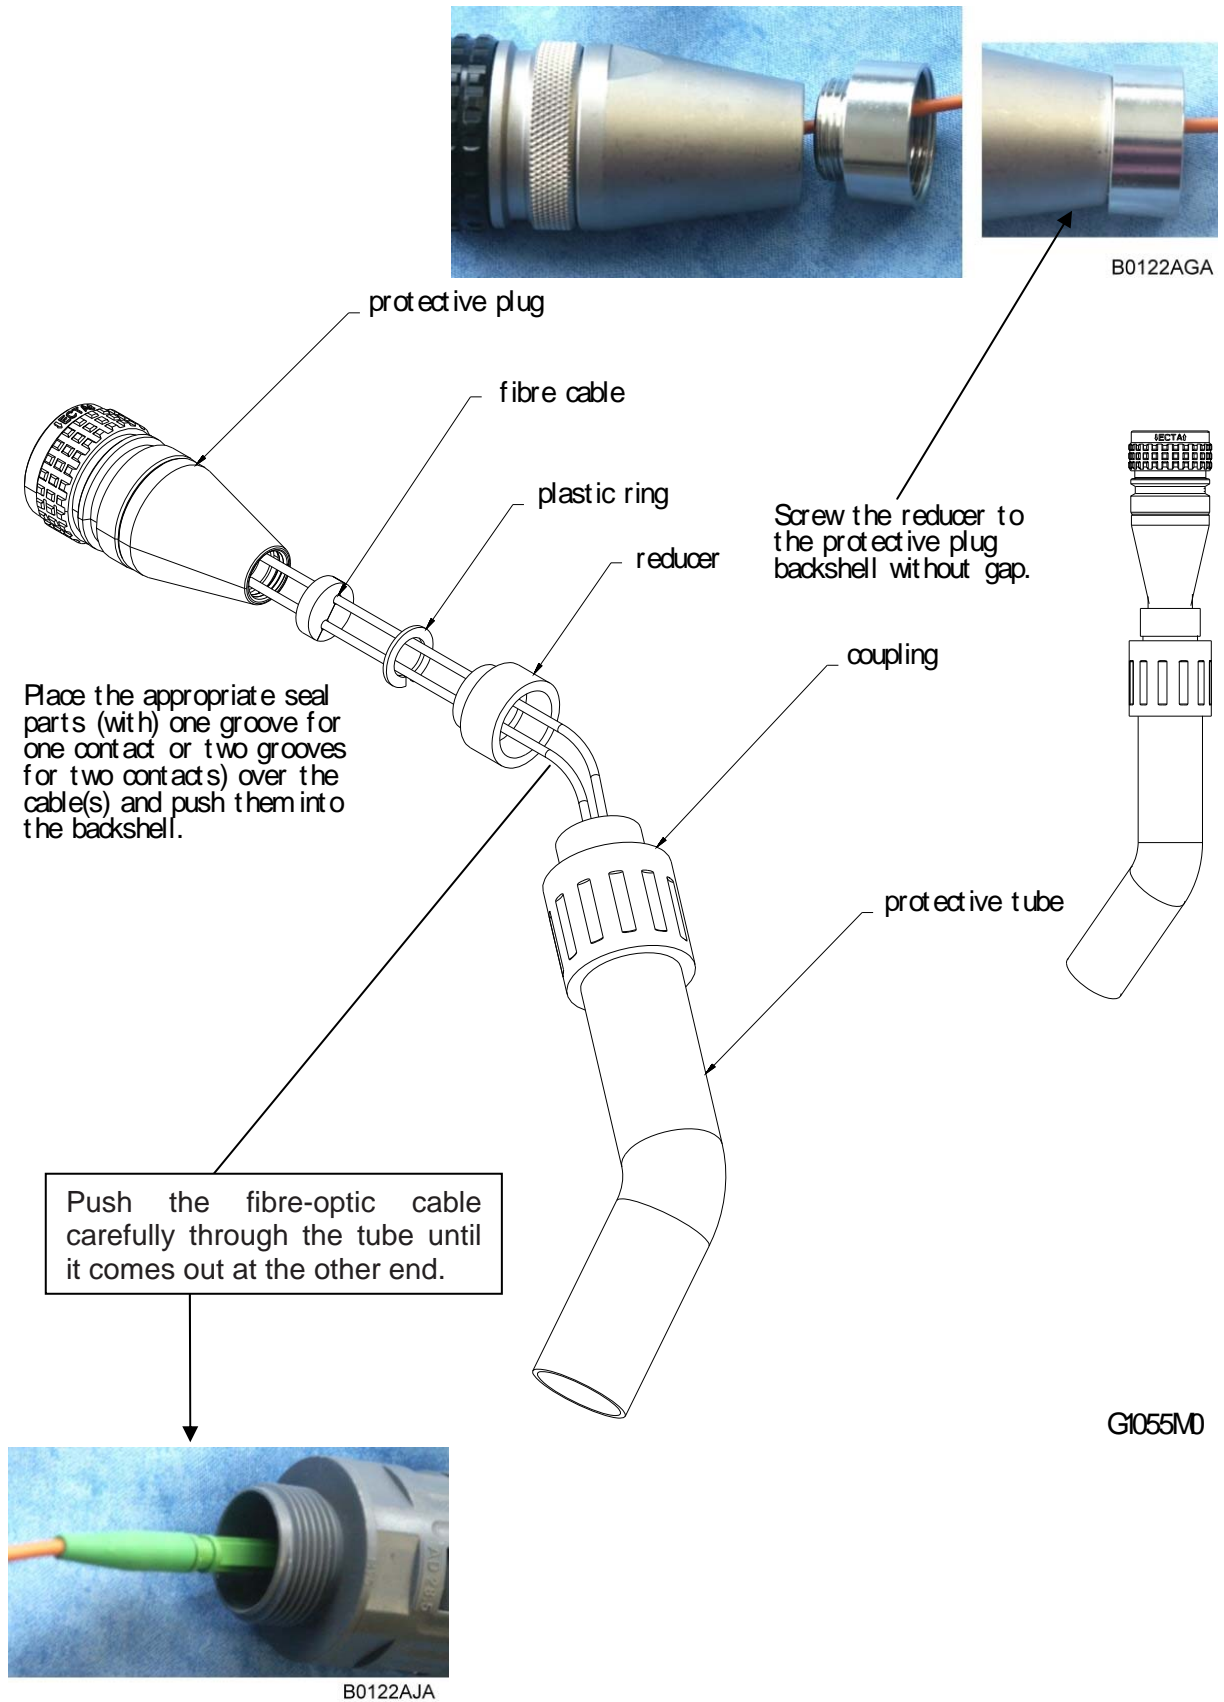



figure 3-12 Tube-kit installation



3.4. COMMISSIONING

Read the health and safety warnings in chapter *3.4 Commissioning* as well as the description carefully to avoid mistakes and proceed step by step as described!

- Do not operate the remote unit without terminating the antenna connectors. The antenna connectors may be terminated by connecting them to their respective antennas or to a dummy load.
- Only qualified personnel should carry out the electrical, mechanical, commissioning and maintenance activities that require the unit to be powered on when open.
- When opening the remote unit do not damage the warranty labels on the internal devices. The warranty is void if the seals are broken.
- Ensure that all connections have been performed according to chapter *3.2.2 Connections*.

 Commissioning an ION-M Remote Unit

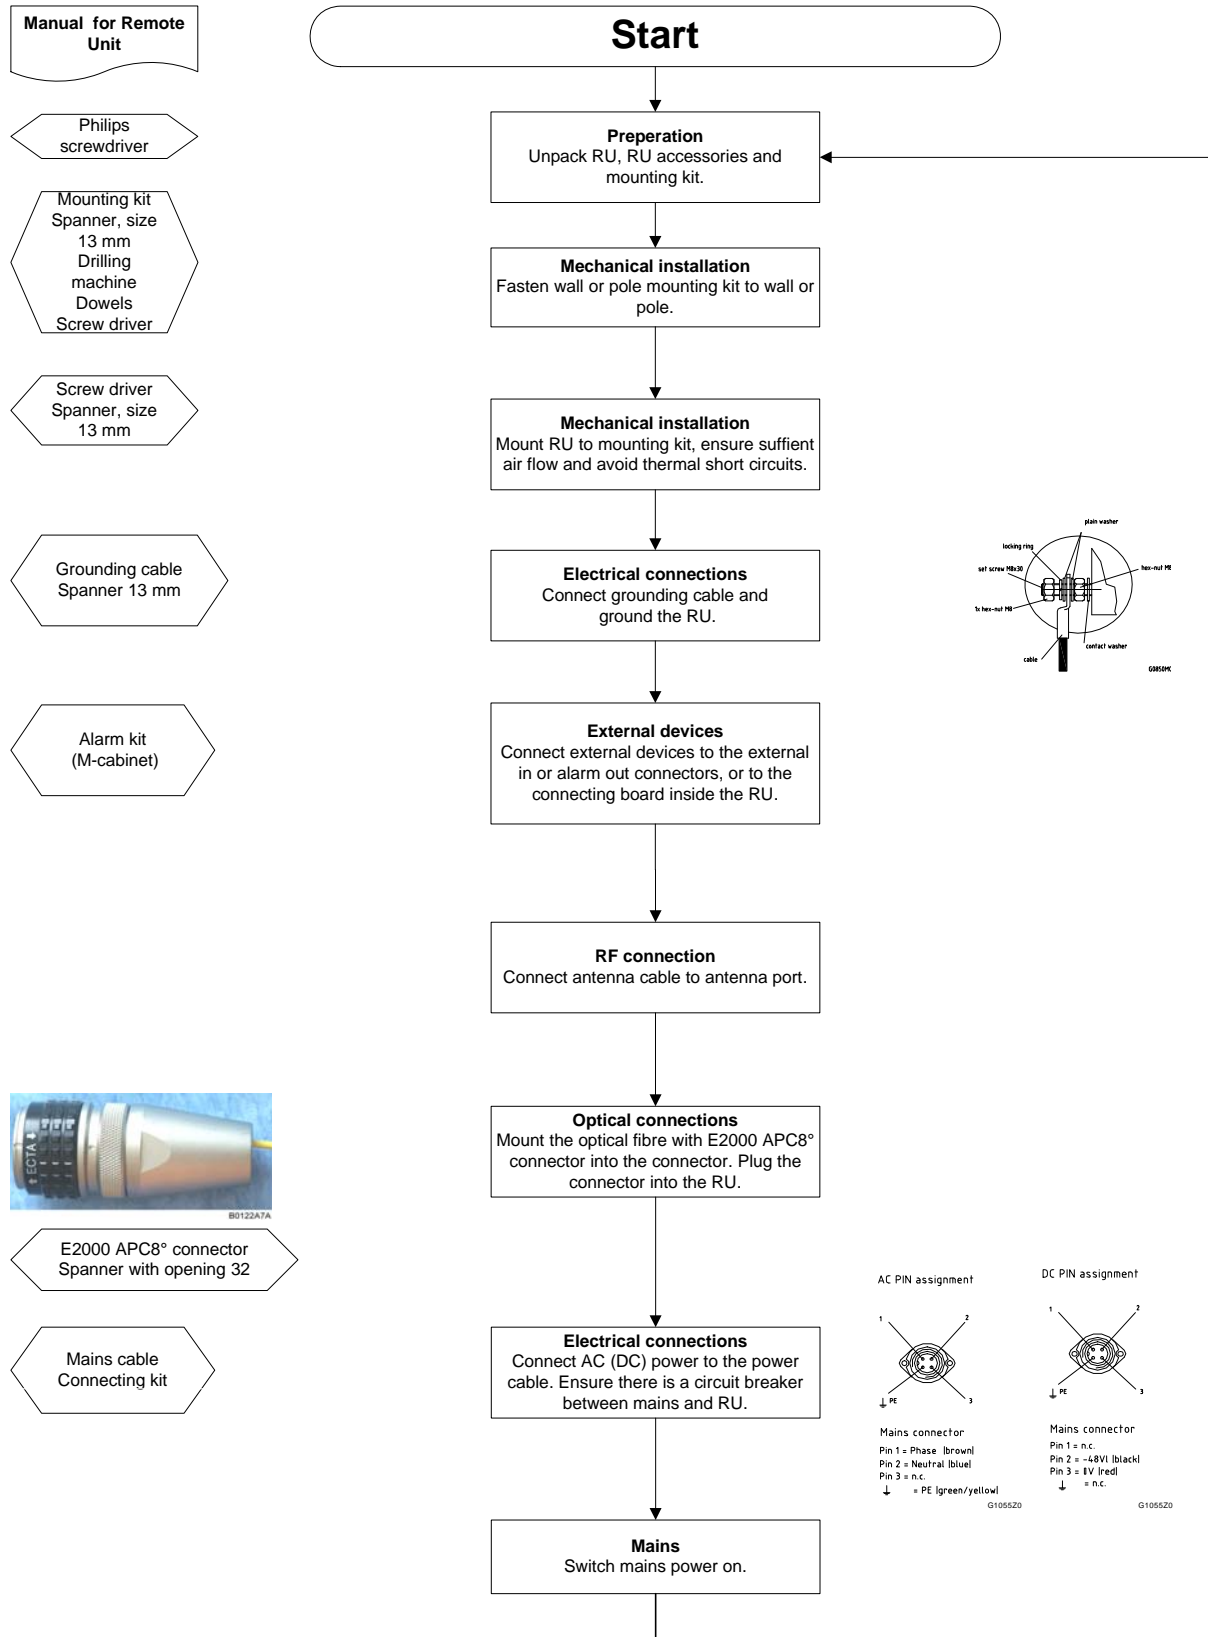

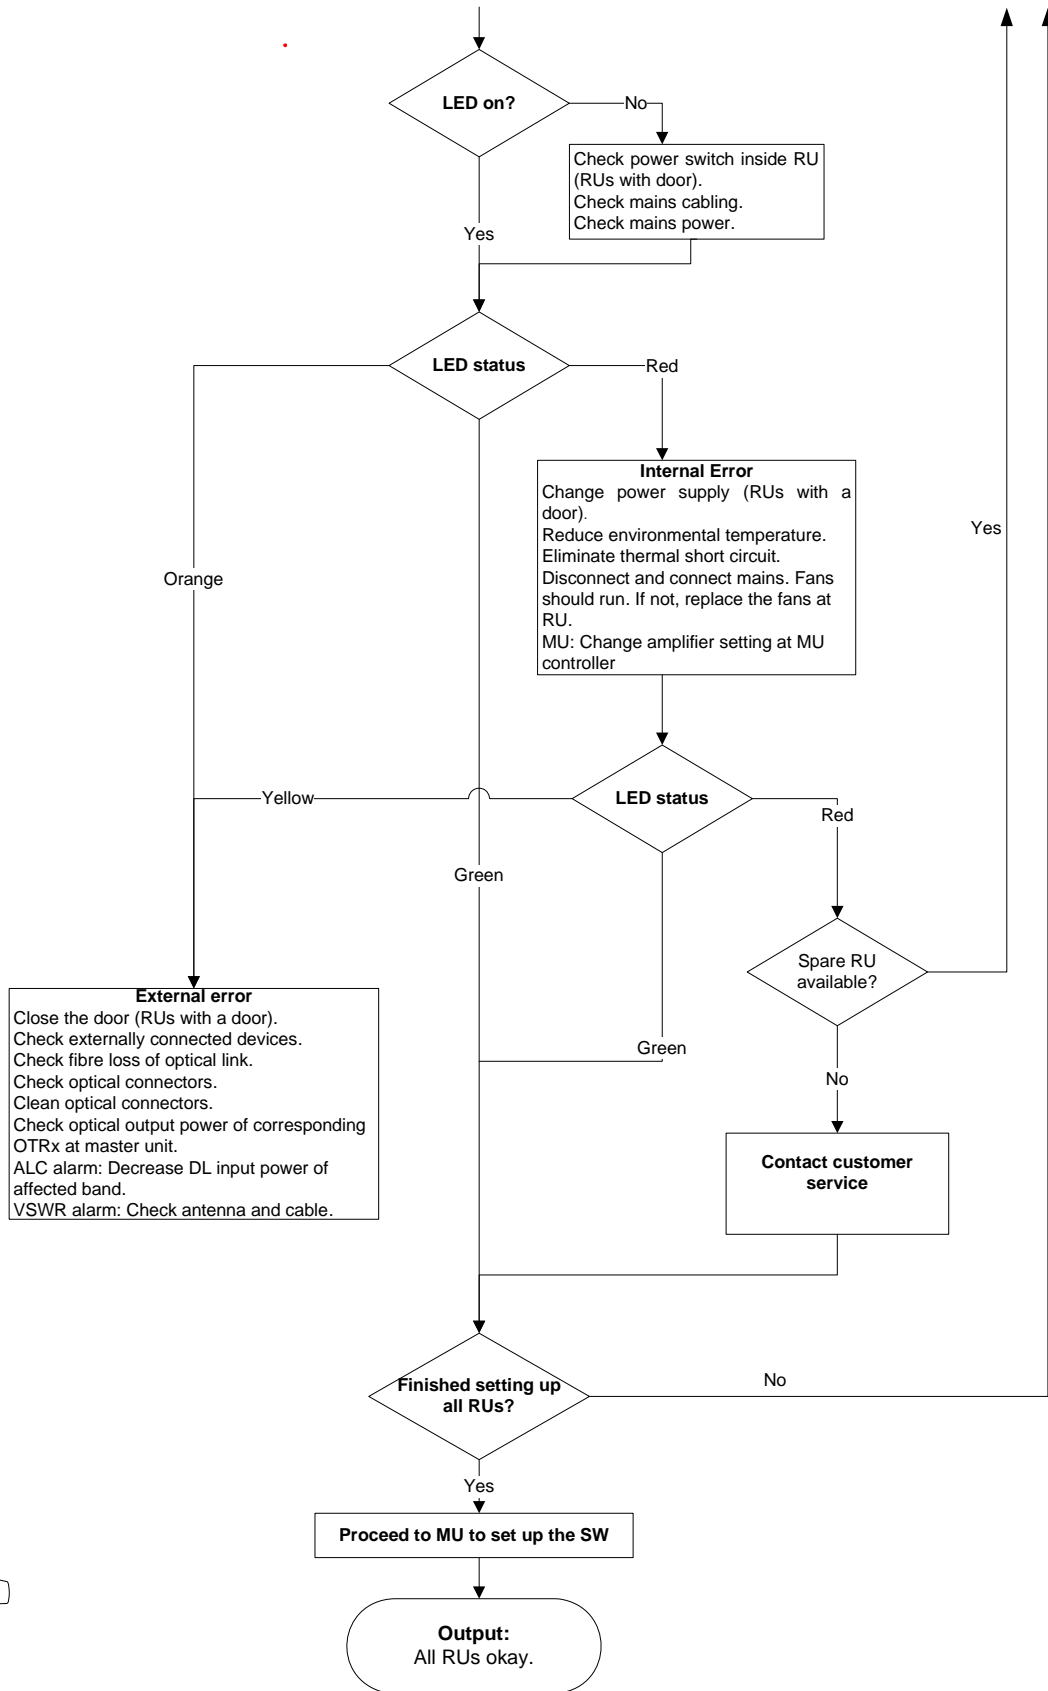

Go to MU

4. ALARMS

4.1. BITE AND ALARMS

The Built-In Test concept comprises the monitoring of the power supplies, the power amplifiers and the optical interface.

All occurring alarms can be checked via software at the master unit.

4.2. HANDLING OF ALARMS

As soon as the software acknowledges a valid alarm, a message is transmitted to the master unit.

If the reason for the alarm has been cleared or if the alarm should continue, a new alarm message will not be repeated. If there was an interruption of at least five seconds after acknowledgement, a new alarm message will be generated.

4.3. ALARM STATUS

For details refer to the corresponding software documentation of the master unit.


4.4. STATUS LED ALARMS

For local supervision, a status LED on the connector flange of the remote unit gives an indication of possible reasons for alarms. This table shows possible on-site measures that could be checked before referring to the master unit alarm list.

Status LED Indication	Alarms	Possible on-site measures
Green	No alarm → Status ok	
Orange	Door alarm	Close the door (RUs with door).
	<i>Alarms not directly related to RU:</i>	
	External alarms	Check externally connected devices.
	Optical alarm Rx	Check fibre loss of optical link. Check optical connectors. Clean optical connectors. <i>(MU: Check optical output power of corresponding OTRx at master unit).</i>
	ALC alarm	<i>(MU: Decrease DL input power of affected band).</i>

Status LED Indication	Alarms	Possible on-site measures
Red	<i>Alarms directly related to RU:</i>	
	Power 28 V	Change power supply (RUs with door). Replace the affected remote unit.
	Temperature	Reduce environmental temperature. Eliminate thermal short circuit.
	Fan	Disconnect and connect mains. Fans should run. If not, replace the fans at RU.
	I ² C	Disconnect and connect mains.
	Optical alarm Tx	-
	Amplifier "Power Down"	<i>(MU: Change amplifier setting at MU controller).</i>
Status LED off	Mains	Check power switch inside of RU (RUs with door). Check mains cabling. Check mains power.

table 4-1 Status LED alarms

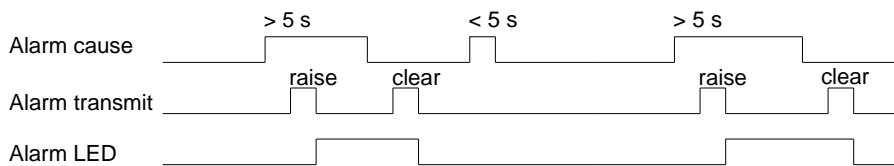


V1651A2

figure 4-1 Alarm triggering

For the position of the status LED see chapter 3.2.2 *Connections*.

Explicit troubleshooting is available in the MU software, (software manual or WEB Interface).

4.5. EXTERNAL ALARM INPUTS AND OUTPUTS

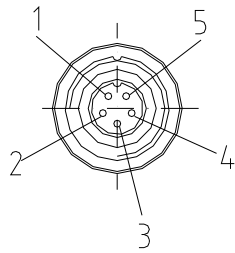


Flange connector
5 poles

- Pin 1= Alarm IN1
- Pin 2= Alarm IN2
- Pin 3= Alarm IN3
- Pin 4= Alarm IN4
- Pin 5= Alarm GND

G1038Z0

figure 4-2 Flange connector, 5 poles

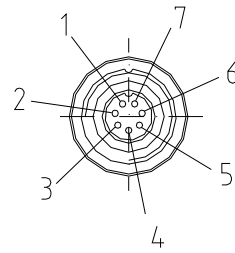

Flange connector
7 poles

- Pin 1= OUT1
- Pin 2= OUT2
- Pin 3= OUT3
- Pin 4= OUT4
- Pin 5= Alarm GND
- Pin 6= GND
- Pin 7= +28 V

G1038Z0

figure 4-3 Flange connector, 7 poles

The alarm outputs (open collector output 5 V / 1 mA) are normally low. In case of an alarm they are high active (5 V). They can be used to monitor alarms with an external alarm indicator.

The +28 V pin (for its location see *figure 4-3 Flange connector, 7 poles*) is protected by a 500 mA thermoswitch. In case of exceeding this current between pin 7 and GND and/or in case of a failure of the VSWR module, the thermoswitch turns into a high-resistive status. Then no fuse needs to be replaced. Just wait a few minutes until the thermoswitch reaches the normal operating temperature again.


Note: The manufacturer / supplier of this system accepts no liability for damage caused by equipment connected to external outputs or by effects from such equipment.

As accessory equipment the alarm kit is available to connect external devices to the external alarm inputs and outputs. For the exact designation, please refer to chapter 6.5 *Spare Parts*.

With the external alarm inputs, it is possible to monitor the status of connected devices, e.g. a UPS, via software. All alarm inputs are normally high (5 V) without connection. The polarity (high/ low) can be set via the software at the Master Unit (for details please see according software manual).

The device to be monitored must be connected so that the alarm contacts will be closed in case of an alarm ($I_{max} = 8 \text{ mA}$). The alarm inputs are potential-free with common ground.

Subminiature circular connectors series 712 with five and seven contacts, which are contained in the alarm kit, can be ordered directly from the Binder Connector Group, the manufacturer, or indirectly from Andrew Solutions. For the designation of the alarm kit see chapter 6.5 *Spare Parts*.

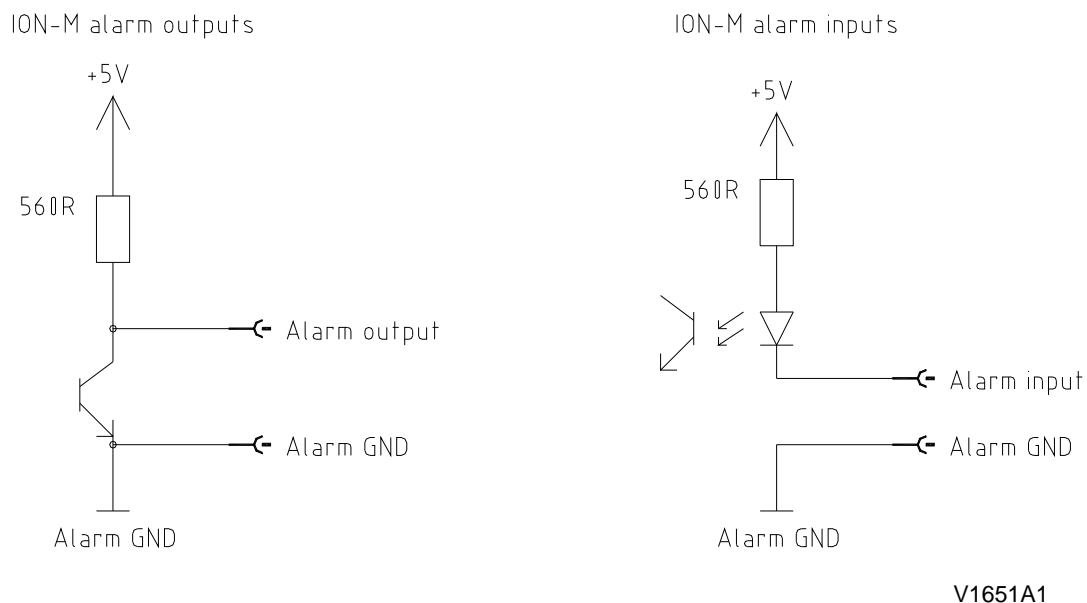

V1651A1

figure 4-4 Alarm inputs and outputs, standard

4.6. TROUBLESHOOTING

The status of the remote unit can be checked via the master unit (for details please refer to the software manual of the Master Controller). Locally, the status can be checked at the LED, see chapter 4.4 *Status LED Alarms*.

5. MAINTENANCE

5.1. GENERAL

Read the health and safety warnings in chapter 1.2.

- ☞ **Note:** The remote unit does not require preventative maintenance measures.
- ☞ **Note:** To prevent malfunctions of the cooling system due to dirt or pollution, it is recommended to clean the heat sink at regular intervals. These cleaning intervals depend mainly on the location of the remote unit and the corresponding degree of pollution.

Maintenance of the ION-M19P/19P/19P should be performed by replacing only components that are contained in this chapter. In order to maintain warranty, take care not to damage unintentionally the seals on the modules.

The spare parts list, consequently, contains only units which can be replaced without tuning or soldering work.

- ☞ **Note:** When sending back the unit, use an appropriate packaging, see chapter 6.4 *Mechanical Specifications*. We strongly recommend using the original packaging!
- ☞ **Note:** Defect parts should only be replaced by original parts from the supplier. All interventions inside the housing are at one's own risk.
- ☞ **Note:** During maintenance ensure the remote unit has been disconnected from mains.
- ☞ **Note:** Before disconnecting any cables, label any unlabelled cables to ensure correct connection.

For most maintenance procedures appropriate tools are required to ensure correct handling. All these tools can be ordered from the supplier. For screwing procedures observe that all our screws have a right-hand thread, i.e. for fastening the screws turn the tool clockwise and for unscrewing them turn it counter-clockwise.

Due to the design of the remote unit the only component recommended to be replaced is the fan unit. For replacing any other component, please contact the supplier.

5.2. REPLACING THE FAN UNIT

Replacement of the fan unit is not required as a preventative measure. Only when an alarm indicates a malfunctioning of a fan, must the unit be exchanged.

Note: Please observe that the fan unit can only be replaced as a whole. Do not remove the fans separately.

Read the health and safety warnings in chapter 1.2 as well as the instructions in chapter 5.1 *General* before starting with the replacement.

1. **Switch off the remote unit. Make sure mains is disconnected for the following replacement procedure.** Then, proceed as follows:

2. Loosen the four tallow-drop screws M4x8 by which the fan plate is screwed to the cabinet. Remove the four screws and the corresponding washers.




B0092ALA

3. Remove the fan unit – by putting slight pressure on the fan plate cover – to a position that allows access to the fan connector and the earth-bonding cable.

4. Unscrew the fan connector and then disconnect the earth-bonding cable.

Fan-unit connector

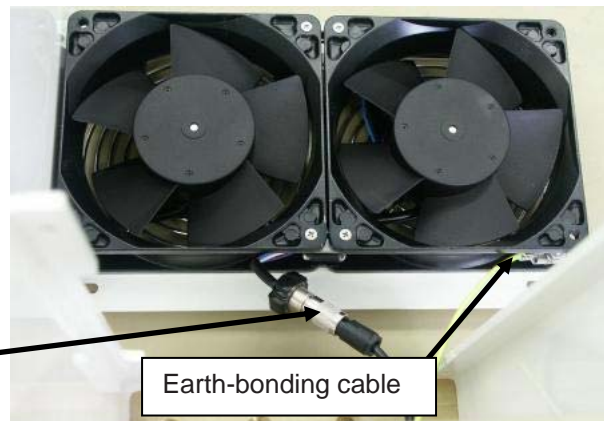

Earth-bonding cable

B0092A5A

Note: To observe the specified torque of 650 Ncm for an M5 thread, use an appropriate tool for the following screwing procedures.

5. To mount the new fan unit, re-connect the earth-bonding cable and the fan connector (see *step 4*). Then, place the fan unit back into its original position and fix it tight as shown below:



B0092AJA




B0097AKA

6. Screw the whole fan unit to the cabinet with the four tallow-drop screws M4x8 (see *step 2*). In order not to exceed the specified torque of 330 Ncm, use an appropriate tool.


5.3. CLEANING THE HEAT SINK

👉 **Note:** Read the health and safety warnings in chapter 1.2 as well as the instructions in chapter 5.1 *General* before starting with the replacement procedure. Then, proceed as follows:

1. Switch off the remote unit. Make sure that mains is disconnected for the following procedure.
2. Remove the fan plate with the fan unit from the remote unit as described in chapter 5.2 *Replacing the Fan Unit*, steps 1 and 2:
3. Use compressed air (max. 5 bar) to blow out the heat sink from back to front:

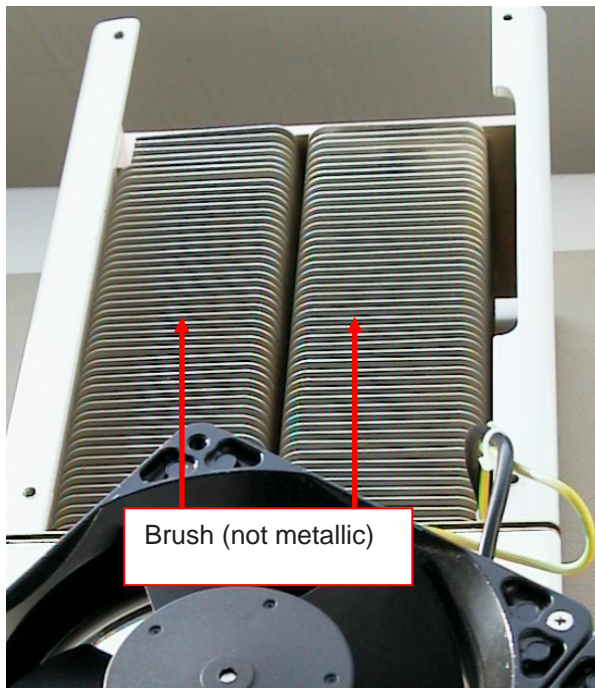

B0112A5A

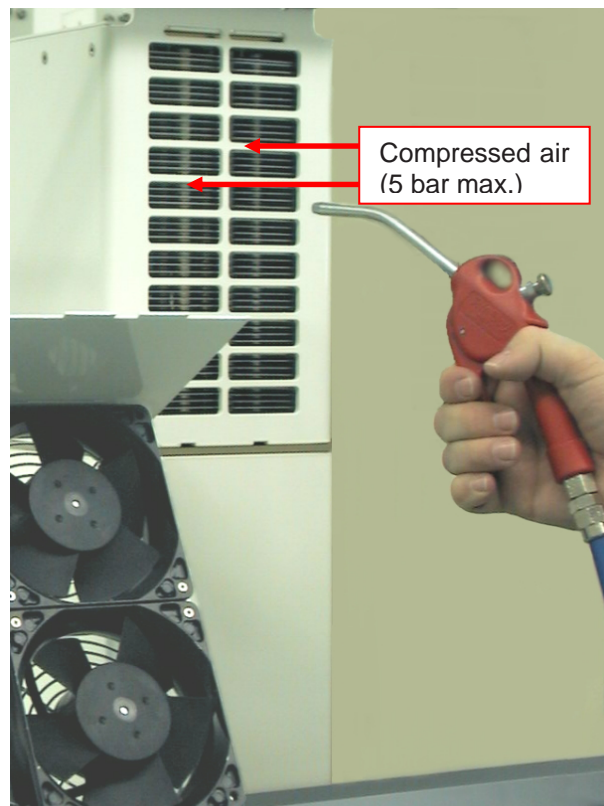

B0112A6A

4. In case the dirt cannot be blown out completely and parts of it stick to the ribs of the heat sink, clean the parts concerned carefully from the front using e.g. a brush. Take care that the material is not scratched or damaged.
5. After cleaning the heat sink, mount the fan unit again according to chapter 5.2 *Replacing the Fan Unit*, step 6. Then, switch the remote unit back on.

6. APPENDIX

6.1. ILLUSTRATIONS

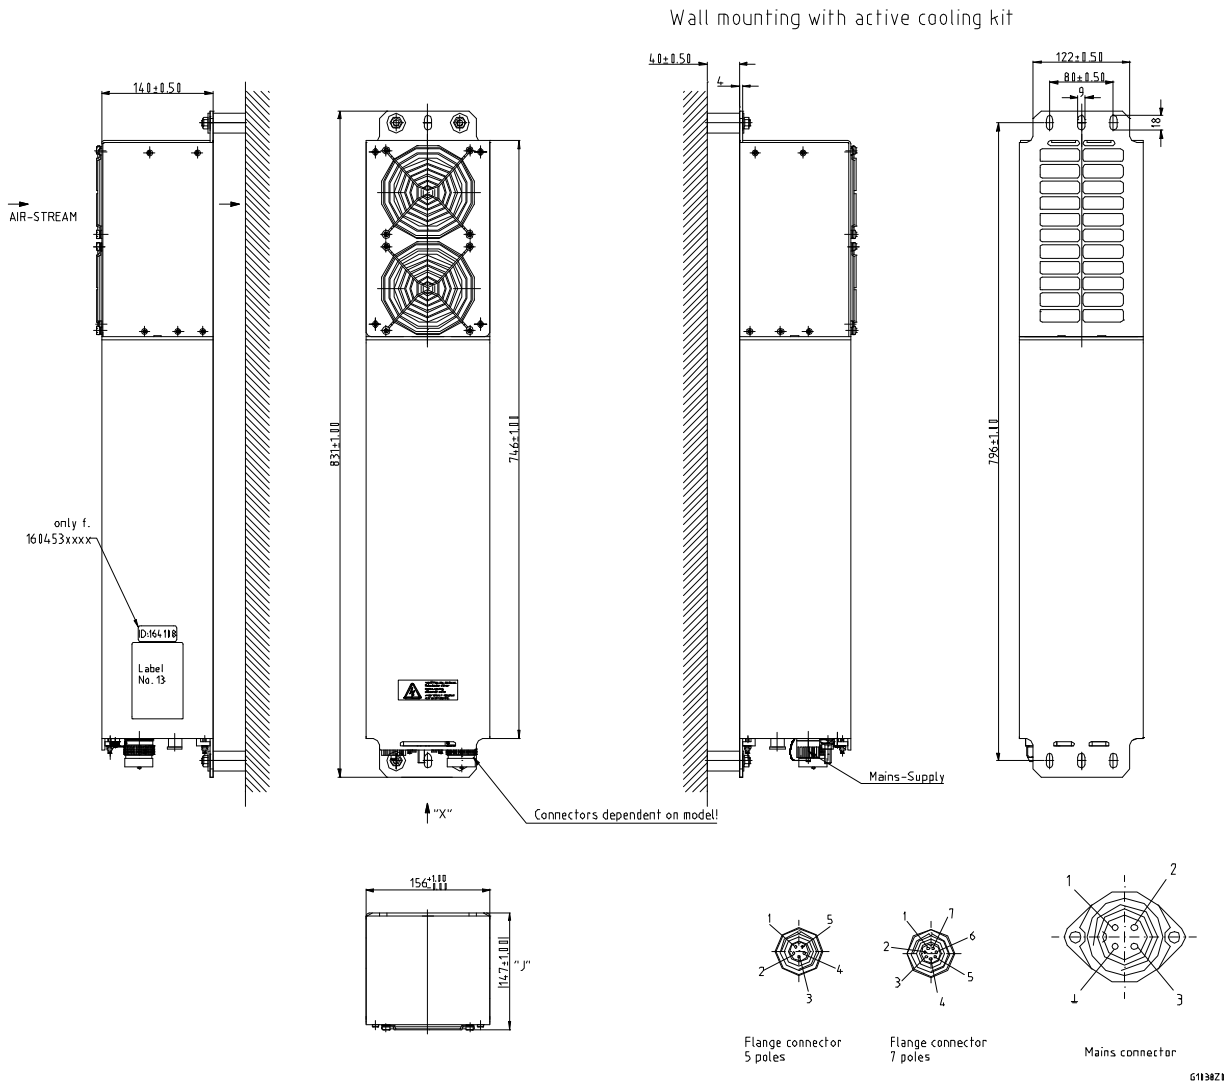


figure 6-1 Installation drawing

6.2. ELECTRICAL SPECIFICATIONS

ION-M19P/19P/19P		
Electrical		
Power Supply	Mains power	85 Vac to 264 Vac 115 Vac or 230 Vac
	Power consumption	770 watts
Optical		
Connectors	E2000/APC 8°	
Optical return loss	45 dB minimum	
Fiber type	Single mode E9/125 mm	
Optical link budget	0 dB to 10 dB	

6.3. ENVIRONMENTAL AND SAFETY SPECIFICATIONS

Note: For detailed information, please refer to the Environmental and Safety Specifications leaflet of the supplier, related to ETS 300 019 (European Telecommunication Standard).

Operating temperature range	-33° C to +50° C	
Ingress protection	RF part	IP67
	Fan part	IP55

All figures are typical values unless otherwise stated.

All data is subject to change without notice.

6.4. MECHANICAL SPECIFICATIONS

ION-M19P/19P/19P Main Unit and ION-M Extension Unit *	
Height, width, depth	831 x 156 x 147 mm (32.7 x 6.1 x 5.8 in)
Weight	21 kg (46.2 lb)

* Spacing of 40 mm (1.58 in) required around unit

All data is subject to change without notice.

6.5. SPARE PARTS

The following list contains all parts available for the Remote Unit. The configuration of the delivered unit meets the requirements of the customer and can differ depending on the state of the delivery.

Maintenance of the ION-M19P/19P/19P should be performed on an FRU (Field Replaceable Unit) basis only. Do not damage the warranty labels on the components, as this voids the warranty.

If any FRU not contained in the following list needs to be replaced, please contact customer service for additional instructions.

Spare Parts List of the Remote Unit ION-M19P/19P/19P Pseudo Omni

Designation:	ID No:
<i>ION-M19P/19P/19P Pseudo Omni</i>	7658132
Protective Plug E2000	7160013
Protective Cap E 2000	7158914
Fan Protection Kit	7159097
Fan Tray 28 VDC 2 Fan, 119 x 119 mm	7157622
Protective Tube Kit	7162182
Manuals for ION-M19P/19P/19P	7658332-00

Accessories	
Alarm Kit	7157396
<i>Wall Mounting</i>	
Wall-Mounting Kit	7158078
ISO Trafo Kit 115 V Wall Mounting	7159340
ISO Trafo Kit 230 V Wall Mounting	7158322
Connecting Box Kit Wall Mounting	7159613
Overcoat Housing Kit Wall Mounting	7159625
<i>Pole Mounting</i>	
Pole-Mounting Kit	7157782
ISO Trafo Kit 115 V Pole Mounting	7159623
ISO Trafo Kit 230 V Pole Mounting	7159621
Connecting Box Kit Pole Mounting	7159612
Overcoat Housing Kit Pole Mounting	7159624

The manufacturer reserves the right to replace the spare parts listed above by equivalent substitutes!

Note: Only the spare parts listed above are FRUs (= Field Replaceable Units) and can be replaced by the user. For replacement of any other parts, please send the entire Remote Unit back to the manufacturer.

7. INDEX

A		H	
Abbreviations.....	6	Health and Safety Warnings.....	7
Alarms		I	
Alarm Status	35	Illustrations	43
Bite and Alarms	35	Installation	
External Inputs.....	37, 38	Electrical	22
Handling of Alarms	35	Mechanical	16
List	38	M	
Outputs	37, 38	Maintenance.....	39
RU	38	Mounting	
Status LED.....	35	Fan Protection	21
		Pole (Outside).....	19
C		Wall.....	18
CE Declaration of Conformity (DoC).....	10	O	
Cleaning the Heat Sink.....	42	Optical-Fibre Connection	
Commissioning		Protective Plug	28
General.....	32	Protective-Tube Kit	30
CommScope.....	10	Outputs	
Components		Location	23
Accessories	15	P	
Fan-Protection Kit.....	15	Pin Assignment	
Connection Rules		External Alarms	37
Optical-Fibre Cables	27	R	
Connections		Replacement of Fan Unit.....	40
Antenna	25	S	
Connector Flange	23	Spare Parts	45
Optical-Fibre Cable.....	27	Specifications	
Contact Addresses		Electrical	44
Customer Support.....	11, 12, 13	Environmental and Safety.....	44
Customer Support Addresses.....	11, 12, 13	Mechanical	44
D		T	
Declaration of Conformity (DoC).....	10	Troubleshooting.....	38
E			
External Inputs			
Location	23		
F			
Flange Connector			
5 poles	37		
7 poles	37		
G			
Grounding.....	24		