

 
Soundcore Infini Pro

User Manual

Safety Instructions


- 1.Avoid dropping.
- 2.Do not disassemble.
- 3.Do not submerge in water.
- 4.Avoid extreme temperatures.
- 5.Do not use the device outdoors during thunderstorms.
- 6.Use original or certified cables.
- 7.Do not use any corrosive cleaner/oil to clean.
8. The product should not be exposed to dripping or splashing water.

What's Included



- 1.Soundbar
- 2.Power cord
- 3.Remote control
4. 2 × AAA batteries
- 5.HDMI 2.0 cable
6. Wall mount positioning card
7. Wall mount brackets
8. Screws
9. User manual

 At a Glance

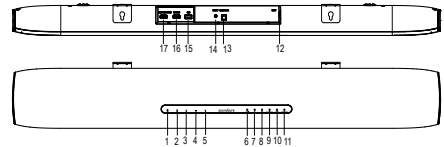

- Front touchpad:
- 1.Power button
 - 2.Source input button
 - 3.Bluetooth button
 - 4.Volume-down button
 5. Volume-up button
- Status indicator:
- 6.HDMI indicator
 7. TV indicator
 - 8.AUX indicator
 9. Bluetooth indicator
 10. Sound mode indicator
 11. Surround indicator

- Rear:
12. AC IN
 13. TV IN (OPT)
 14. AUX IN
 15. USB port
 16. HDMI IN
 17. HDMI OUT (ARC)
 18. Wall mount screw holes

Note: Hold source input button for 3 seconds to activate Bluetooth pairing mode.

Placement

 
●Table Placement

1. Place the soundbar on a solid surface with the touch panel facing up.




●Wall Mount Installation


Step 1:

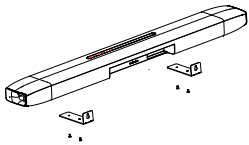

 
Step 2: Place the wall mount positioning card against the wall, under your TV. Mark the 2 bracket holes on the wall with a pencil, then drill two holes on the wall. Insert two screws into the holes.



 Step 3:

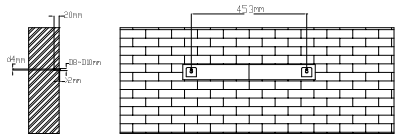

 Step 4:

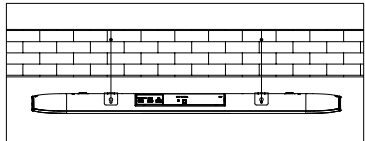


Remote Control

1. Battery installation



 
2. Remote control buttons

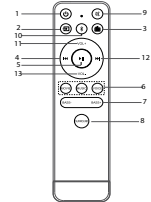

| Button | Button functions |
|-----------------------------|---|
| 1 Power button | Press to switch the soundbar on / off. Note: the status indicator of the previously set input source will flash when soundbar is turned on. Select an input source for playback: HDMI: Sound from a device connected via HDMI IN TV: TV audio (TV IN (OPT) and HDMI OUT (ARC) AUX: Sound from a device connected via AUX IN BLUETOOTH: Sound from a Bluetooth device Refer to d. Basic Operation chapter for details. |
| 2 Source input button | |
| 3 TV button | Switch to TV source. |
| 4 Previous | Return to the previous track. |
| 5 Play / Pause | To pause/resume playback. |
| 6 Sound mode buttons | To activate movie, music, or voice mode. Refer to e. Sound Modes chapter for more information. |
| 7 Bass + and Bass - buttons | To increase / decrease the bass. Refer to g. Bass chapter for reference. |


| | |
|-----------------------|--|
| 8 Surround | To activate the Dolby Surround effect. Refer to e. Playback with Surround sound chapter for reference. |
| 9 Mute button | To temporarily turn off the sound. Press the button again to turn the sound back on. |
| 10 Bluetooth button | To activate Bluetooth mode. 1. Press to activate Bluetooth mode. 2. Press and hold for 3 seconds to reconnect. Refer to c. Bluetooth mode chapter for information. |
| 11 Volume-up button | To increase the volume. |
| 12 Next | Move to the next track. |
| 13 Volume-down button | To decrease the volume. |

 Using Your Soundbar

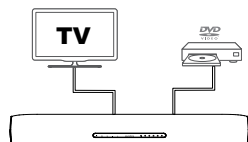

Note: The soundbar will automatically switch to standby mode when no audio input is received for 15 minutes. The soundbar will wake up from standby mode when any button is pressed or source input is received.

 
a. Connect to your TV HDMI IN connection (For TVs that support ARC)



Note: The Audio Return Channel (ARC) function enables an HDMI compatible TV to send the audio stream to HDMI OUT of the unit.

- 1.Connect HDMI cable to the HDMI OUT (ARC) port on the rear of the soundbar.
- 2.Connect the other end of the HDMI cable to the HDMI IN ARC port on the TV.
- 3.Tap the source input button on the soundbar or remote control to activate the corresponding mode.

 
Optical connection (For TVs that do not support ARC)

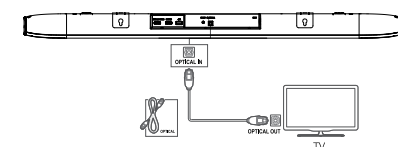

1. Connect the optical cable to the TV IN (OPT) jack on the rear of the soundbar.
2. Connect the other end of the optical cable to audio output jack on TV.
3. Tap the source input button on the soundbar or remote control to activate the corresponding mode.


Note: The TV IN (OPT) jack cannot be used when a TV that supports the Audio Return Channel is connected to the soundbar.

 b. Connect to other devices HDMI IN connection



- 1.Connect the HDMI cable to the HDMI IN port on the rear of the soundbar.
- 2.Connect the other end of the HDMI cable to the HDMI output port on the playback devices.
- 3.Tap the source input button on the soundbar or remote control to activate the corresponding mode.

 
AUX connection

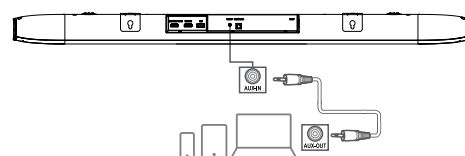

1. Connect the audio cable to the AUX IN port on the rear of the soundbar.
2. Connect the other end of AUX cable (not provided) to the audio output jack on the device.
3. Tap the source input button on the soundbar or remote control to activate the corresponding mode.

Note: Follow your device's user manual if you want to connect the soundbar to your other devices (such as Blu-ray player, game console, tablet, MP3 Player, laptop etc).
Note: 3.5mm to 3.5mm cable is not included.

 
c. Bluetooth Mode

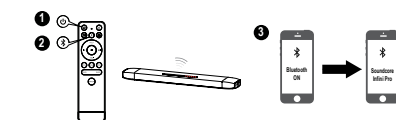

- 1.Press power button on the remote control to switch on the soundbar.
- 2.Press the Bluetooth button on the remote control to activate Bluetooth pairing mode.
- 3.Turn on the Bluetooth of your device, search for Soundcore Infini Pro on your Bluetooth list then select connect.

| | |
|---|-----------------------------|
| Flashing white (Bluetooth indicator) | Bluetooth mode is activated |
| Solid white | Connected to device |
| When turned on, Soundcore Infini Pro will automatically connect to the last connected device if available. If not, hold the Bluetooth button (or source input button) for 3 seconds on the remote control or hold the source input button on the soundbar for 3 seconds to activate Bluetooth mode. Having connection problems? Remove Soundcore Infini Pro from your device's Bluetooth history and ensure it's less than 10 meters away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your soundbar. | |

 d. Basic Operation

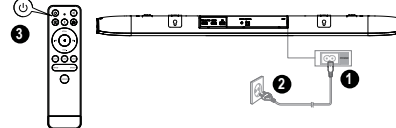

- 1.Press the power button on either the remote control or the soundbar to turn on the soundbar.
- 2.Switch on the connected device (such as TV, playback devices, game console etc).

- 3.Press the source input button on either the remote control or the soundbar to select your desired input source.

| Input Source | Description |
|--------------|---|
| HDMI | Sound from a connected device (via HDMI IN port) |
| TV | Audio from TV (via HDMI OUT port or TV IN (OPT) jack) |
| AUX | Sound from a connected device (via AUX port) |
| BLUETOOTH | Sound from a Bluetooth connected device |

Note: The status indicator of the selected input source will flash.

Press volume buttons to control the volume of the sound. The LED indicator indicates the level of volume.

5 Press VOLUME(+/-) to adjust the volume.



| | |
|--------------|------------------|
| VOL+ VOL- | Volume Up / Down |
| Mute | Mute |

Note: the volume cannot be controlled by the volume buttons on soundbar when sound input to the HDMI IN port is output from the TV.

e. Dolby Atmos



Dolby Atmos® transports you from the ordinary into the extraordinary with breathtaking, moving audio that fills your room and flows above and around you.
DOLBY ATMOS® is only available in HDMI IN and HDMI OUT (ARC) mode.

- Your TV must support DOLBY ATMOS® in order to use DOLBY ATMOS® in HDMI OUT (ARC) mode.
 - Set the audio output sampling rate to 192 kHz if you can adjust it. This soundbar supports 4K Passthrough and DOLBY VISION.
- When you play a disc which supports 4K video signal, the signal can be delivered to your TV.

f. Sound Modes

| | |
|----------------------|---|
| Movie mode (Default) | Intensifies the bass and enhances the clarity of dialogue. |
| Music mode | Enhances the treble and adds greater depth to the music. |
| Voice mode | Enhances the clarity of voices. Suitable for watching TV shows, news, and sports. |

| Status | Status indicator |
|------------|------------------|
| Movie mode | Solid white |
| Music mode | Solid green |
| Voice mode | Solid blue |

g. Playback with Surround Sound

Press the surround button on the remote control to switch on the Surround on / off mode.

| | |
|-------------------|---|
| Surround on mode | When surround mode is selected, DOLBY ATMOS® creates a fuller, more immersive experience that puts you inside the action. |
| Surround off mode | Switch back to 2-channel stereo playback. Select from one of the 3 sound modes to tailor the sound to the media. |

| Status | Status indicator |
|---|------------------|
| Surround mode on | Solid white |
| Surround mode on (when a DOLBY ATMOS® source is received) | Solid blue |
| Surround mode off | Off |

h. Bass



Press Bass + and Bass - buttons on the remote control to adjust the bass.

 
Using your TV's Remote Control to Operate the Soundbar
Use your own TV remote control to control your Soundbar (Applicable for most Vizio, LG, Philips TVs).

Turn off the soundbar first, then press and hold the HDMI button on the TV remote control for 3 seconds. The soundbar will turn on automatically.

Note: only the power, source input, and volume of your soundbar can be controlled by your TV remote control.

Download the Soundcore App for an enhanced product experience. Follow onscreen instructions to set up.

z



Declaration of Conformity

Hereby, Anker Innovations Limited declares that the radio equipment type A3372 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<https://www.anker.com/products>
Maximum output power: 0dBm
Frequency band: 2.4G band (2.4000GHz-2.4835GHz)
Anker Innovations Limited / Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

Specifications

| *Specifications are subject to change without | |
|---|--|
| Input | 100-240V~ 50/60Hz 0.5A |
| Audio output | Front L / R: 30W x 2ch Subwoofer: 60W |
| Decoder | Dolby Digital Dolby TrueHD Dolby Digital Plus Dolby Atmos |
| Input jack | HDMI IN x 1 TV IN (OPT) x 1 AUX IN (3.5mm stereo mini) x 1 |
| Output jack | HDMI OUT x 1 |
| Additional jack | USB (for firmware update only) |
| Bluetooth | Version 5.0 |
| Product size | 930 x 120 x 61 mm / 36.6 x 4.7 x 2.4 in |
| Product size (with wall mount brackets installed) | 930 mm x 135 mm x 63 mm/36.6 x 5.3 x 2.5 in |
| Weight (without packaging) | 3.3 kg / 116 oz |

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

The following importer is the responsible party

Company Name: Fantasia Trading LLC

Address: 9155 Archibald Avenue, Suite 202, Rancho Cucamonga, CA, 91730, US

Telephone: +1 (909) 484 1530

IC NOTICE TO CANADIAN USERS

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body."

ce matériel est conforme aux limites d'exposition aux rayonnements rf de ic énoncés dans un autre environnement. ce matériel doit être installé et exploité à une distance minimale de 20 cm entre le radiateur et votre corps.

Operating Temperature:0~45℃