## SoundBuds Flow

### Owner's Manual

## **Safety Instructions**

- 1 Avoid dropping.
- 2 Do not disassemble.
- 3 Do not submerge in water.
- 4 The product shall not be exposed to dripping or splash.
- **⑤** Avoid extreme temperatures.
- (6) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- ① Use original or certified cables.
- 8 Do not use any corrosive cleaner/oil to clean.
- (9) Do not use the product outdoors during thunderstorms.
- (11) Keep out of reach of children. It contains small parts which may be a choking hazard.



## Hearing Safety

- ① To avoid hearing damage, do not listen for extended periods at high volume.
- ② Do not turn the volume so high that you're unable to hear your surroundings.
- 3 Do not use earphones while driving.
- 4 You should use caution or temporarily discontinue use in potentially hazardous situations.

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.


### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




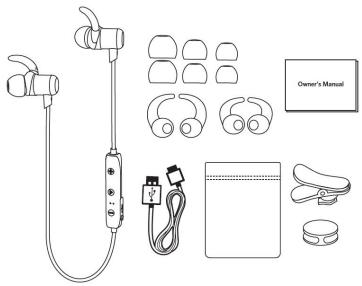



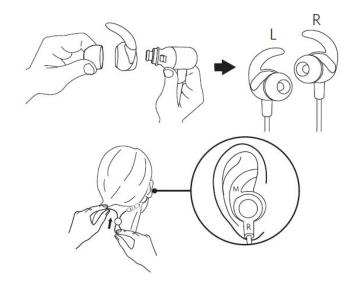




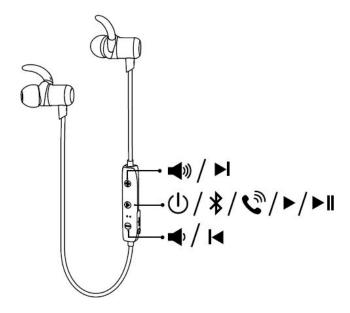



ON	Press and hold for 1 second	Flashing blue once
OFF	Press and hold for 3 seconds	Flashing red once




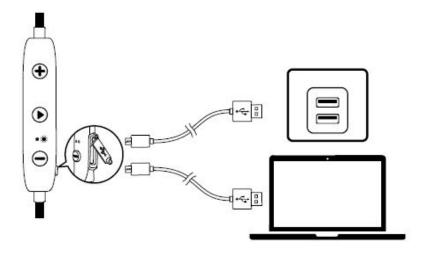

Flashing red	Low battery
Steady red	Charging
Steady blue	Fully charged

# \*

## **Pairing**

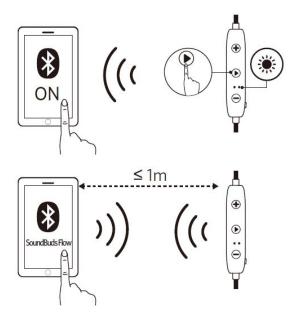

Enter pairing mode	Press and hold for 3 seconds
Un-pair connected device and re-enter pairing mode	Press and hold for 3 seconds

Rapidly flashing blue	Pairing mode
Steady blue	Connected to a device

# ₩**Ç**

## Controls



Play / Pause	Press
Next track	Press and hold for 1 second
Previous track	Press and hold for 1 second
Volume up / down	◆/→ Press



Answer / End call	Press	
Reject call	Press and hold for 1 second	
Put current call on hold and answer incoming call	Press	
Switch between held call and active call	Press and hold for 1 second	
Transfer a call between headphones and mobile phone	Press and hold for 1 second	

Steady blue	On a call
Flashing blue	Incoming call



Activate Siri / other voice control software	Press and hold for 1 second
	Press and hold for 1 second

## **Specifications**

Note: Specifications are subject to change without notice.

Input	5 V = 0.1 A
Charging time	1.5 hours
Play time (varies by volume level and content)	7 hours
Weight	16 g / 0.56 oz
Impedance	16 Ω
Driver (full range)	6 mm x 2
Frequency response	20 Hz - 20 KHz
Bluetooth version	V4.1
Range	10 m / 33 ft

Product Number A3234
Bluetooth Headphone / SoundBuds Flow