

Anker Portable Stereo Bluetooth Speaker

Package Contents

Anker Portable Stereo Bluetooth Speaker
Micro USB cable (2.3 ft)
3.5mm audio cable (2.3 ft)
Welcome Guide


Product Features

- Impressively clear and full sound powered by 2 powerful 5 watt audio drivers.
- Advanced audio performance delivers a full-range sound, while the built-in bass port generates impressive bass, all to provide extraordinary listening experience.
- At 80% volume, the speaker lasts for 18 hours, significantly outperforming other stereo Bluetooth speakers.
- Non-Bluetooth devices enjoy unhampered experience with the provided 3.5mm audio cable.

Specifications

Product Model	A7909
Bluetooth Standard	Bluetooth 4.2, backward compatible with all standards.
Product Weight	280 ± 10 g / 9.9 ± 0.4oz
Product Size	162 × 65 × 65mm/ 6.4 × 2.6 × 2.6in
Play Time	18 hours
Charge Time	4 hours (with a 1.5A output adapter) 6 hours (with a 1A output adapter)
Input	5V / 1.5A
Operating Range	10m / 33ft
Speaker Output Power	5W × 2
Audio Cable Type	3.5mm audio cable
Supported Bluetooth Profiles	A2DP and AVRCP

Product Overview

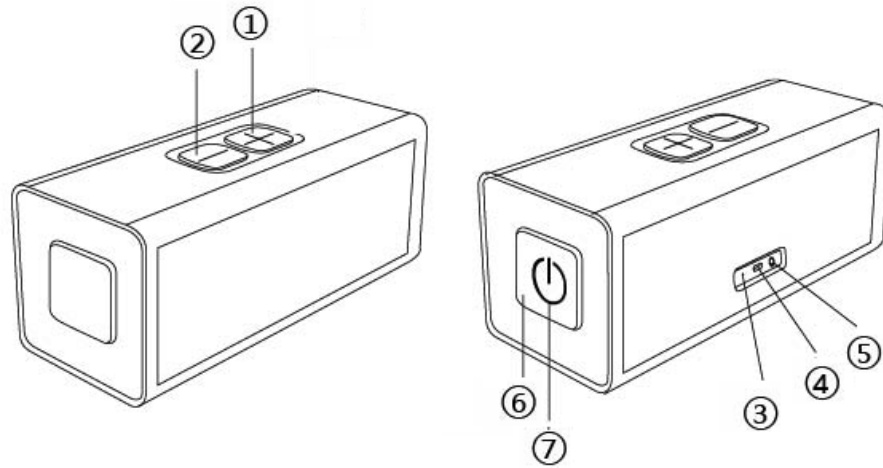

- Volume up
- Volume down
- Battery indicator
- Micro USB charging port
- 3.5mm audio input
- Status indicator
- Power button / Pause & Play

How to Turn the Speaker On / Off

Press the power button for 3 seconds to turn on or off the speaker.

How to Pair with Your Device

1. Press the power button for 3 seconds. The speaker will turn on and automatically enter pairing mode displayed by the flashing blue indicator.
2. Activate your device's Bluetooth function and search for the device.
3. Once the Bluetooth speaker has been detected, select the product name "Anker A7909" to connect. (For devices with Bluetooth versions below 3.0, press "Yes" to confirm pairing. Enter a passkey or PIN code "0000" (4 zeros), then press the "Yes" or "OK" key to finish pairing.)
4. When the Bluetooth speaker and your device are successfully paired, the blue indicator will go on and remain on while connected.

How to Recharge

When the speaker's battery is low, the red battery indicator will flash for about 10 minutes.

1. Plug the Micro USB cable into the input port of the speaker.
2. Insert the remaining end of the USB power wire into (a) a USB AC adapter (not included) connected to a wall socket, or (b) a charging computer USB port. A steady red battery indicator will show that it is charging.
3. The red battery indicator will go off when the speaker is fully charged.

LED Indicator Instructions

LED indicator	Meaning
Blue status indicator rapidly flashing	Pairing mode
Blue status indicator slowly flashing	Connected to a device
Red battery indicator flashing	Low battery
Steady red battery indicator	Charging
Red battery indicator goes off	Fully charged

Usage Tips

1. Power off the speaker when not in use and before storing.
2. The operational range of the speakers may be influenced by obstructions, such as walls, pillars, etc. To ensure a stable connection, we recommend avoiding such obstructions whenever possible and/or shortening the distance during use.
3. To protect the long-term performance of the battery, please do not place the speaker in high temperatures above 140°F/60°C, such as in a hot vehicle or under direct sunlight.
4. Do not expose the speaker or any of its supplied parts to rain or other liquids.

FAQ and Solutions

1. Why can't the speaker connect to my device?

- a. Check to ensure your device's Bluetooth function is enabled.
- b. Make sure your device is within 3ft/1m of the speaker.
- c. Delete the pairing record(s) on the speaker or your device. When the speaker is in standby mode, press the "Volume Down" and "Volume Up" buttons for 2 seconds to delete pairing records or reset (when the speaker is not working normally).

2. Can I use the speaker to play music while charging?

To protect the long-term performance of the battery, it is better to charge when the speaker is turned off, especially when the battery is low.

3. Can I make or answer phone calls through the speaker?

No. The speaker does not feature a built-in microphone.

4. Will all buttons function normally when connected to a 3.5mm audio cable?

The pause/play function (the power button) will not work.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.