


# Welcome Guide


PowerCore Jump Starter 600

## At a Glance

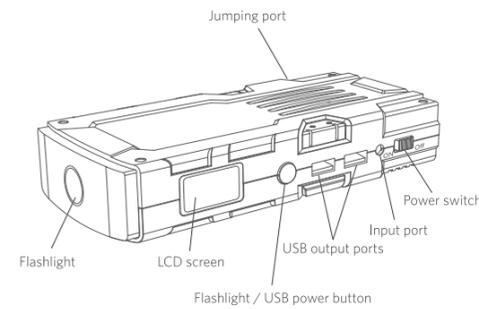


## Jump Starting Your Car

1. Switch on your PowerCore Jump Starter and check it's over 25% charged

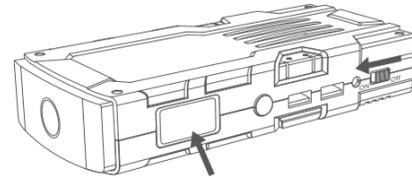


⚠ If less than 25% charged, it may not be able to start your engine

2. Connect the red clamp to the positive terminal (+) and black clamp to the negative terminal (-) of your vehicle's battery

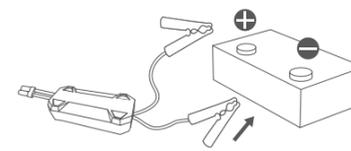

⚠ Do not connect the red and black clamps together


3. Plug in the jumper cables

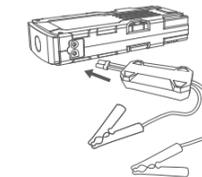

4. Start your engine



5. Unplug the jumper cables within 30 seconds

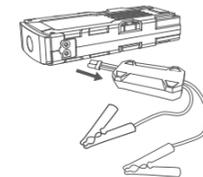


6. Remove clamps from car battery and pack away




## Charging and Recharging

• Charge your phone or tablet

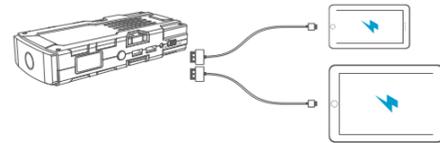


• Recharge your PowerCore Jump Starter

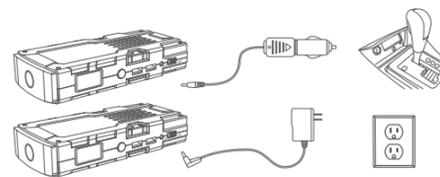

## Using the Flashlight

- Hold to turn on
- Press to turn off / toggle flash

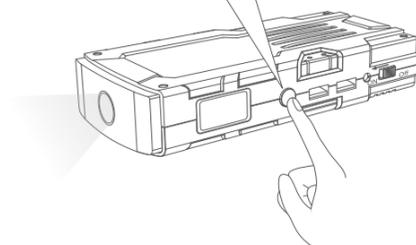

## Specifications

Capacity	15000 mAh / 55.5 Wh
Weight	565 g / 19.9 oz
Size	184 × 88 × 38 mm / 7.3 × 3.5 × 1.5 in
Input	15 V / 1 A
USB Output	5 V / 4.2 A
Starting Current	300 A
Peak Current	600 A

## Attention

📄 To preserve lifespan recharge every 4 months

🔌 Use original or certified cables

💧 Don't expose to water

🔧 Don't disassemble

🍷 Avoid dropping

🌡️ Avoid extreme temperatures

## Customer Service

🛡️ 18-month limited warranty

👤 Lifetime technical support

✉️ support@anker.com

☎️ 1-800-988-7973 | Mon-Fri 9:00-5:00 PST (US)

For FAQs and more information, please visit:



[anker.com/support](https://www.anker.com/support)

📘 @Anker Official

🐦 @Anker Official

🌐 @Anker

**ANKER™**  
POWER YOUR MOBILE LIFE