


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.



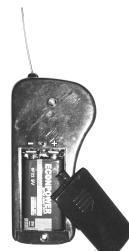

This Toy had an on/off power switch on the car bottom panel. The right-hand one controls the toy vehicle moving forward, and the left-hand one controls backward and turn right in direction.

INSTRUCTIONS

- Do not mix old and new batteries.
 Do not mix alkaline, standard (carbon-zinc) or rechargeable (circle) and primary between the control of the contr
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
 Uses 1 '9V' size battery For Controller, uses 3 "AA' size Batteries For Car (Batteries not Included).
 Do not use rechargeable batteries.
 Non-rechargeable batteries are not to be recharged.
 Only batteries of the same or equivalent type as recommended are to be used.
 Batteries are to be inserted with the correct polarity.
 Exhausted batteries are to be removed from the toy.
 The supply terminals are not to be short-circuited.
 Packing has to be kept since it contains important information.

TO REPLACE BATTERIES

To change the batteries remove from the battery compartment cover and make sure the positive (+) and the negative (-) poles are in the correct position as shown in the diagram. To ensure proper safely and operation, battery replacement must always be done by adult. Never let a child use this product unless battery door is secured. Batteries are small objects and could be ingested. Keep all batteries away from small children. Immediately and safely dispose of any used batteries.

ATTENTION:
The batteries included in the unit are also intended for in-store demonstration. It is possible that they may become weak or discharged prior to purchase and customer may find it necessary to replace the included batteries with fresh cells to insure proper operation.

COLORS AND CONTENTS MAY VARY FROM ILLUSTRATIONS.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Distributed by: \$2.50 Ankyo Development Ltd. T.S.T. KOWLOON, H.K. Made in China

