

Ashley International Limited

PS2/PS3 WIRELESS WOODEN GUITAR USER MANUAL

GUITAR SETUP INSTRUCTIONS:

1. Make sure your game console is turned off.
2. Place 4 AA batteries (not included) in the battery compartment on the back of the Guitar Controller.
3. Depending on which game you are playing, move the switch on the Wireless Receiver based on the instruction in Table 1 : Column 3 before plugging into your game console.
4. Plug the USB or PS2™ connector on the Wireless Receiver into the correct port on your game console. Refer to Table 1 : Column 2.
5. Turn on your game console. The GREEN Light on your Wireless Receiver will blink while waiting for wireless connection.
6. Turn on the Guitar Controller, refer to Table 2 for Light behavior.
7. To set up a second Guitar Controller, please repeat step 2-6
8. Your Guitar Controller is ready to be used.

TABLE 1 : SETUP GUIDE

When playing...	Use this connector on the Wireless Receiver...	Set the switch on Wireless Receiver to...
Guitar Hero® 1 PS2™	PS2™	PS2™
Guitar Hero® 2 PS2™	PS2™	PS2™
Guitar Hero® 3 PS2™	PS2™	PS2™
Guitar Hero® 3 PS3™	USB	GH
RockBand™ PS2™	USB	RB
RockBand™ PS3™	USB	RB

TABLE 2: LIGHT BEHAVIOR

Action	RED Light on Guitar Controller	GREEN Light on Wireless Receiver
Searching for wireless connection	BLINK	BLINK
Wireless connection established	OFF	ON
Low Battery	RAPID BLINKING	ON
Sleep Mode (after 2 minutes of inactivity on the Guitar Controller)	OFF	BLINK

NOTE 1: The 4 RED Lights on the Wireless Receiver are for the Controller ID selection on PS3™ console. The Red Lights are designed to work on Guitar Hero® 3 but not Rock Band™.

NOTE 2: Solo Switch is designed for Rock Band game, it has no effect when playing the Guitar Hero® game.

NOTE 3: When using the Guitar Controller on PS2™, the PS button will function as alternate Start button.

Ashley International Limited

PS2/PS3 WIRELESS WOODEN GUITAR USER MANUAL

GUITAR CONTROLS:

①	FRET BUTTONS	Activates the FRET notes
②	SOLO buttons	Activates the SOLO notes
③	SOLO SWITCH	5 way switch: wah- wah, flanger, echo, chorus, or none
④	WHAMMY BAR	Press WHAMMY BAR down to alter the sound of the note
⑤	START button	Pause
⑥	SELECT button	Activate STAR POEER
⑦	STRUM BAR	Move STRUM BAR up & down to activate color buttons and navigate menu
⑧	PS button	Open Playstation® HOME menu
⑨	DIRECTIONAL PAD	Navigates menus-press up, down, left, or right
⑩	POWER SWITCH	Turns guitar ON and OFF



CAUTIONS:

- This product is made for indoor use only.
- Keep this product at room temperature.
- Product contains electrical components; keep it away from moisture.
- Modifying or disassembling the controller will void the warranty.
- The product must be used with care to avoid injury. Seller is not liable for injuries caused by improper use of the wireless guitar controller.
- Allow at least 10 metres of clearance around you during game play and make sure that all areas you might move into are clear of other people and objects.
- Do not attempt to spin the product as it is not designed to do so.
- Any injury caused by the use of the product not for its intended design will not be the responsibility of seller.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for ANY interference, for example RADIO or TV interference, caused by unauthorized modifications to this equipment.

Such modifications could void the user's authority to operate the equipment.